 


 
 
 


 







---

 
 




 
 
 




# SST AND SSM

	<b>Page</b>
SST (SPECIAL SERVICE TOOLS) .....	C-2
SSM (SPECIAL SERVICE MATERIALS) .....	C-9

## SST (SPECIAL SERVICE TOOLS)

 




 
 






 
Section		EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	• Part No. • Part Name																		
	09201-31010 (Valve Stem Oil Seal Replacer)																		●
	09201-60011 (Valve Stem Guide Remover & Replacer)	●								●	●	●							
	09202-43013 (Valve Spring Compressor)	●																	
	09213-27010 (Gear Remover)									●									
	09213-31021 (Crankshaft Pulley Puller)	●																	
	09213-36020 (Timing Gear Remover)	●								●									
	09218-56030 (Cylinder Liner Remover & Replacer)																		●
	09222-30010 (Connecting Rod Bushing Remover & Replacer)	●																	
	09223-41020 (Crankshaft Rear Oil Seal Replacer)	●																	
	09223-50010 (Crankshaft Front Oil Seal Replacer)					●				●									
	09228-44010 (Oil Filter Wrench)					●									●				
	09236-00101 (Water Pump Overhaul Tool Set)																●		●
	09238-47012 (Water Pump Bearing Remover & Replacer)									●									
	09240-00014 (Carburetor Adjusting Gauge Set)				●														

# SST (SPECIAL SERVICE TOOLS) (Cont'd)





 

 







Section		EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	• Part No. • Part Name																		
	<b>09258-14010</b> (Air Pump Tester)		●																
	<b>09268-41045</b> (Injection Measuring Tool Set)			●															
	<b>09268-45011</b> (EFI Fuel Pressure Gauge)			●															
	<b>09285-76010</b> (Injection Camshaft Bearing Cone Replacer)						●	●											
	<b>09286-46011</b> (Injection Pump Spline Shaft puller)						●	●											●
	<b>09301-20020</b> (Clutch Guide Tool)								●										
	<b>09302-30031</b> (Clutch Diaphragm Spring Hight No. 3 Gauge)								●										
	<b>09303-35011</b> (Input Shaft Front Bearing Puller)								●										
	<b>09304-30012</b> (Input Shaft Front Bearing Replacer)								●										
	<b>09305-20012</b> (Gear Shift Lever Remover)											●							
	<b>09307-12010</b> (Extension Housing Bushing Replacer)																	●	
	<b>09307-30010</b> (Extension Housing Bushing Replacer)									●									
	<b>09308-00010</b> (Oil Seal Puller)									●	●	●		●	●			●	

cardiagn.com

 
 
 
 










# SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	Part No.	Part Name																		
	09308-10010	(Oil Seal Puller)									•	•				•				
	09310-35010	(Countershaft Bearing Replacer)											•							
	09312-20011	(Transmission Gear Remover & Replacer)									•									
	09313-30021	(Detent Ball Plug Socket)									•		•							•
	09315-00010	(Clutch Release Bearing Remover & Replacer)								•										
	09315-00021	(Clutch Release Bearing Remover & Replacer)								•										
	09316-60010	(Transmission & Transfer Bearing Replacer)									•		•							
	09325-12010	(Transmission Oil Plug)									•									
	09325-20010	(Transmission Oil Plug)	•								•	•	•	•						
	09330-00020	(Companion Flange Holding Tool)											•	•		•				
	09332-25010	(Universal Joint Bearing Remover & Replacer)												•						
	09333-00012	(Clutch Diaphragm Spring Aligner)								•										
	09350-20013	(TOYOTA Automatic Transmission Tool Set)										•								
	09504-00011	(Differential Side Bearing Adjusting Nut Wrench)														•				


 

 





 

 
 

# SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	Part No.	Part Name																		
	09506-30011	(Differential Drive Pinion Bearing Cone Replacer)														●				
	09506-35010	(Differential Drive Pinion Rear Bearing Replacer)									●									
	09515-30010	(Rear Wheel Bearing Replacer)														●				
	09521-25011	(Rear Axle Shaft Puller)														●				
	09527-10010	(Rear Axle Shaft Bearing Remover)													●					
	09527-20011	(Rear Axle Shaft Bearing Remover)															●			
	09554-30011	(Differential Oil Seal Replacer)														●				
	09556-30010	(Drive Pinion Front Bearing Remover)														●				
	09557-22022	(Companion Flange Remover & Replacer)												●		●				
	09605-60010	(Steering Knuckle Bearing Cup Replacer)													●					
	09606-60020	(Steering Knuckle Bearing Cup Remover)													●					
	09607-60020	(Front Wheel Adjusting Nut Wrench)													●					
	09608-20011	(Front Hub & Drive Pinion Bearing Tool Set)									●									
	09608-30011	(Front Hub & Drive Pinion Bearing Tool Set)													●	●		●		


 


 


 

 
 
 

# SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	Part No.	Part Name																		
	09608-35013	(Axle Hub & Drive Pinion Bearing Tool Set)									●				●	●		●		
	09609-20011	(Steering Wheel Puller)																●		
	09610-55012	(Pitman Arm Puller)																●		
	09611-12010	(Tie Rod End Puller)																●		
	09611-22012	(Tie Rod End Puller)													●			●		
	09612-22011	(Tilt Handle Bearing Replacer)																●		
	09612-30012	(Steering Worm Bearing Puller)											●					●		
	09612-65013	(Steering Worm Bearing Puller)													●			●		
	09616-00010	(Steering Worm Bearing Adjusting Socket)																●		
	09616-22010	(Steering Worm Bearing Adjusting Screw Wrench)																●		
	09617-30040	(Worm Bearing Adjusting Screw Lock Nut Wrench)																●		
	09618-60010	(Front Axle & Drive Shaft Bearing Replacer)													●					
	09620-30010	(Steering Gear Box Replacer Set)																●		
	09628-62011	(Ball Joint Puller)													●			●		

# SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section			EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	Part No.	Part Name																		
	09630-00011	(Power Steering Gear Housing Overhaul Tool Set)																	●	
	09631-22020	(Power Steering Hose Nut 14 x 17 Wrench)																	●	
	09631-60010	(Power Steering Gear Housing Bearing Replacer)																	●	
	09634-60013	(Steering Knuckle Centering Gauge)														●				
	09636-20010	(Upper Ball Joint Dust Cover Replacer)																	●	
	09703-30010	(Brake Shoe Return Spring Tool)																●		
	09709-29017	(LSPV Gauge Set)																●		
	09710-30020	(Suspension Bushing Tool Set)														●				
	09717-20010	(Brake Shoe Return Spring Remover)																●		
	09718-00010	(Shoe Hold Down Spring Driver)																●		
	09718-20010	(Brake Shoe Return Spring Replacer)																●		
	09726-35010	(Front Lower Arm Bushing Remover & Replacer)														●	●			
	09737-00010	(Brake Booster Push Rod Gauge)																●		
	09751-36011	(Brake Tube Union Nut 10 x 12 Wrench)								●						●	●			

# SST (SPECIAL SERVICE TOOLS) (Cont'd)

Section		EM	EC	FI	FU	LU	ST	CH	CL	MT	AT	TF	PR	FA	RA	BR	SR	BO	WI
Illustration	• Part No. • Part Name																		
	<b>09812-00010</b> (Door Hinge Set Bolt Wrench Set)																		●
	<b>09820-00020</b> (Alternator Bearing Puller)							●											
	<b>09820-63010</b> (Alternator Pulley Set Nut Wrench Set)							●											
	<b>09842-14010</b> (Idle Adjusting Wiring Harness)			●															
	<b>09842-30020</b> (Wiring "C" EFI Inspection)			●															
	<b>09842-30050</b> (Wiring "A" EFI Inspection)			●															
	<b>09860-11011</b> (Carburetor Drive Set)				●														
	<b>09921-00010</b> (Spring Tension Tool)									●	●	●							
	<b>09922-00010</b> (Wrench 5 x 12)				●														
	<b>09923-00010</b> (Hexagon Wrench)									●									
	<b>09950-00020</b> (Bearing Remover)									●		●			●				
	<b>09950-20015</b> (Universal Puller)									●		●		●	●				
	<b>09992-00093</b> (Oil Pressure Gauge Set)										●								

**SSM (SPECIAL SERVICE MATERIALS)**

Part Name	Part No.	Sec.	Use etc.
Seal packing No. 102	08826-00080	EM	Engine oil pan
Anaerobic adhesive	08833-00070	SR	Upper bracket bolt
Windshield glass adhesive set No. 15	08850-00070	BO	Windshield glass [0 – 15°C]
Windshield glass adhesive set No. 35	08850-00080	BO	Windshield glass [15 – 35°C]
Windshield glass adhesive set No. 45	08850-00090	BO	Windshield glass [35 – 45°C]
Dam kit	04562-30030	BO	Windshield glass
Glass sealer	08705-00010	BO	Windshield glass
Butyl tape set	08850-00065	BO	Quarter window glass
Glass sealer	68177-89101	BO	Quarter window glass