 


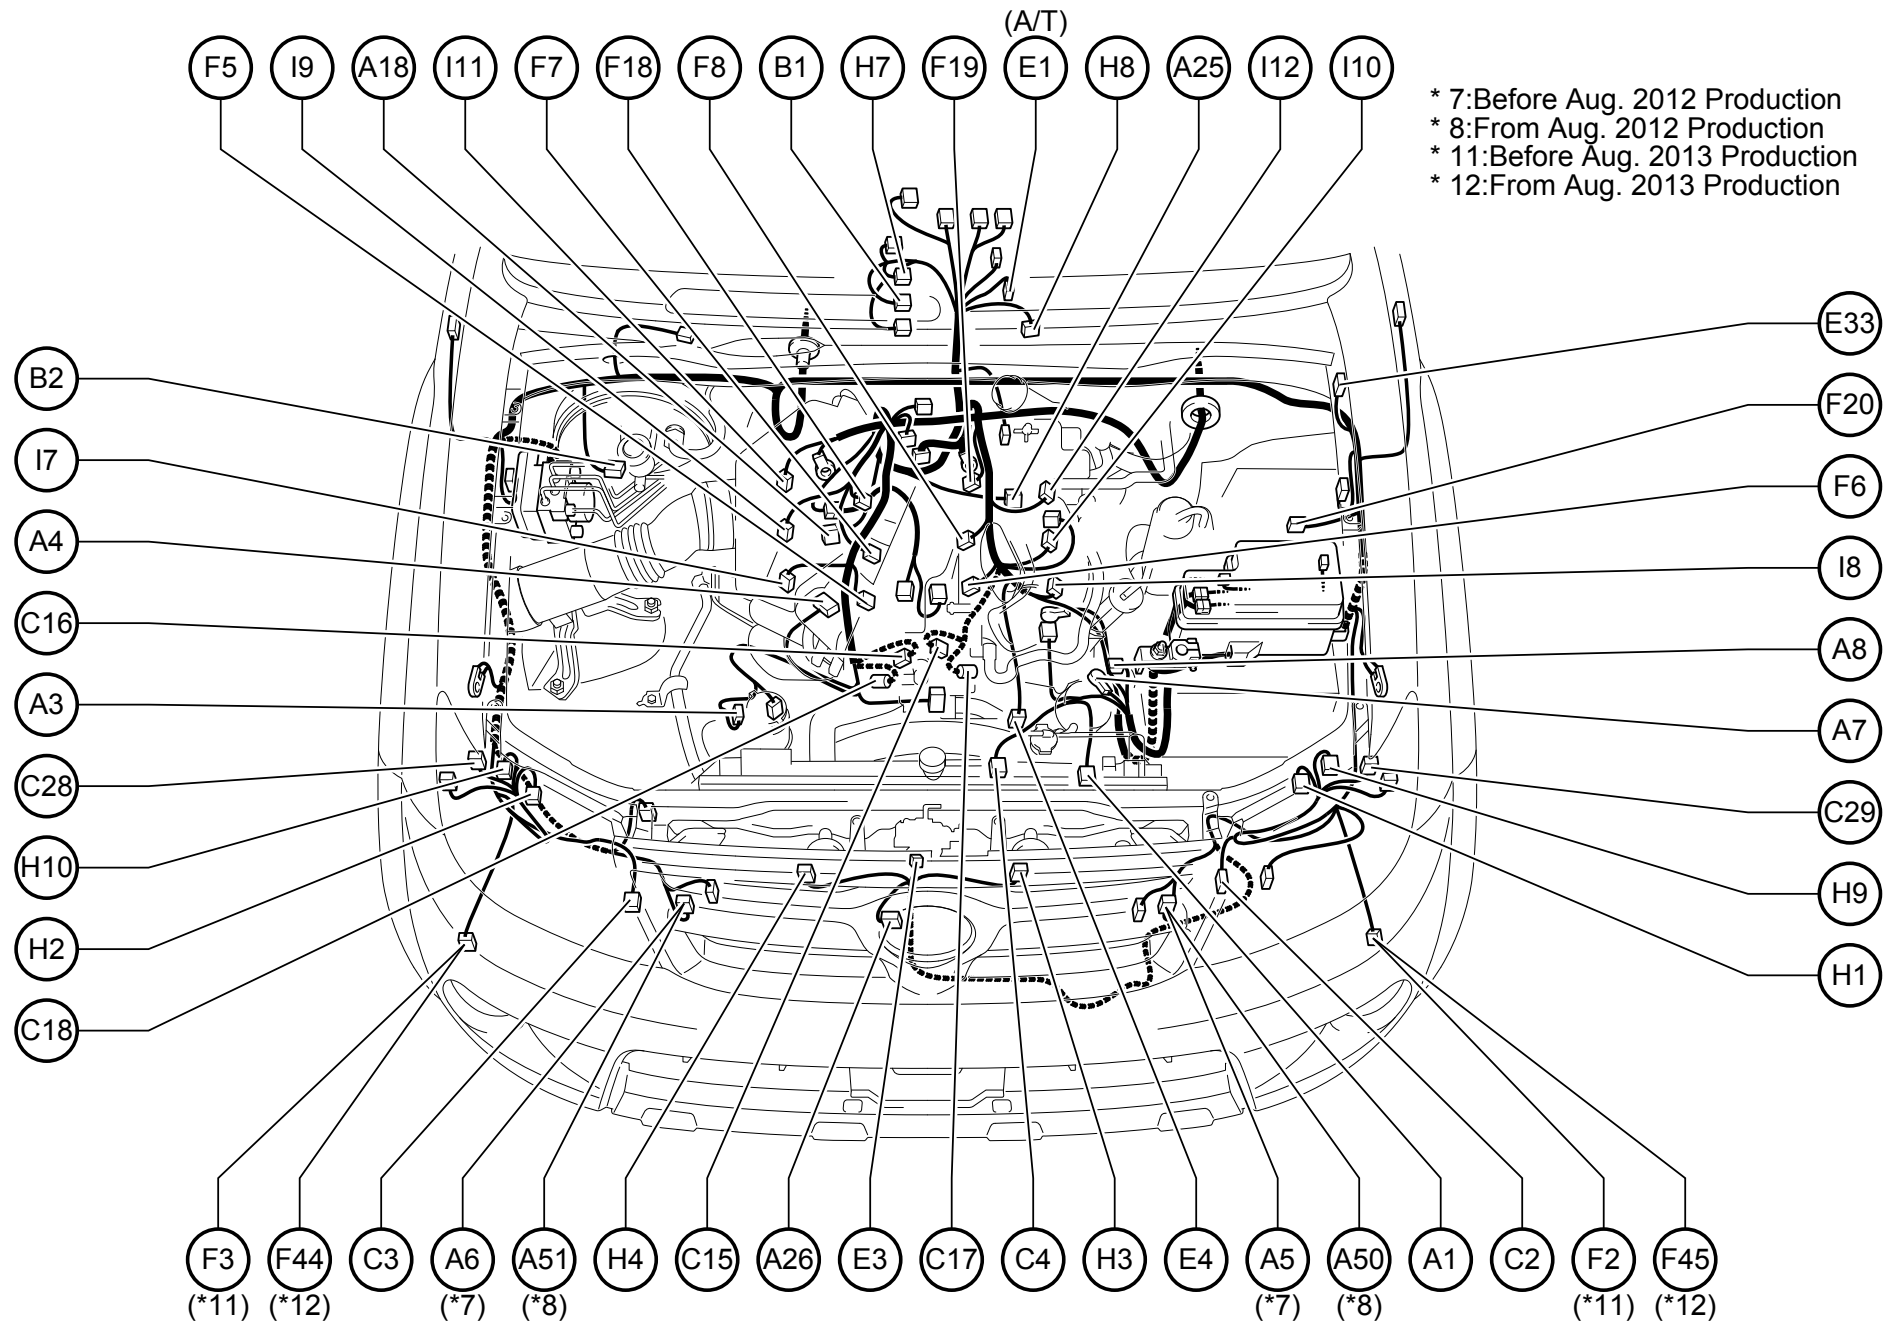

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 25 Air Fuel Ratio Sensor (Bank 2 Sensor 1)
- A 26 Ambient Temp. Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 15 Camshaft Timing Oil Control Valve (LH)
- C 16 Camshaft Timing Oil Control Valve (RH)
- C 17 VVT Sensor (Bank 2)
- C 18 VVT Sensor (Bank 1)
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

- E 1 ECT Solenoid
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor
- E 33 Engine Hood Courtesy SW (Interior Light)





- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)
- F 18 Fuel Injector (No.5)
- F 19 Fuel Injector (No.6)
- F 20 Fuel Pump Resistor
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)





















- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 8 Heated Oxygen Sensor (Bank 2 Sensor 2)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)









- I 7 Ignition Coil (No.1)
- I 8 Ignition Coil (No.2)
- I 9 Ignition Coil (No.3)
- I 10 Ignition Coil (No.4)
- I 11 Ignition Coil (No.5)
- I 12 Ignition Coil (No.6)

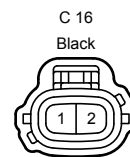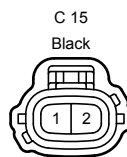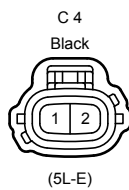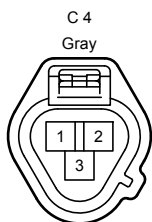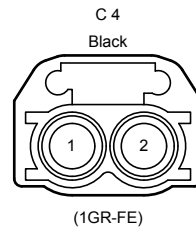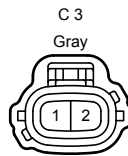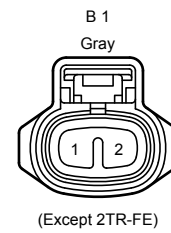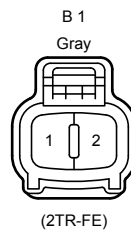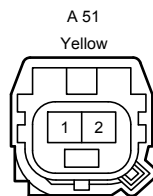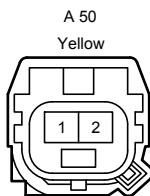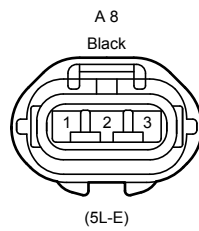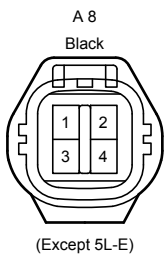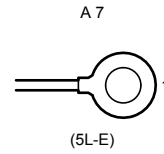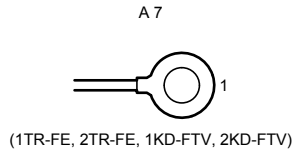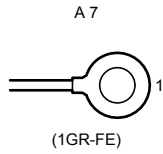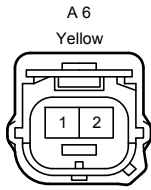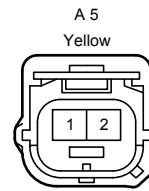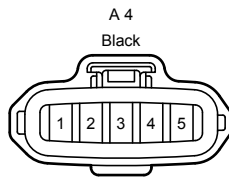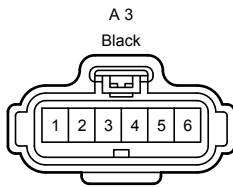


(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

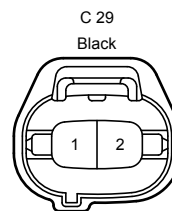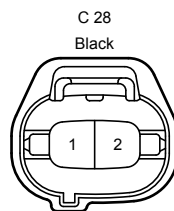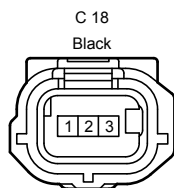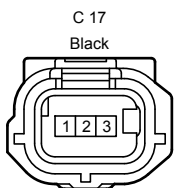    

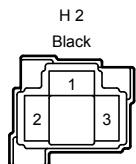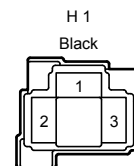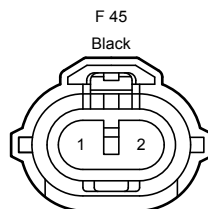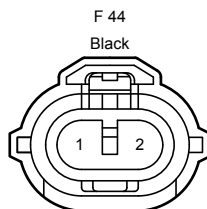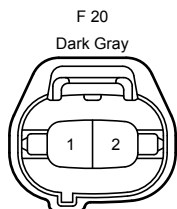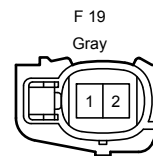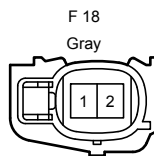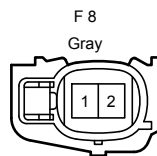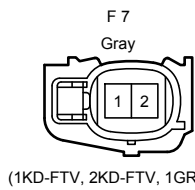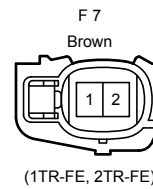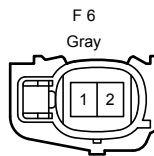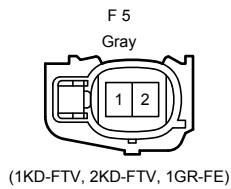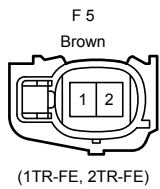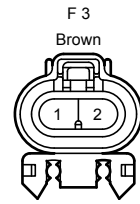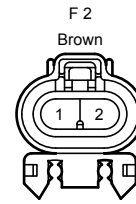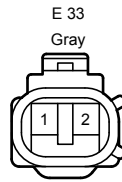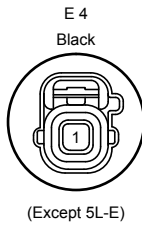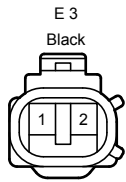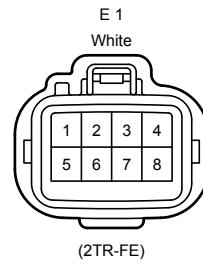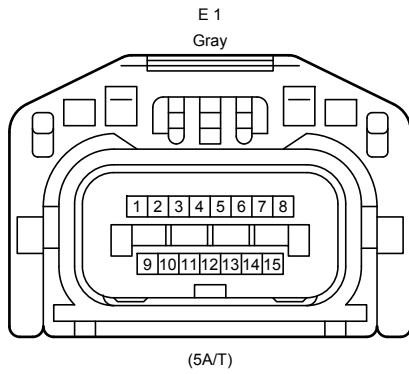                    

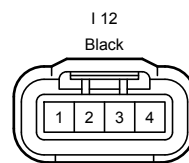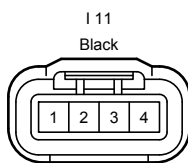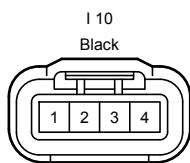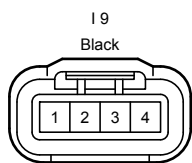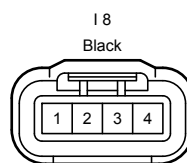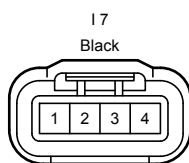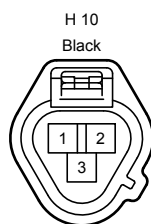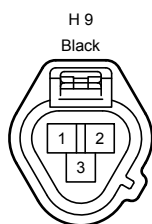        

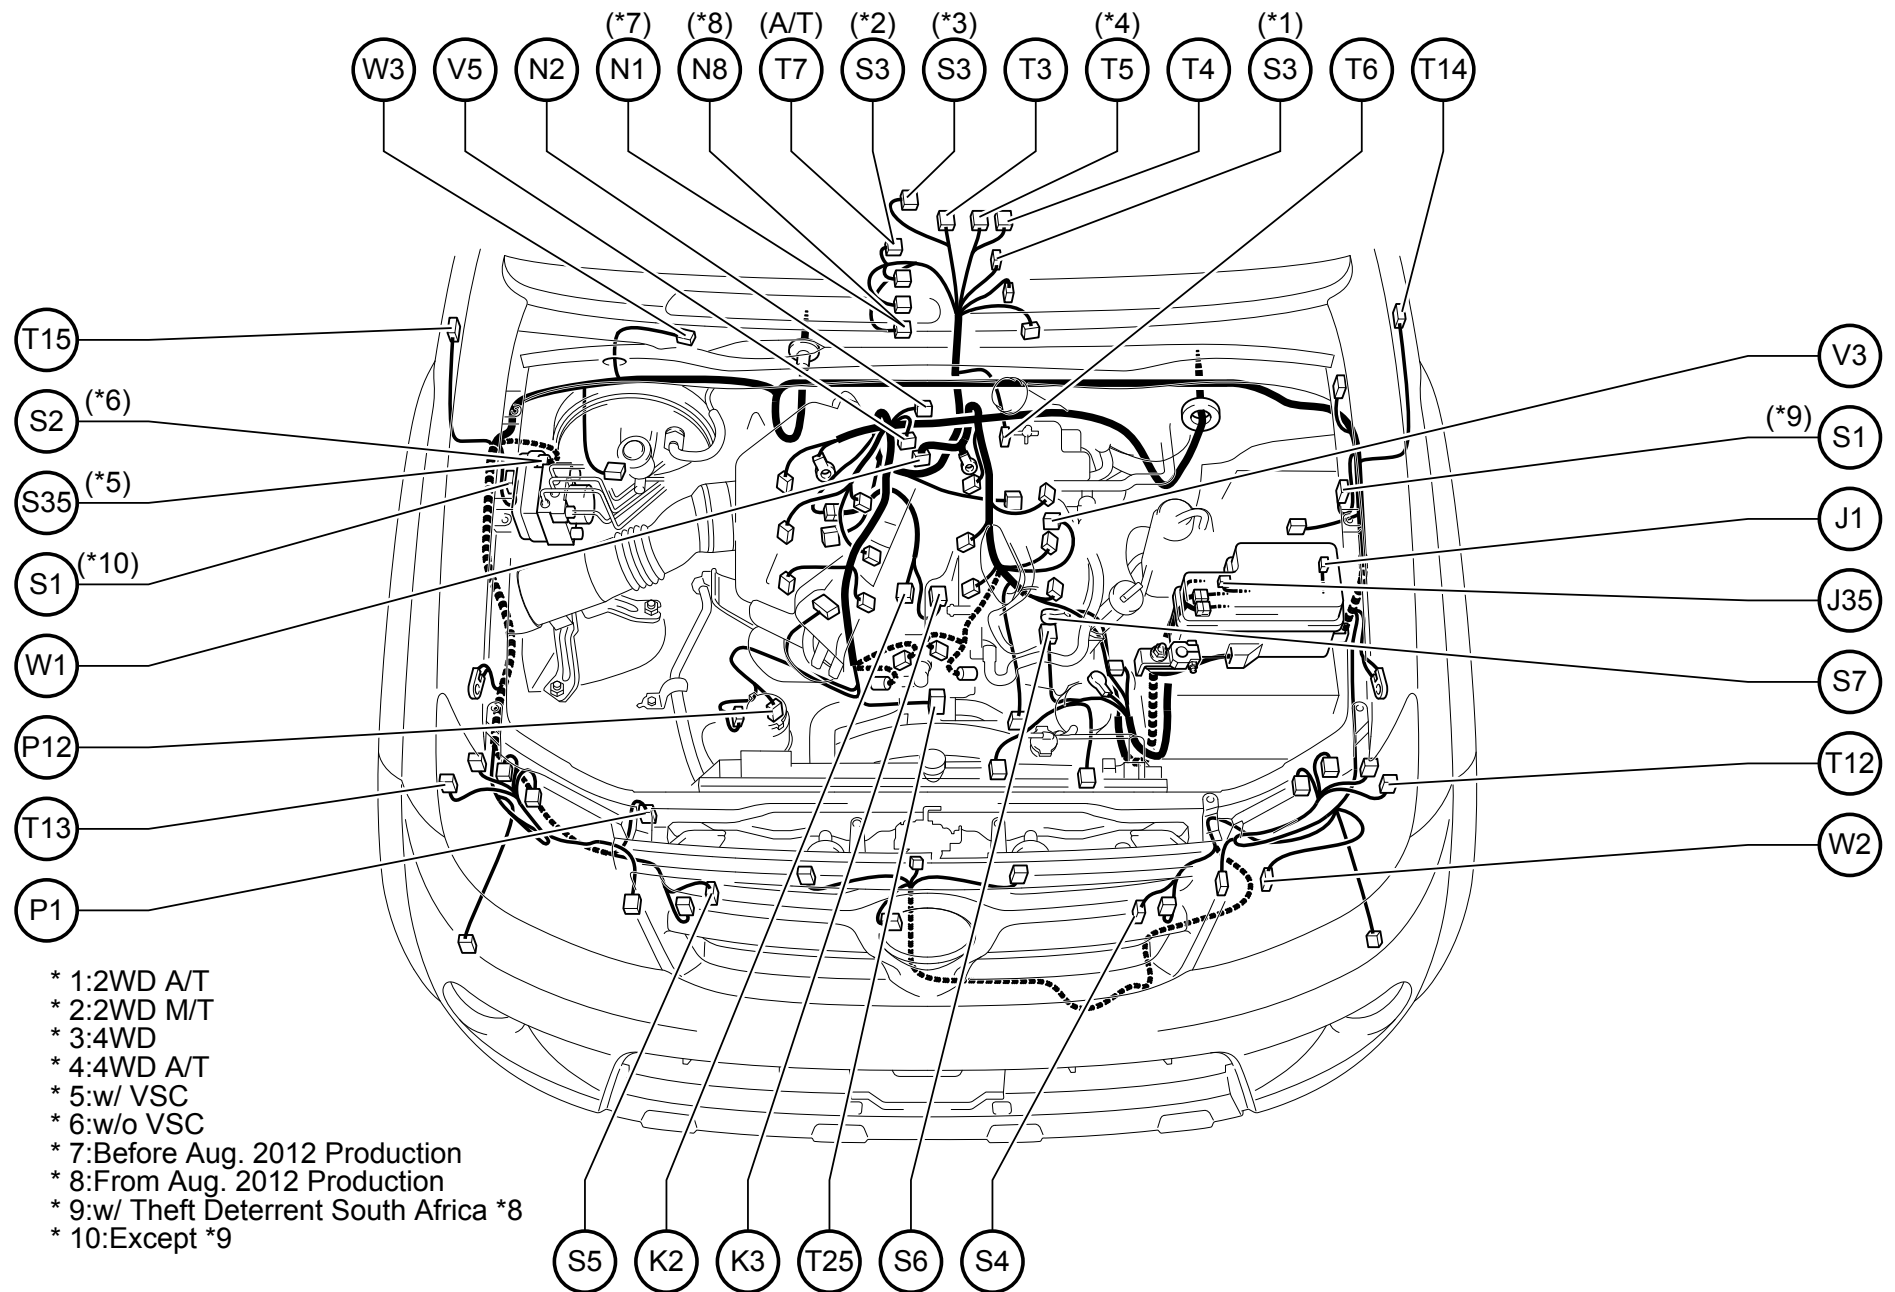 

- J 1 Junction Connector
- J 35 Junction Connector

- K 2 Knock Control Sensor (Bank 1)
- K 3 Knock Control Sensor (Bank 2)

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition)
- N 8 Park/Neutral Position SW

- P 1 Pressure SW
- P 12 Power Steering Oil Pressure SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 35 Skid Control ECU with Actuator

- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly

- V 3 VSV (Purge)
- V 5 VSV (ACIS)


- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment <RHD 1GR-FE>

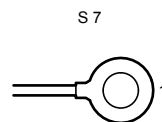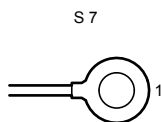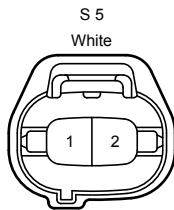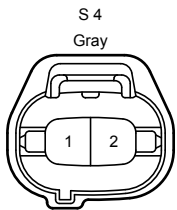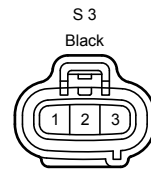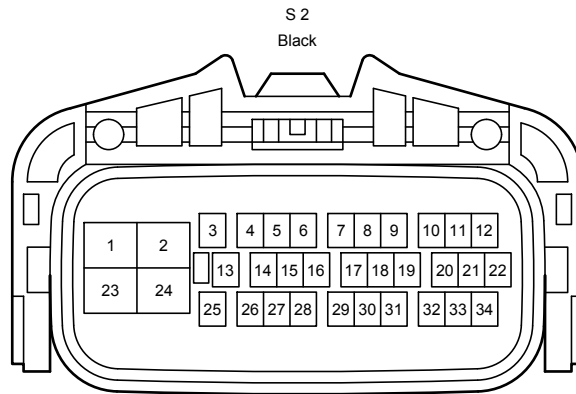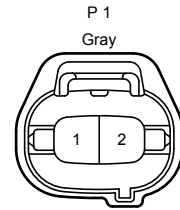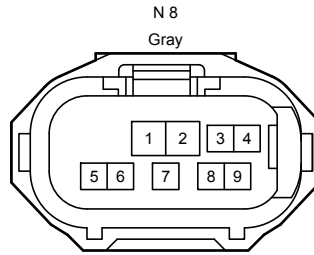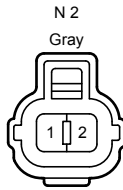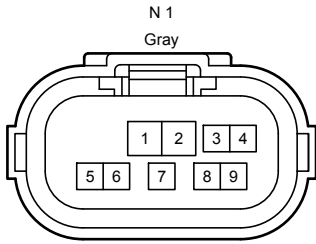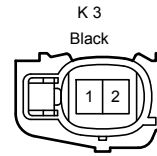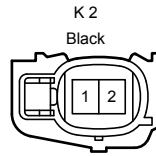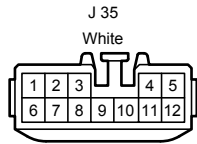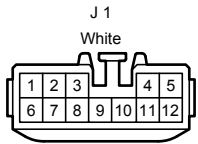


(South Africa 1GR-FE, Australia Before Aug. 2009 Production 1GR-FE)









 
(1TR-FE, 2TR-FE, Australia From Aug. 2009 Production 1GR-FE)

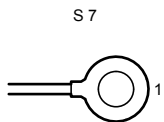

 
(1KD-FTV, 2KD-FTV Except Cold Area Spec., 5L-E)

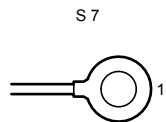


(2KD-FTV Cold Area Spec.)

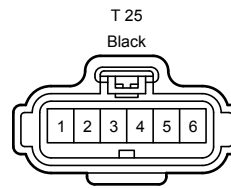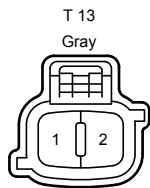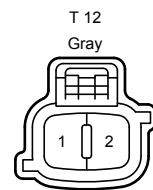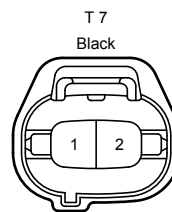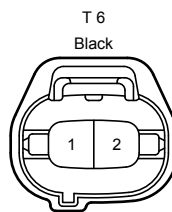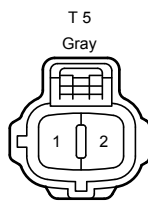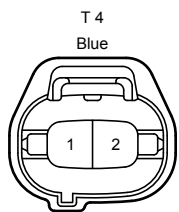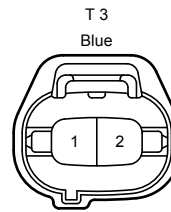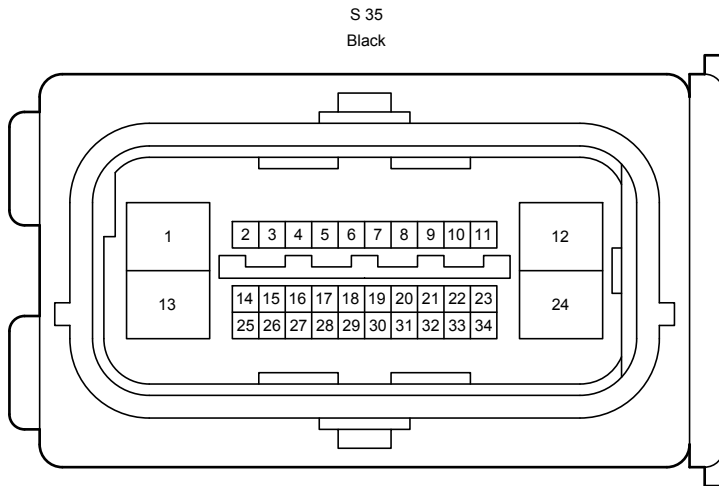         


(1GR-FE, 1TR-FE, 2TR-FE)

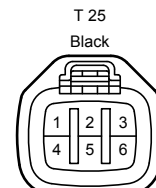 





(5L-E)

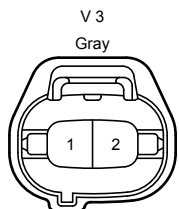 



(1GR-FE)

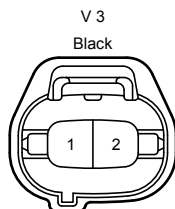 


(1TR-FE, 2TR-FE)

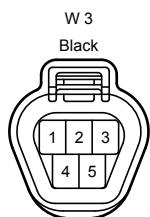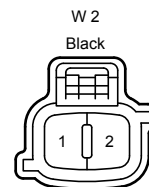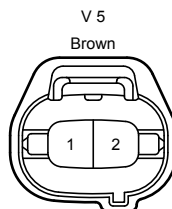    

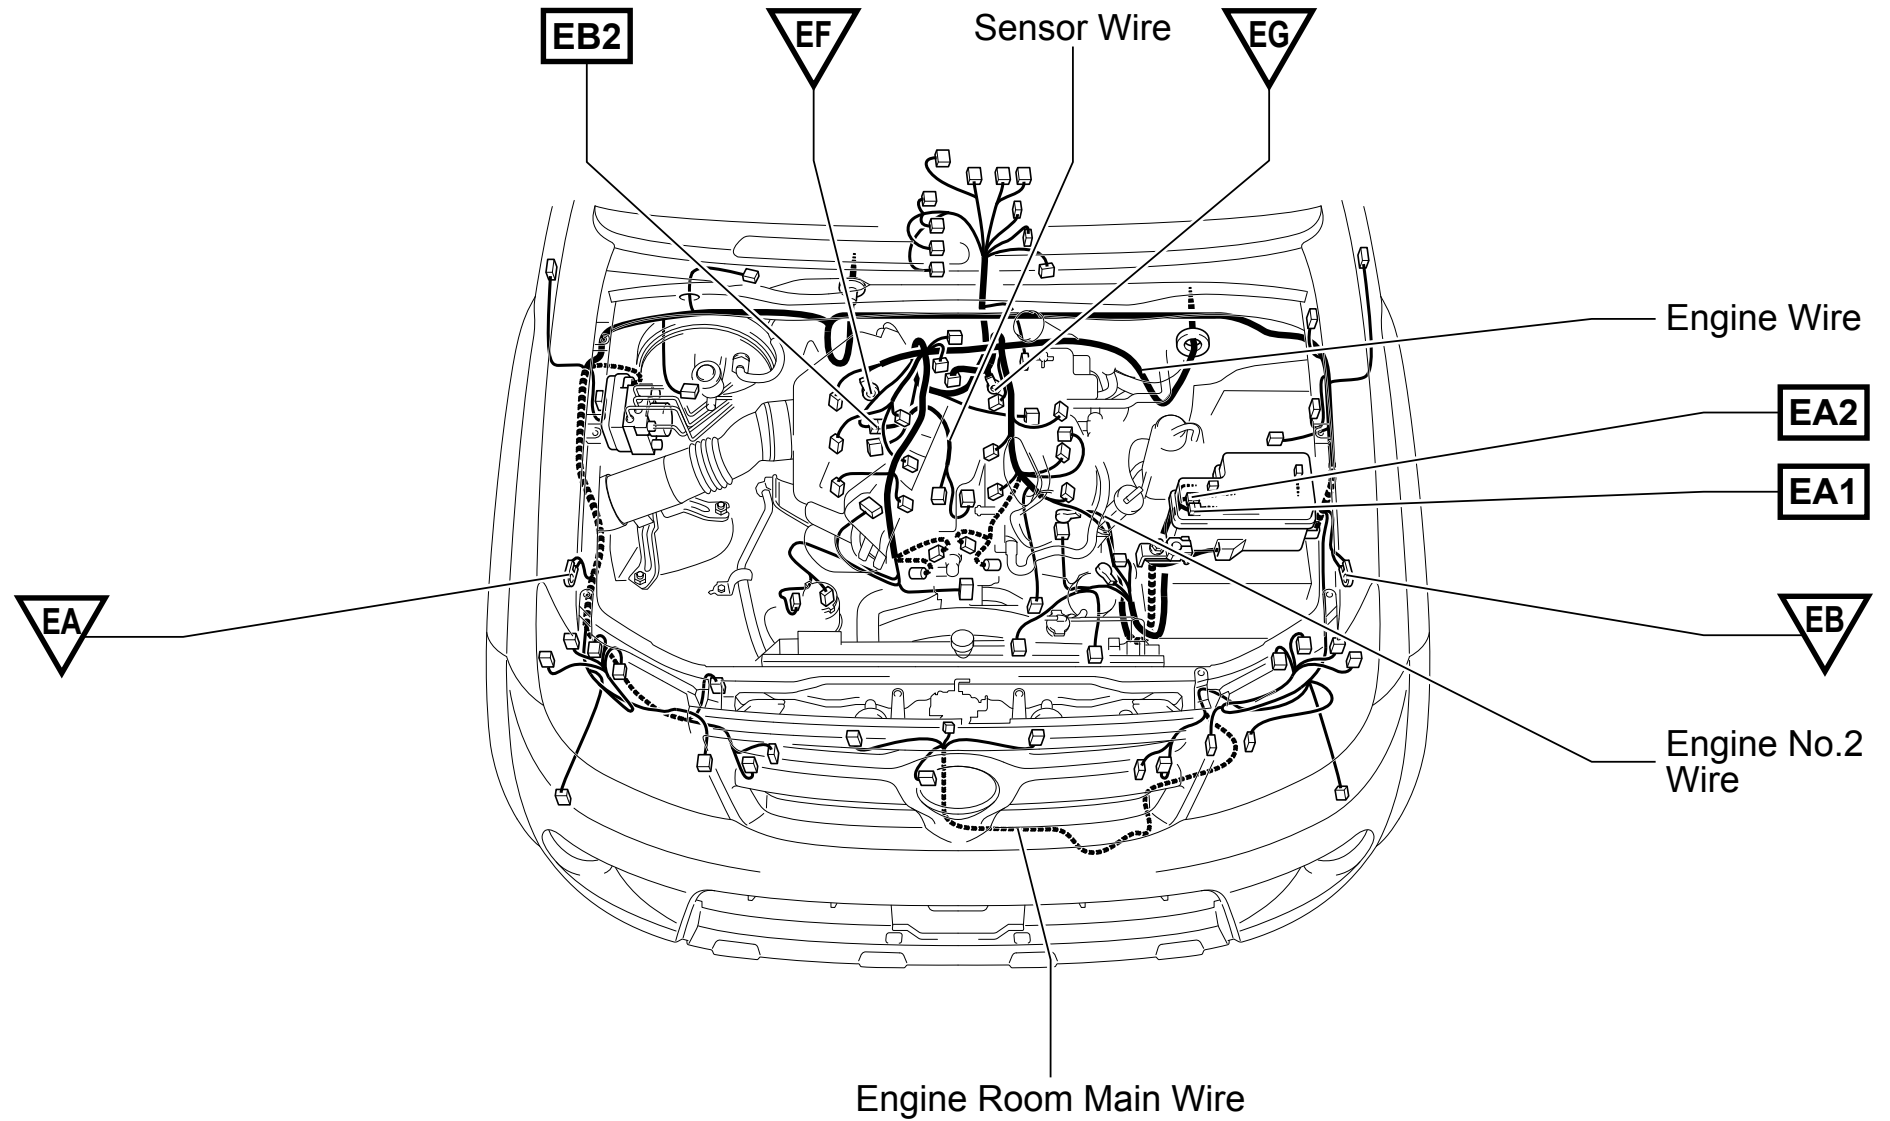 

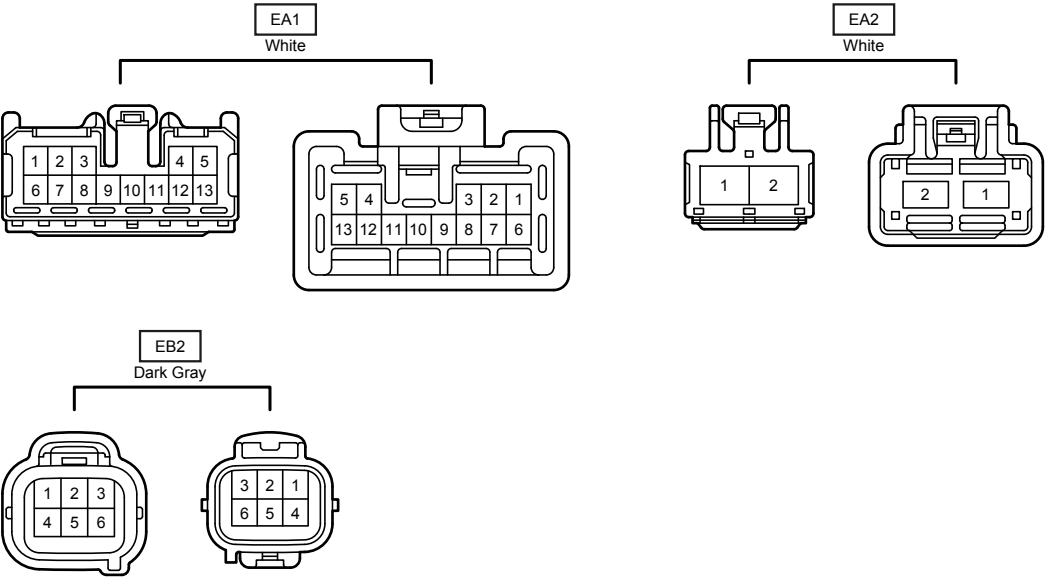 

 - * 1: Before Aug. 2012 Production
- * 2: From Aug. 2012 Production
- * 3: Before Aug. 2013 Production
- * 4: From Aug. 2013 Production

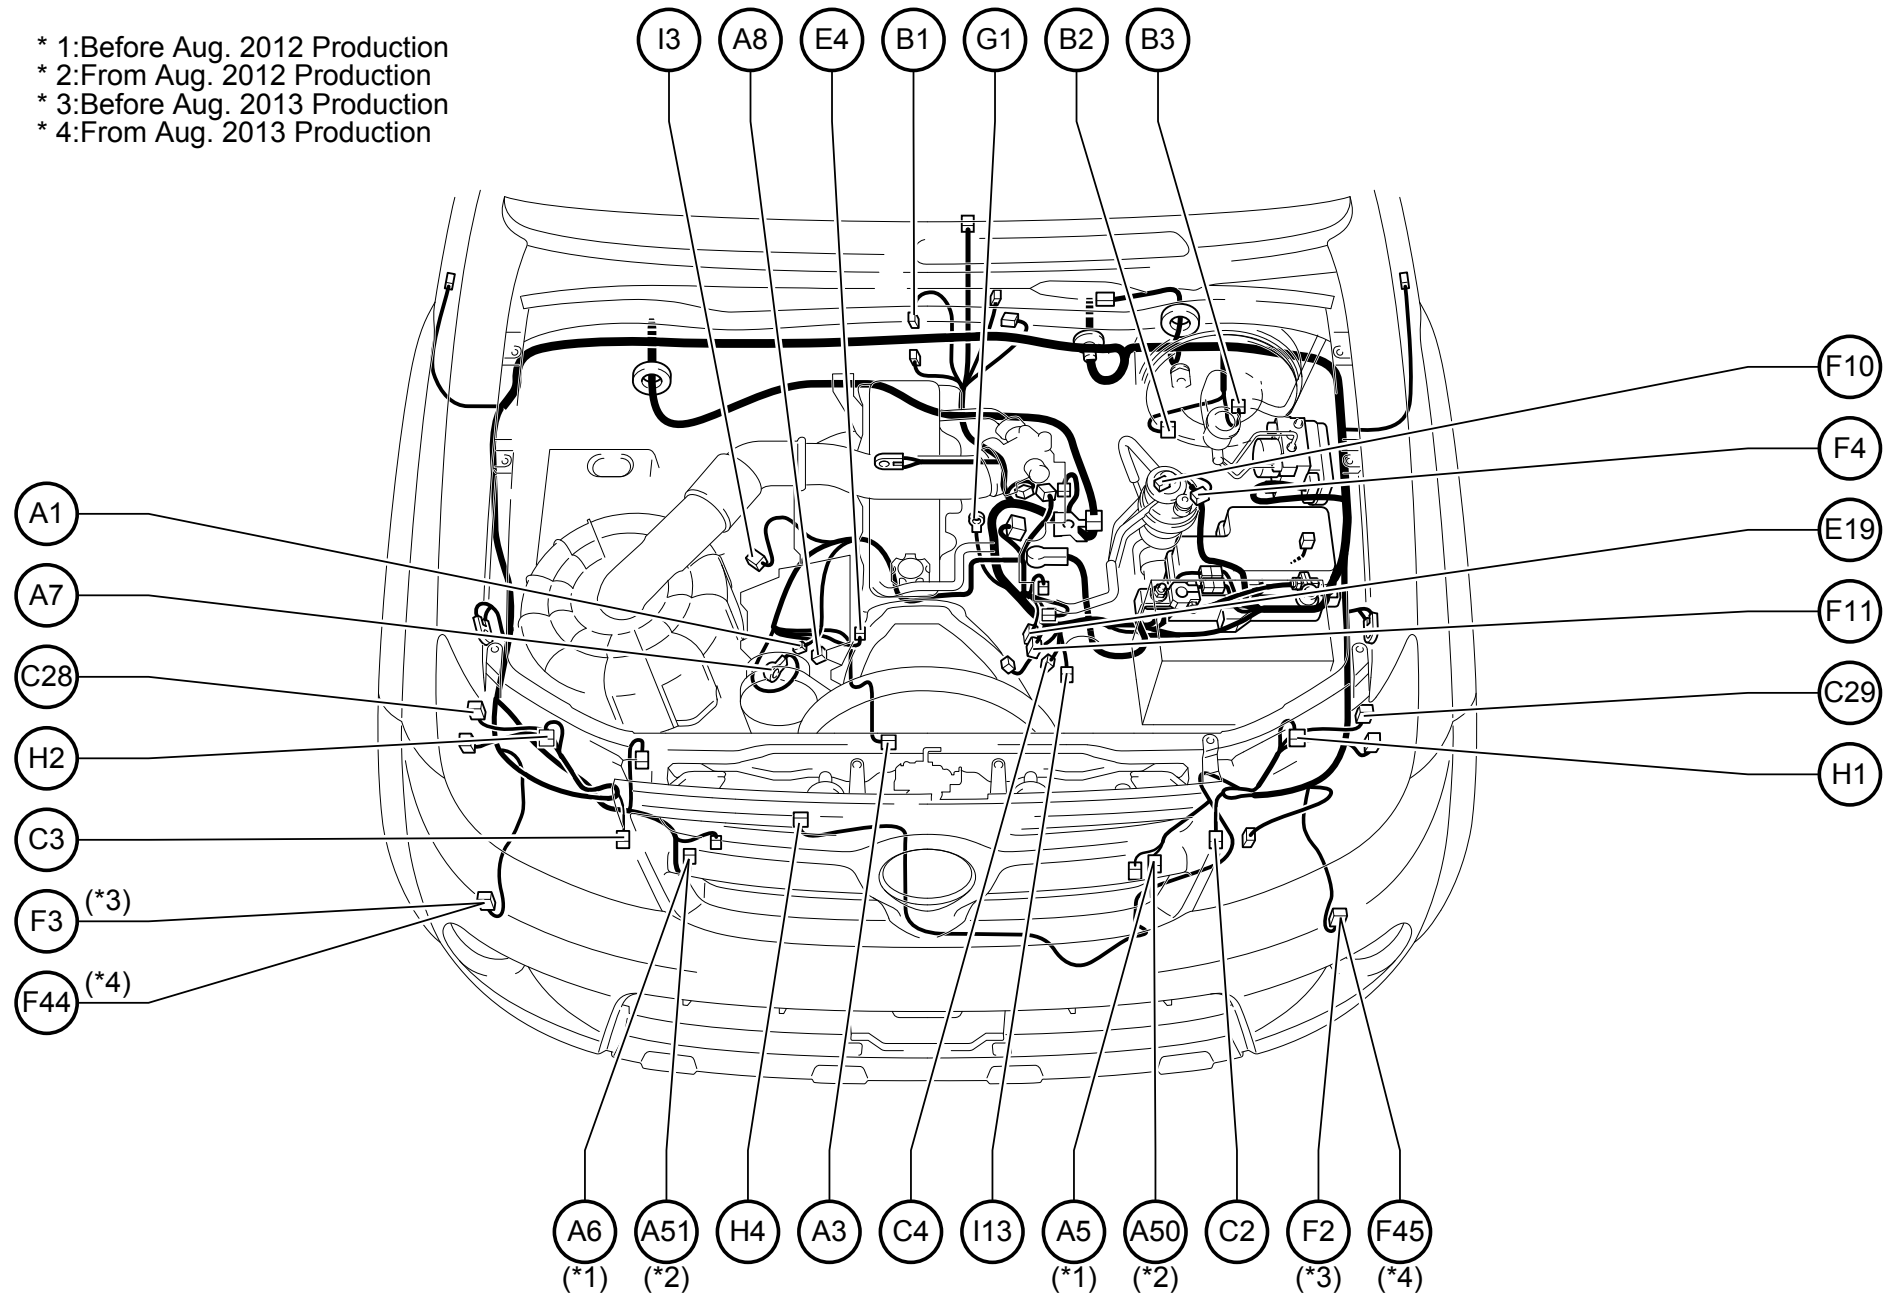

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

- E 4 Engine Oil Pressure Sensor
- E 19 Engine Speed Sensor

 
- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 4 Fuel Filter Warning SW
- F 10 Fuel Sedimentary Level Warning SW
- F 11 Fuel Temp. Sensor
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

 
 
 
 
 
 
 
- G 1 Glow Plug

 
- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 4 Horn (Low)

- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 13 Injection Pump Assembly

























Position of Parts in Engine Compartment <LHD 5L-E>

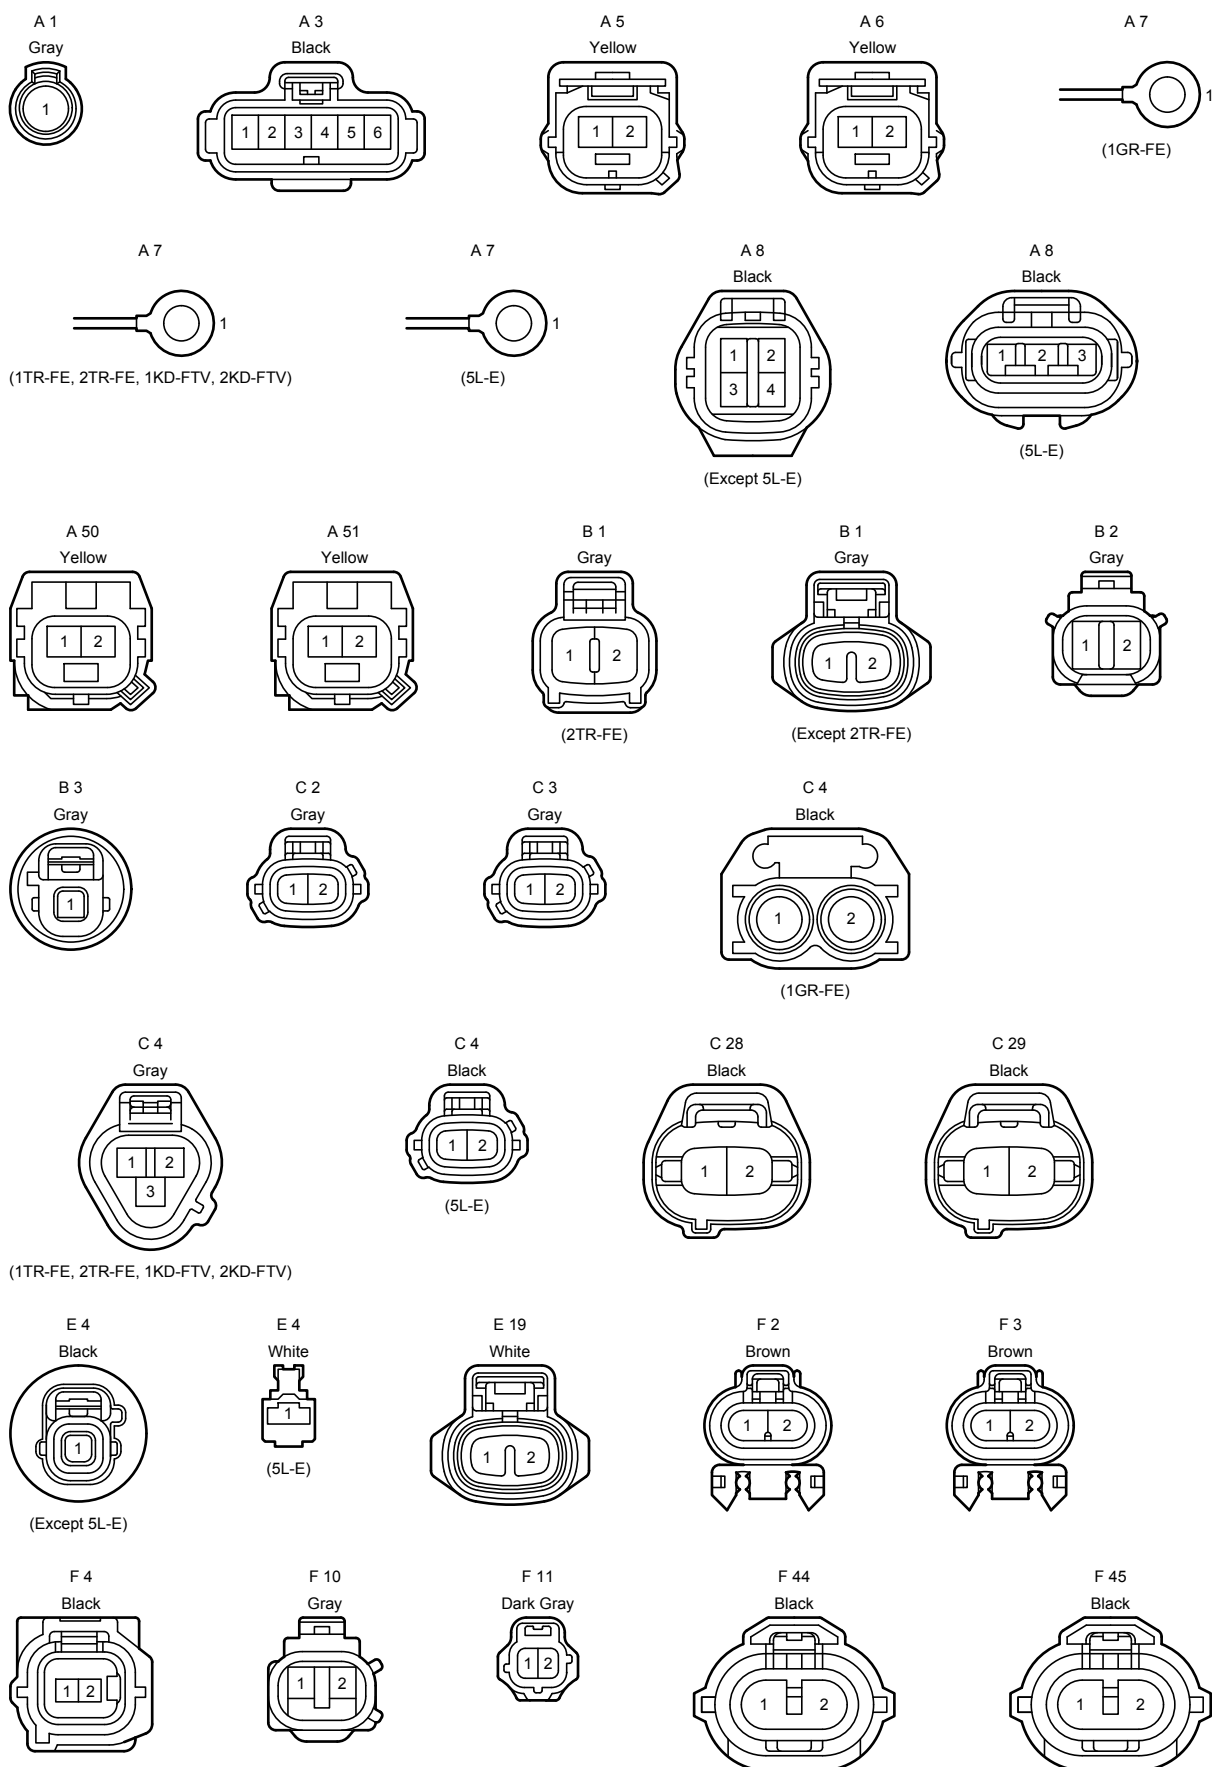


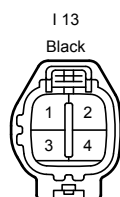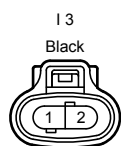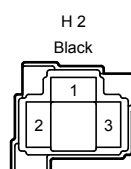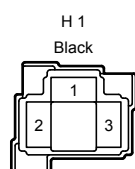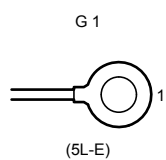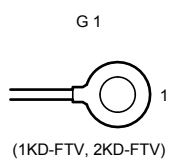


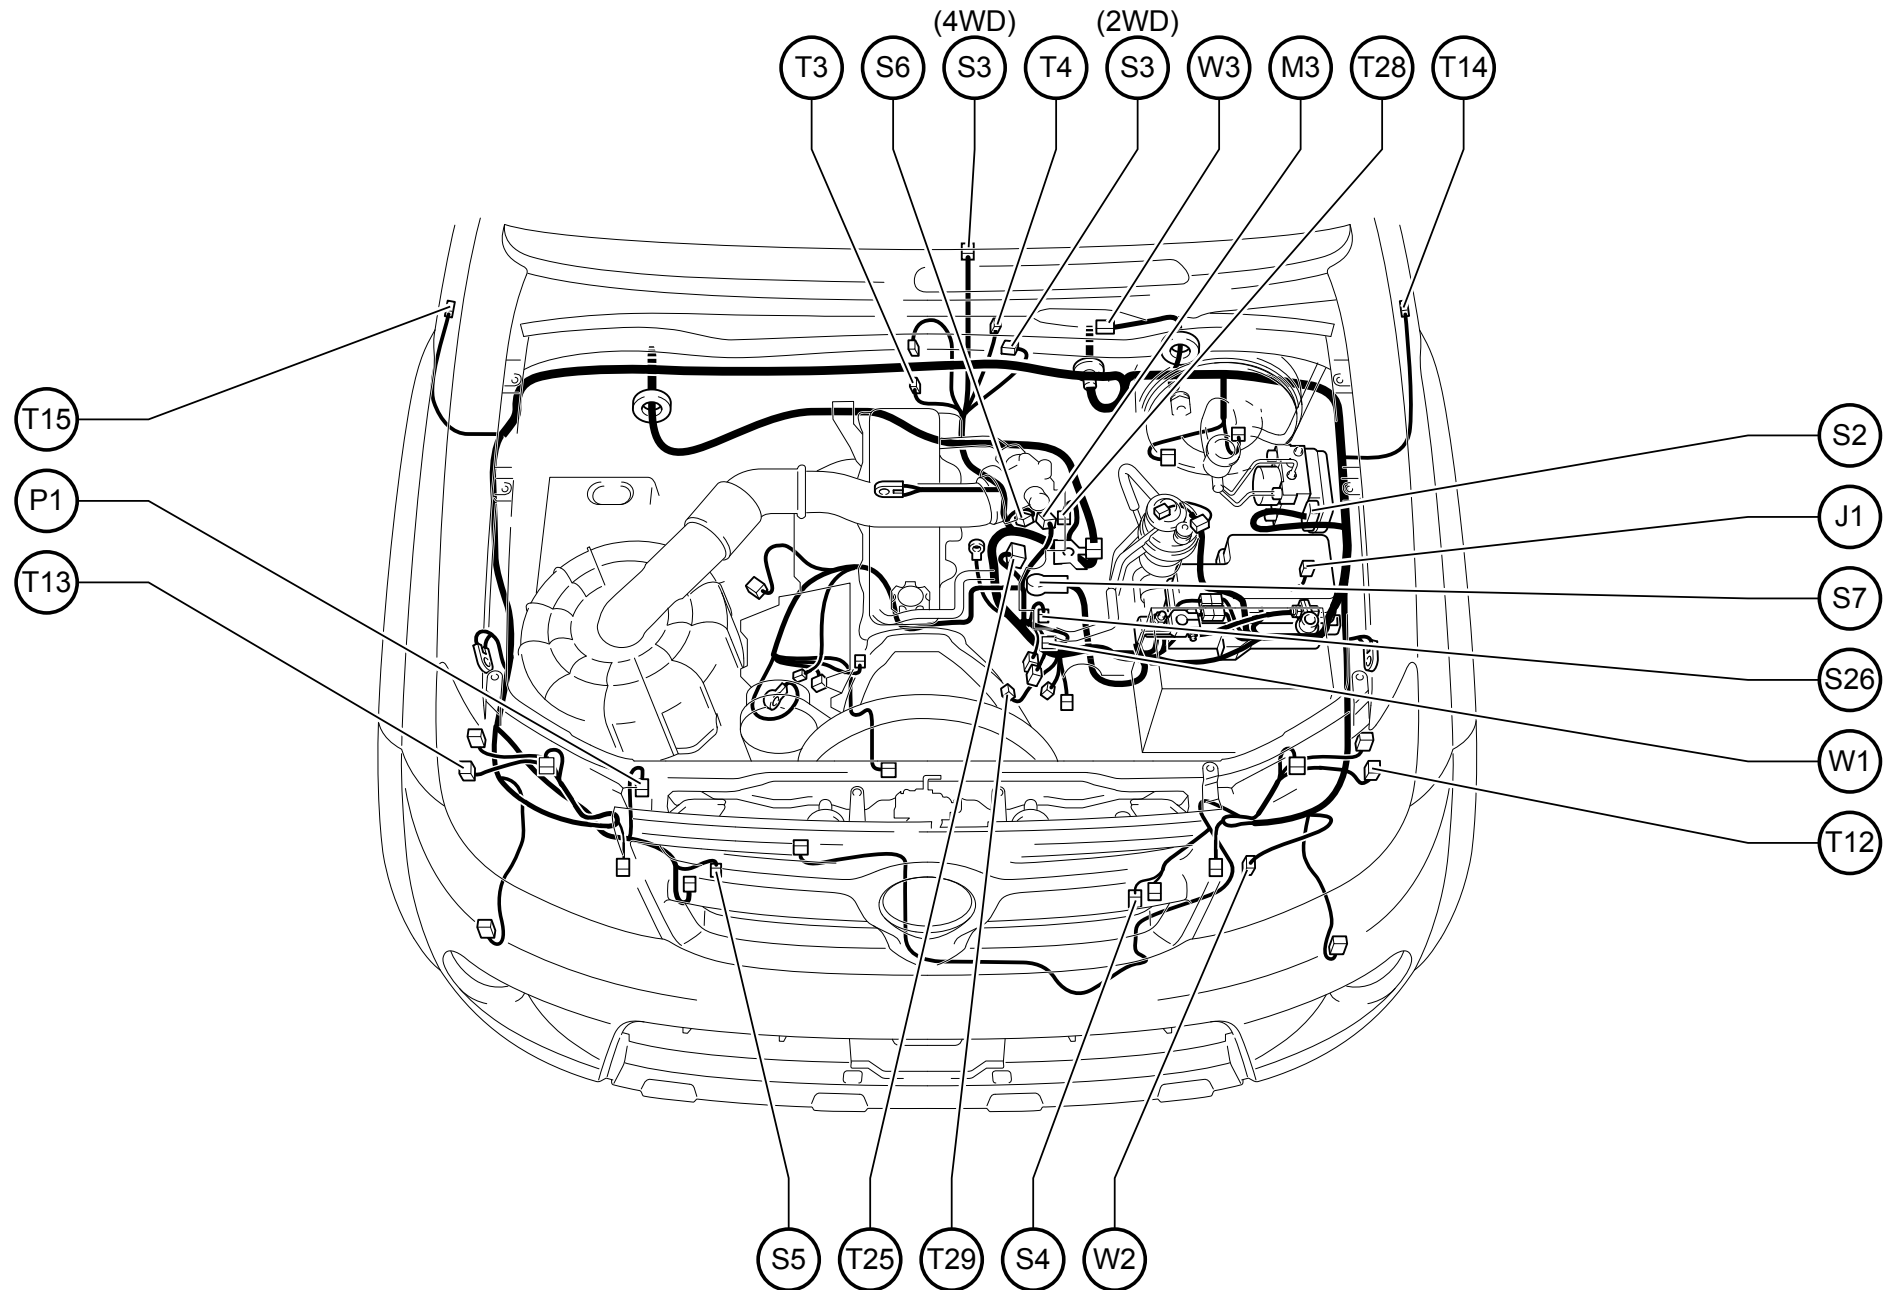


- J 1 Junction Connector
- M 3 Manifold Absolute Pressure Sensor
- P 1 Pressure SW
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 26 Spill Control Valve
- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly
- T 28 Throttle Position SW
- T 29 Timing Control Valve
- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

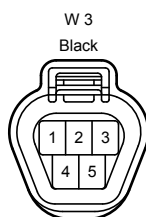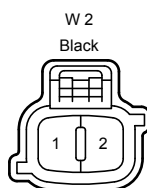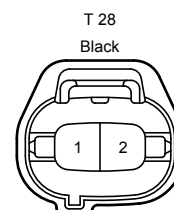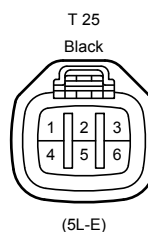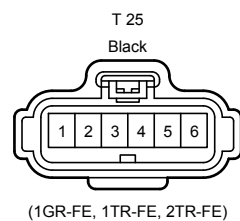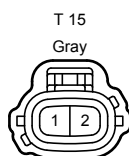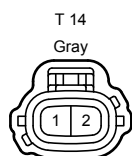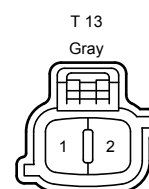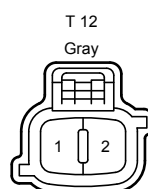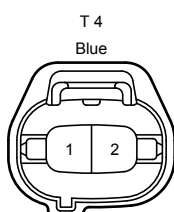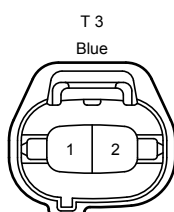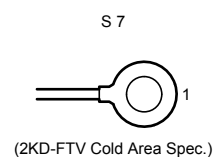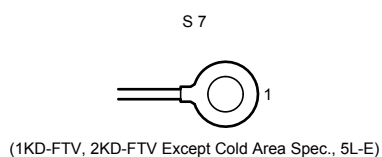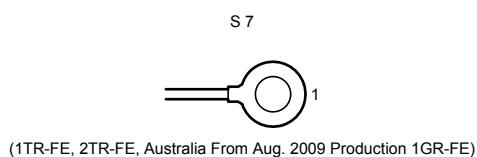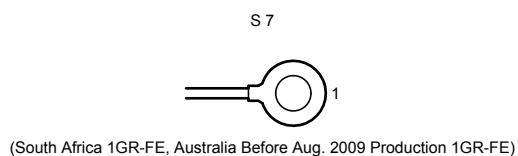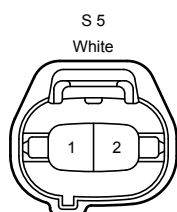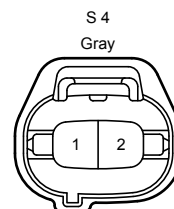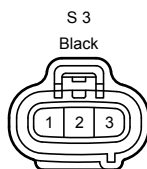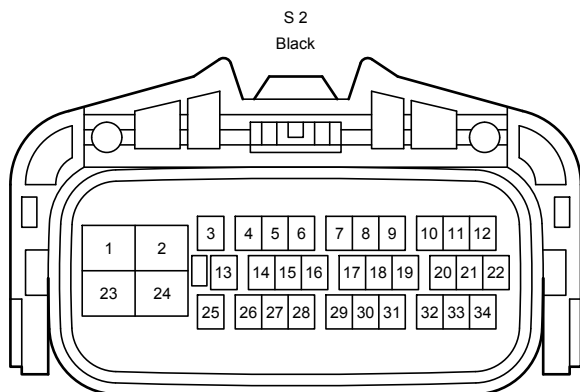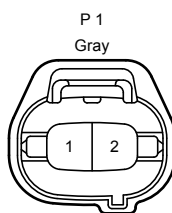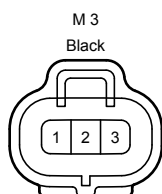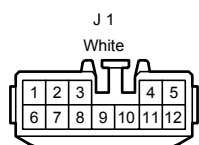                        

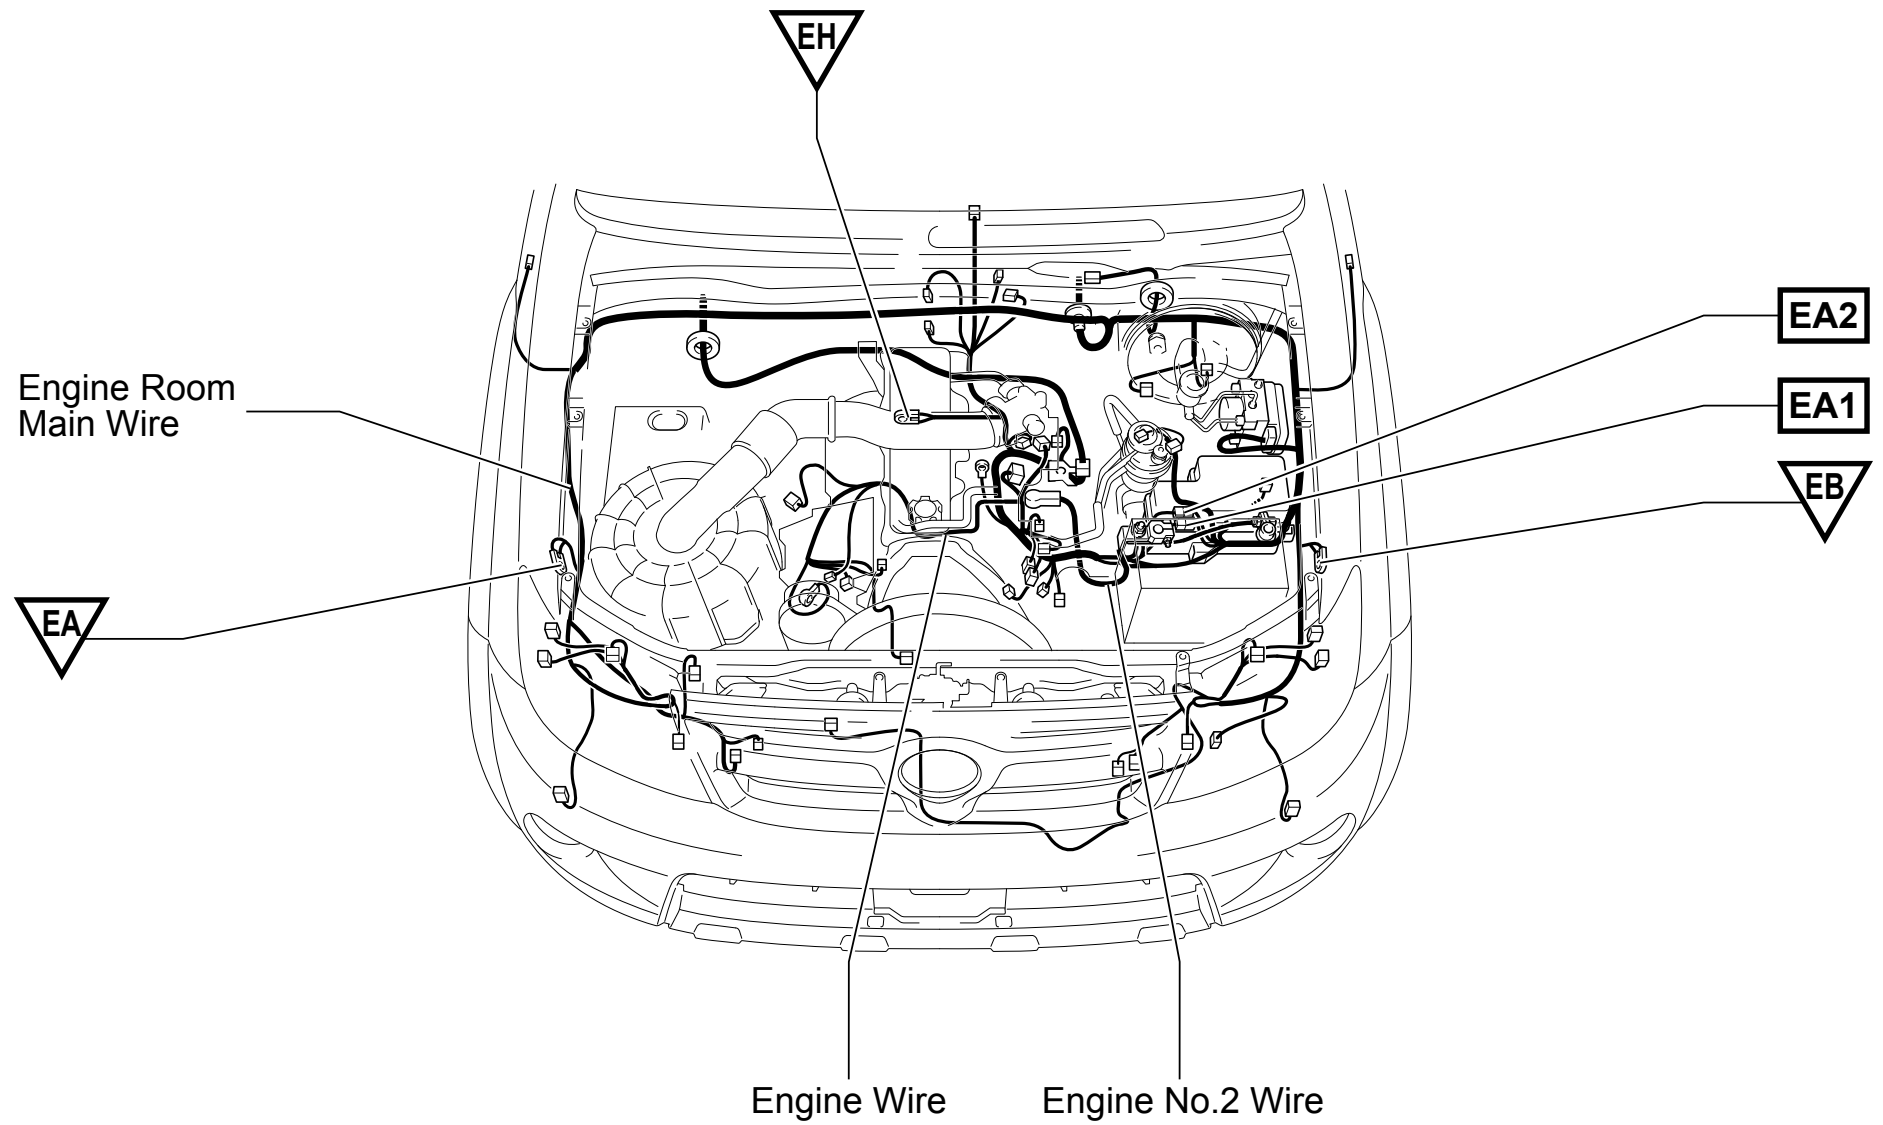 

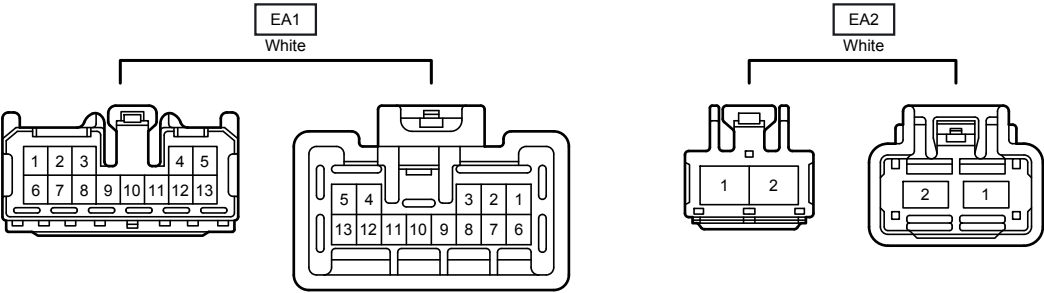 

 - * 1: Before Aug. 2012 Production
- * 2: From Aug. 2012 Production

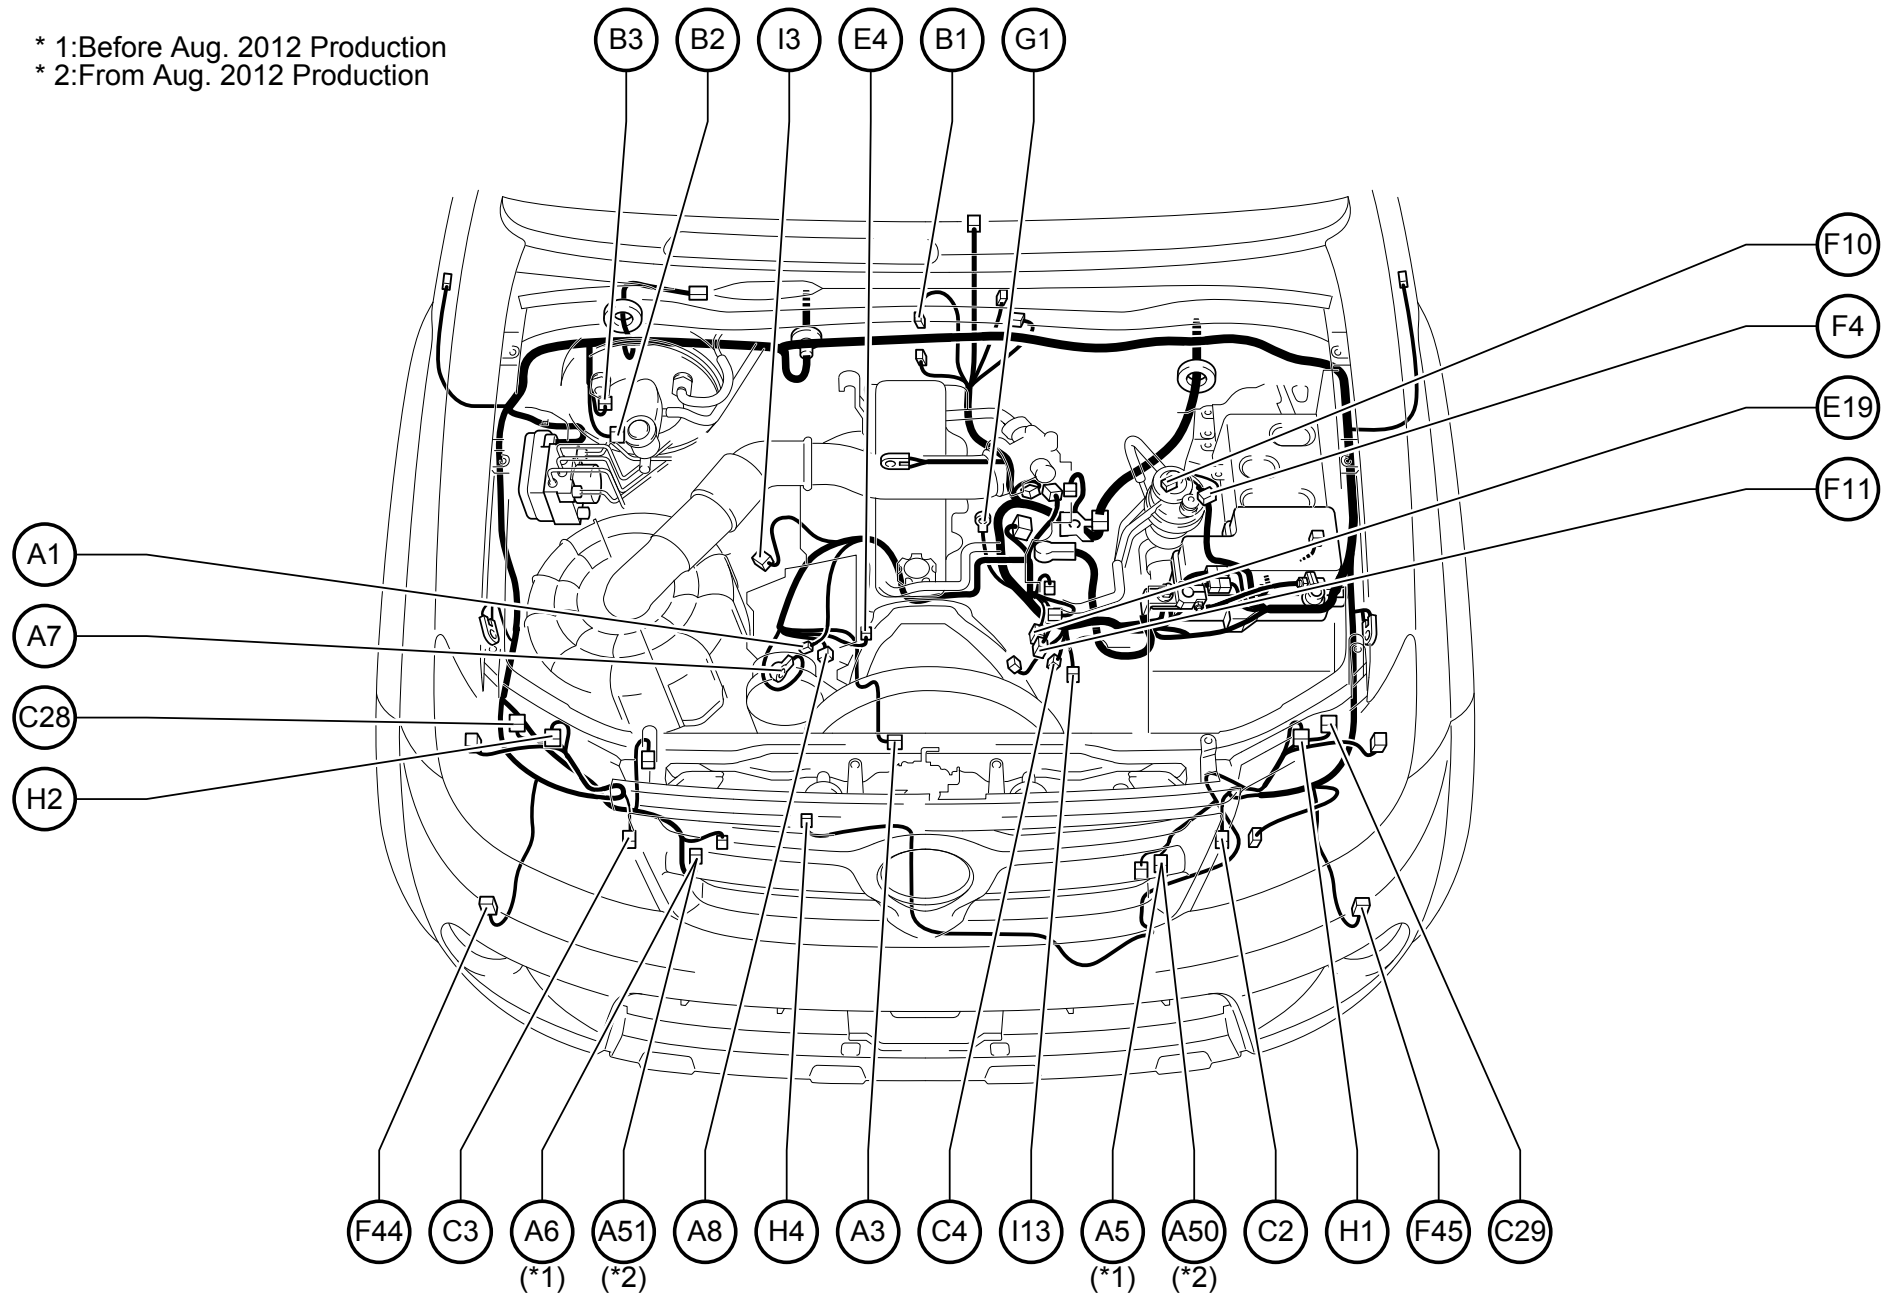

- A 1 A/C Compressor
- A 3 ADD Actuator
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW

- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

- E 4 Engine Oil Pressure Sensor
- E 19 Engine Speed Sensor

 
- F 4 Fuel Filter Warning SW
- F 10 Fuel Sedimentary Level Warning SW
- F 11 Fuel Temp. Sensor
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- G 1 Glow Plug






- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 4 Horn (Low)


- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 13 Injection Pump Assembly

Position of Parts in Engine Compartment <RHD 5L-E>
























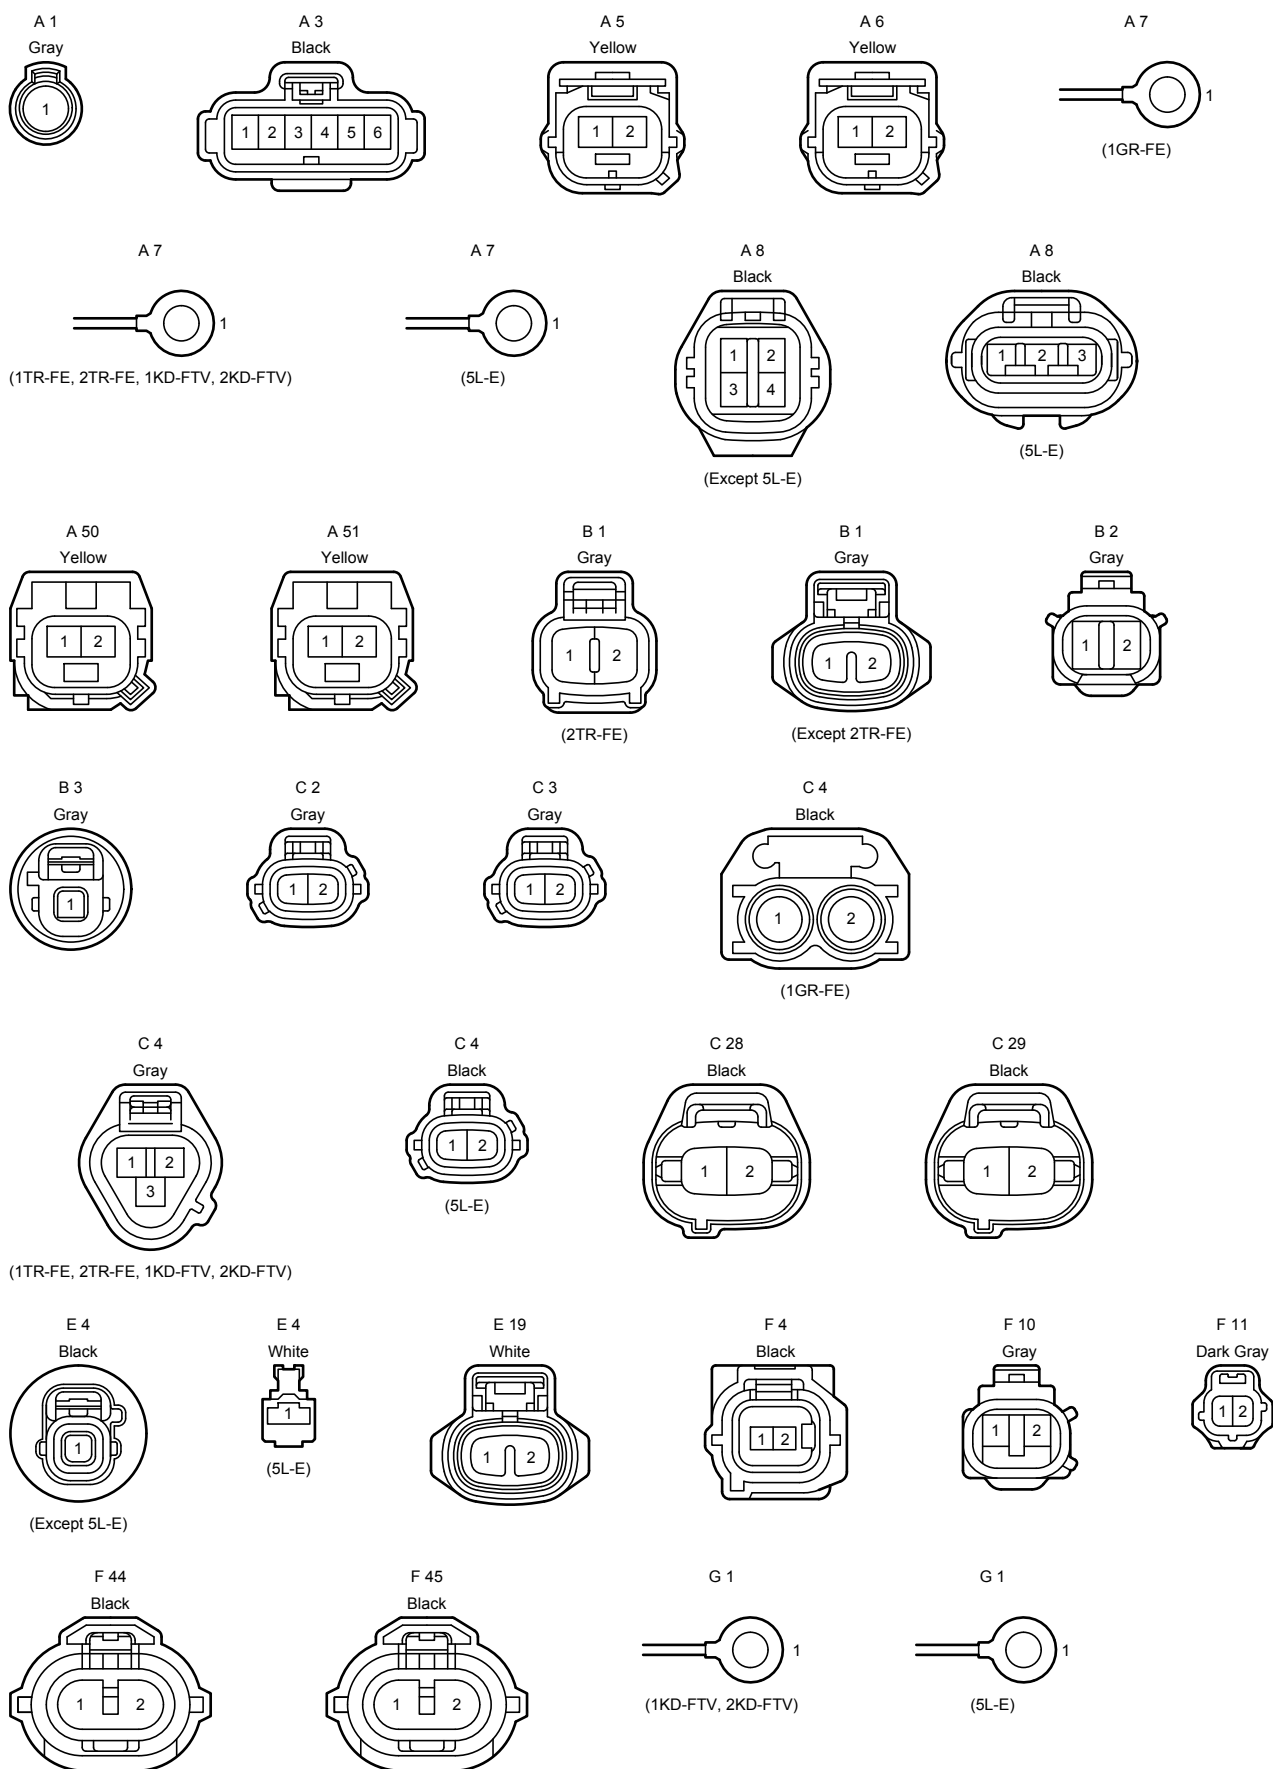


      
Position of Parts in Engine Compartment <RHD 5L-E>

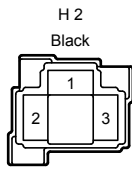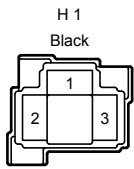


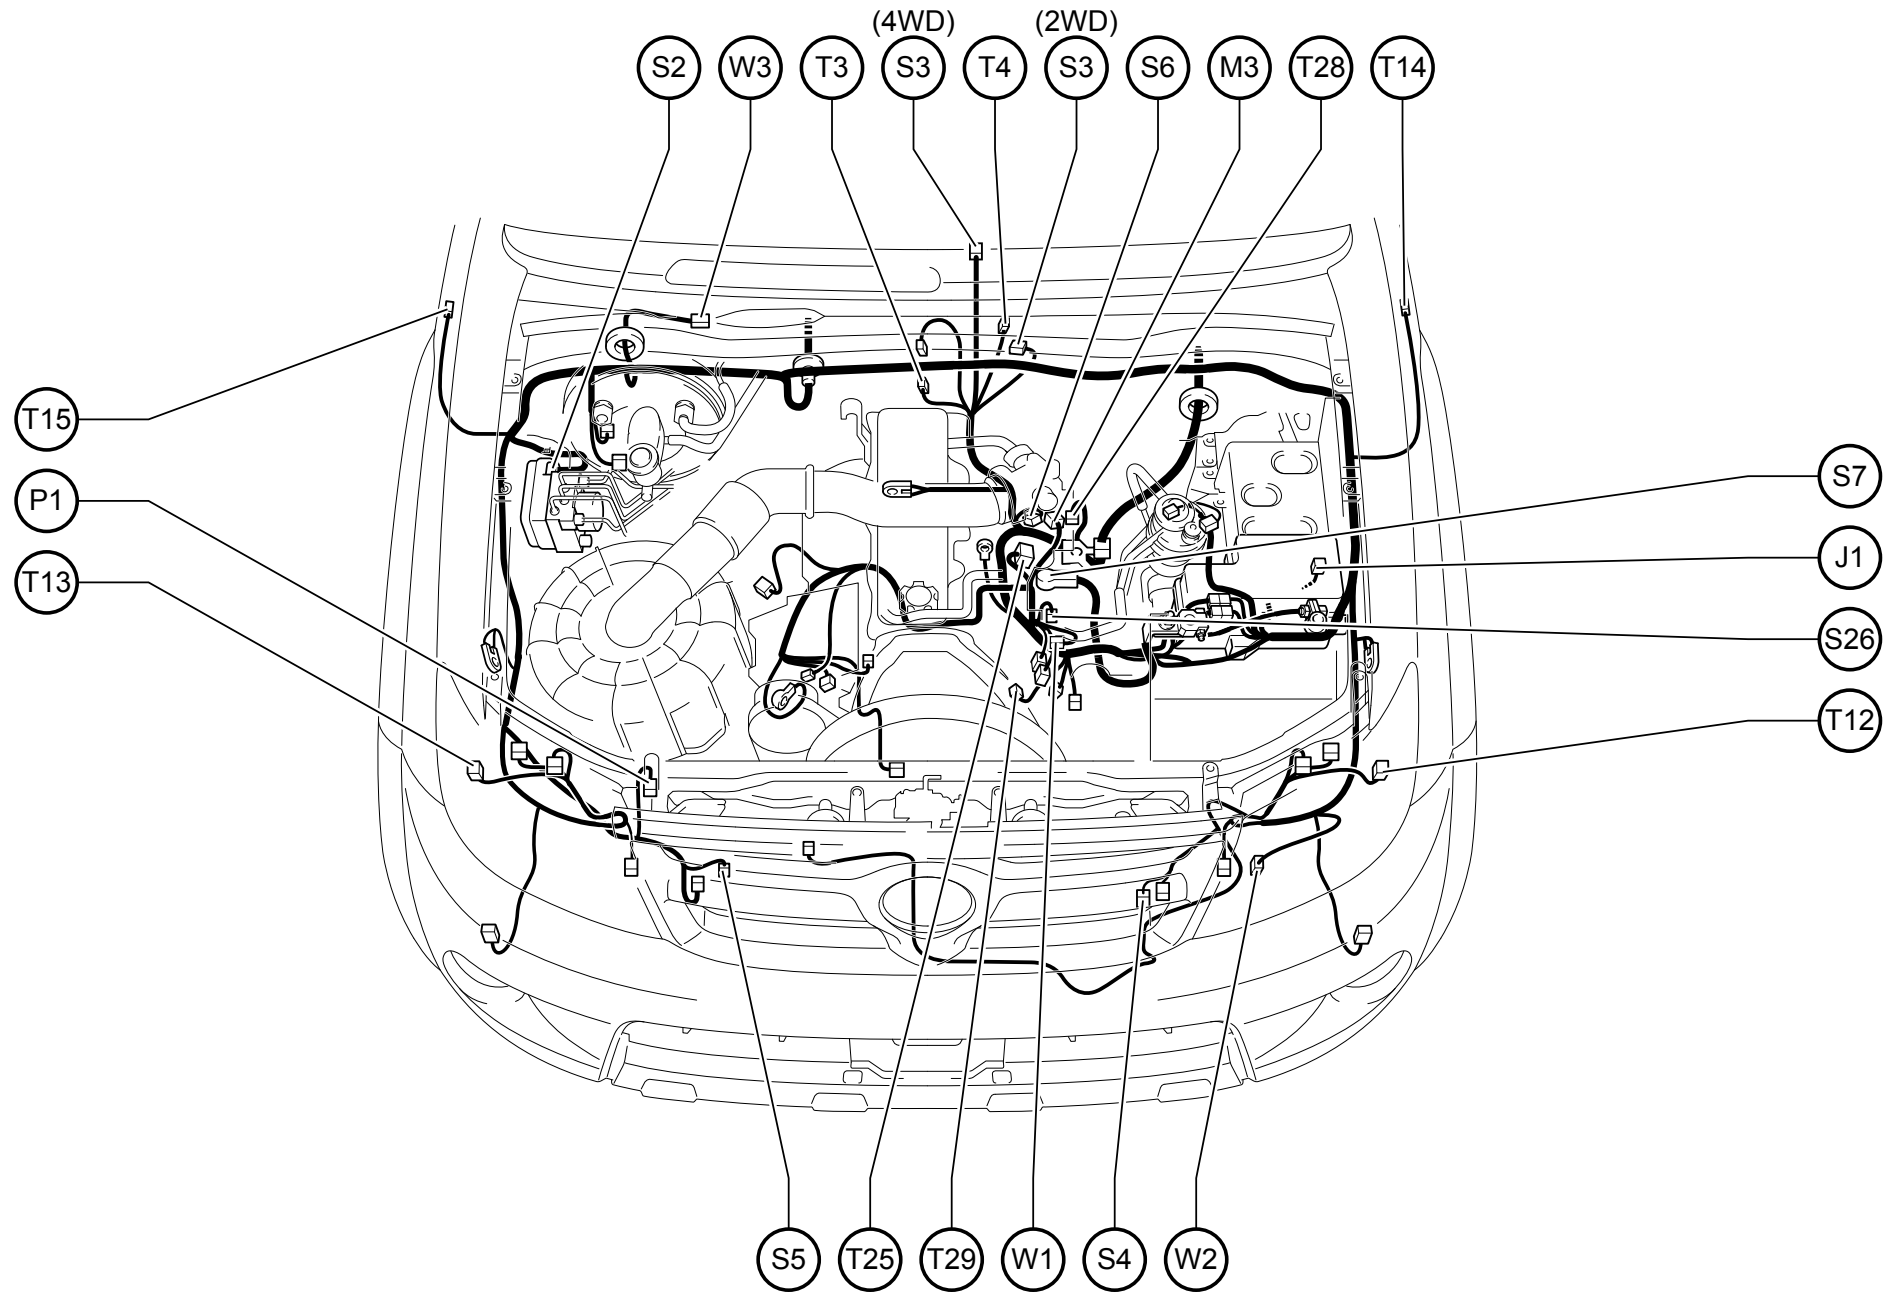


- J 1 Junction Connector
- M 3 Manifold Absolute Pressure Sensor
- P 1 Pressure SW
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 26 Spill Control Valve
- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly
- T 28 Throttle Position SW
- T 29 Timing Control Valve
- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

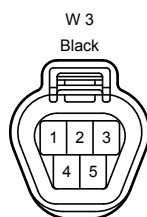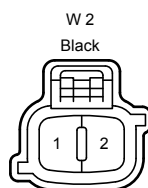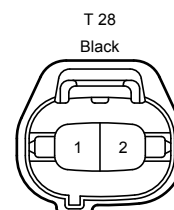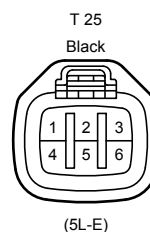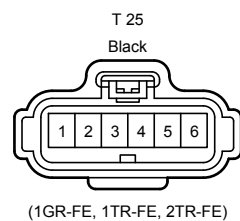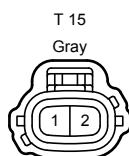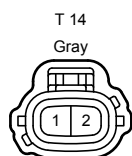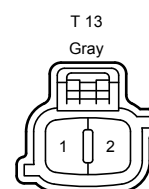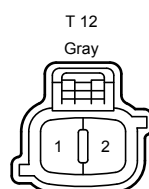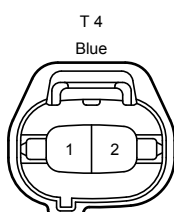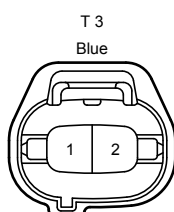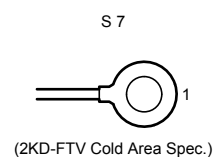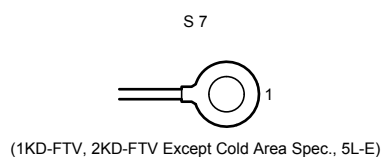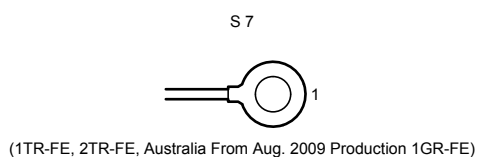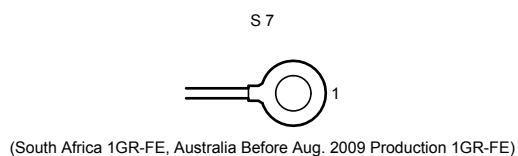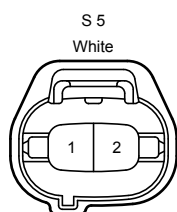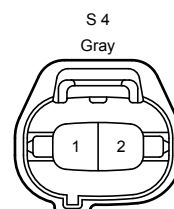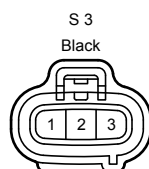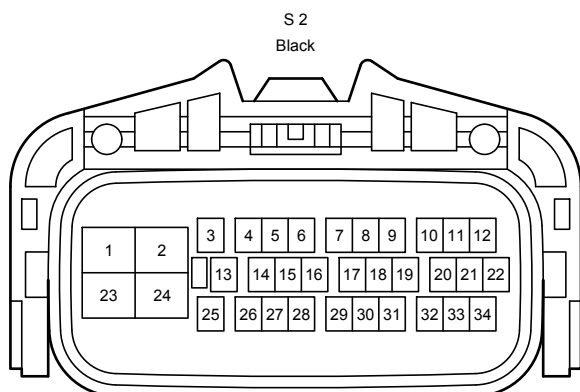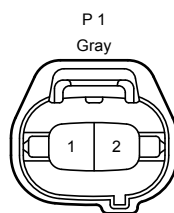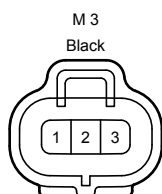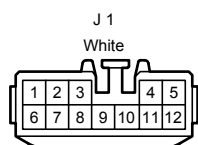                        

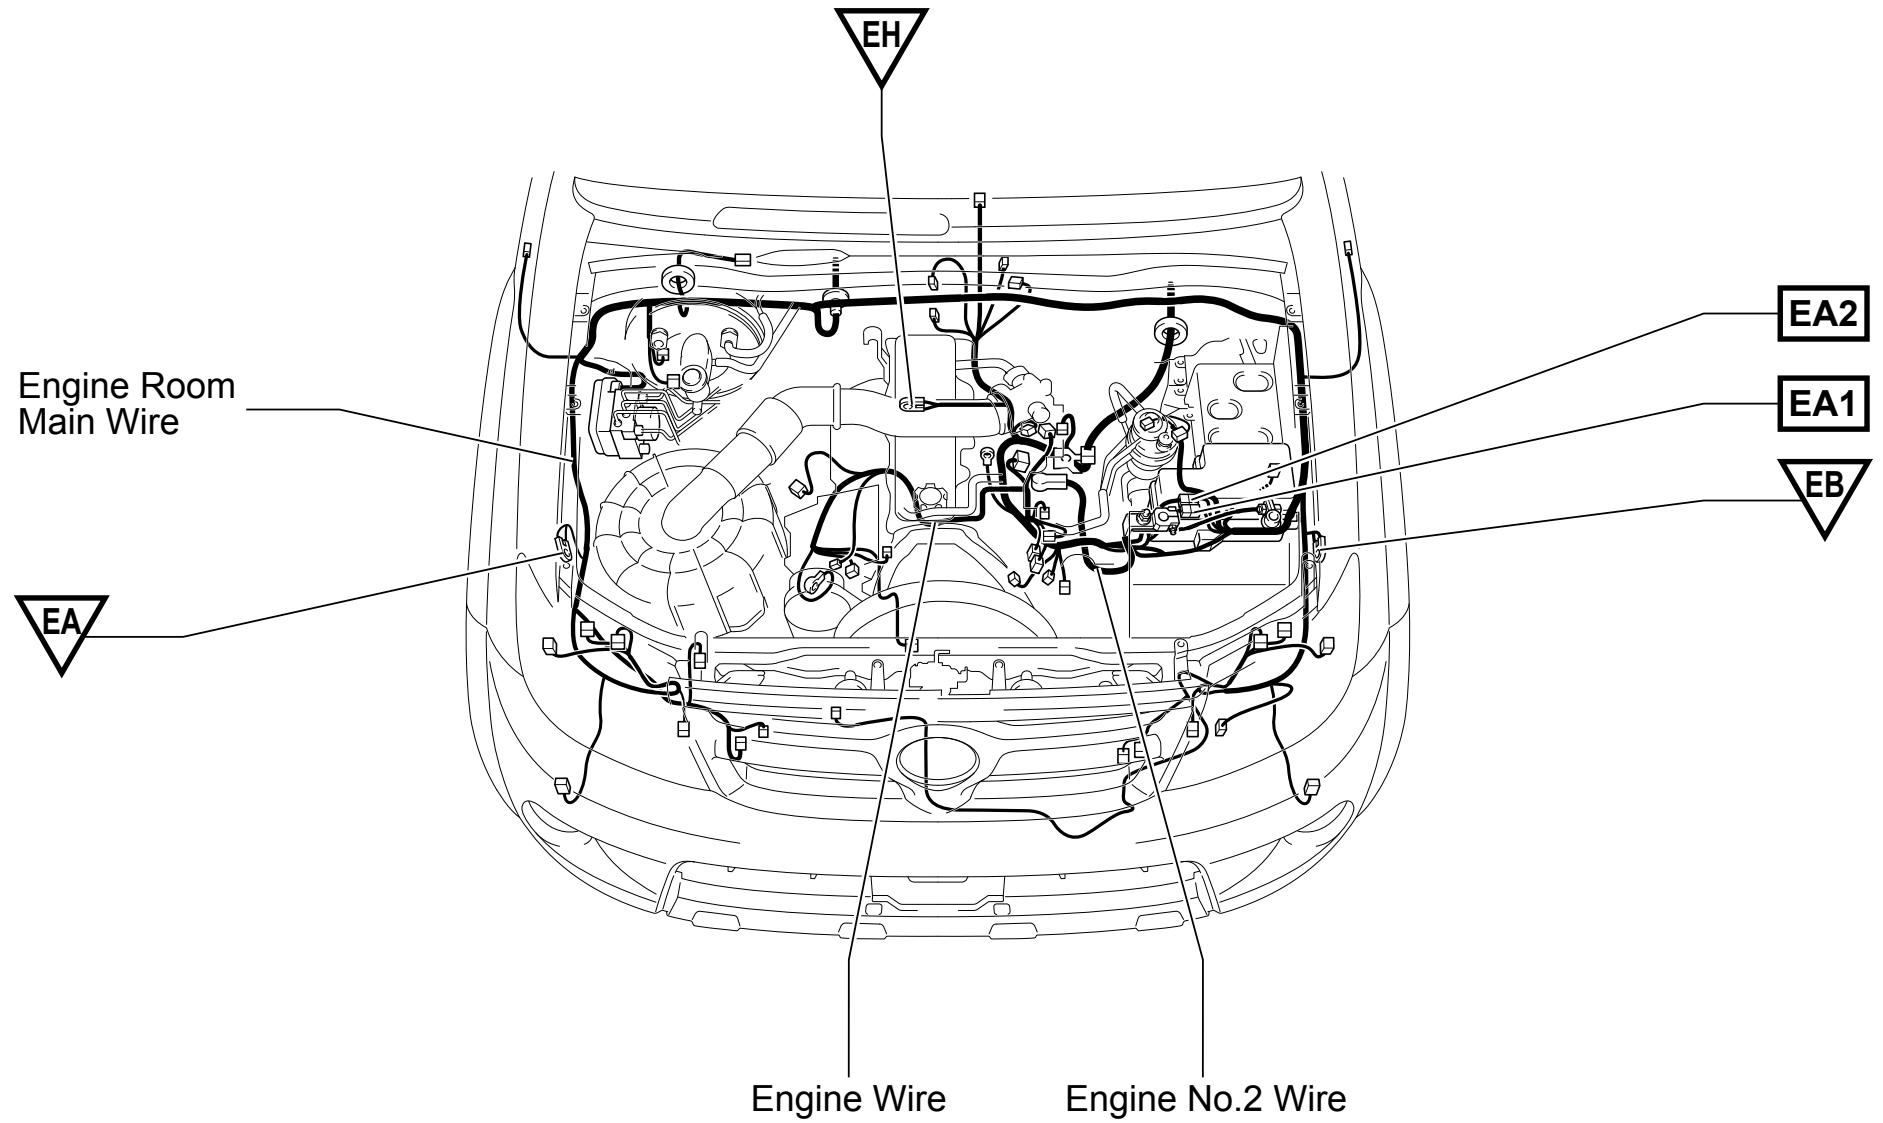 

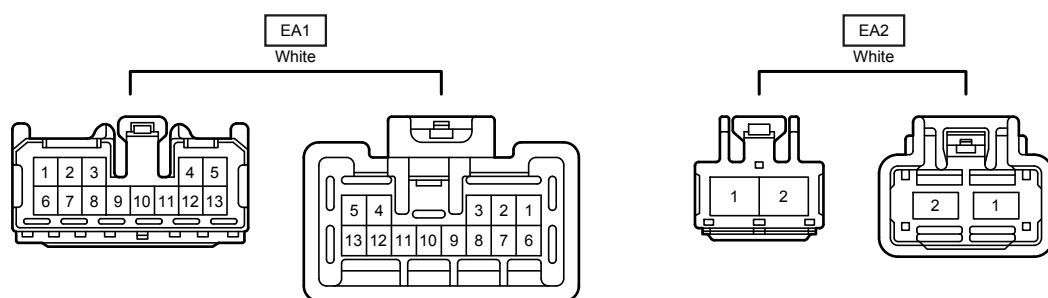 

 - * 1:w/ PTC Heater Cold Area Spec.
w/ Air Conditioner
- * 9:w/ VSC
- * 10:w/o VSC
- * 17:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 19:1KD-FTV M/T w/ DPF, 2KD-FTV M/T w/ DPF
- * 20:Except *17

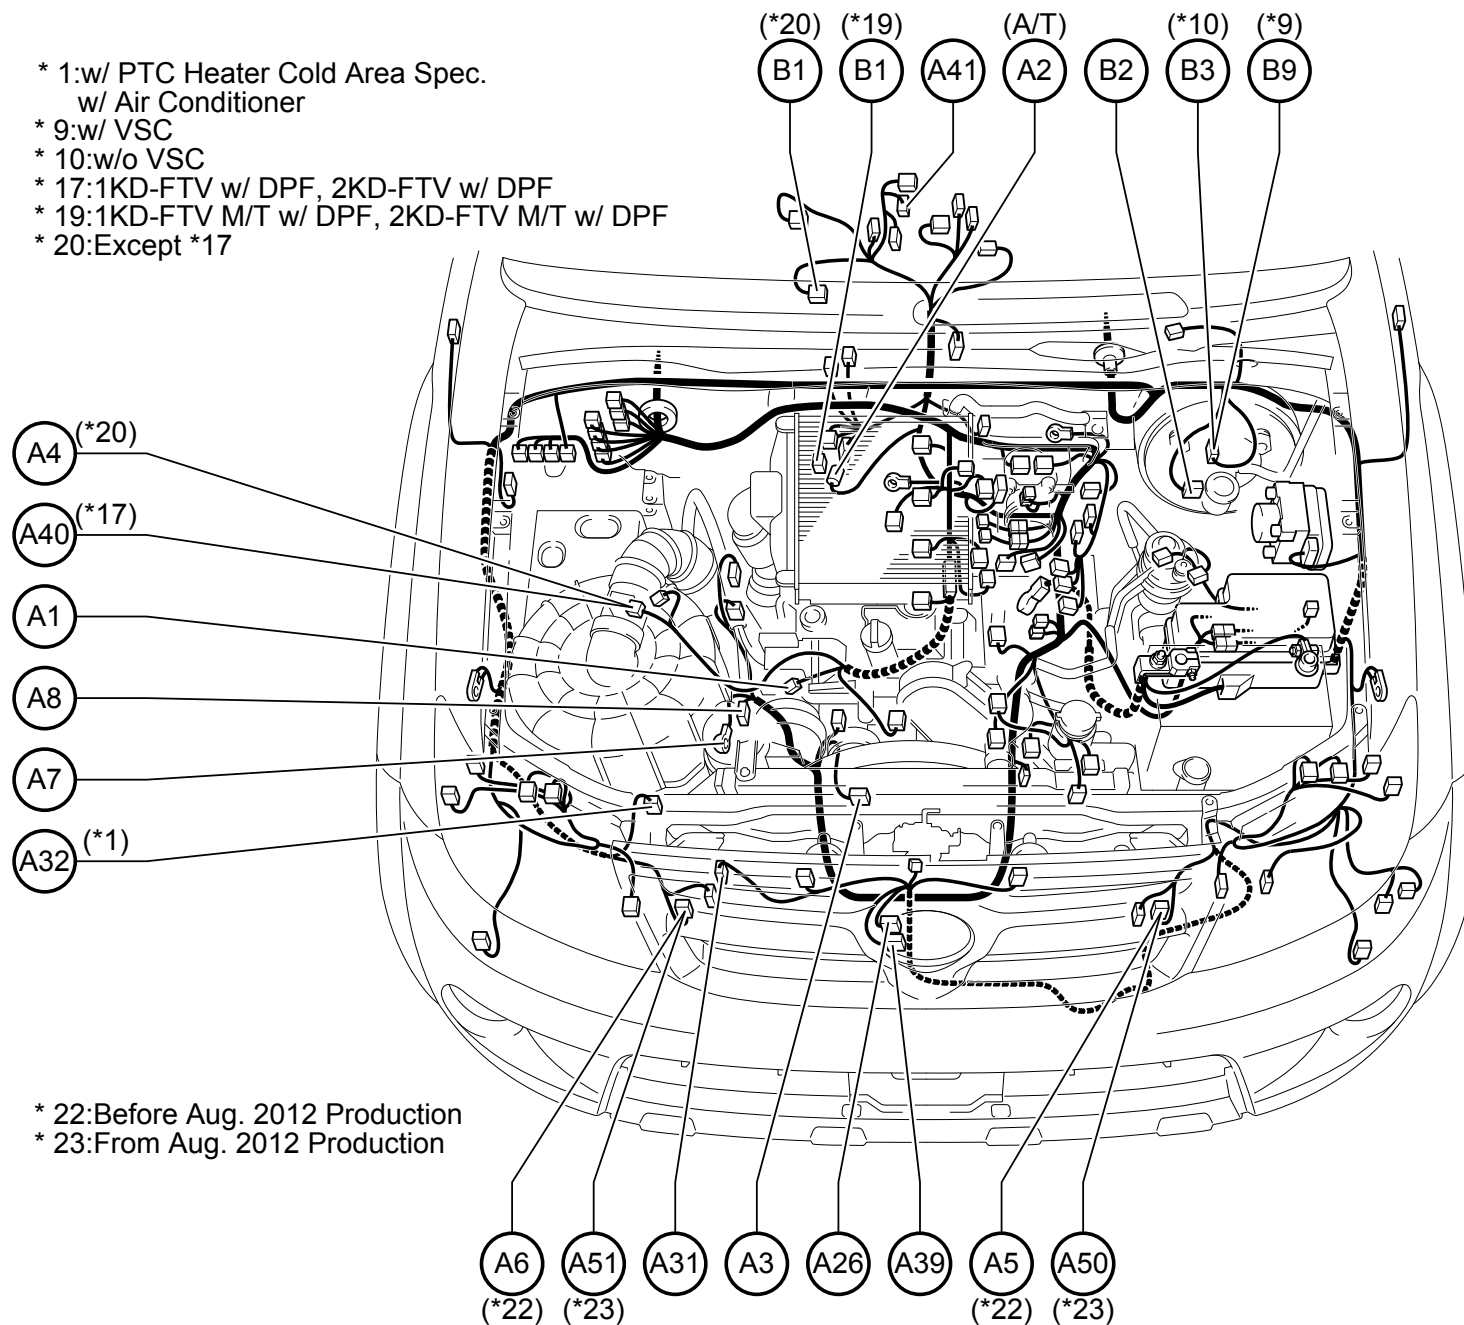


- * 22:Before Aug. 2012 Production
- * 23:From Aug. 2012 Production


- A 1 A/C Compressor
- A 2 A/T Fluid Temp. Sensor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 26 Ambient Temp. Sensor
- A 31 A/C Pressure Sensor
- A 32 A/C Magnetic Valve
- A 39 Ambient Temp. Sensor
- A 40 Air Flow Meter
- A 41 Air Fuel Ratio Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW
- B 9 Brake Vacuum Warning SW





 
Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

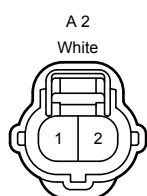


(1KD-FTV, 2KD-FTV)

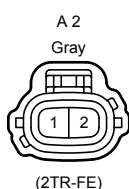 


(2TR-FE)

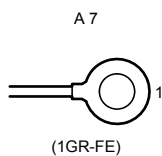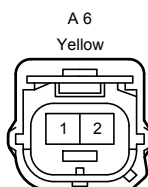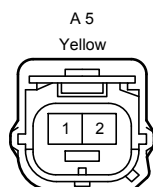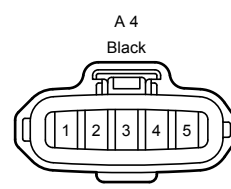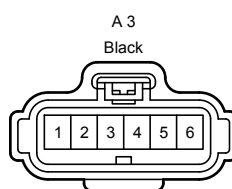     


(1GR-FE)

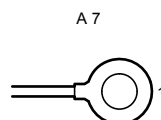 


(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

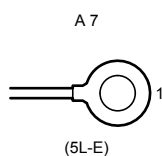 








(5L-E)

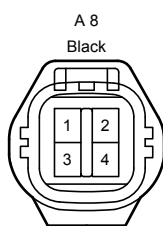 


(Except 5L-E)

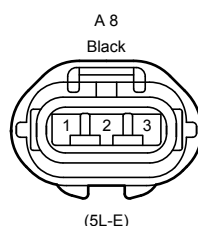 



(5L-E)

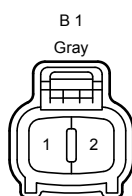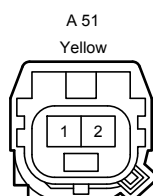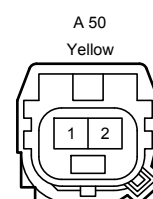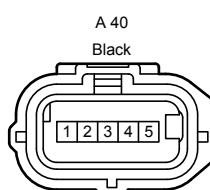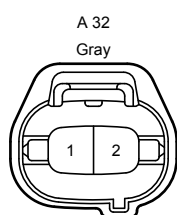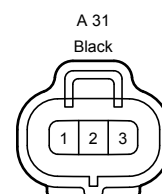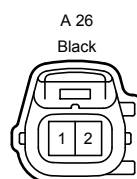       


(2TR-FE)

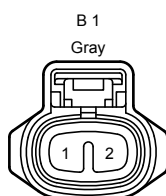 

(Except 2TR-FE)

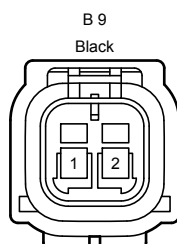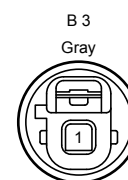  

 - * 5:Europe From Aug. 2006 Production
- * 6:Except *5
- * 17:1KD-FTV w/ DPF, 2KD-FTV w/ DPF







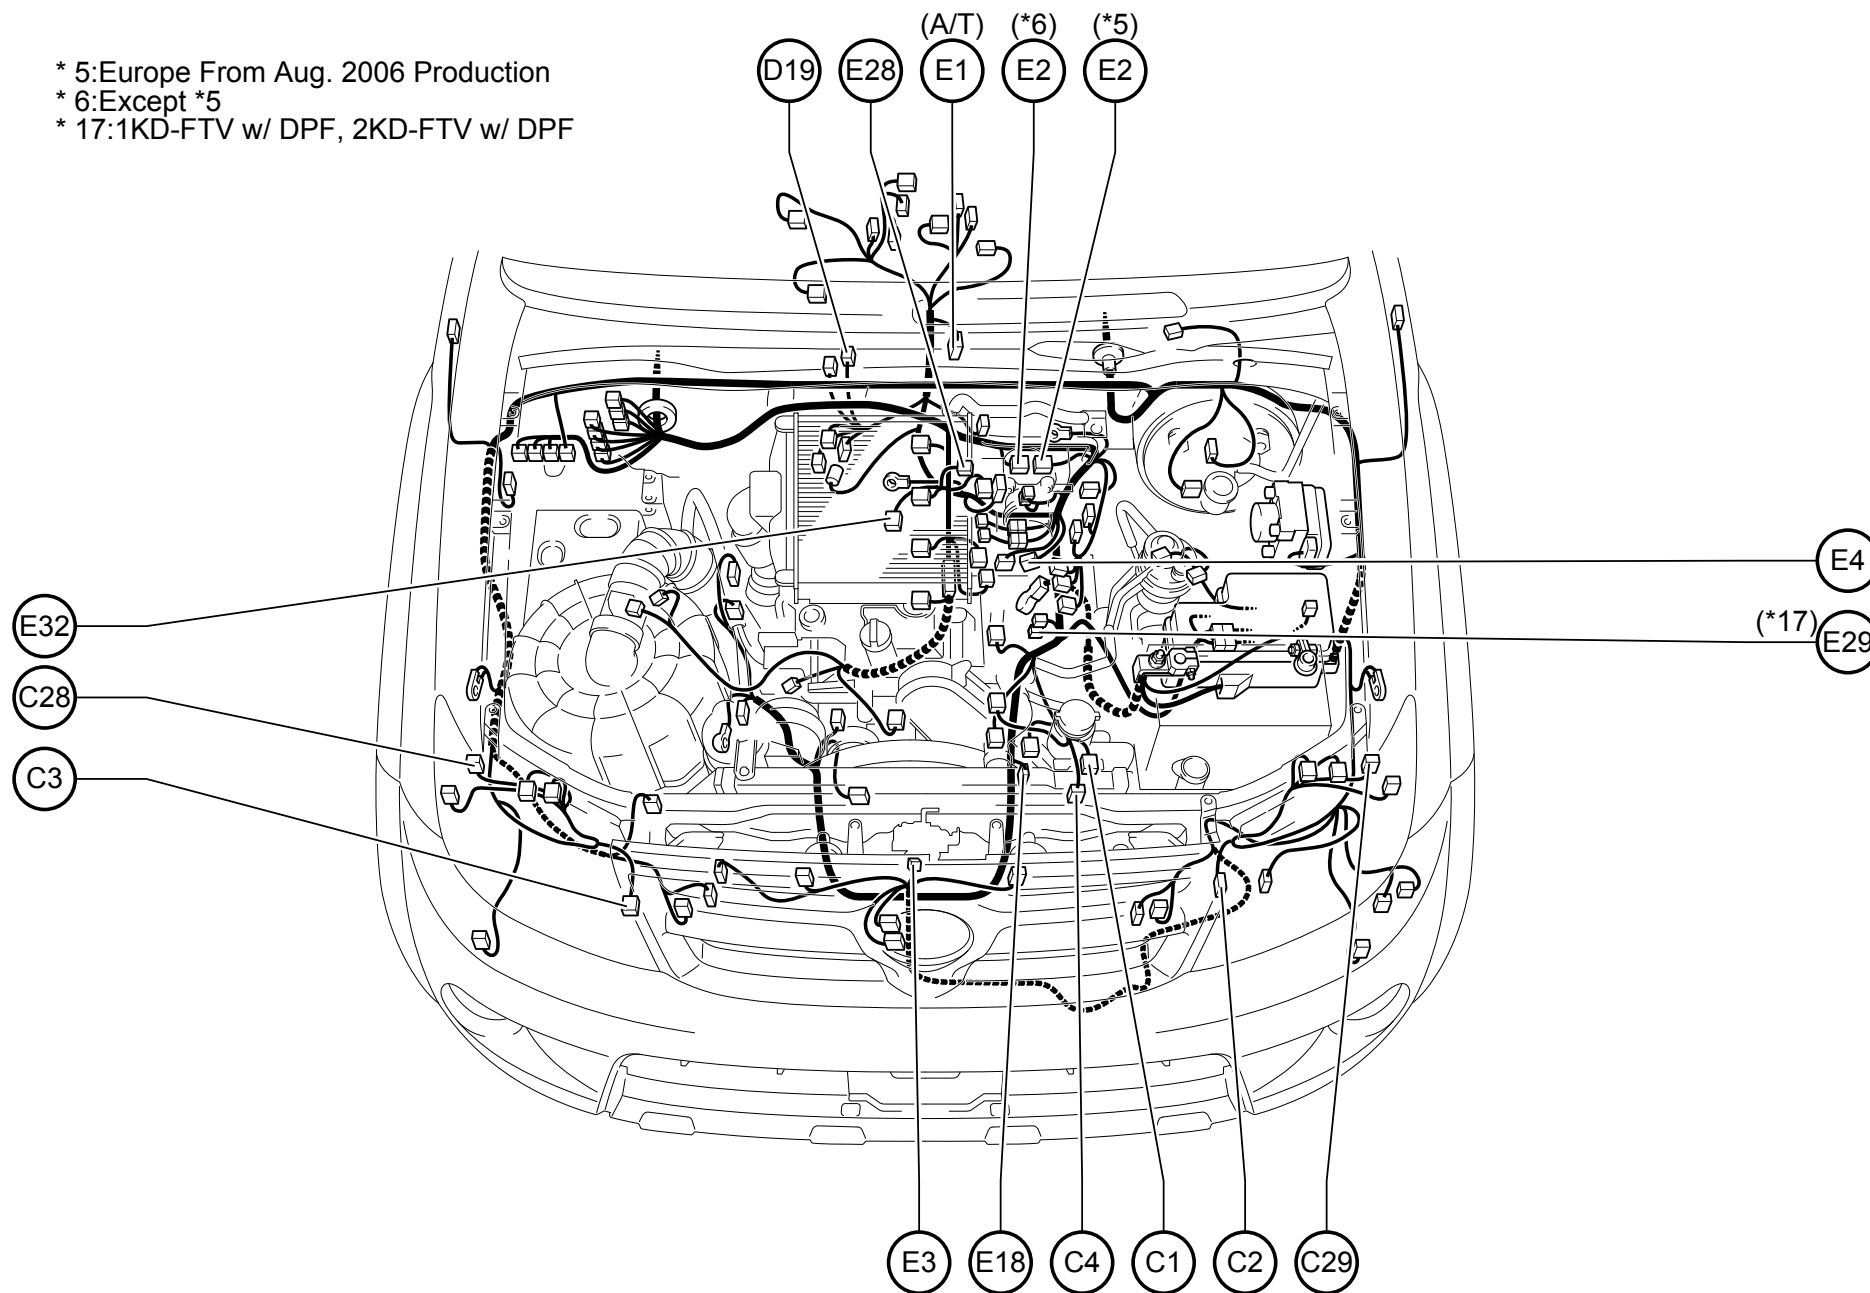


- C 1 Camshaft Position Sensor
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)









- D 19 Differential Pressure Sensor

- E 1 ECT Solenoid
- E 2 EGR Valve Position Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor
- E 18 Engine Oil Level Sensor
- E 28 Electric EGR Control Valve Assembly
- E 29 EGR Valve Assembly
- E 32 Exhaust Fuel Addition Injector Assembly

       
Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

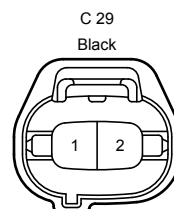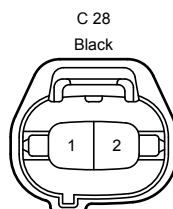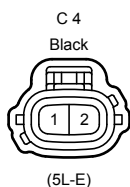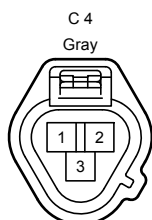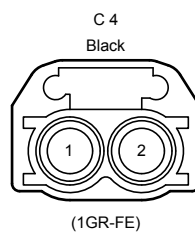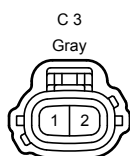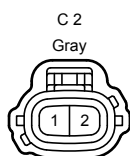



(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

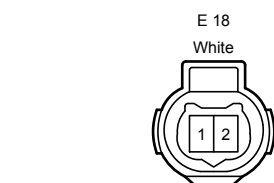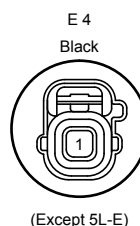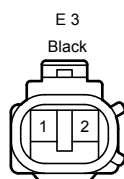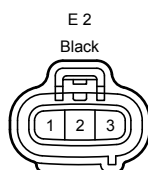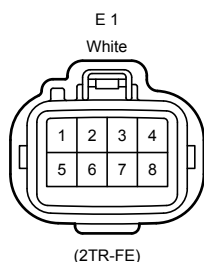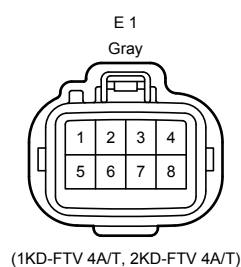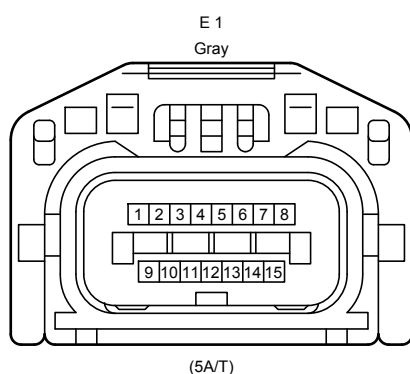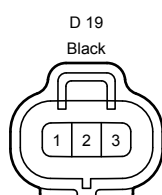        


 (1KD-FTV, 2KD-FTV Europe From Aug. 2006 Production)

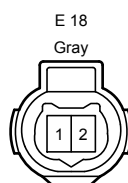

   (2KD-FTV Except Europe From Aug. 2006 Production)









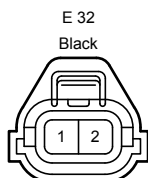
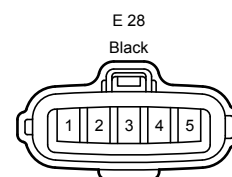


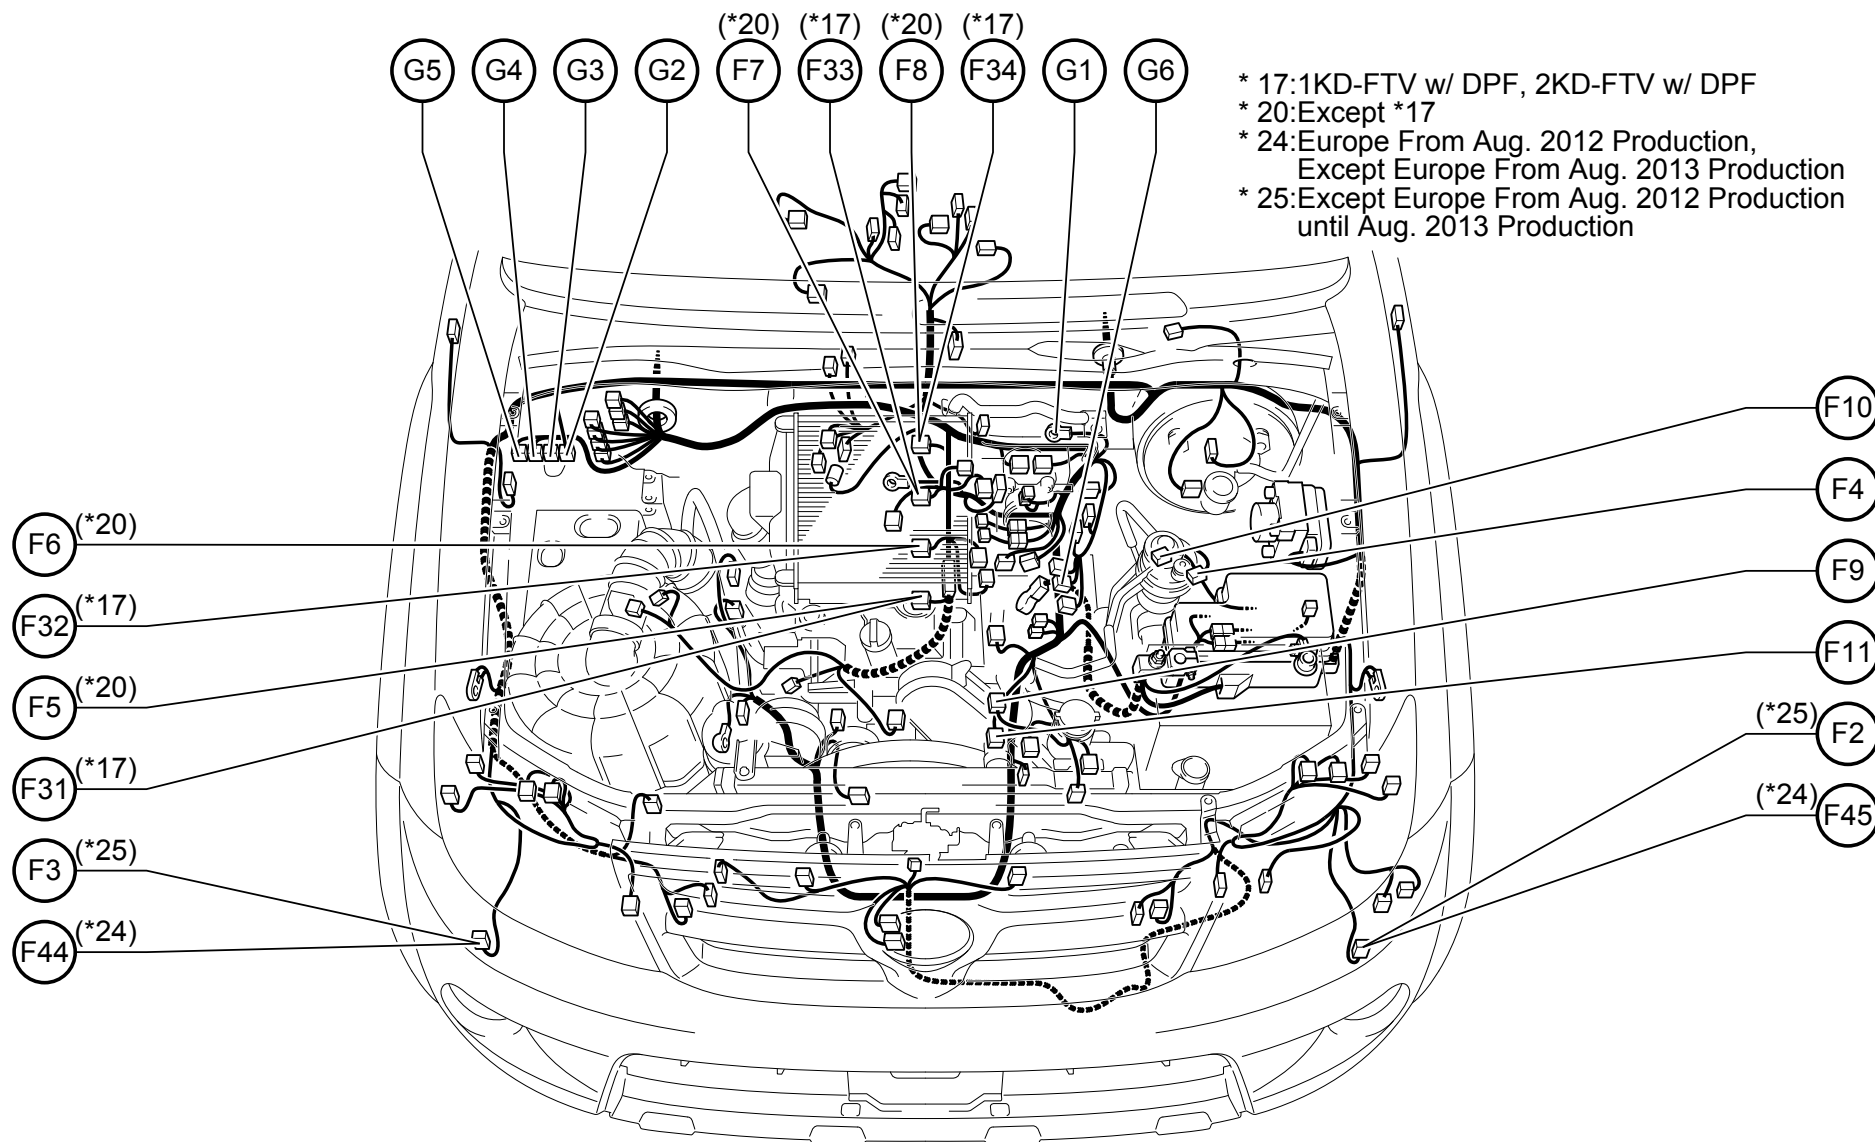


- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 4 Fuel Filter Warning SW
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)
- F 9 Fuel Pressure Sensor
- F 10 Fuel Sedimentary Level Warning SW
- F 11 Fuel Temp. Sensor
- F 31 Fuel Injector (No.1)
- F 32 Fuel Injector (No.2)
- F 33 Fuel Injector (No.3)
- F 34 Fuel Injector (No.4)
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- G 1 Glow Plug
- G 2 Glow Plug Controller
- G 3 Glow Plug Controller
- G 4 Glow Plug Controller
- G 5 Glow Plug Controller
- G 6 Glow Plug Assembly

 
 
 
 
 
 
 
 
 
 
Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

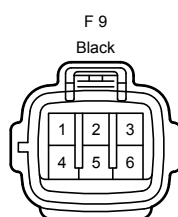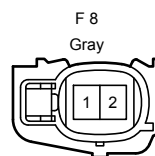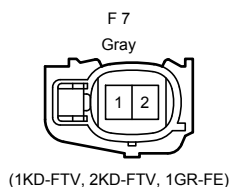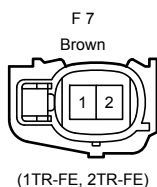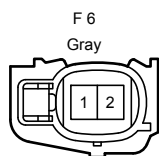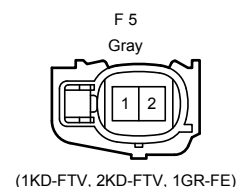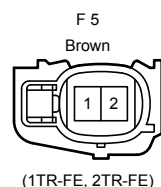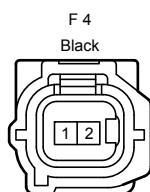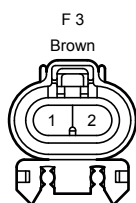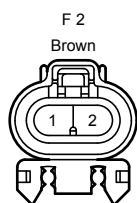

 
(Europe 1KD-FTV From Aug. 2006 Production, Europe 2KD-FTV From Aug. 2009 Production, Australia From Aug. 2006 Production, South Africa From Aug. 2010 Production, Middle East From Aug. 2010 Production)

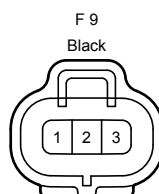

          
(Europe 1KD-FTV Before Aug. 2006 Production, Europe 2KD-FTV Before Aug. 2009 Production, Australia Before Aug. 2006 Production, South Africa Before Aug. 2010 Production, Middle East Before Aug. 2010 Production)

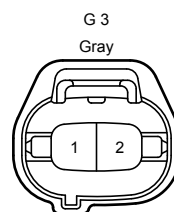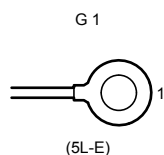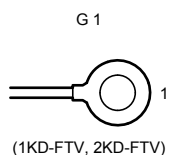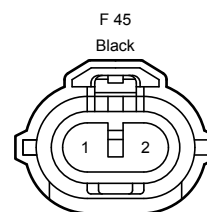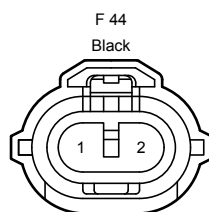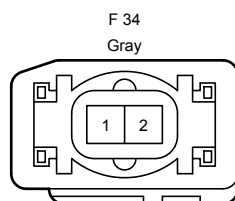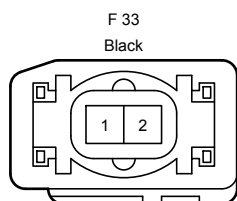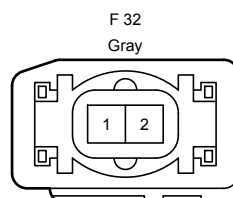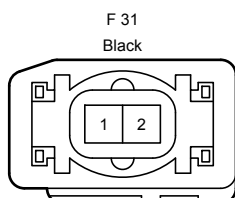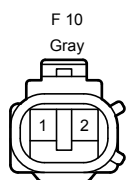


G 5
Black

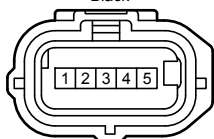 

G 6
Black











 


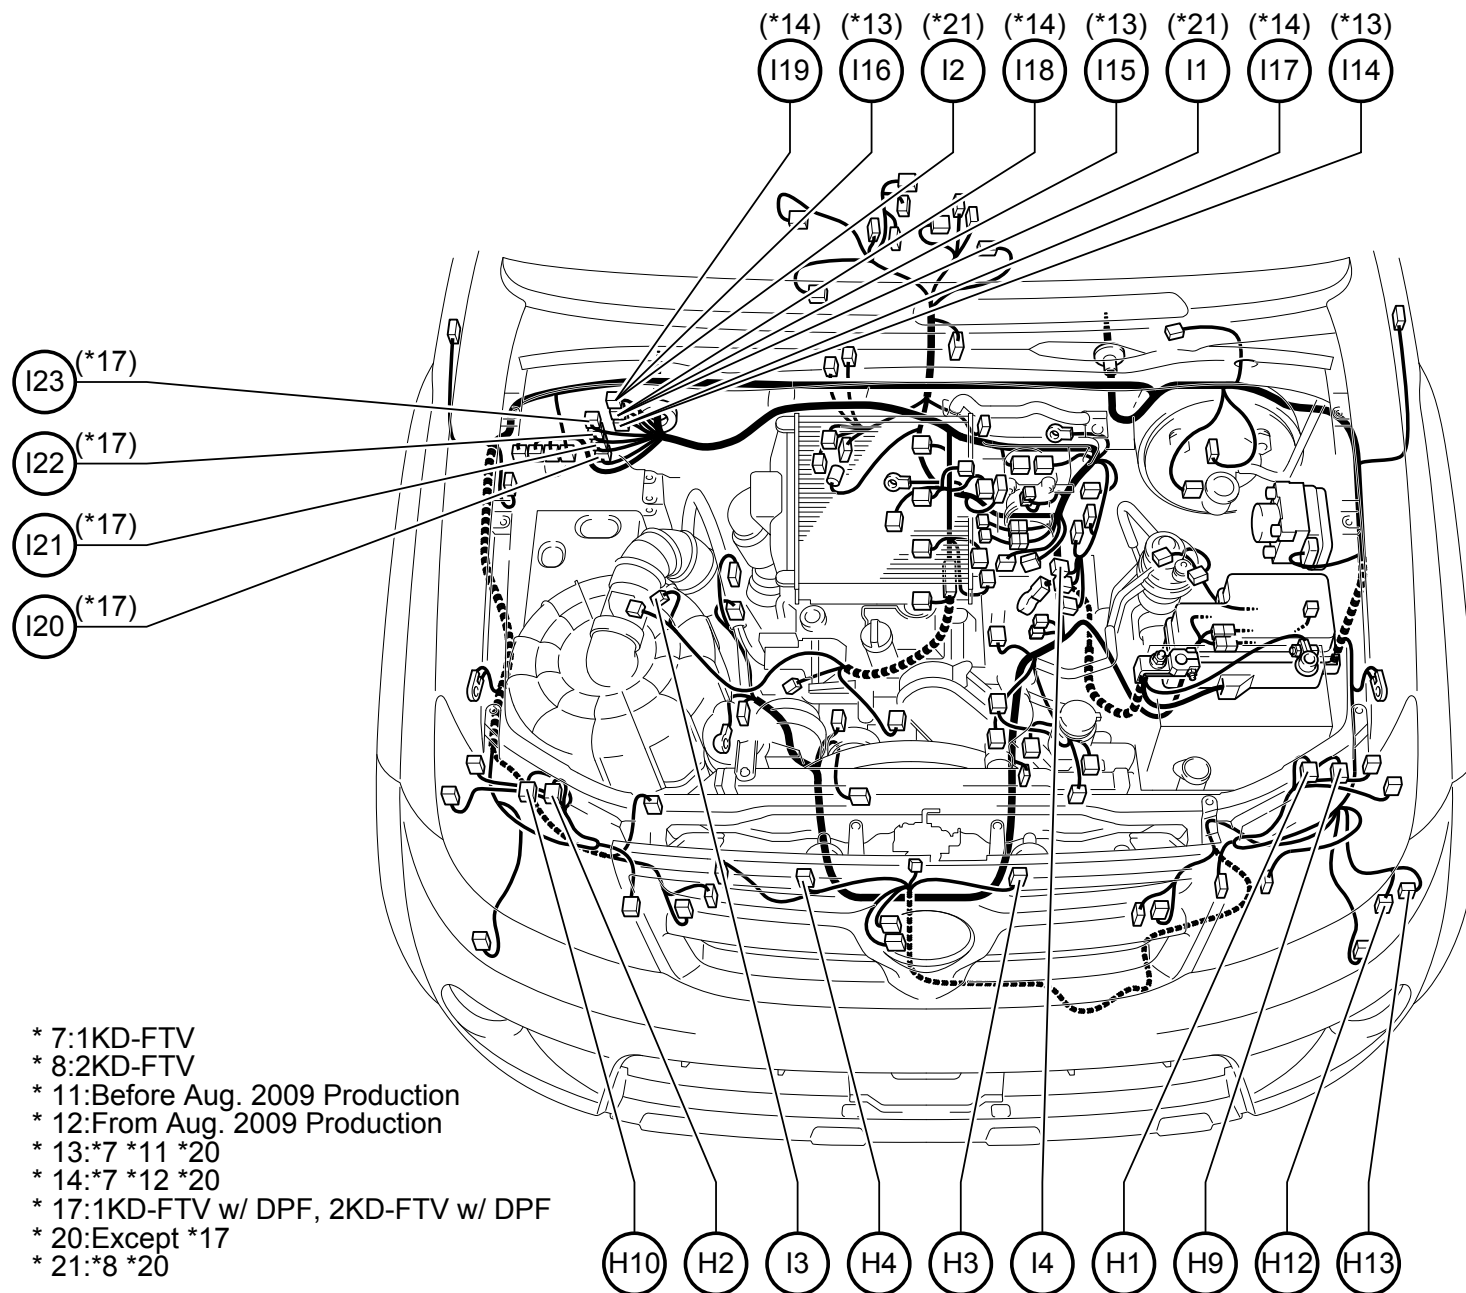 

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)
- H 12 Headlight Cleaner Motor
- H 13 Headlight Cleaner Control Relay









- I 1 Injector Driver (EDU)
- I 2 Injector Driver (EDU)
- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 4 Inlet Air Temp. Sensor (Inter Cooler)
- I 14 Injector Driver (EDU)
- I 15 Injector Driver (EDU)
- I 16 Injector Driver (EDU)
- I 17 Injector Driver (EDU)
- I 18 Injector Driver (EDU)
- I 19 Injector Driver (EDU)
- I 20 Injector Driver (EDU)
- I 21 Injector Driver (EDU)
- I 22 Injector Driver (EDU)
- I 23 Injector Driver (EDU)

           Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

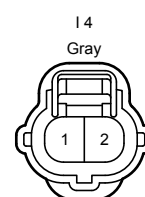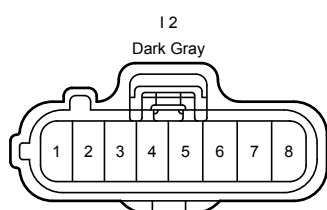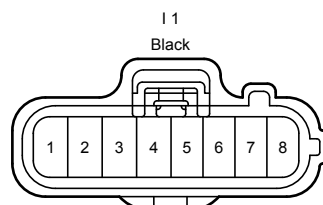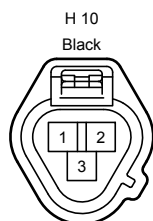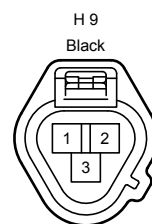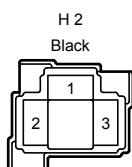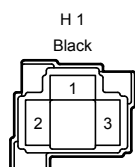


(Before Aug. 2009 Production)

        (From Aug. 2009 Production)

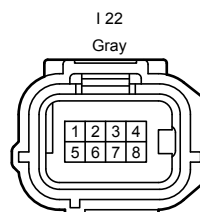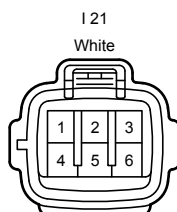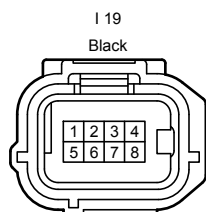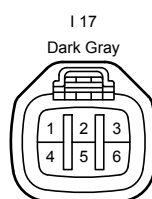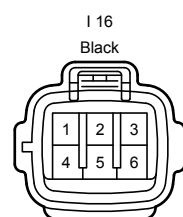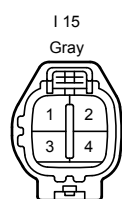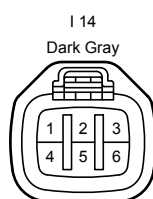

 - * 2:Except w/ PTC Heater Cold Area Spec.
w/ Air Conditioner
- * 3:2WD A/T
- * 4:2WD M/T
- * 7:1KD-FTV
- * 8:2KD-FTV
- * 9:w/ VSC
- * 10:w/o VSC

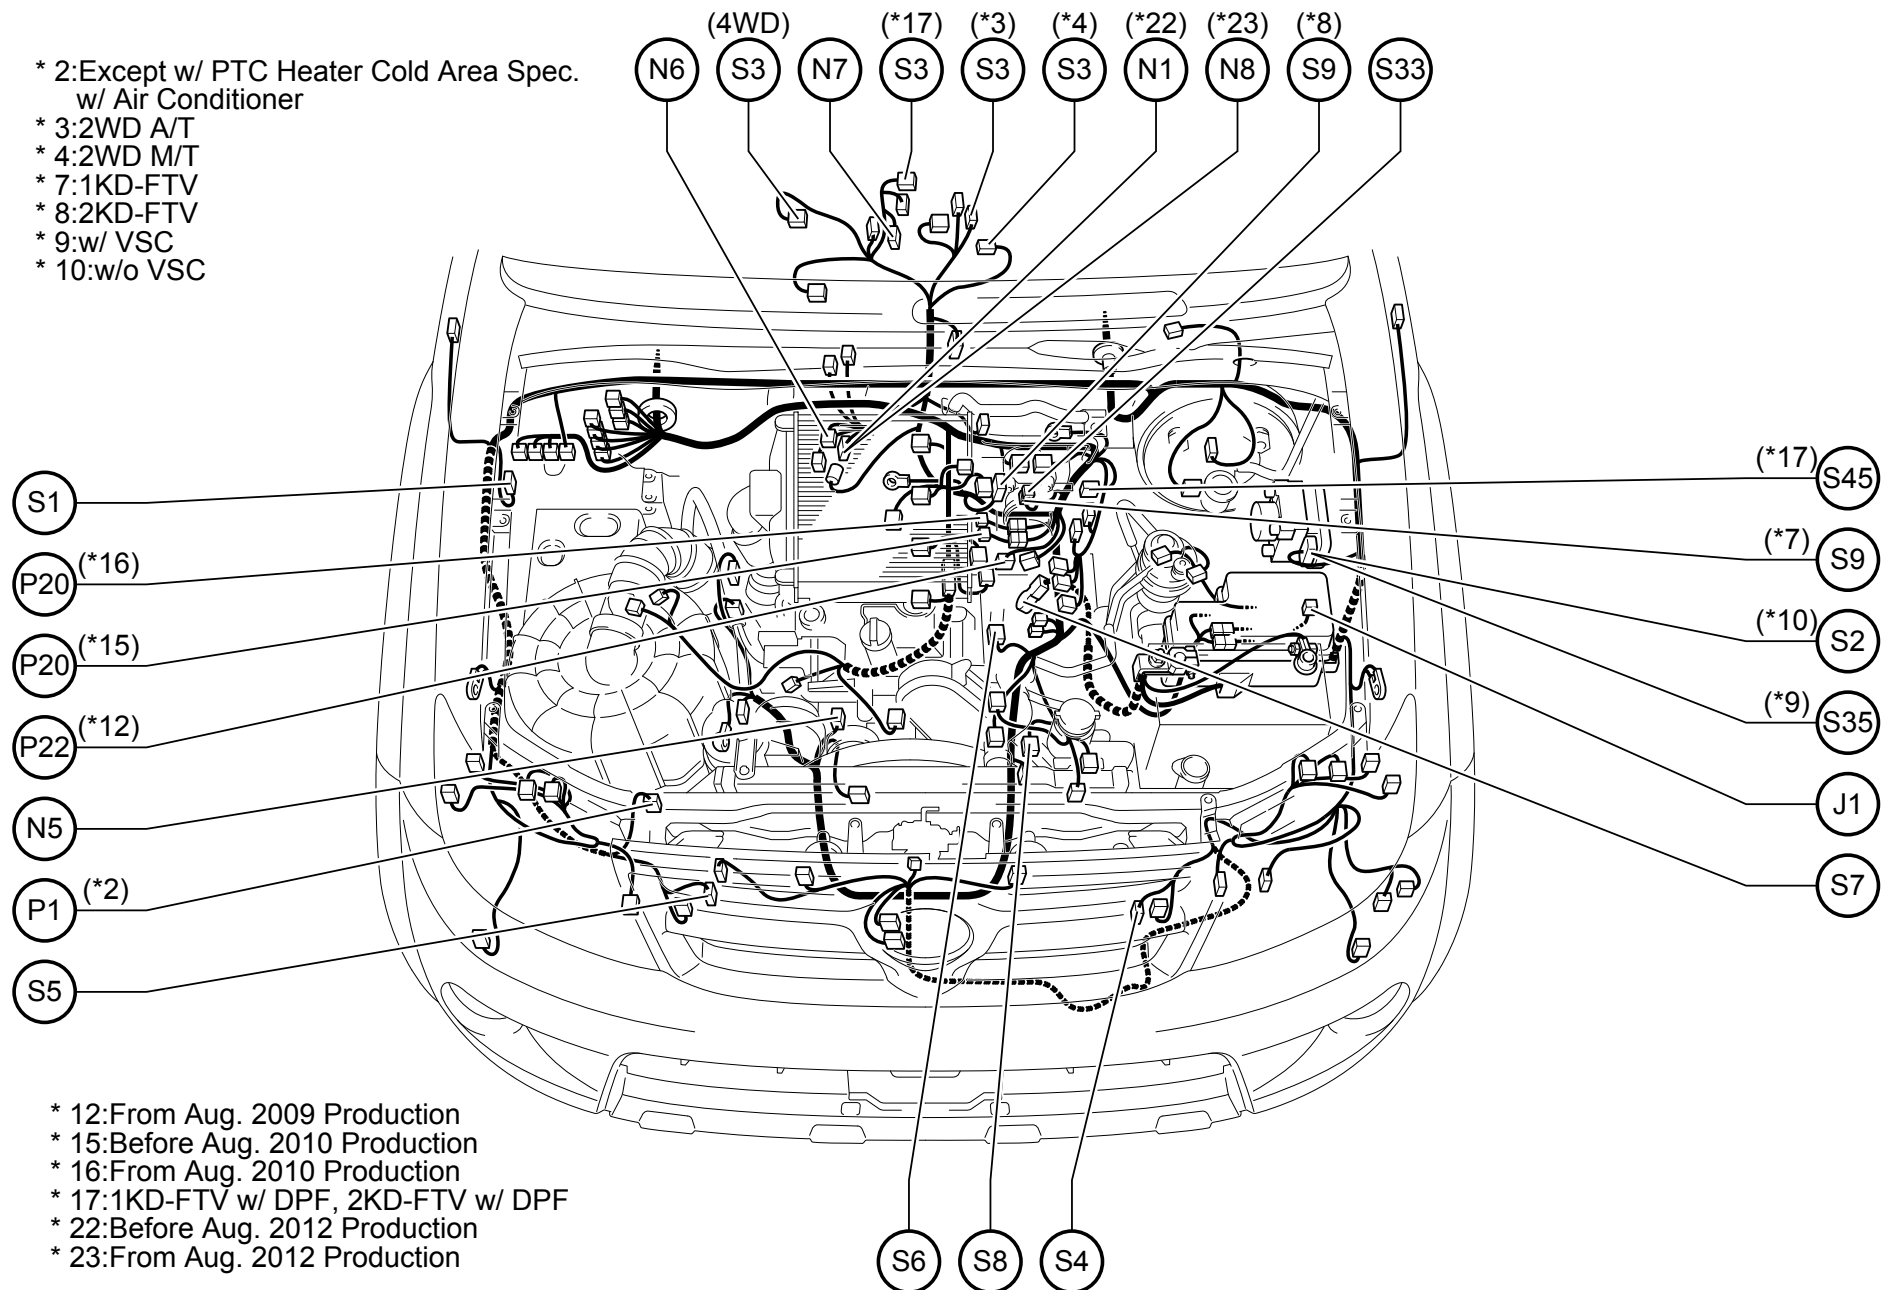

- * 12:From Aug. 2009 Production
- * 15:Before Aug. 2010 Production
- * 16:From Aug. 2010 Production
- * 17:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 22:Before Aug. 2012 Production
- * 23:From Aug. 2012 Production

 
- J 1 Junction Connector

- N 1 Park/Neutral Position SW
- N 5 No. 1 Exhaust Gas Temperature Sensor
- N 6 No. 2 Exhaust Gas Temperature Sensor
- N 7 No. 3 Exhaust Gas Temperature Sensor
- N 8 Park/Neutral Position SW

- P 1 Pressure SW
- P 20 Pressure Discharge Valve
- P 22 Pressure Discharge Valve

- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 8 Suction Control Valve
- S 9 Swirl Control Valve (No.1)
- S 33 Swirl Control Valve (No.2)
- S 35 Skid Control ECU with Actuator
- S 45 Suction Control Valve

Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

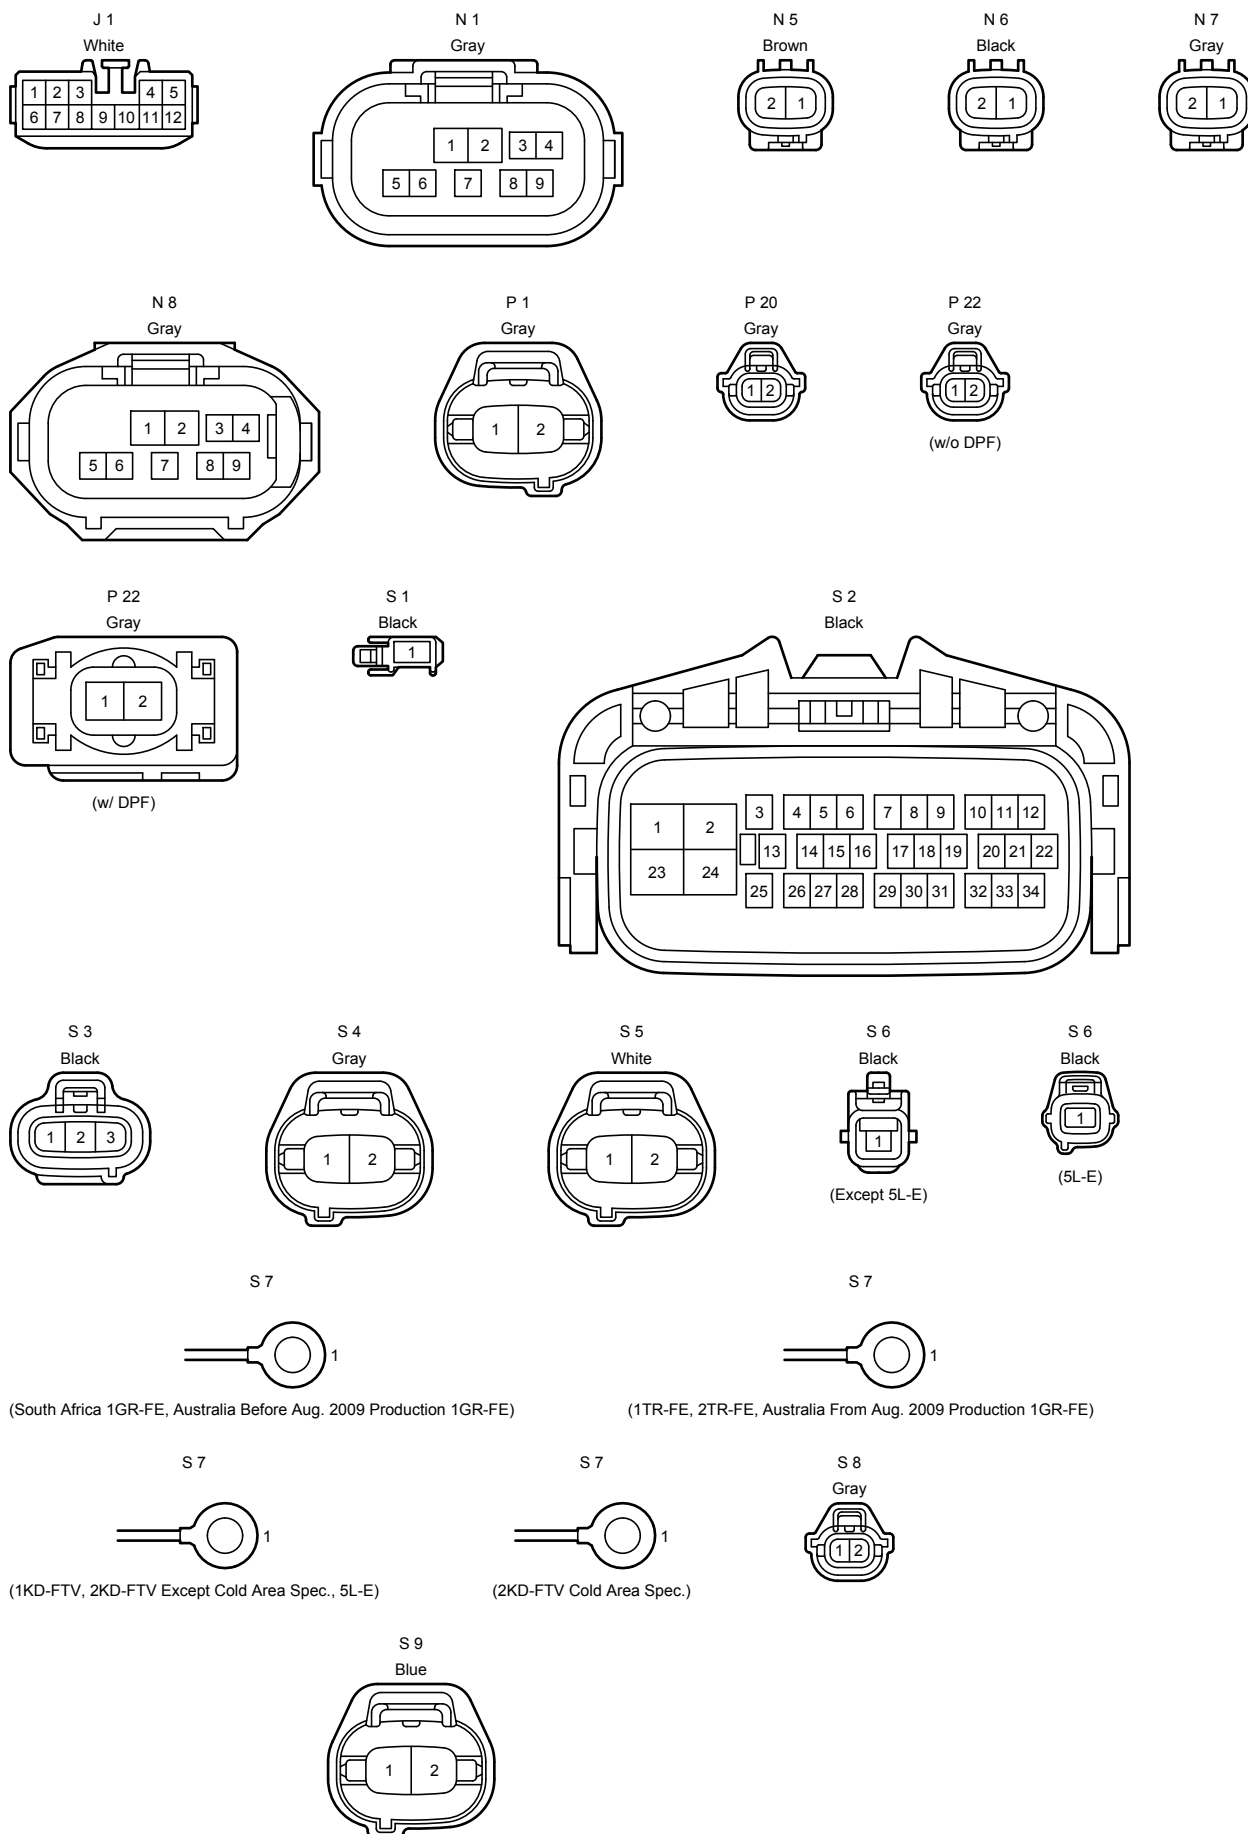

(South Africa 1GR-FE, Australia Before Aug. 2009 Production 1GR-FE)

 
(1TR-FE, 2TR-FE, Australia From Aug. 2009 Production 1GR-FE)

(1KD-FTV, 2KD-FTV Except Cold Area Spec., 5L-E)


(2KD-FTV Cold Area Spec.)

(Europe From Aug. 2006 Production, Australia From Aug. 2006 Production, Morocco From Aug. 2012 Production)

S 9
Gray

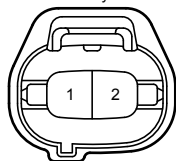


S 33
Brown

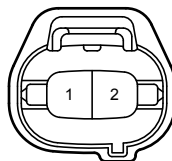 

(South Africa 1KD-FTV, Australia Before Aug. 2006 Production)

 
S 35
Black

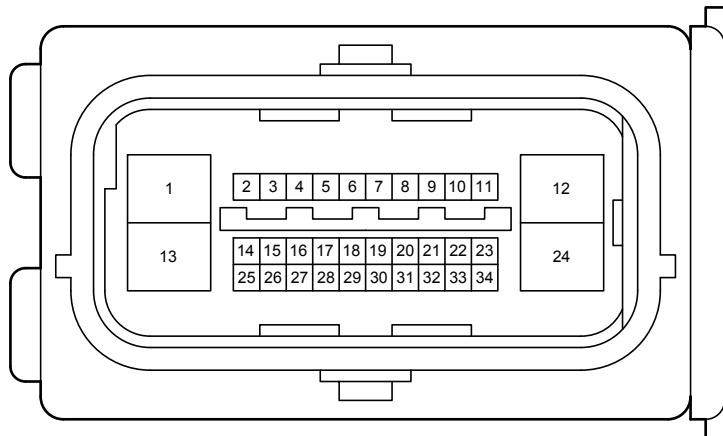

S 45
Blue



 - * 5:Europe From Aug. 2006 Production
- * 6:Except *5
- * 17:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 20:Except *17
- * 26:4A/T
- * 27:5A/T

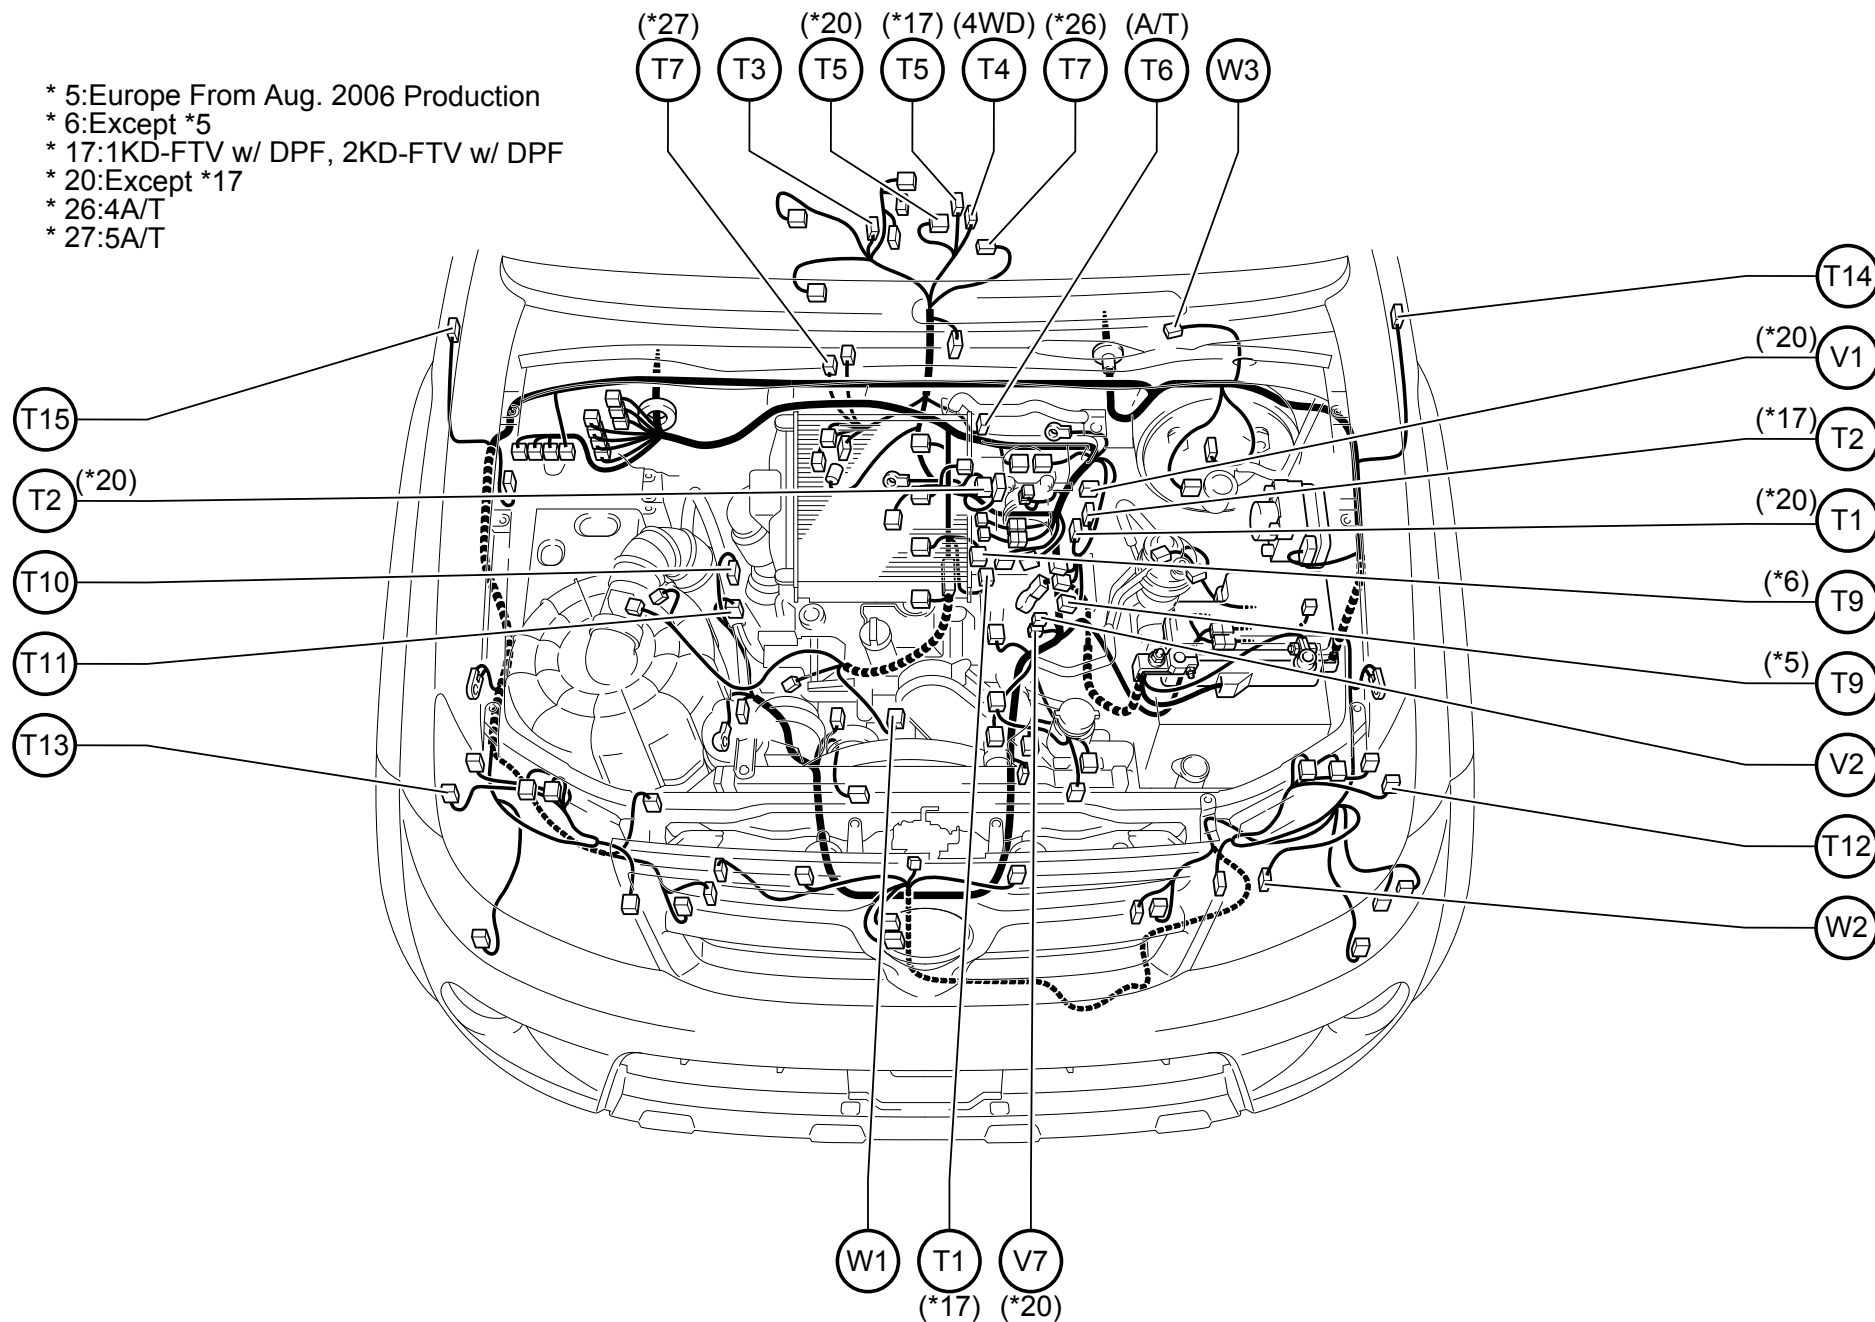


- T 1 Throttle Body Assembly
- T 2 Throttle Body Assembly
- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 9 Turbo Pressure Sensor
- T 10 Turbocharger Variable Nozzle Motor
- T 11 Turbocharger Variable Nozzle Sensor
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)


- V 1 VRV (EGR)
- V 2 VSV (EGR Cut Valve)
- V 7 VSV (for EGR No.2 Valve)

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

 
Position of Parts in Engine Compartment <LHD 1KD-FTV, 2KD-FTV>

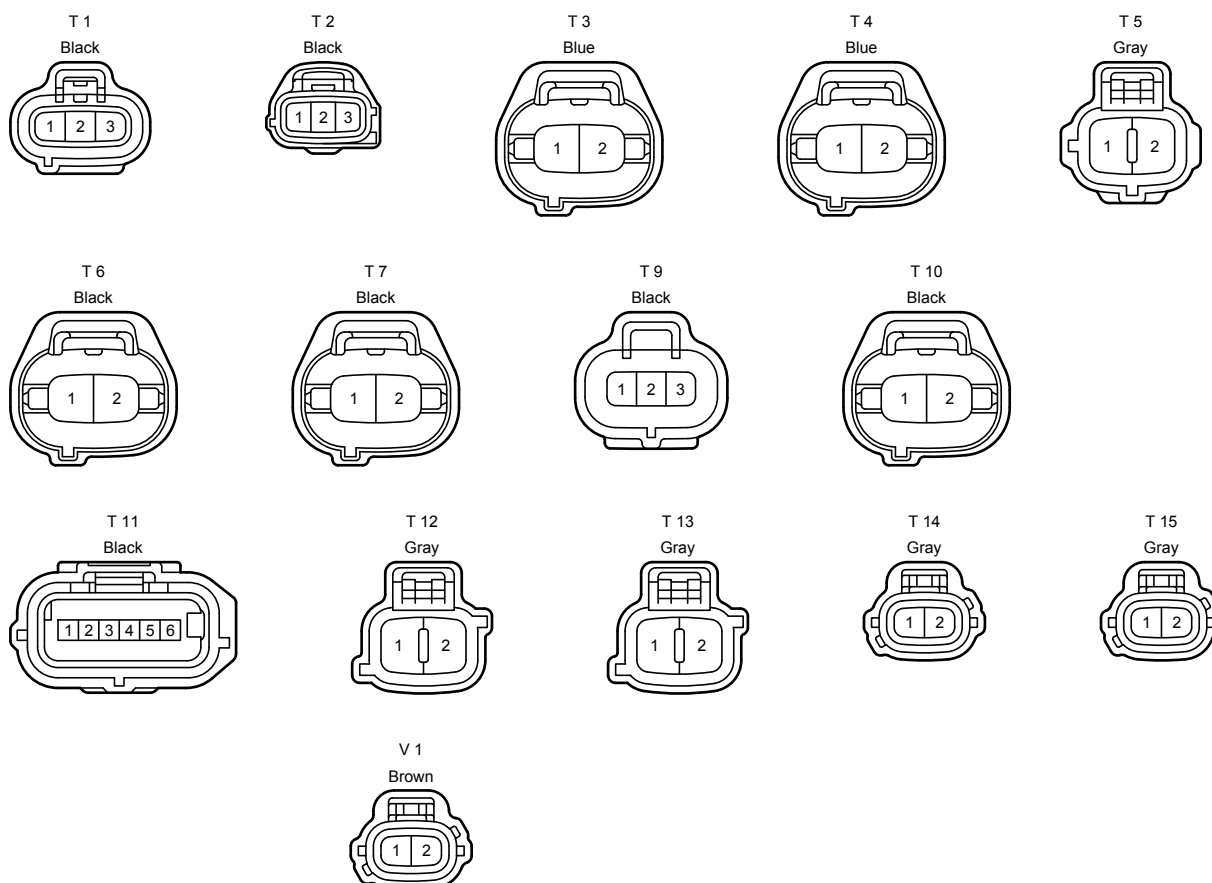

 
(Europe From Aug. 2006 Production, Australia From Aug. 2006 Production, Morocco From Aug. 2012 Production)

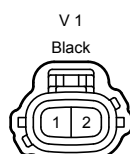


 
(South Africa, Europe Before Aug. 2006 Production Except Turkey, Australia Before Aug. 2006 Production, General From Aug. 2012 Production, Laos From Aug. 2012 Production)

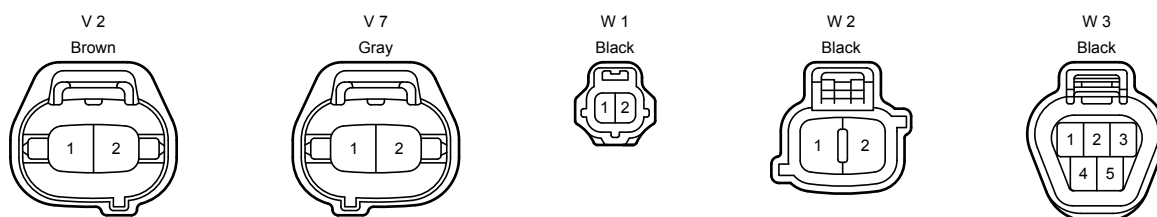

   - * 1:1KD-FTV w/ DPF
From Aug. 2012 Production,
2KD-FTV w/ DPF
From Aug. 2012 Production
- * 2:Except *1

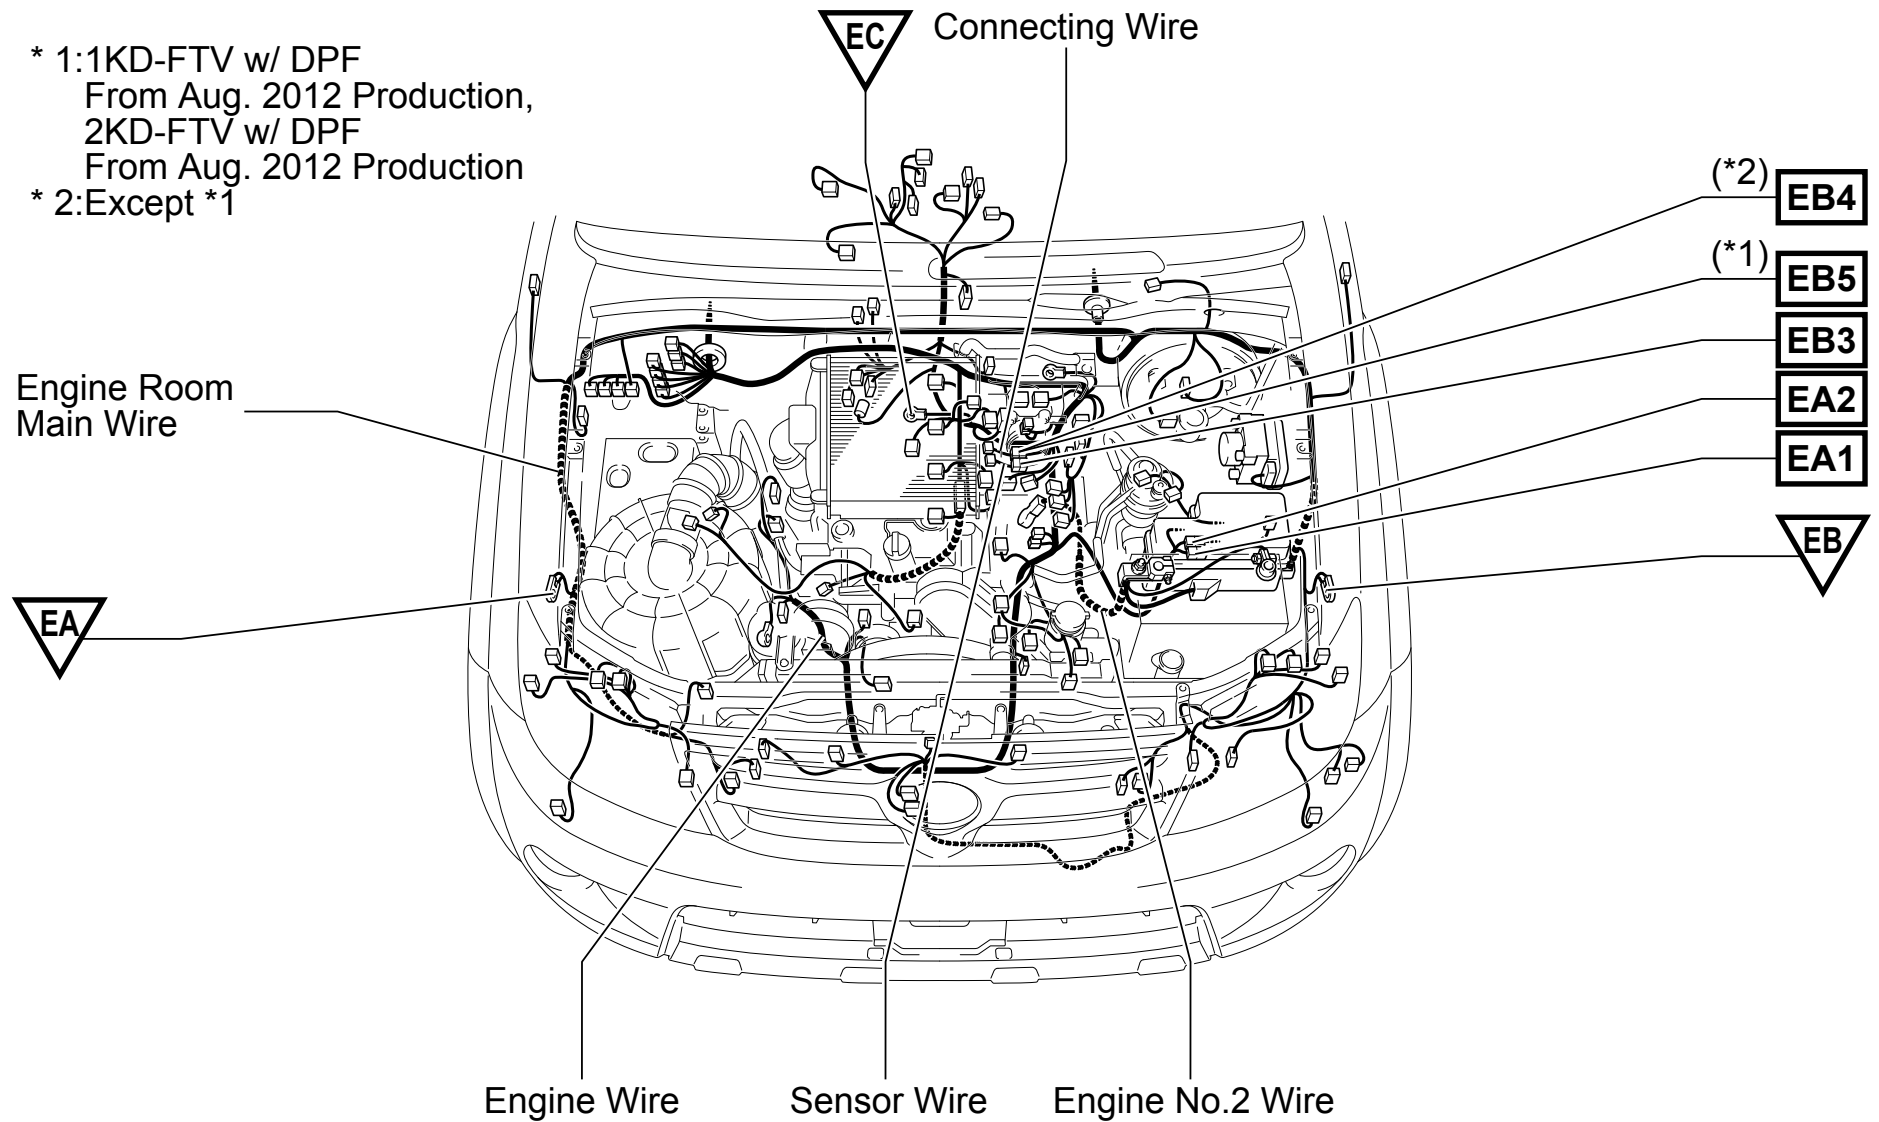

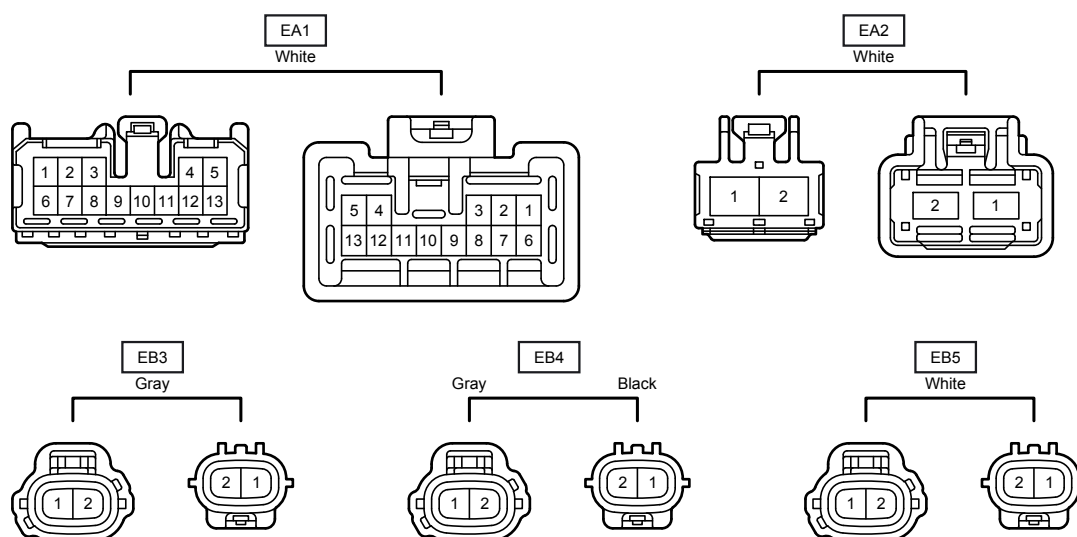

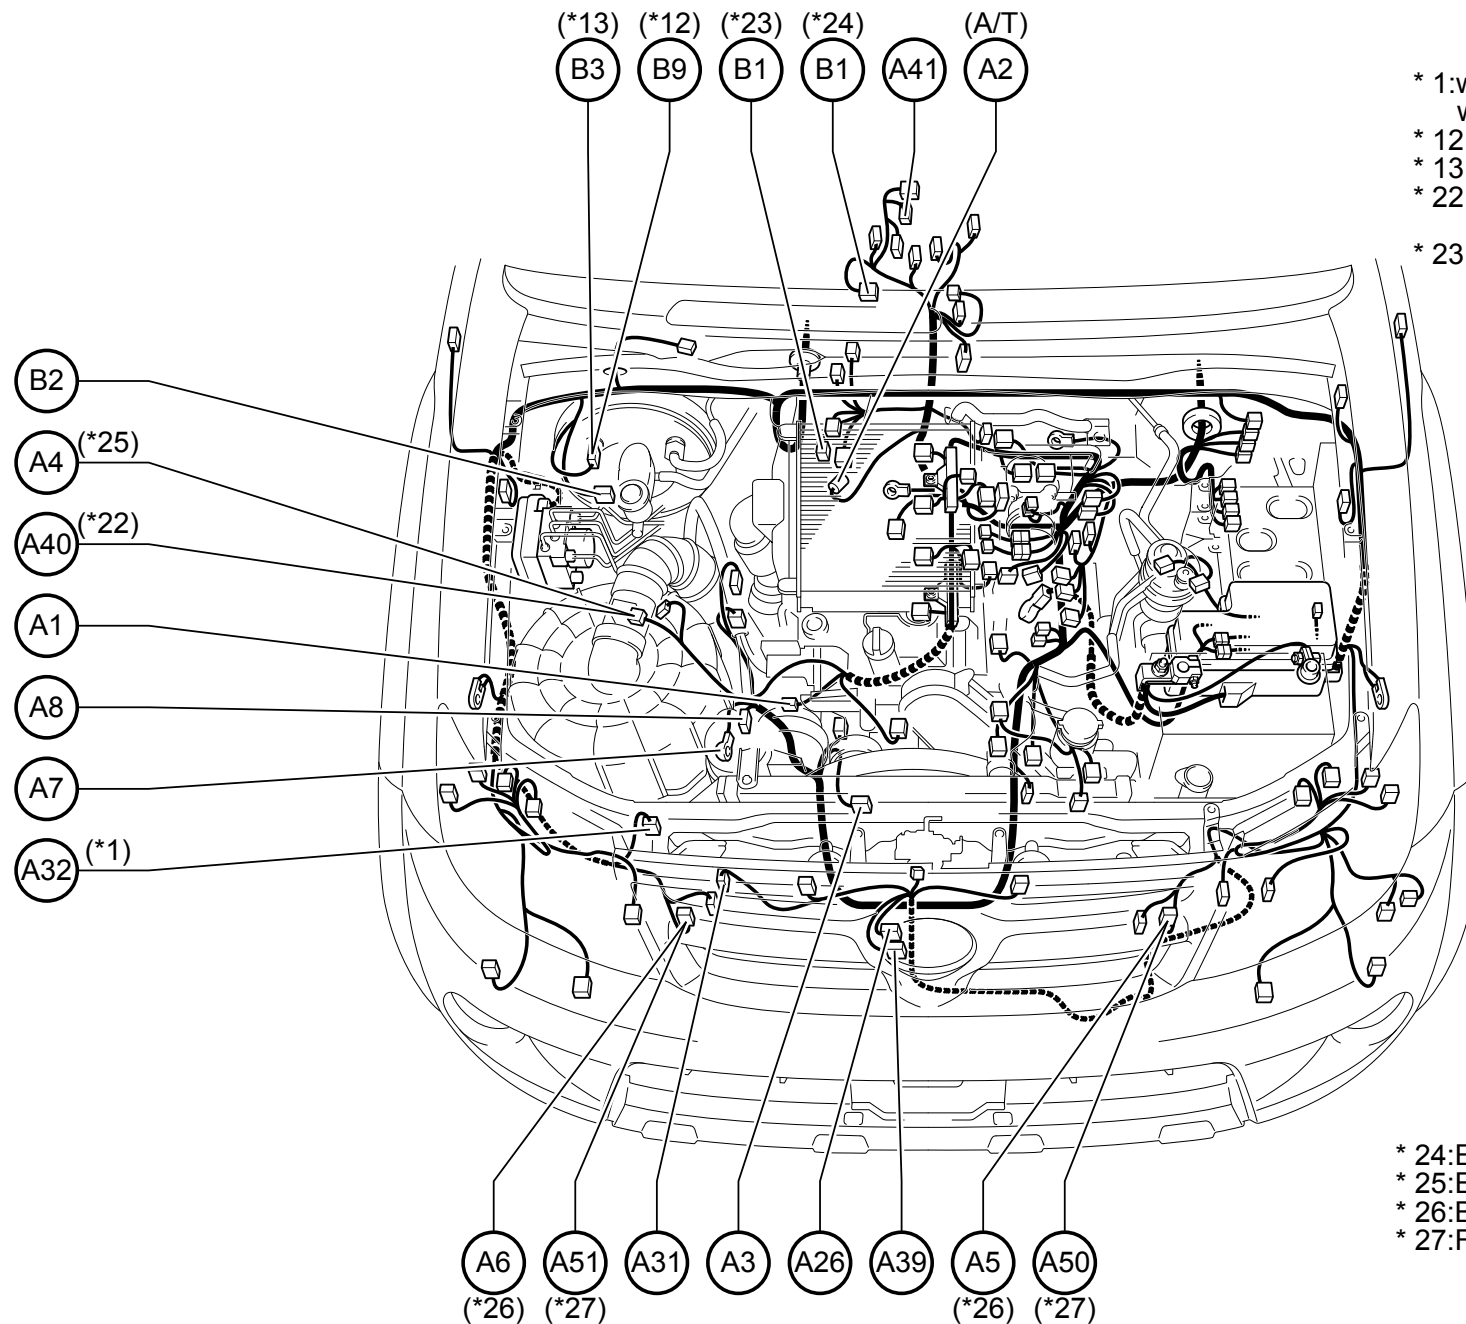


- * 1:w/ PTC Heater Cold Area Spec. w/ Air Conditioner
- * 12:w/ VSC
- * 13:w/o VSC
- * 22:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 23:1KD-FTV M/T w/ DPF, 2KD-FTV M/T w/ DPF

- * 24:Except *23
- * 25:Except *22
- * 26:Before Aug. 2012 Production
- * 27:From Aug. 2012 Production

- A 1 A/C Compressor
- A 2 A/T Fluid Temp. Sensor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 26 Ambient Temp. Sensor
- A 31 A/C Pressure Sensor
- A 32 A/C Magnetic Valve
- A 39 Ambient Temp. Sensor
- A 40 Air Flow Meter
- A 41 Air Fuel Ratio Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW
- B 3 Brake Vacuum Warning SW
- B 9 Brake Vacuum Warning SW





 
Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

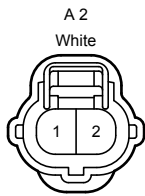


(1KD-FTV, 2KD-FTV)



     
(2TR-FE)

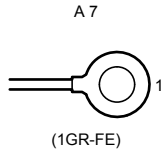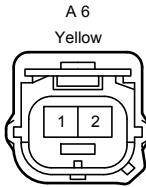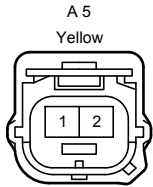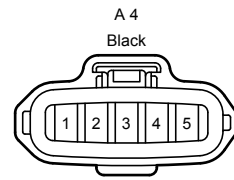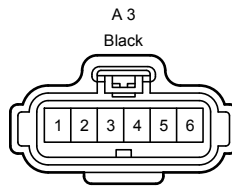


(1GR-FE)

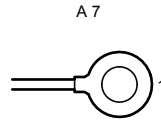 


(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

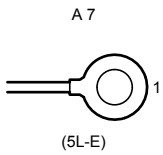 







(5L-E)

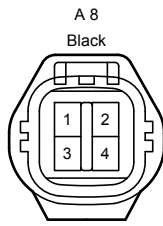 


(Except 5L-E)

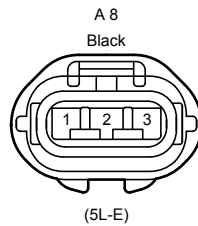 




(5L-E)

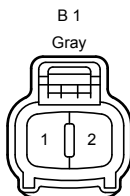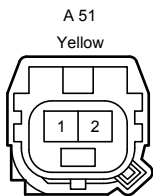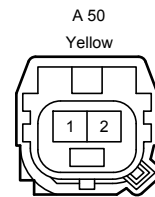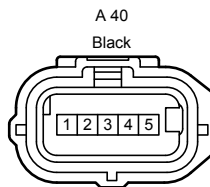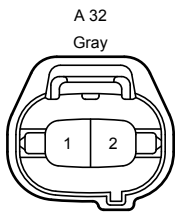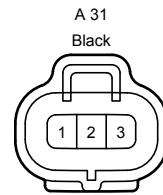      


(2TR-FE)

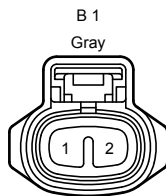 

(Except 2TR-FE)

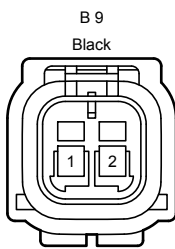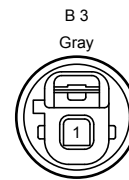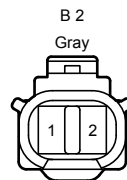   

 - * 8:Europe From Aug. 2006 Production,
Australia From Aug. 2006 Production
- * 9:Except *8
- * 22:1KD-FTV w/ DPF, 2KD-FTV w/ DPF






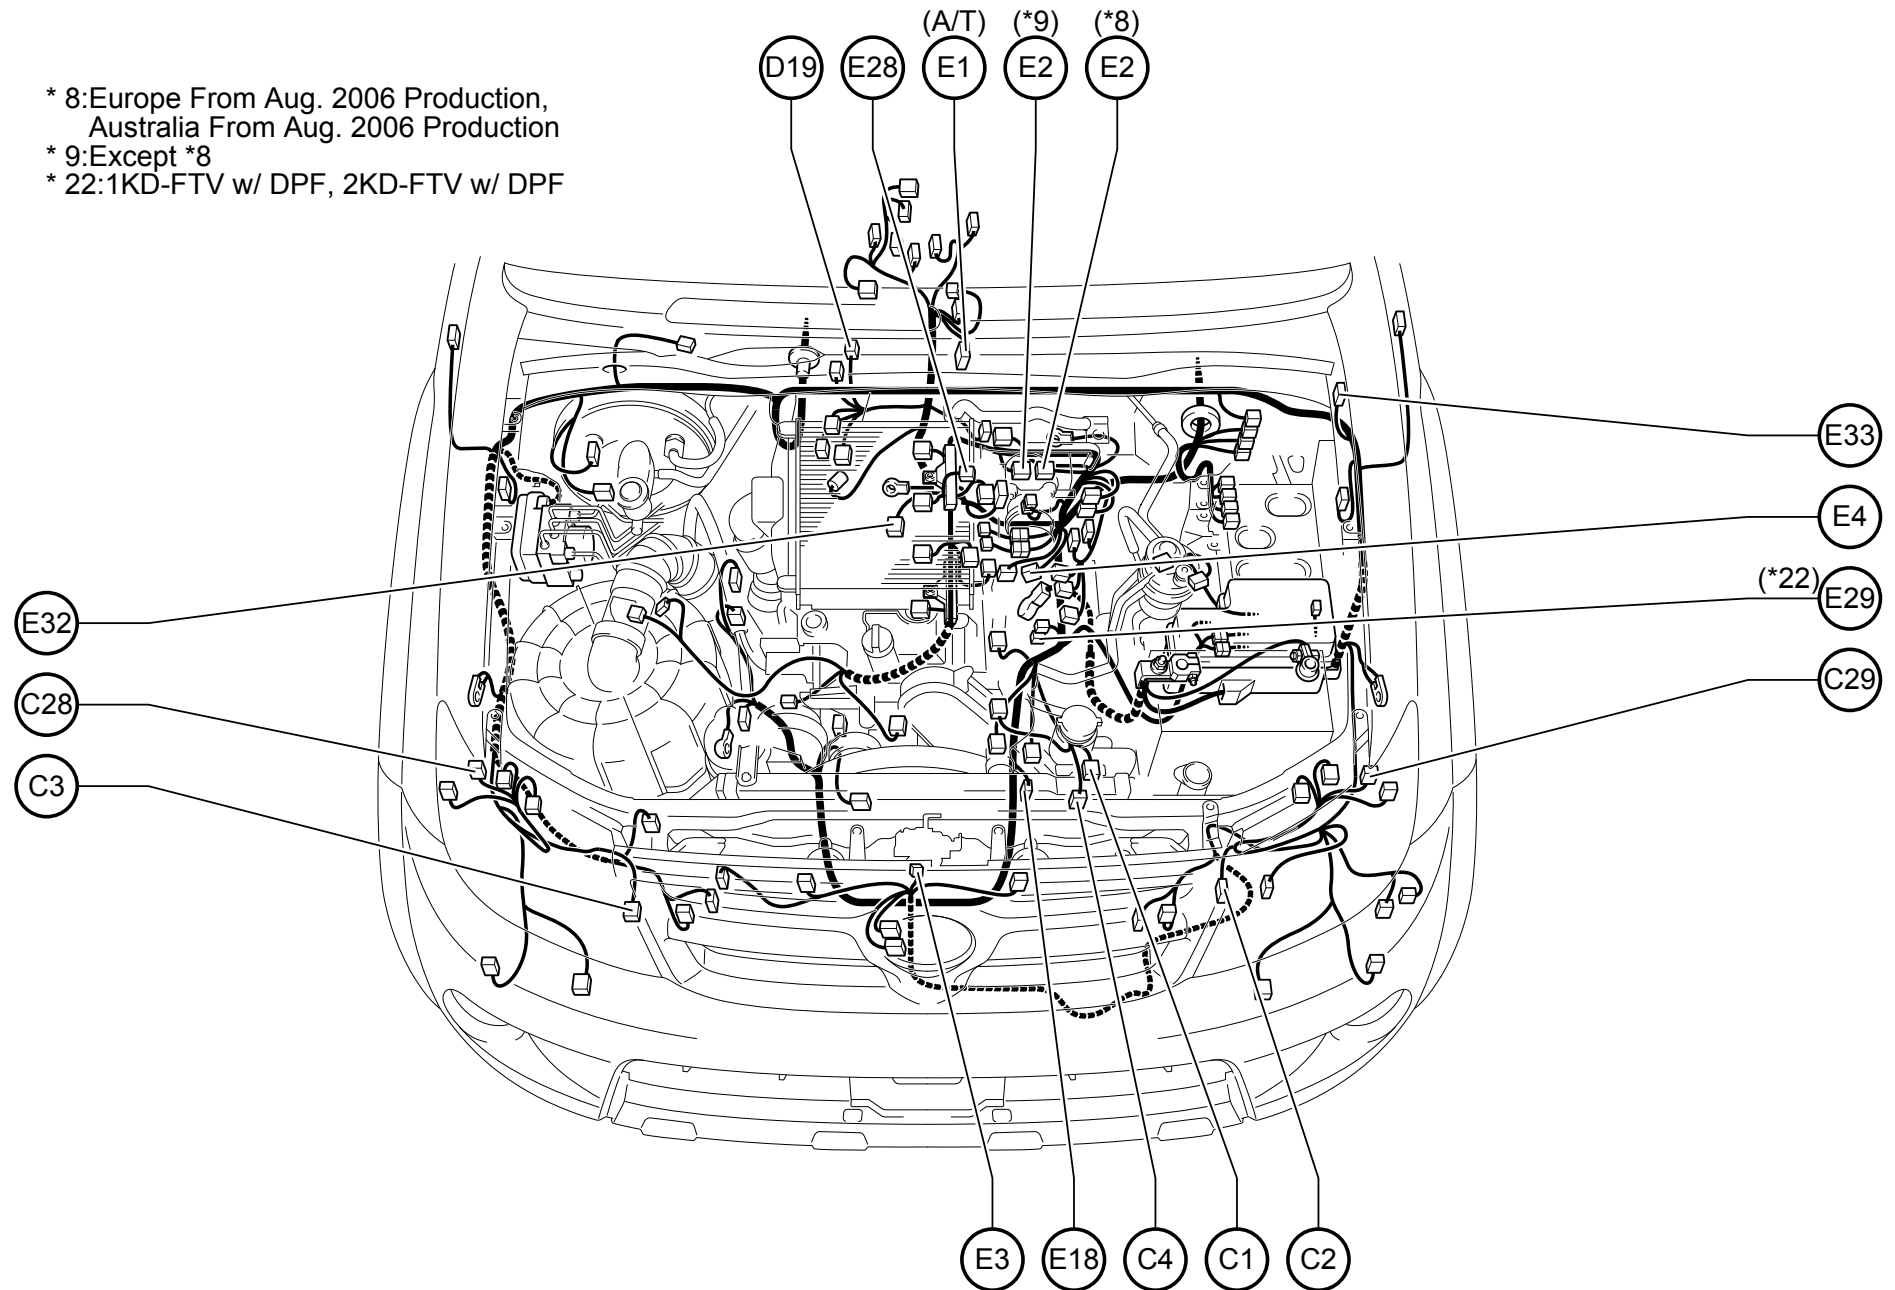


- C 1 Camshaft Position Sensor
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)










- D 19 Differential Pressure Sensor

- E 1 ECT Solenoid
- E 2 EGR Valve Position Sensor
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor
- E 18 Engine Oil Level Sensor
- E 28 Electric EGR Control Valve Assembly
- E 29 EGR Valve Assembly
- E 32 Exhaust Fuel Addition Injector Assembly
- E 33 Engine Hood Courtesy SW (Interior Light)

      Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

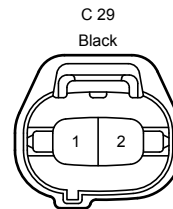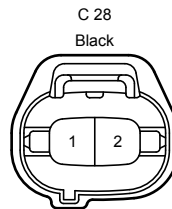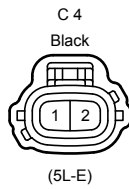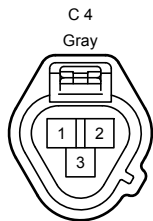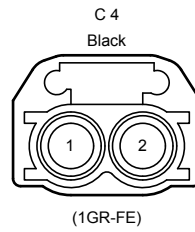
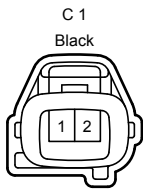


(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

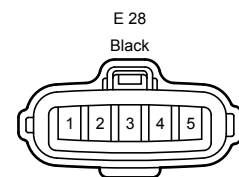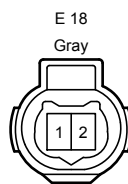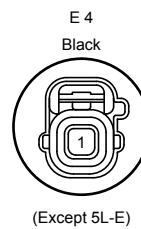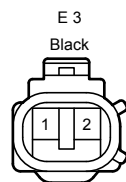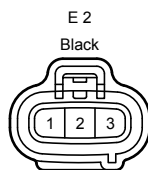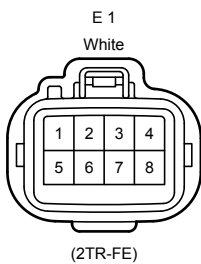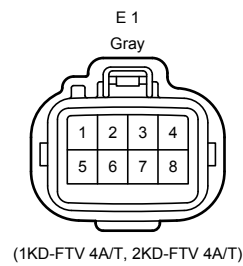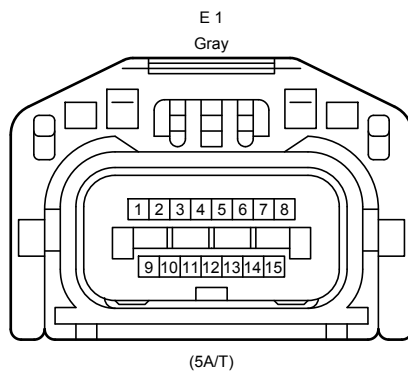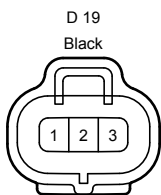         


(1KD-FTV, 2KD-FTV Europe From Aug. 2006 Production)

  (2KD-FTV Except Europe From Aug. 2006 Production)

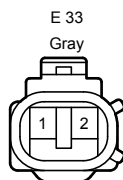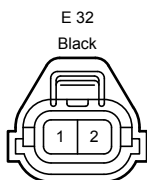










 
- * 22:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 25:Except *22
- * 28:Europe From Aug. 2012 Production
- * 29:Except Europe From Aug. 2012 Production

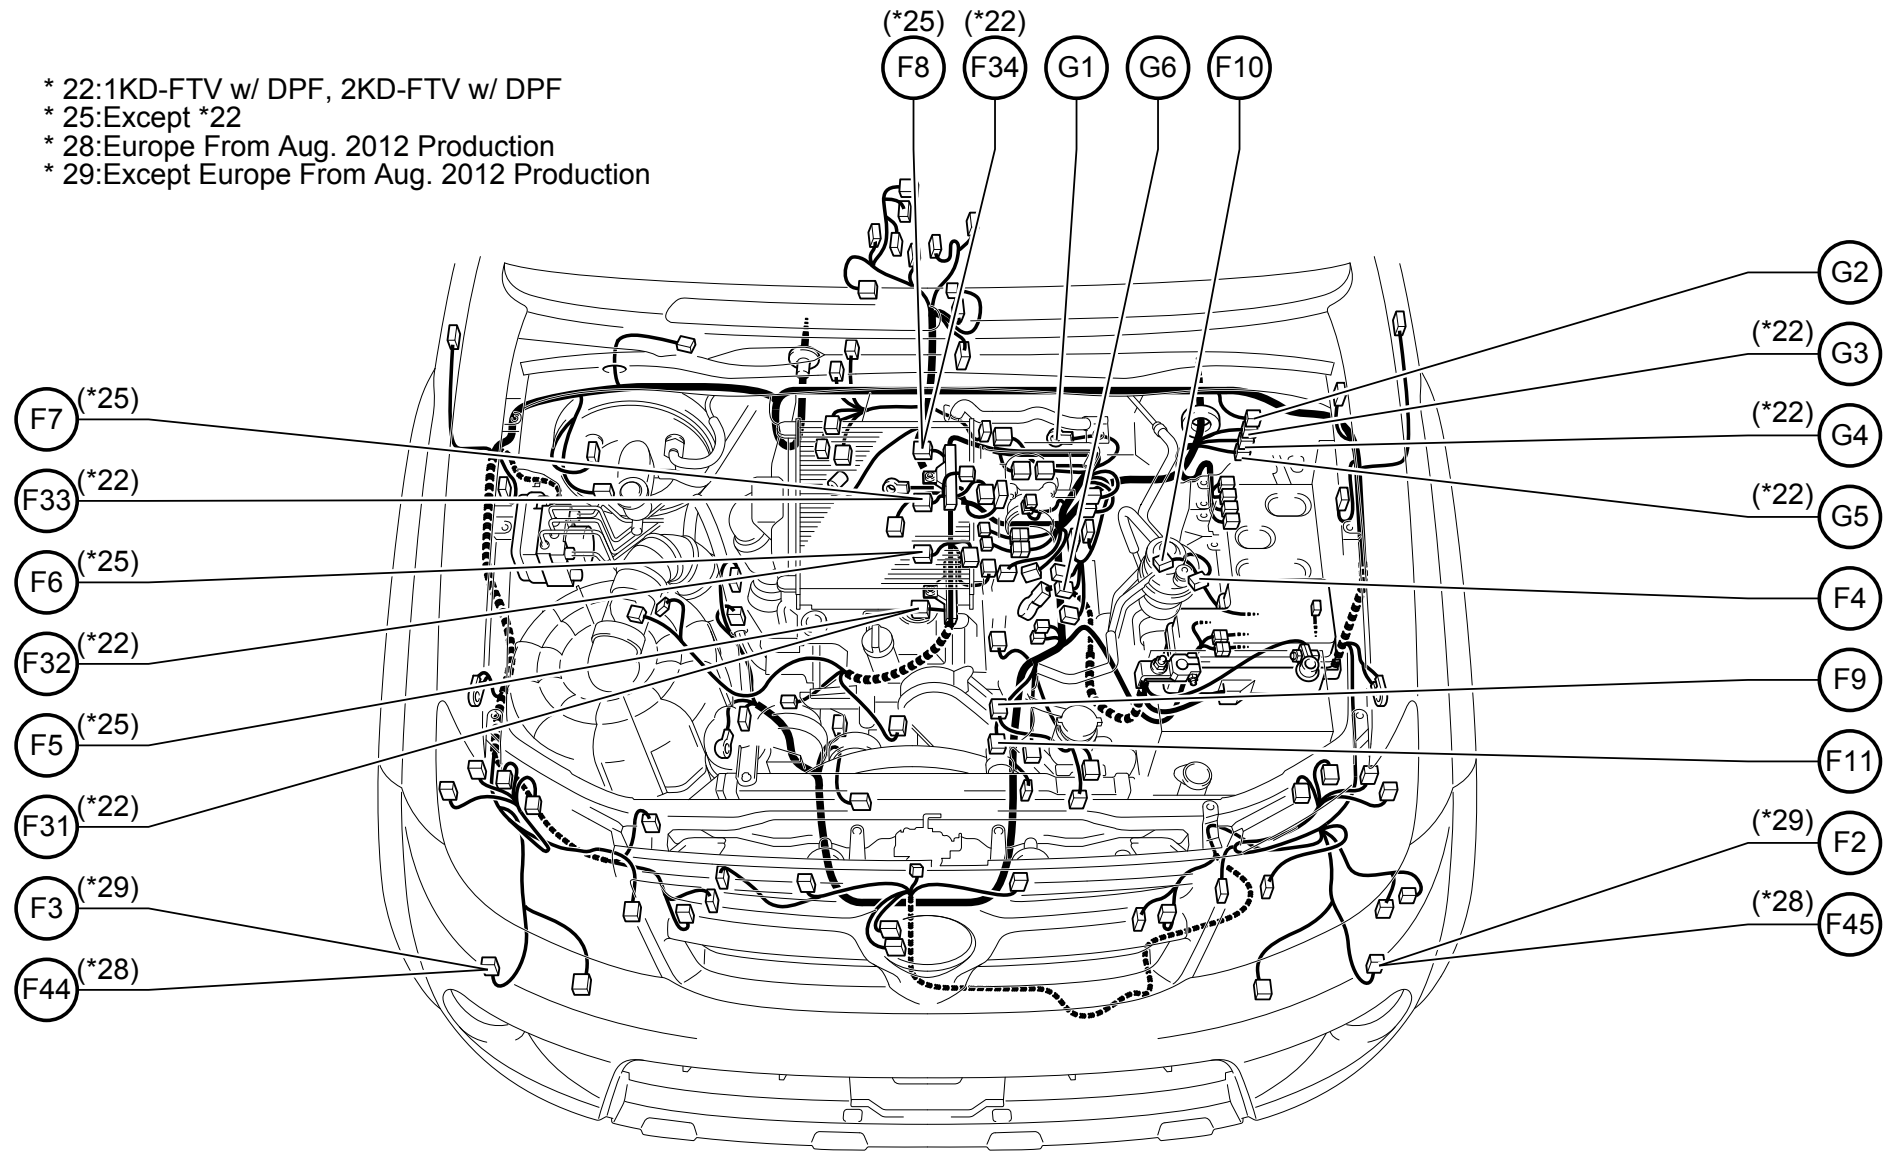


- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 4 Fuel Filter Warning SW
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)
- F 9 Fuel Pressure Sensor
- F 10 Fuel Sedimentary Level Warning SW
- F 11 Fuel Temp. Sensor
- F 31 Fuel Injector (No.1)
- F 32 Fuel Injector (No.2)
- F 33 Fuel Injector (No.3)
- F 34 Fuel Injector (No.4)
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- G 1 Glow Plug
- G 2 Glow Plug Controller
- G 3 Glow Plug Controller
- G 4 Glow Plug Controller
- G 5 Glow Plug Controller
- G 6 Glow Plug Assembly

 
 
 
 
 
 
 
 
 
 
Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

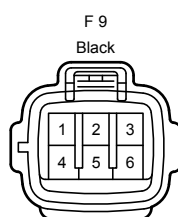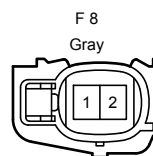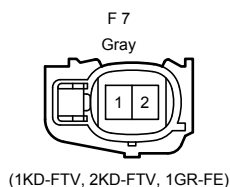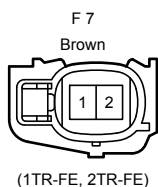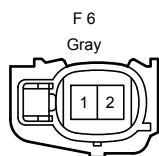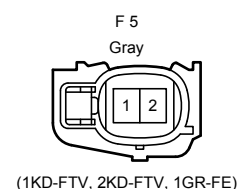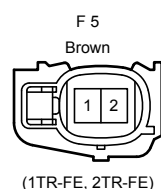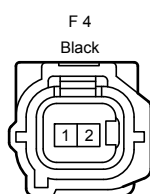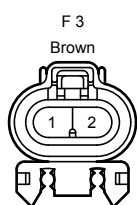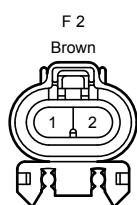

 
(Europe 1KD-FTV From Aug. 2006 Production, Europe 2KD-FTV From Aug. 2009 Production, Australia From Aug. 2006 Production, South Africa From Aug. 2010 Production, Middle East From Aug. 2010 Production)

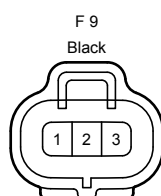

          
(Europe 1KD-FTV Before Aug. 2006 Production, Europe 2KD-FTV Before Aug. 2009 Production, Australia Before Aug. 2006 Production, South Africa Before Aug. 2010 Production, Middle East Before Aug. 2010 Production)

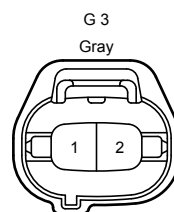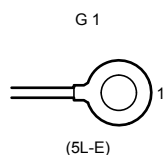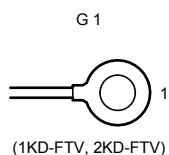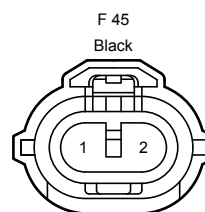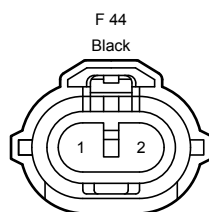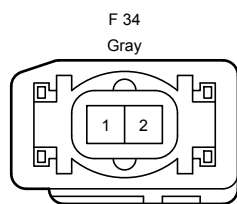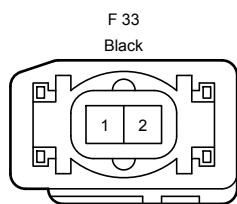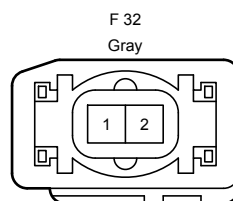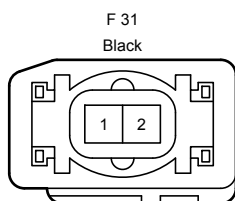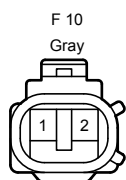


G 5
Black

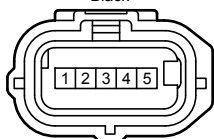 

G 6
Black

 

 - * 14:2KD-FTV Before Aug. 2009 Production,
Except 1KD-FTV Europe 2KD-FTV
From Aug. 2009 Production
- * 15:1KD-FTV Before Aug. 2006 Production,
South Africa 1KD-FTV
From Aug. 2009 Production










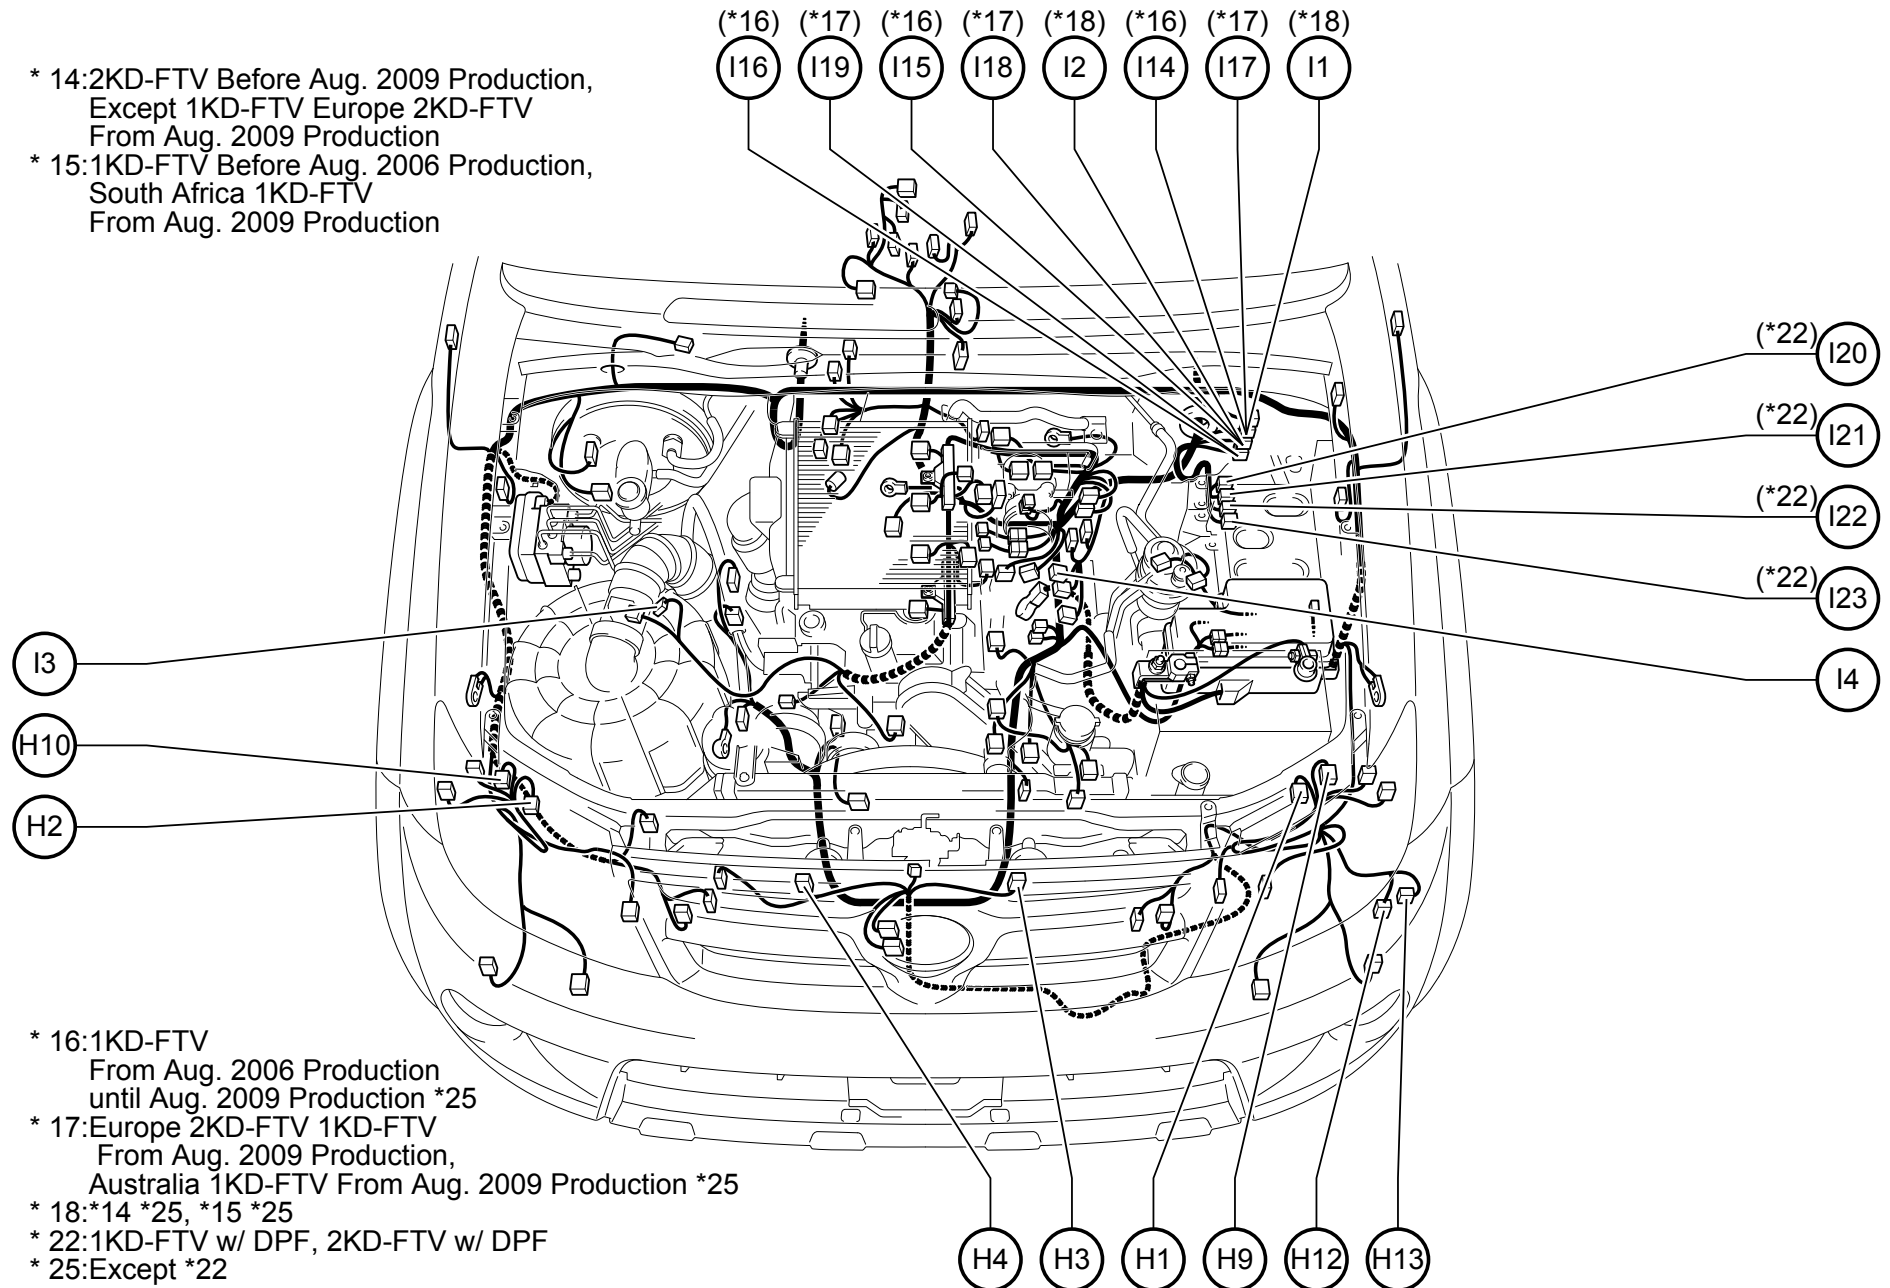


- * 16:1KD-FTV
From Aug. 2006 Production
until Aug. 2009 Production *25
- * 17:Europe 2KD-FTV 1KD-FTV
From Aug. 2009 Production,
Australia 1KD-FTV From Aug. 2009 Production *25
- * 18:*14 *25, *15 *25
- * 22:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 25:Except *22

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)
- H 12 Headlight Cleaner Motor
- H 13 Headlight Cleaner Control Relay









- I 1 Injector Driver (EDU)
- I 2 Injector Driver (EDU)
- I 3 Inlet Air Temp. Sensor (Air Cleaner)
- I 4 Inlet Air Temp. Sensor (Inter Cooler)
- I 14 Injector Driver (EDU)
- I 15 Injector Driver (EDU)
- I 16 Injector Driver (EDU)
- I 17 Injector Driver (EDU)
- I 18 Injector Driver (EDU)
- I 19 Injector Driver (EDU)
- I 20 Injector Driver (EDU)
- I 21 Injector Driver (EDU)
- I 22 Injector Driver (EDU)
- I 23 Injector Driver (EDU)

          
Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

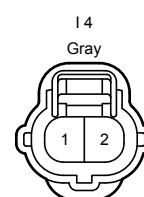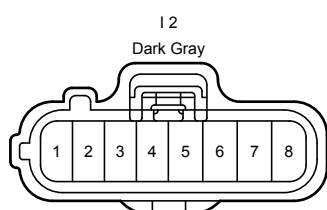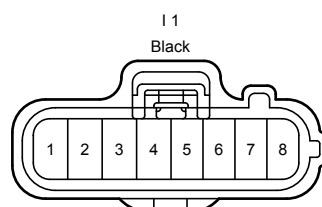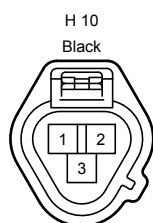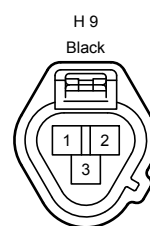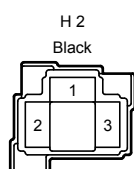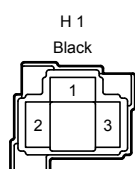

(Before Aug. 2009 Production)

         (From Aug. 2009 Production)

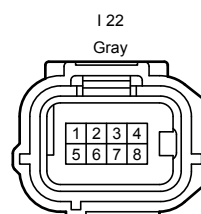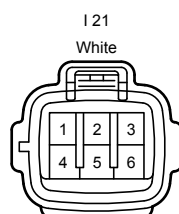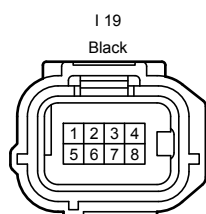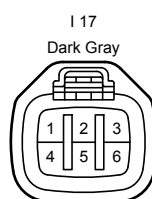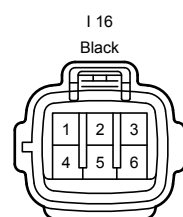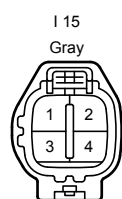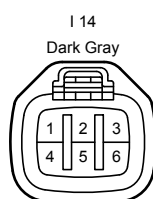

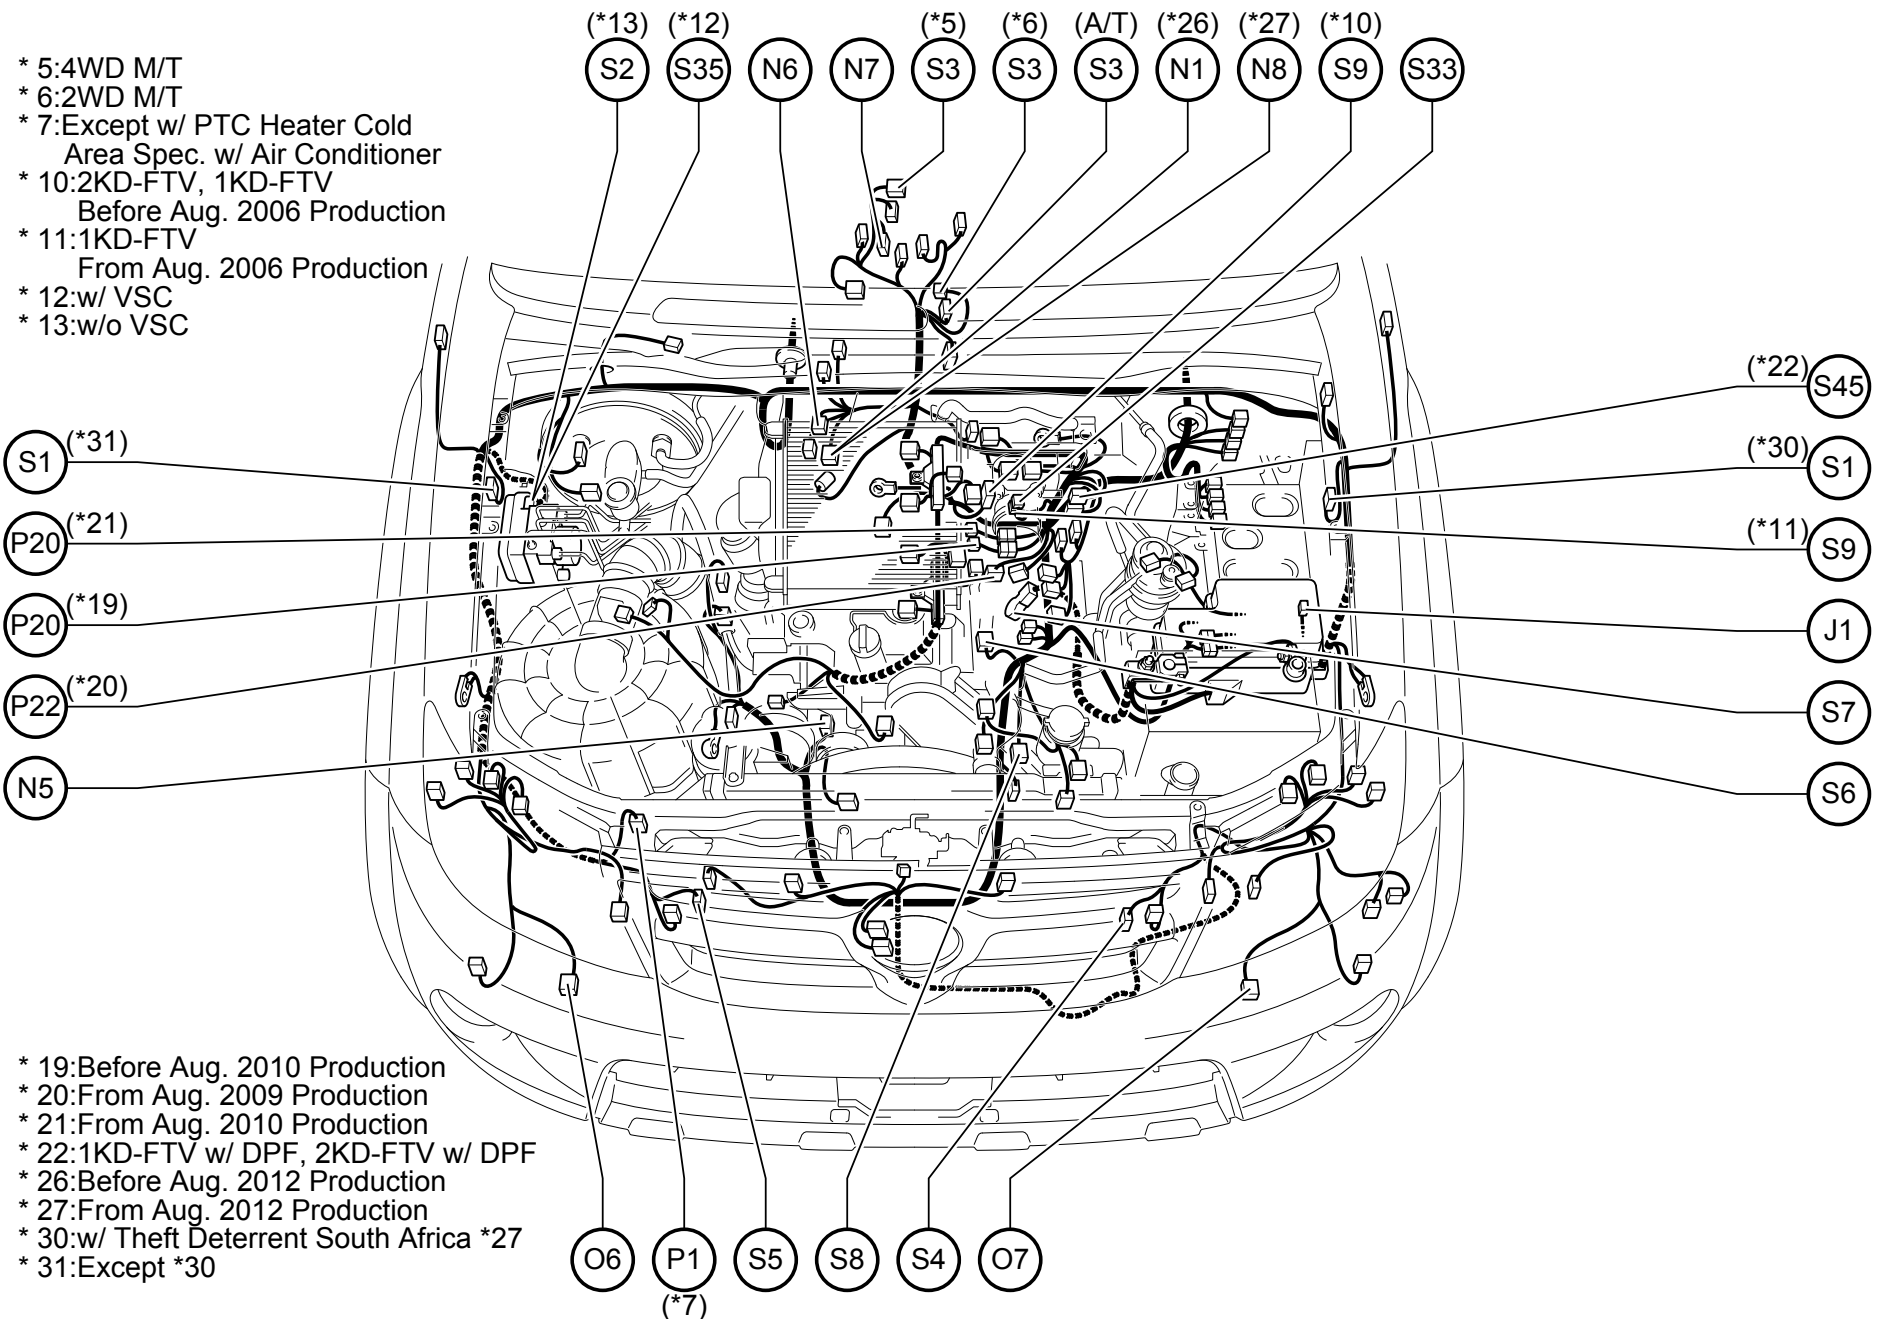

- J 1 Junction Connector

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- N 1 Park/Neutral Position SW
- N 5 No. 1 Exhaust Gas Temperature Sensor
- N 6 No. 2 Exhaust Gas Temperature Sensor
- N 7 No. 3 Exhaust Gas Temperature Sensor
- N 8 Park/Neutral Position SW

- O 6 Option Connector (Daytime Running Light RH)
- O 7 Option Connector (Daytime Running Light LH)


- P 1 Pressure SW
- P 20 Pressure Discharge Valve
- P 22 Pressure Discharge Valve

- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter
- S 8 Suction Control Valve
- S 9 Swirl Control Valve (No.1)
- S 33 Swirl Control Valve (No.2)
- S 35 Skid Control ECU with Actuator
- S 45 Suction Control Valve



Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

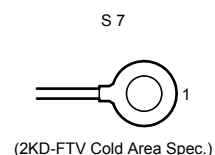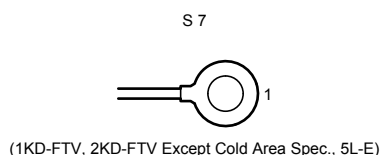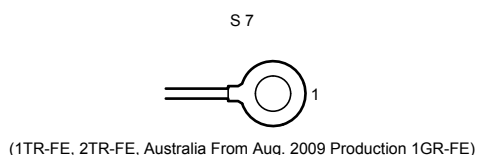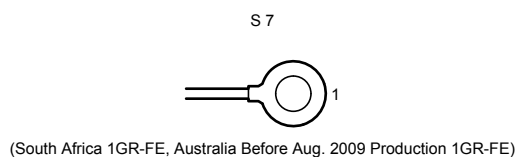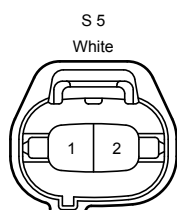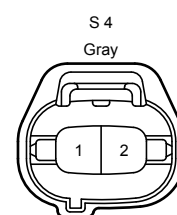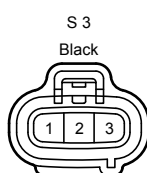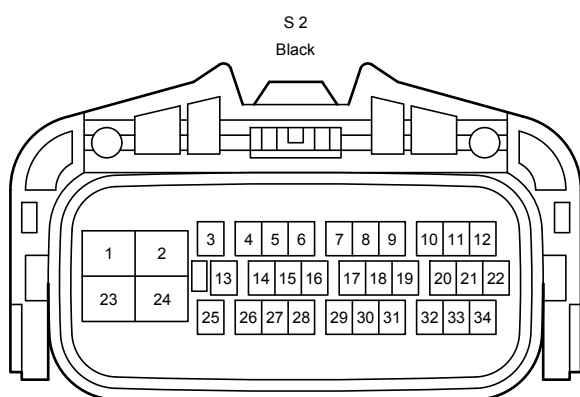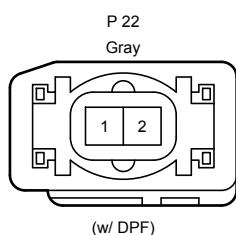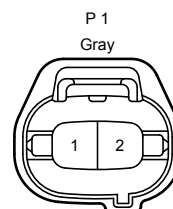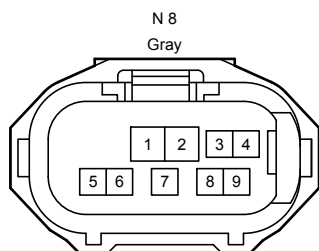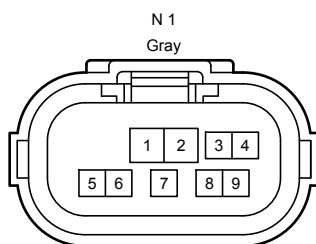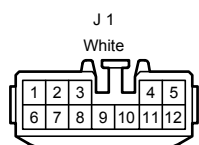

 
Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

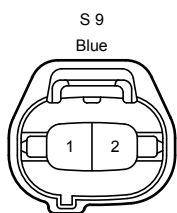

  
(Europe From Aug. 2006 Production, Australia From Aug. 2006 Production, Morocco From Aug. 2012 Production)

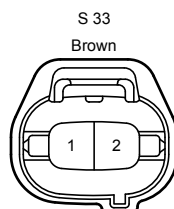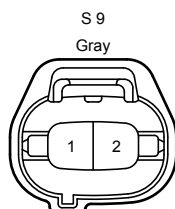

 (South Africa 1KD-FTV, Australia Before Aug. 2006 Production)

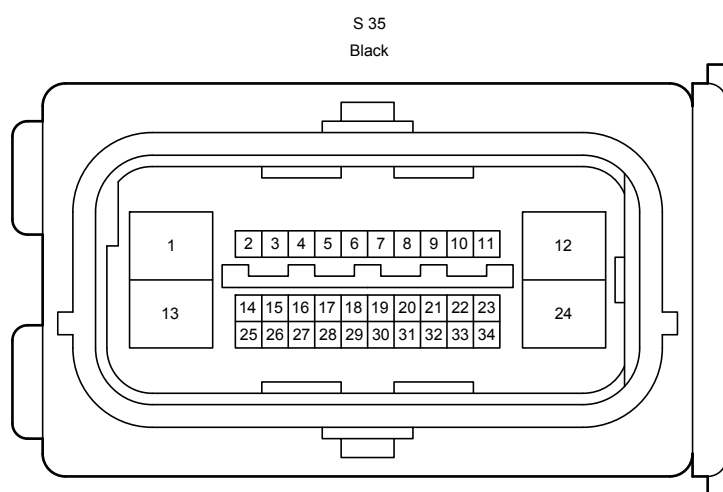

 - * 2:2KD-FTV *9
- * 3:1KD-FTV *9
- * 5:4WD M/T
- * 8:Europe From Aug. 2006 Production,
Australia From Aug. 2006 Production
- * 9:Except *8
- * 22:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 25:Except *22
- * 26:4A/T
- * 27:5A/T

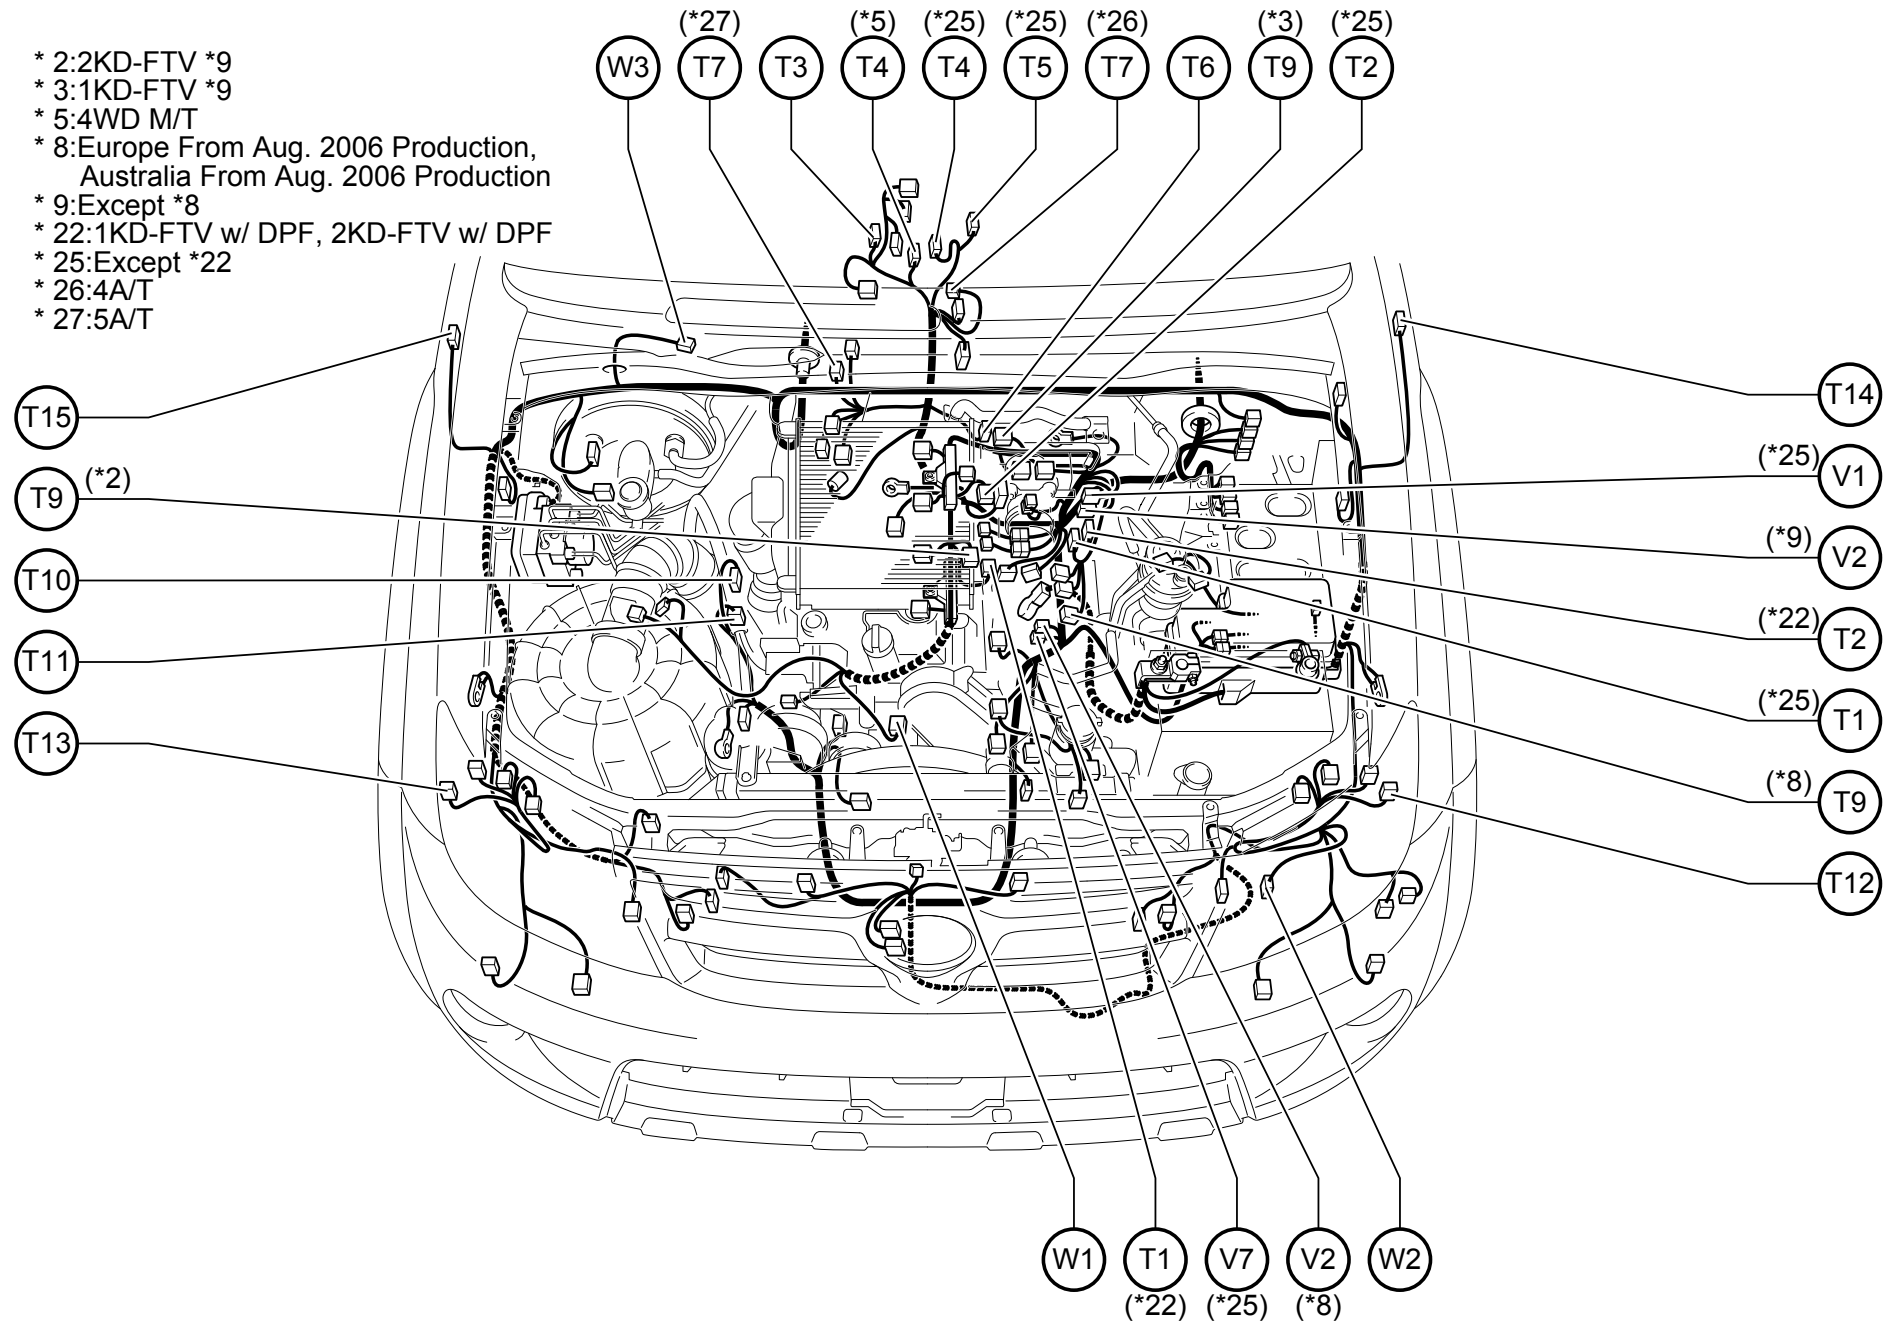


- T 1 Throttle Body Assembly
- T 2 Throttle Body Assembly
- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 9 Turbo Pressure Sensor
- T 10 Turbocharger Variable Nozzle Motor
- T 11 Turbocharger Variable Nozzle Sensor
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)


- V 1 VRV (EGR)
- V 2 VSV (EGR Cut Valve)
- V 7 VSV (for EGR No.2 Valve)

- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

 
Position of Parts in Engine Compartment <RHD 1KD-FTV, 2KD-FTV>

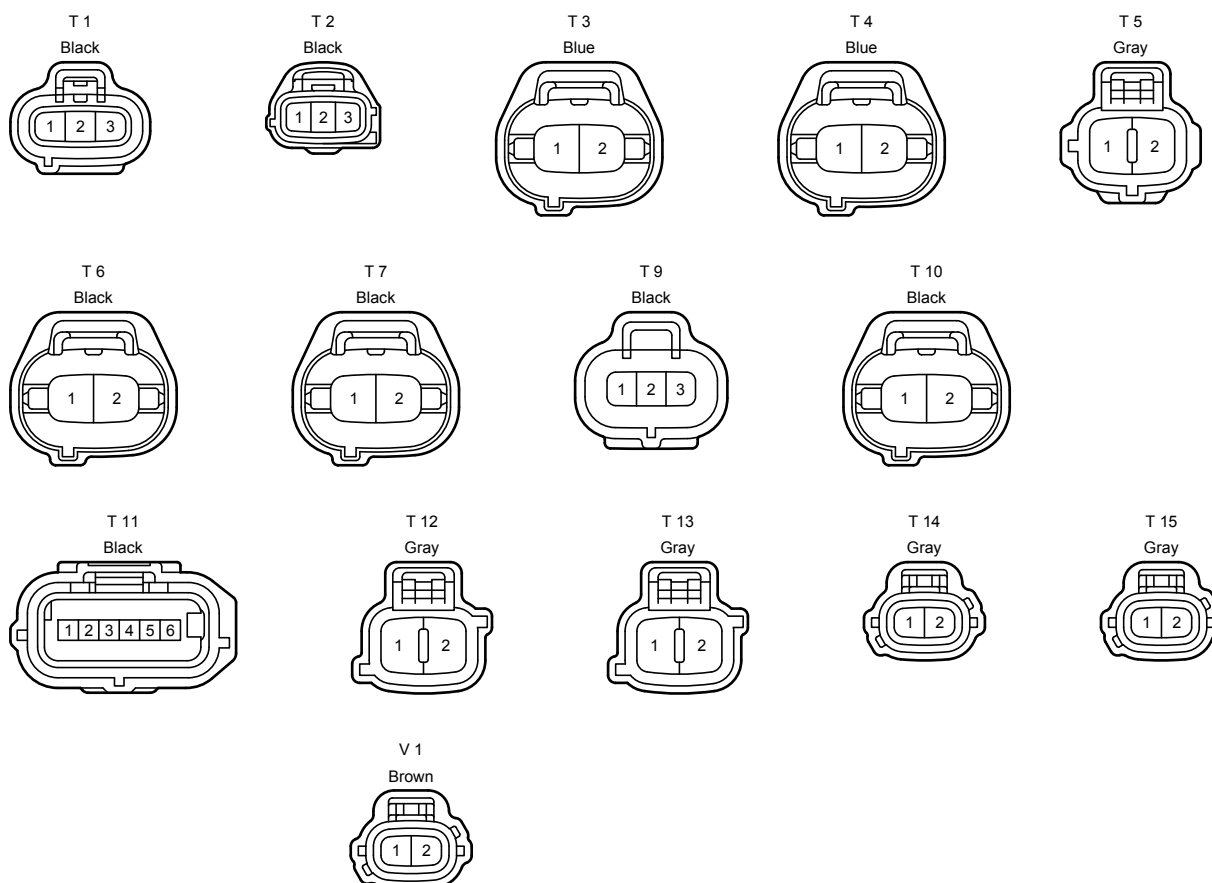


 
(Europe From Aug. 2006 Production, Australia From Aug. 2006 Production, Morocco From Aug. 2012 Production)

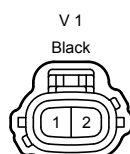

   
(South Africa, Europe Before Aug. 2006 Production Except Turkey, Australia Before Aug. 2006 Production, General From Aug. 2012 Production, Laos From Aug. 2012 Production)

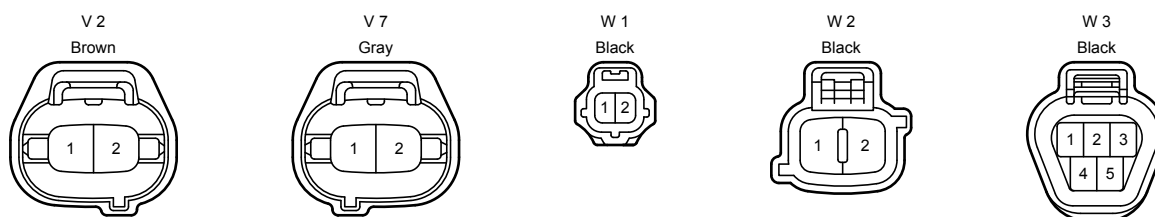

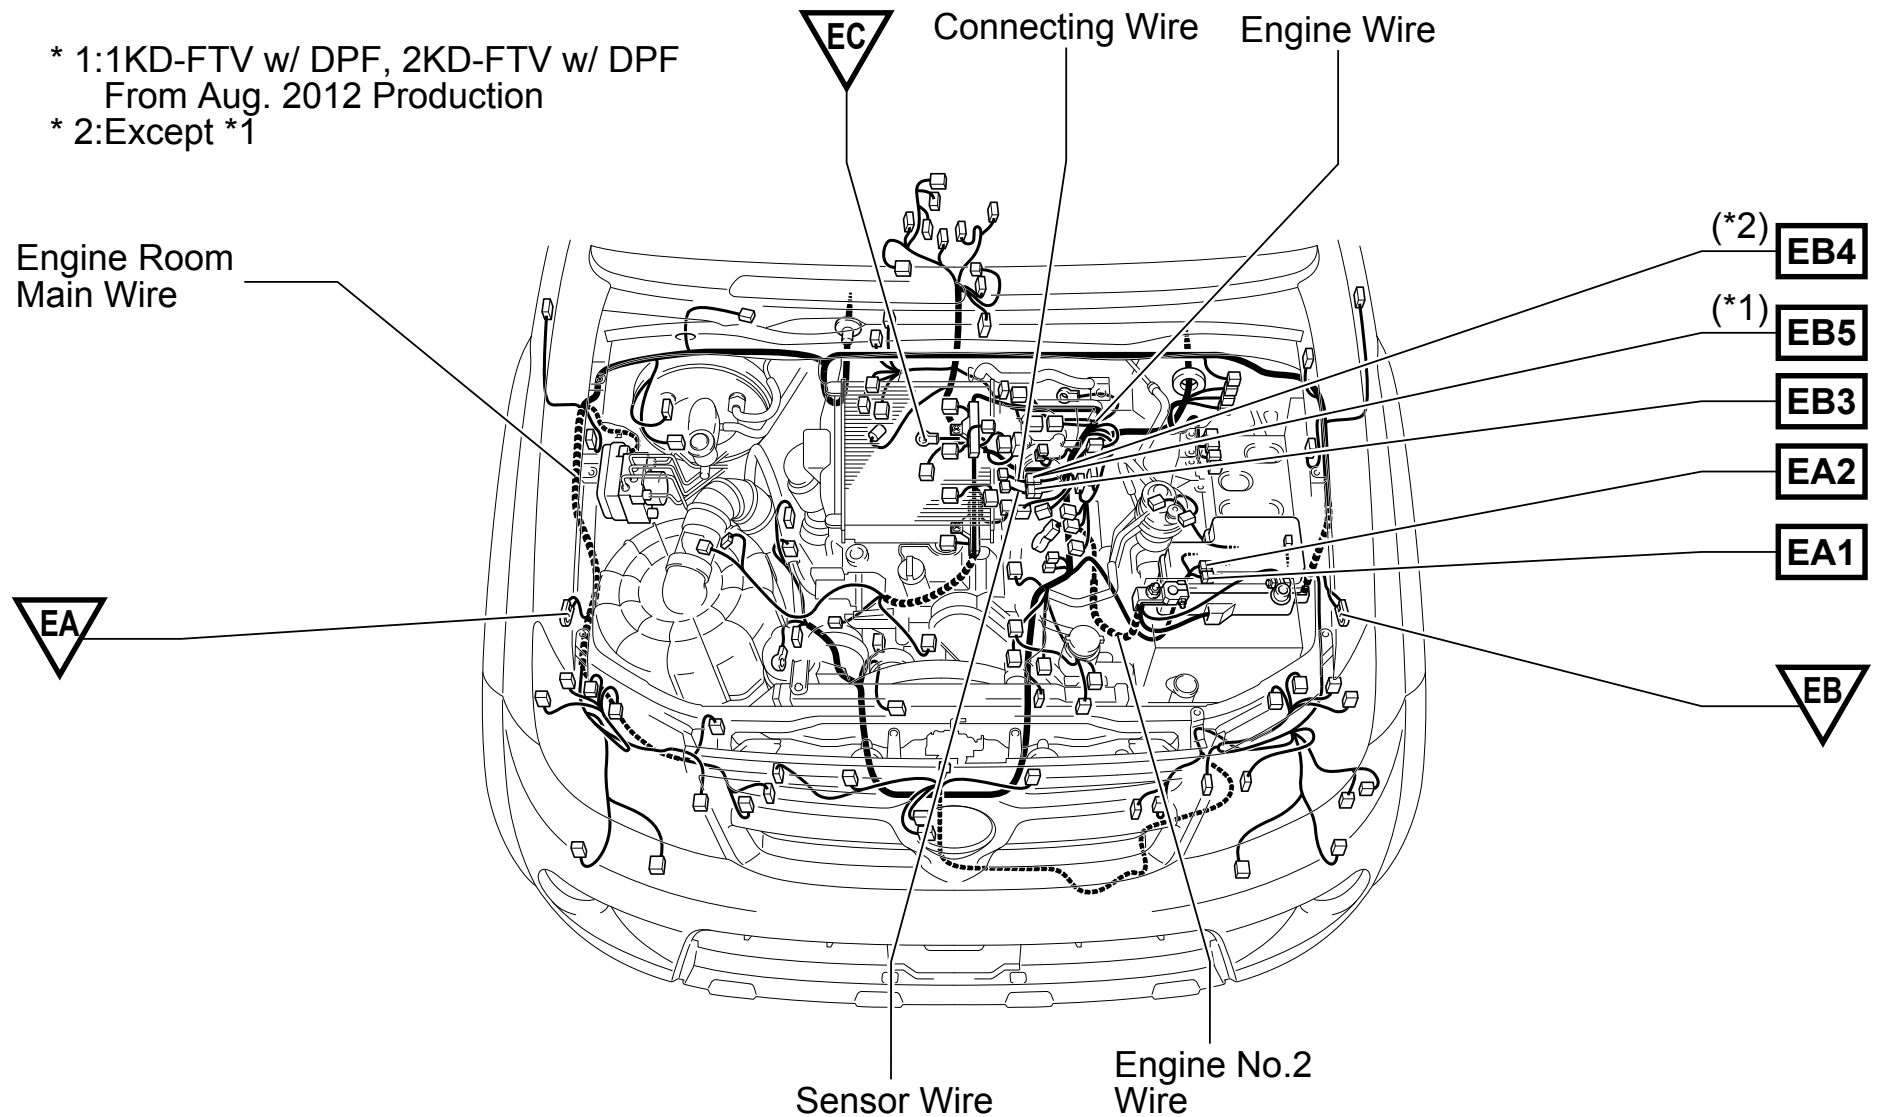

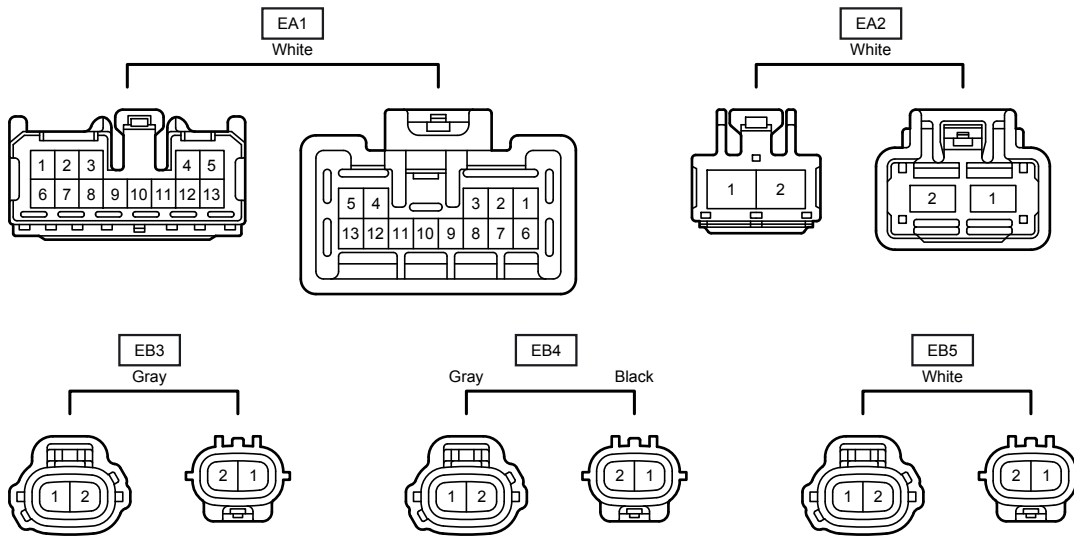

 - * 7:Before Aug. 2012 Production
- * 8:From Aug. 2012 Production
- * 9:w/ Air Injection Control Driver
- * 10:w/o Air Injection Control Driver
- * 11:Before Aug. 2013 Production
- * 12:From Aug. 2013 Production

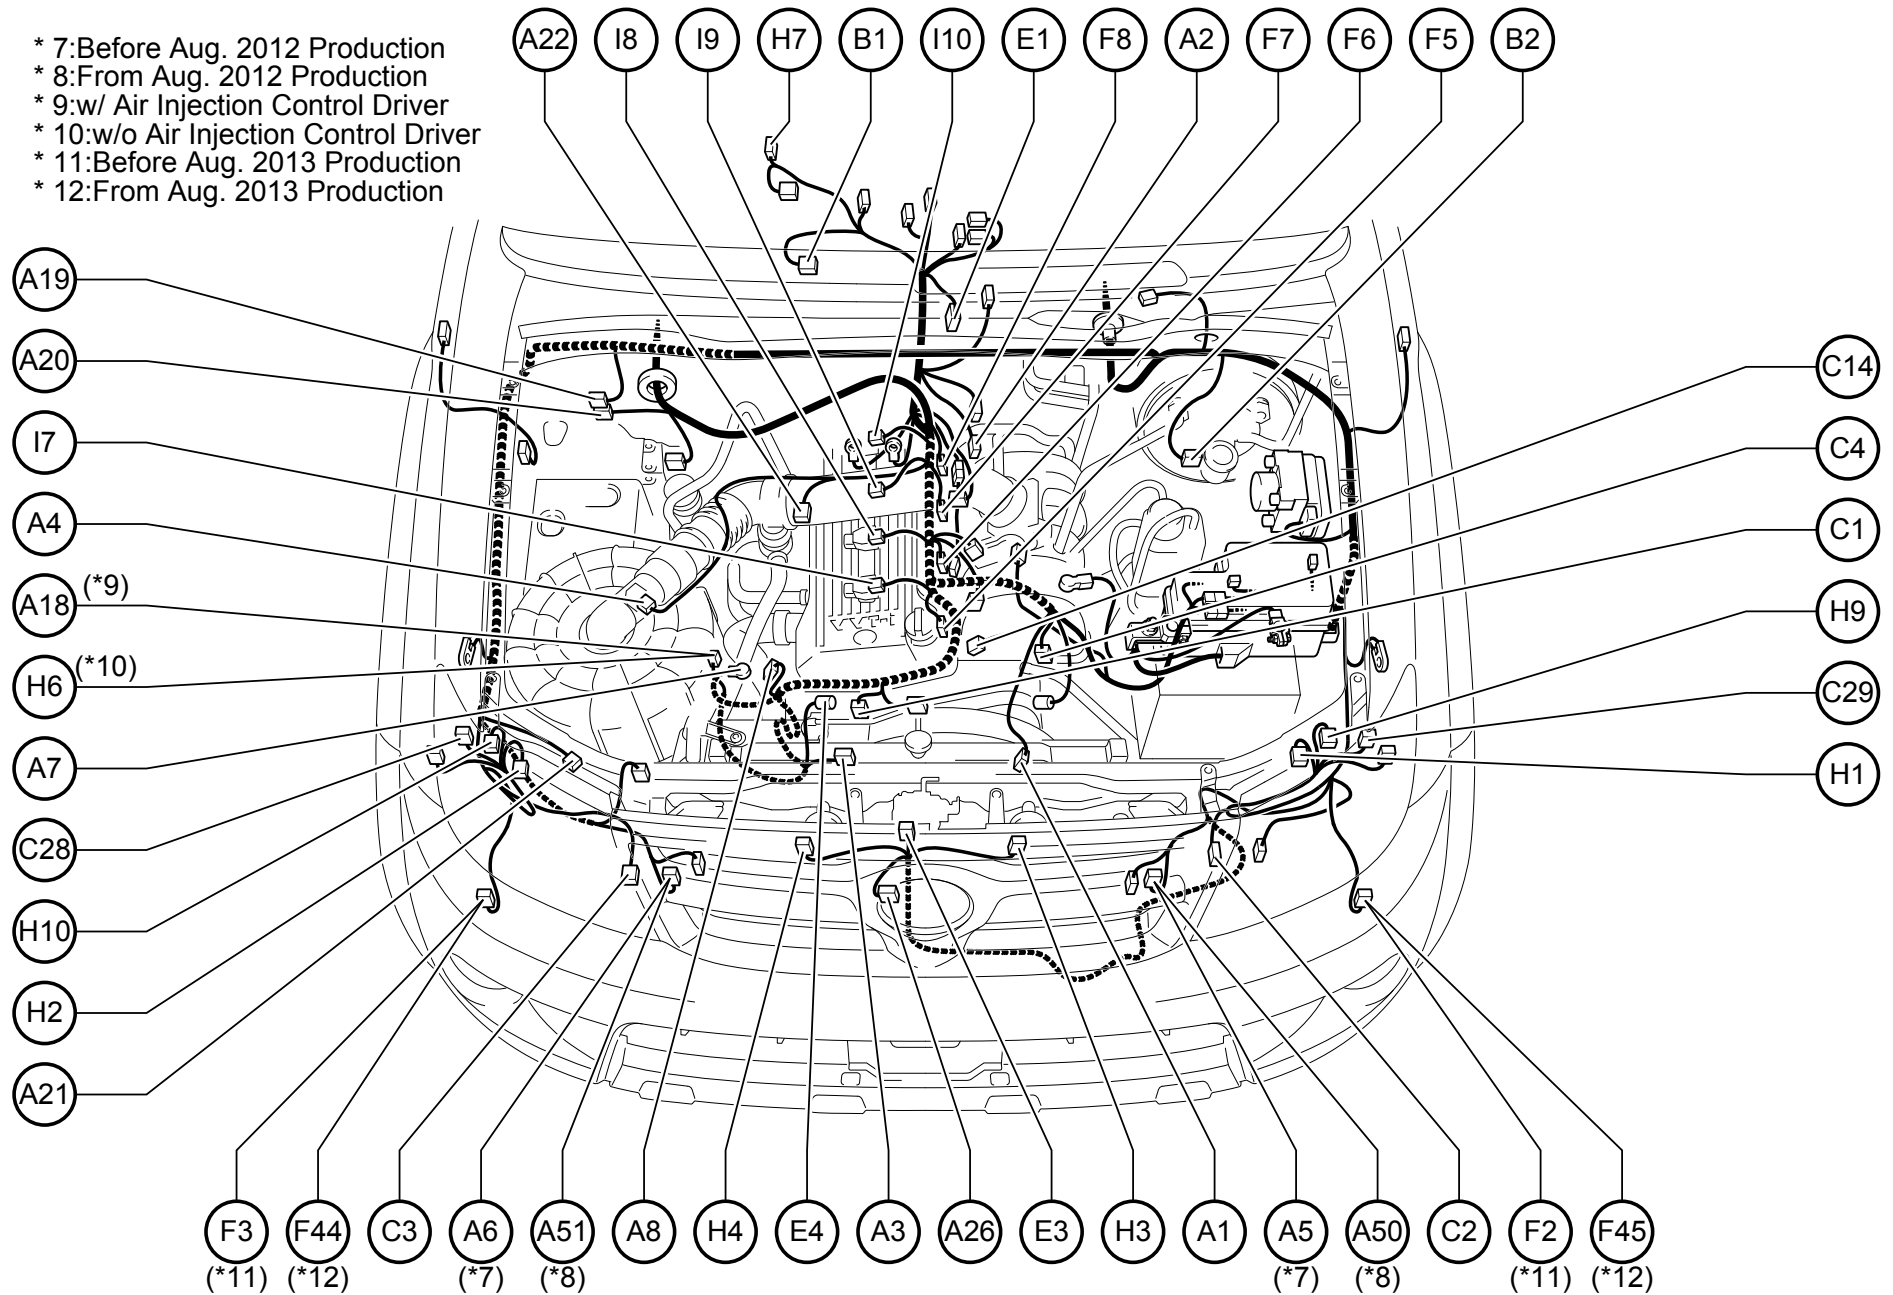

- A 1 A/C Compressor
- A 2 A/T Fluid Temp. Sensor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 19 Air Injection Control Driver
- A 20 Air Injection Control Driver
- A 21 Air Pump
- A 22 Air Switching Valve
- A 26 Ambient Temp. Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 14 Camshaft Timing Oil Control Valve
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

 
- E 1 ECT Solenoid
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor

- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)
- F 44 Fog Lamp (Front RH)
- F 45 Fog Lamp (Front LH)

- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)

- I 7 Ignition Coil (No.1)
- I 8 Ignition Coil (No.2)
- I 9 Ignition Coil (No.3)
- I 10 Ignition Coil (No.4)






Position of Parts in Engine Compartment <LHD 1TR-FE, 2TR-FE>

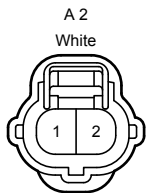


(1KD-FTV, 2KD-FTV)



     
(2TR-FE)

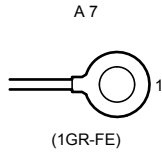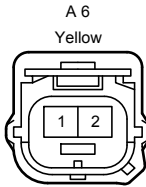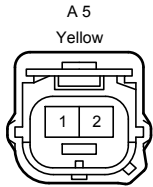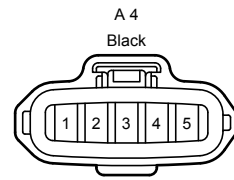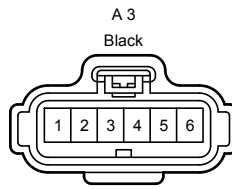


(1GR-FE)

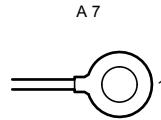 


(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

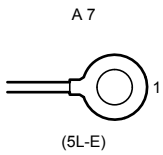 

(5L-E)

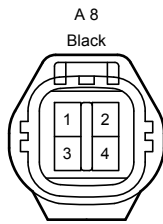 

(Except 5L-E)

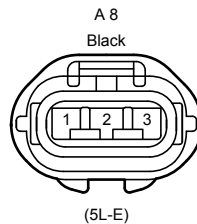 








(5L-E)




(1GR-FE)



     
 
 
(Australia 2TR-FE)

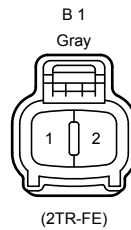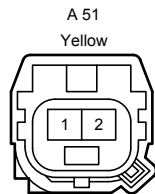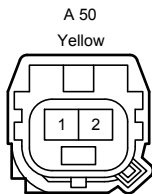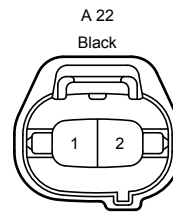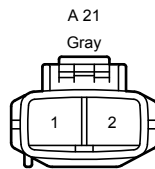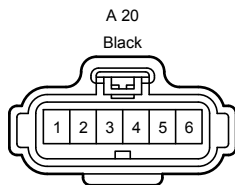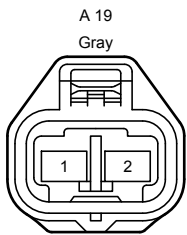


(2TR-FE)

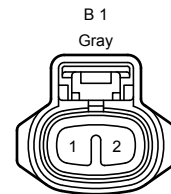 


(Except 2TR-FE)

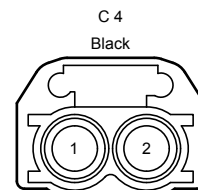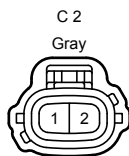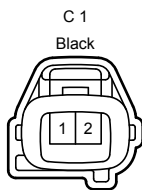   



(1GR-FE)


























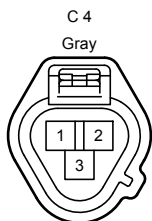 



(1TR-FE, 2TR-FE, 1KD-FTV, 2KD-FTV)

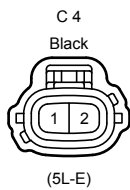 

(5L-E)

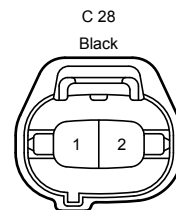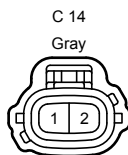  

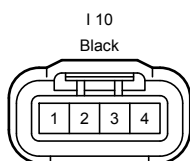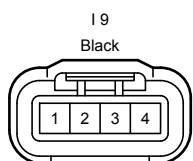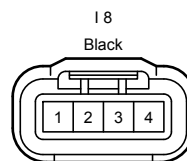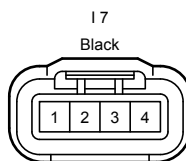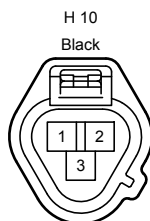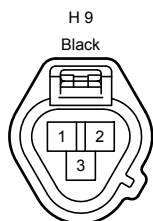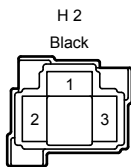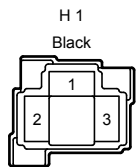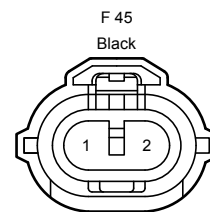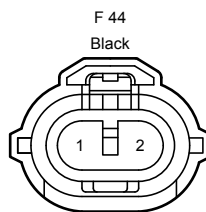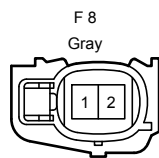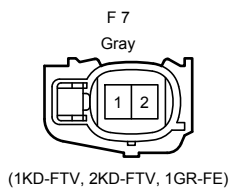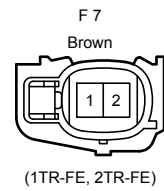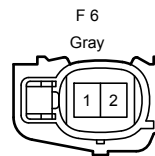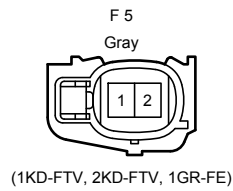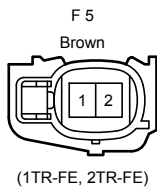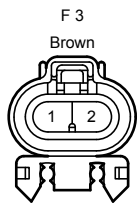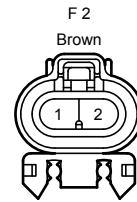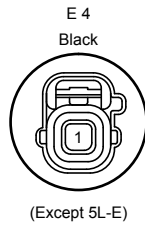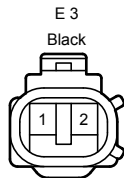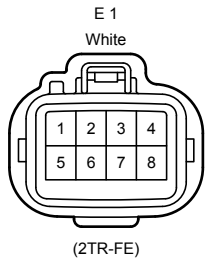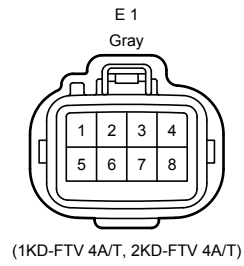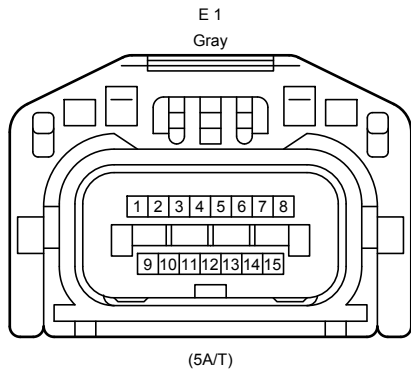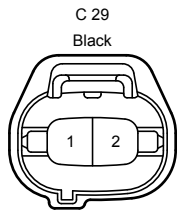                          

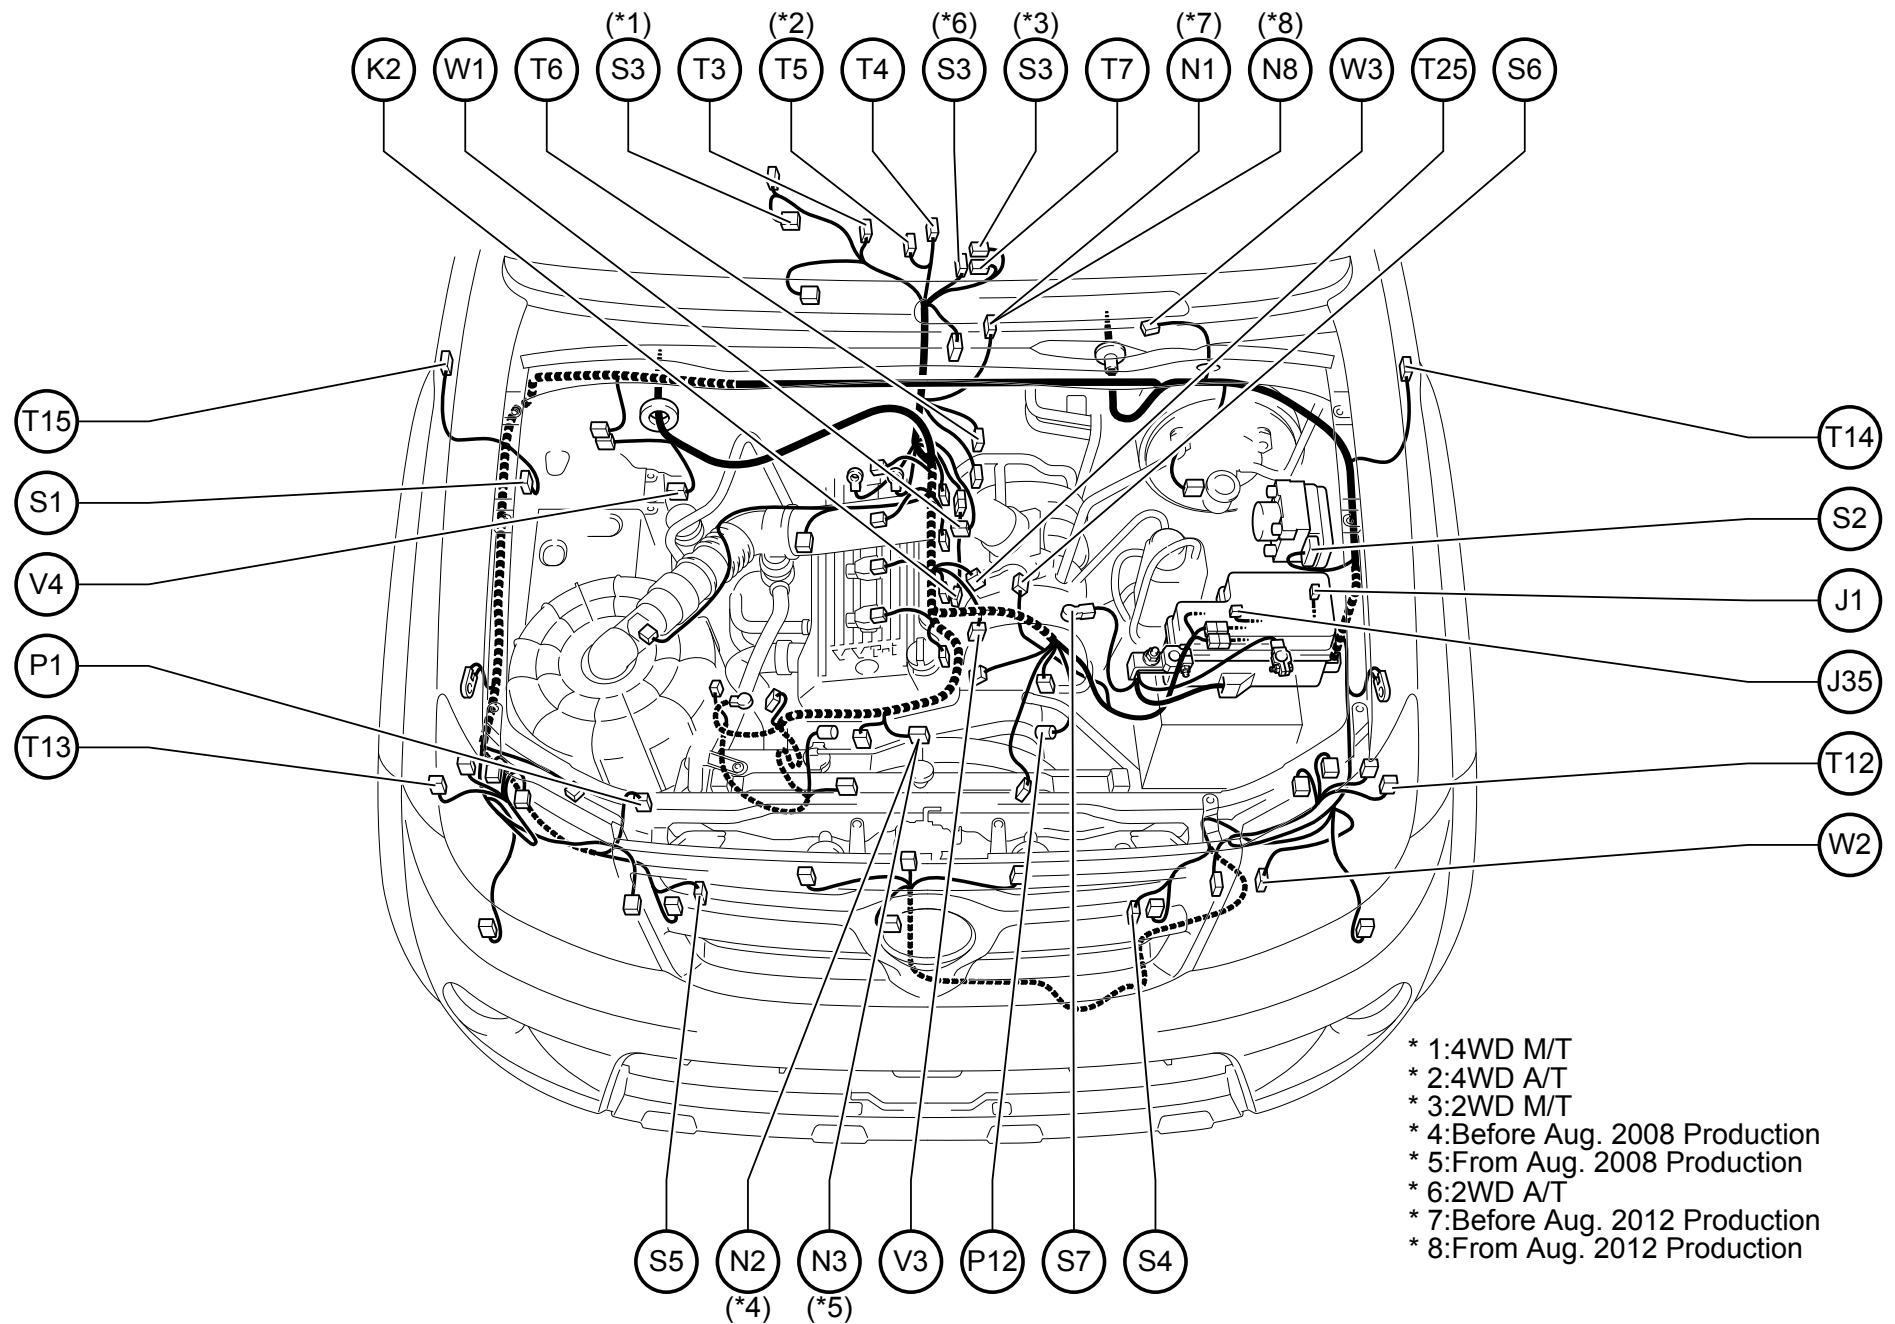 

- J 1 Junction Connector
- J 35 Junction Connector

- K 2 Knock Control Sensor (Bank 1)

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition)
- N 3 Noise Filter (Ignition)
- N 8 Park/Neutral Position SW

- P 1 Pressure SW
- P 12 Power Steering Oil Pressure SW

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter

- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly

- V 3 VSV (Purge)
- V 4 Variable Resistor


- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

Position of Parts in Engine Compartment <LHD 1TR-FE, 2TR-FE>

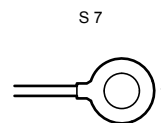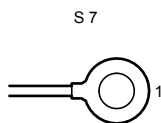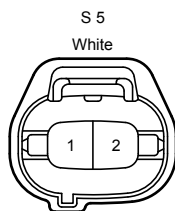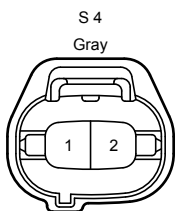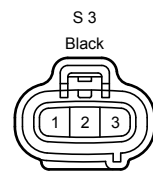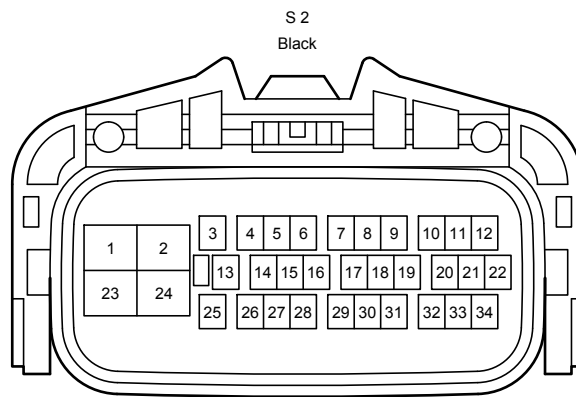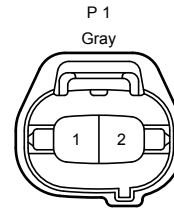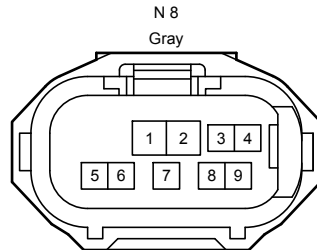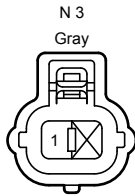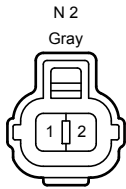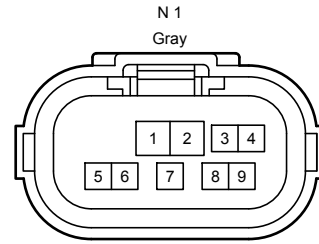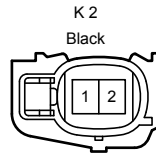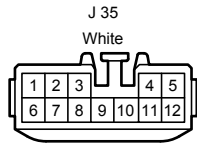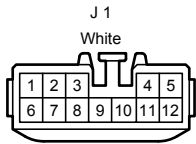


(South Africa 1GR-FE, Australia Before Aug. 2009 Production 1GR-FE)


 
(1TR-FE, 2TR-FE, Australia From Aug. 2009 Production 1GR-FE)

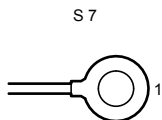


 
(1KD-FTV, 2KD-FTV Except Cold Area Spec., 5L-E)

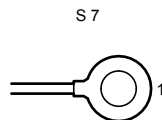


(2KD-FTV Cold Area Spec.)

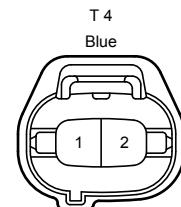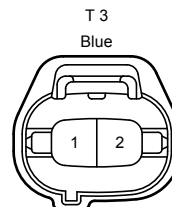  

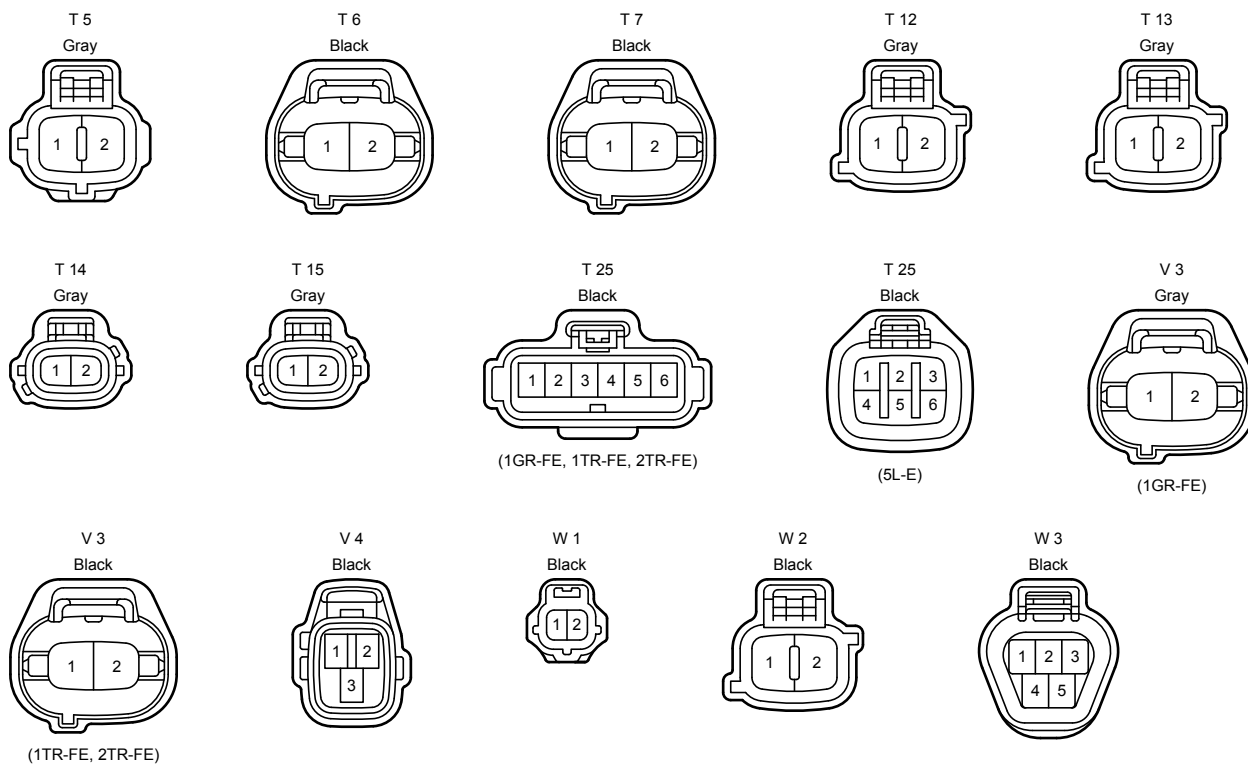 


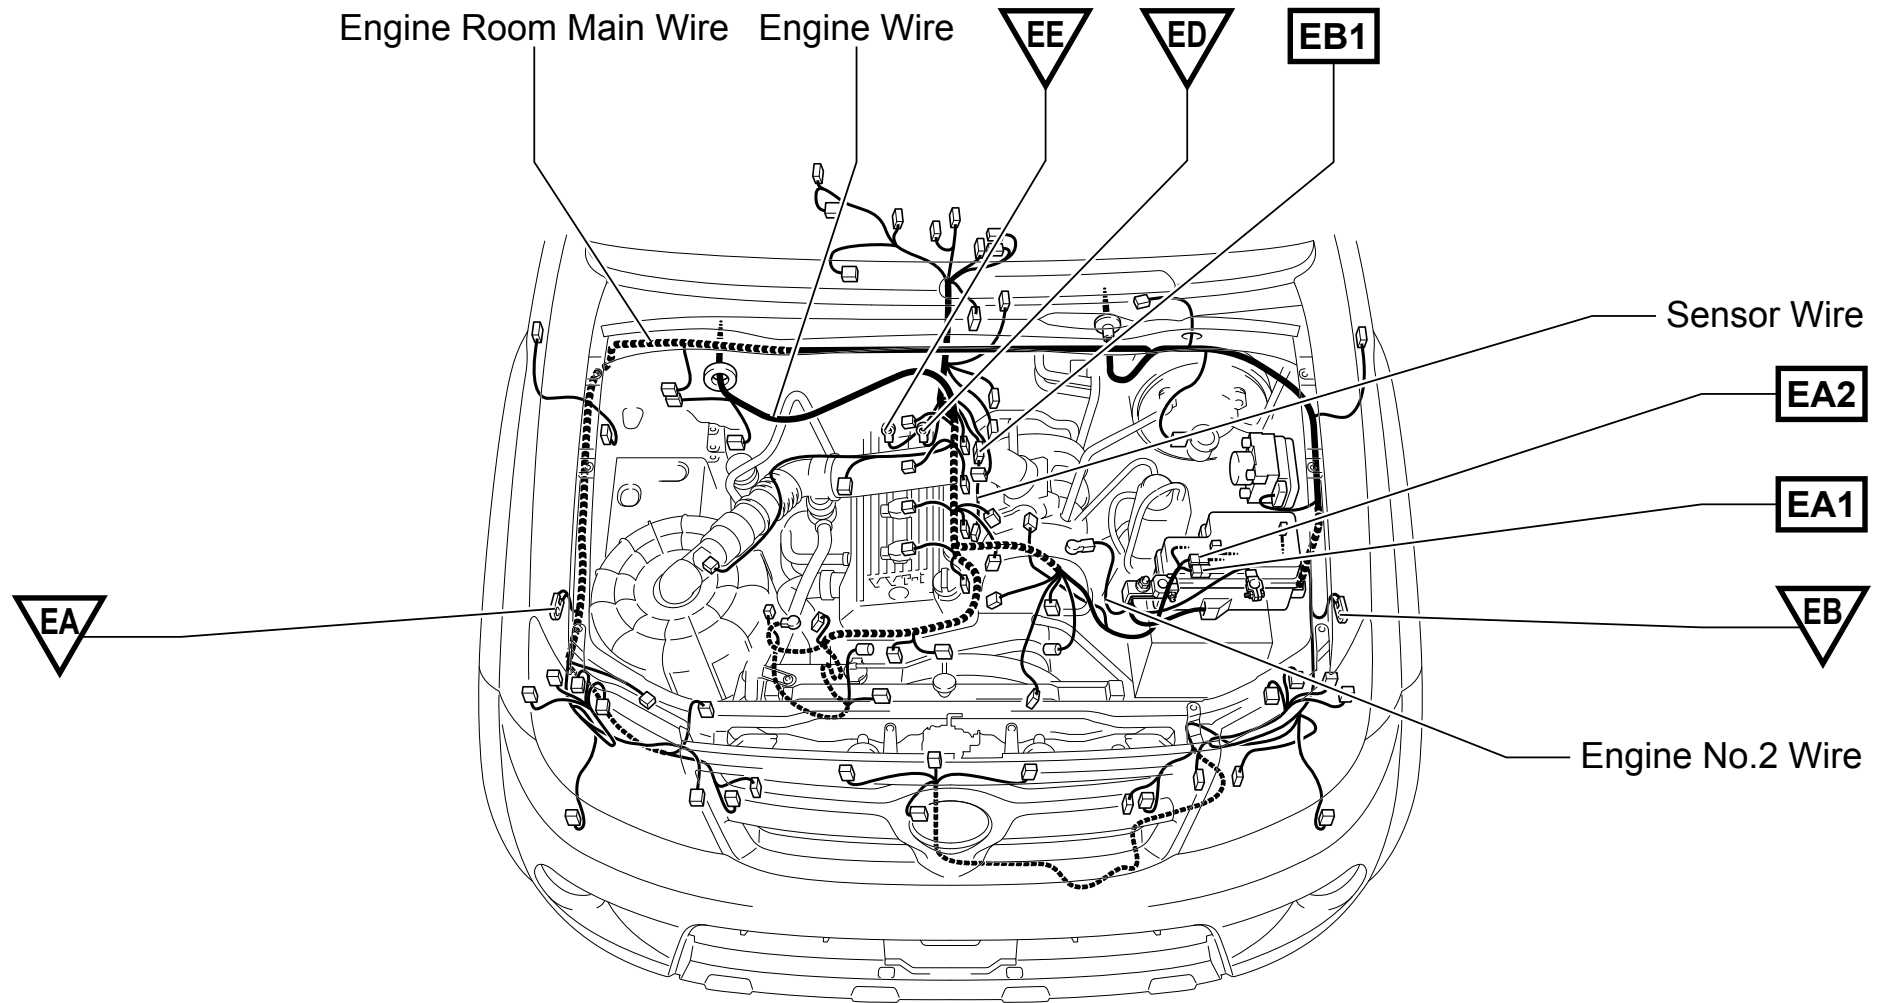 

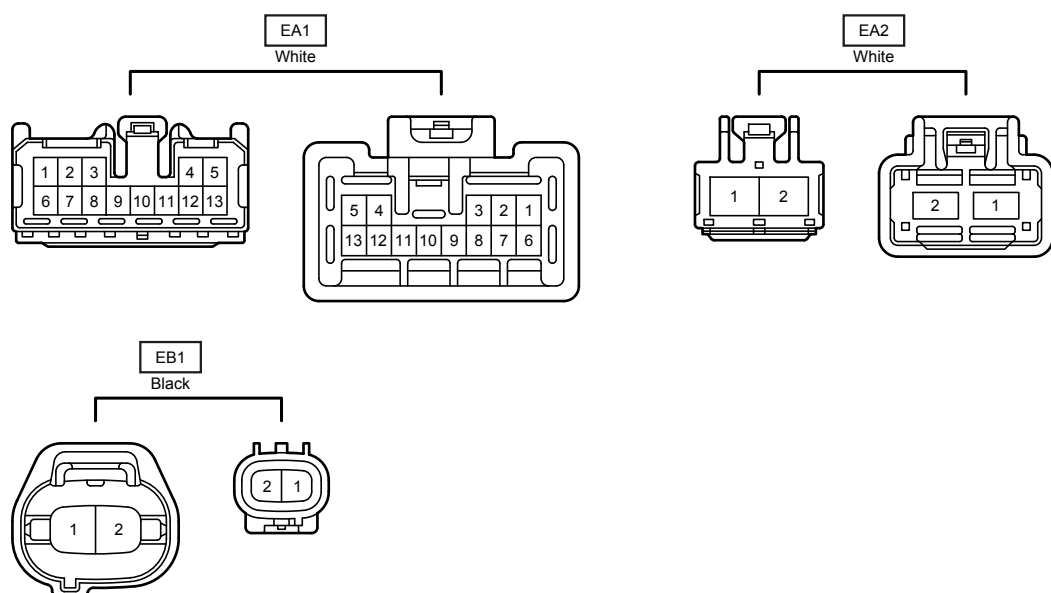 

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

 - * 1:Australia
- * 2:Unleaded Gasoline
Except Australia
- * 7:From Jun. 2011 Production
- * 10:Before Aug. 2012 Production
- * 11:From Aug. 2012 Production

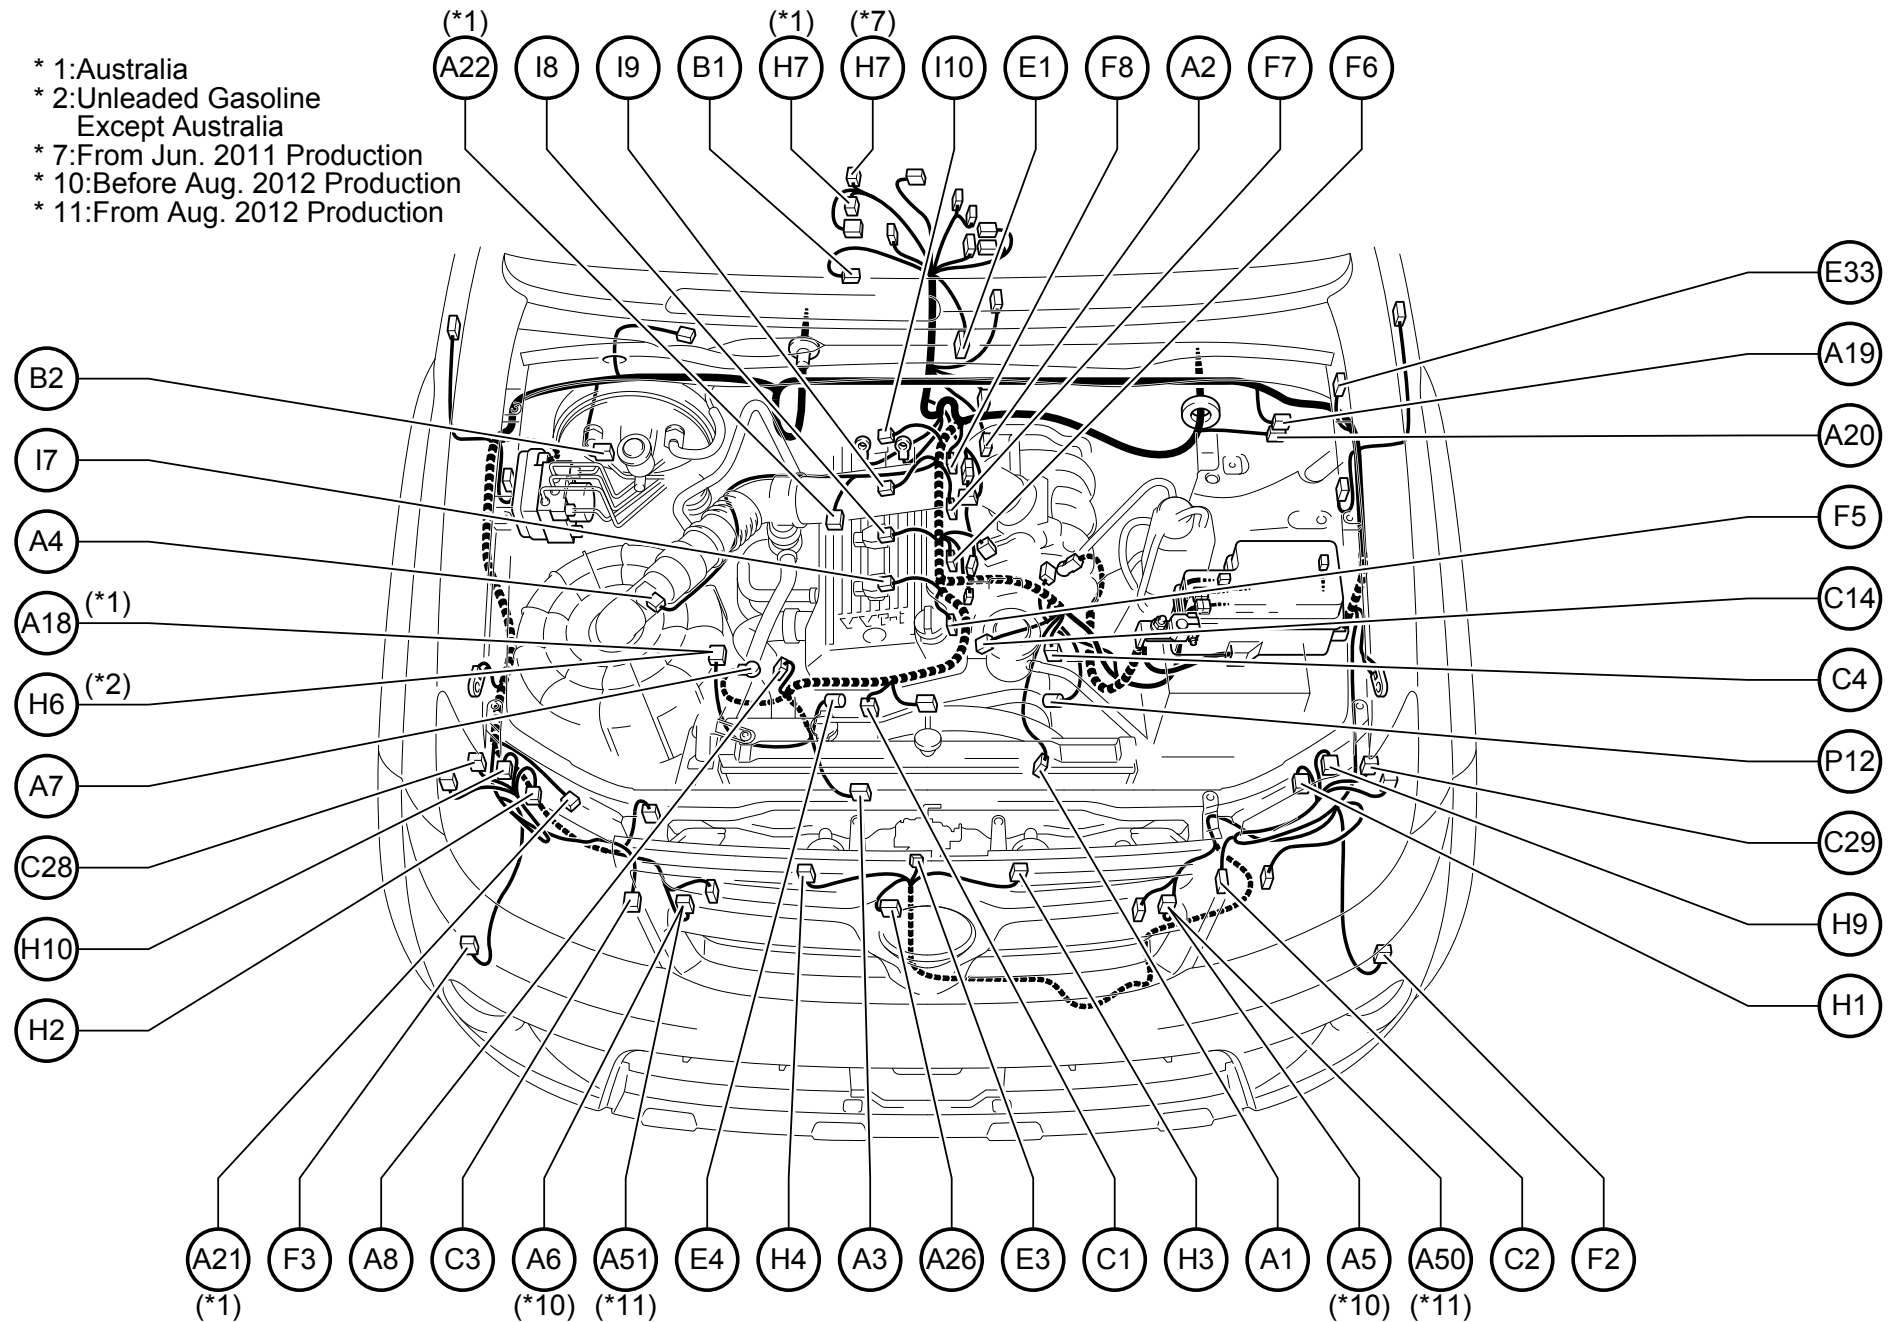

- A 1 A/C Compressor
- A 2 A/T Fluid Temp. Sensor
- A 3 ADD Actuator
- A 4 Air Flow Meter
- A 5 Airbag Sensor (Front LH)
- A 6 Airbag Sensor (Front RH)
- A 7 Alternator
- A 8 Alternator
- A 18 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 19 Air Injection Control Driver
- A 20 Air Injection Control Driver
- A 21 Air Pump
- A 22 Air Switching Valve
- A 26 Ambient Temp. Sensor
- A 50 Airbag Sensor (Front LH)
- A 51 Airbag Sensor (Front RH)

- B 1 Back-Up Lamp SW
- B 2 Brake Fluid Level Warning SW

- C 1 Camshaft Position Sensor
- C 2 Clearance Lamp (Front LH)
- C 3 Clearance Lamp (Front RH)
- C 4 Crankshaft Position Sensor
- C 14 Camshaft Timing Oil Control Valve
- C 28 Clearance Lamp (Front RH)
- C 29 Clearance Lamp (Front LH)

- E 1 ECT Solenoid
- E 3 Engine Hood Courtesy SW
- E 4 Engine Oil Pressure Sensor
- E 33 Engine Hood Courtesy SW (Interior Light)

 
- F 2 Fog Lamp (Front LH)
- F 3 Fog Lamp (Front RH)
- F 5 Fuel Injector (No.1)
- F 6 Fuel Injector (No.2)
- F 7 Fuel Injector (No.3)
- F 8 Fuel Injector (No.4)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- H 1 Headlamp (LH)
- H 2 Headlamp (RH)
- H 3 Horn (High)
- H 4 Horn (Low)
- H 6 Heated Oxygen Sensor (Bank 1 Sensor 1)
- H 7 Heated Oxygen Sensor (Bank 1 Sensor 2)
- H 9 Headlamp Leveling Motor (LH)
- H 10 Headlamp Leveling Motor (RH)

 
- I 7 Ignition Coil (No.1)
- I 8 Ignition Coil (No.2)
- I 9 Ignition Coil (No.3)
- I 10 Ignition Coil (No.4)

- P 12 Power Steering Oil Pressure SW

Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

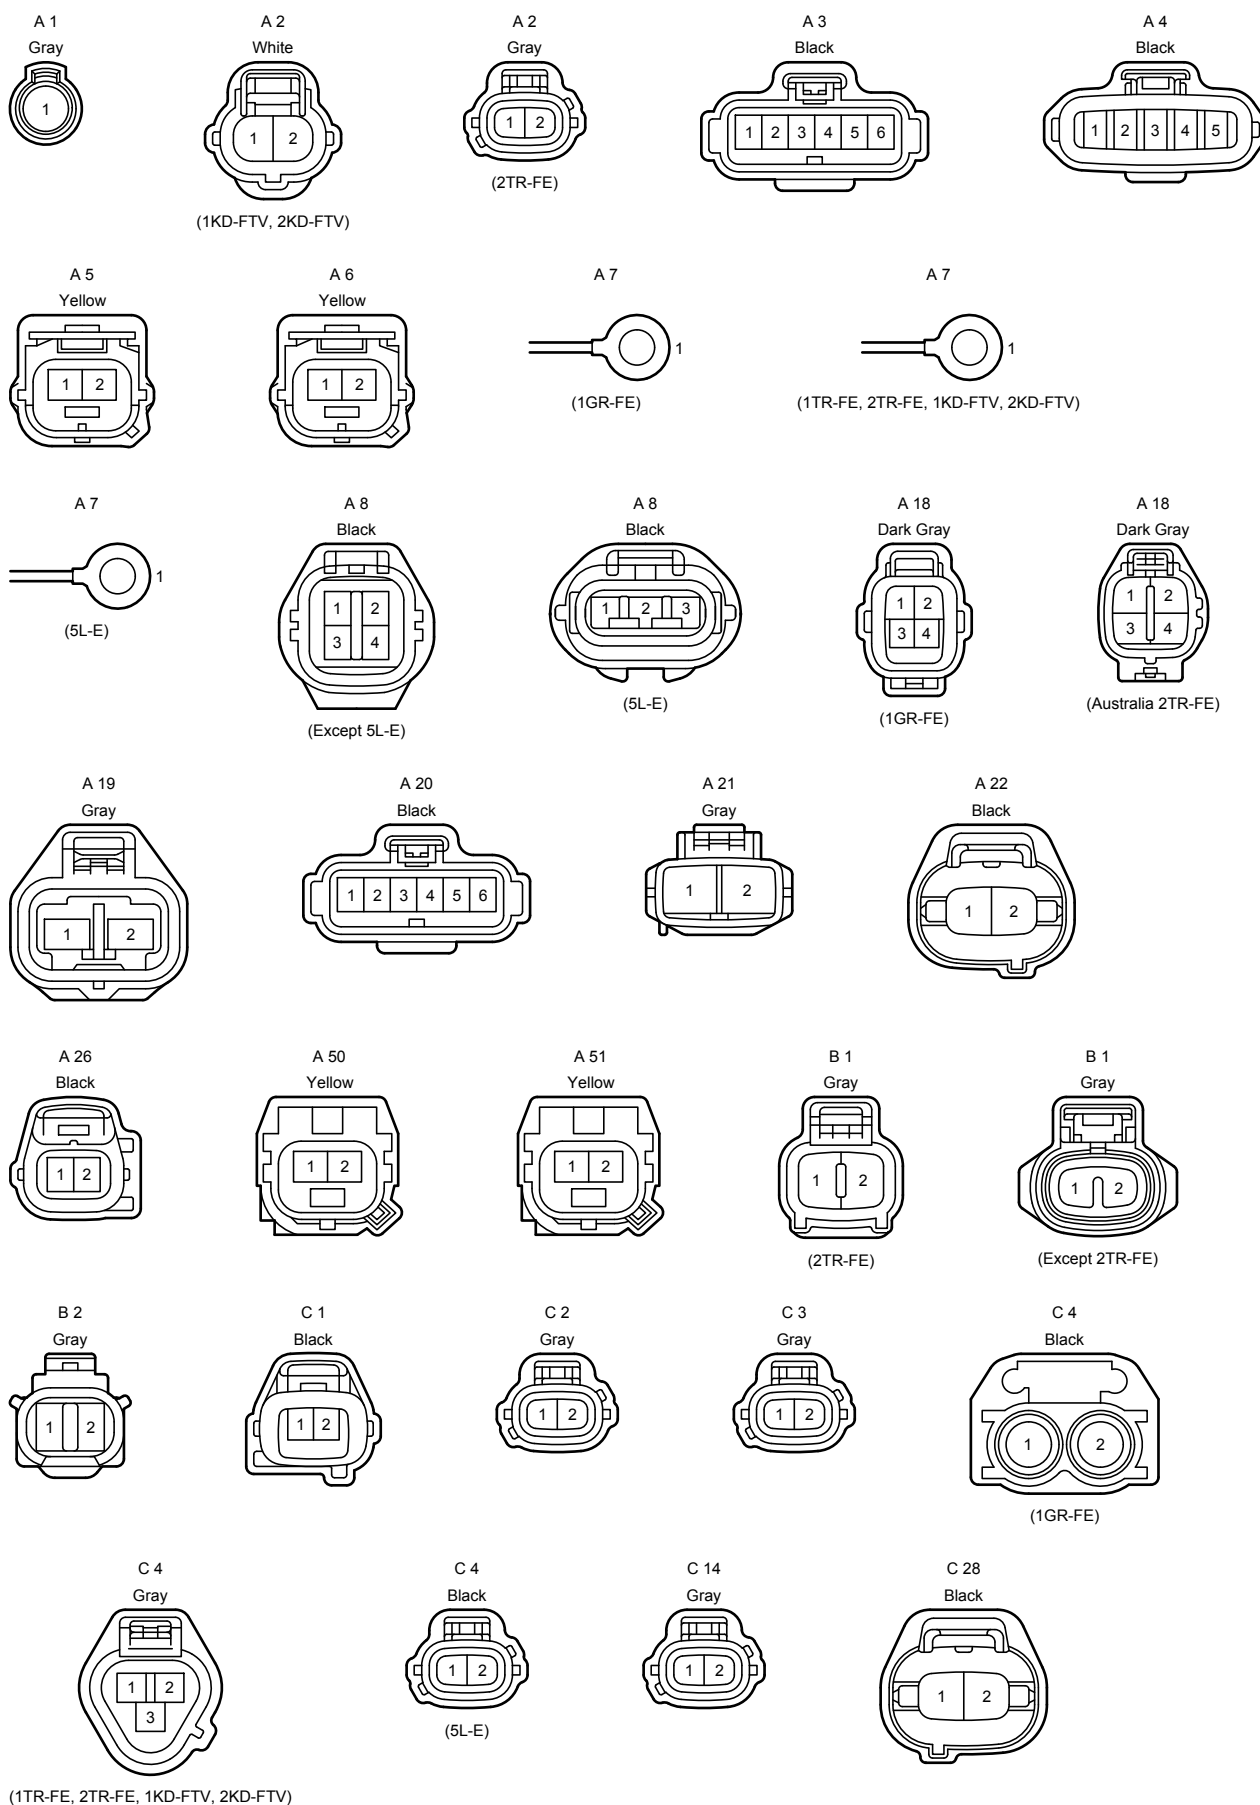

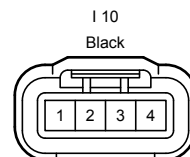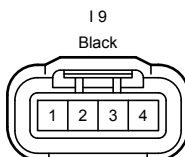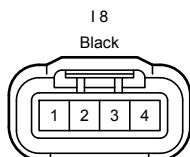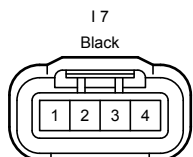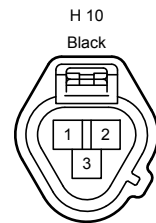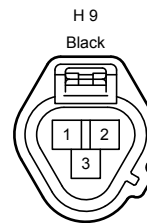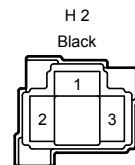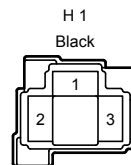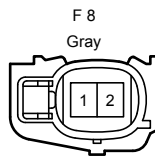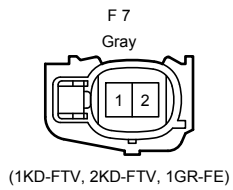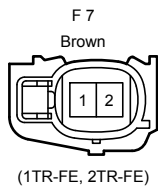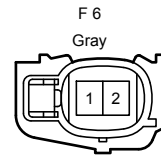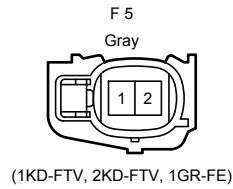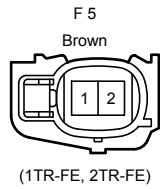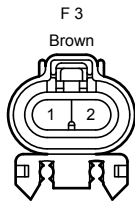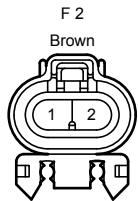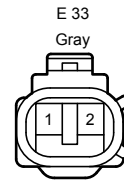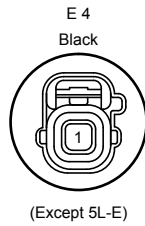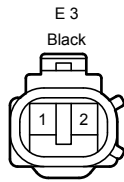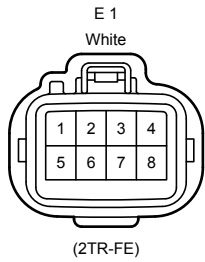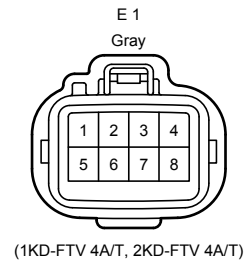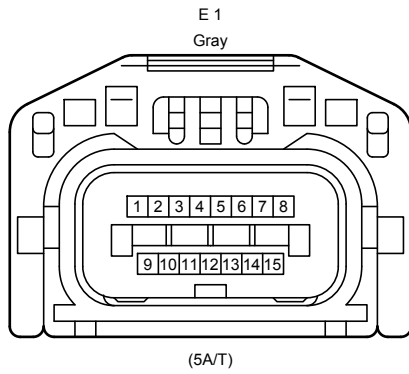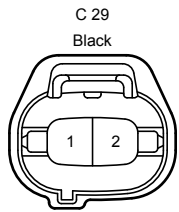

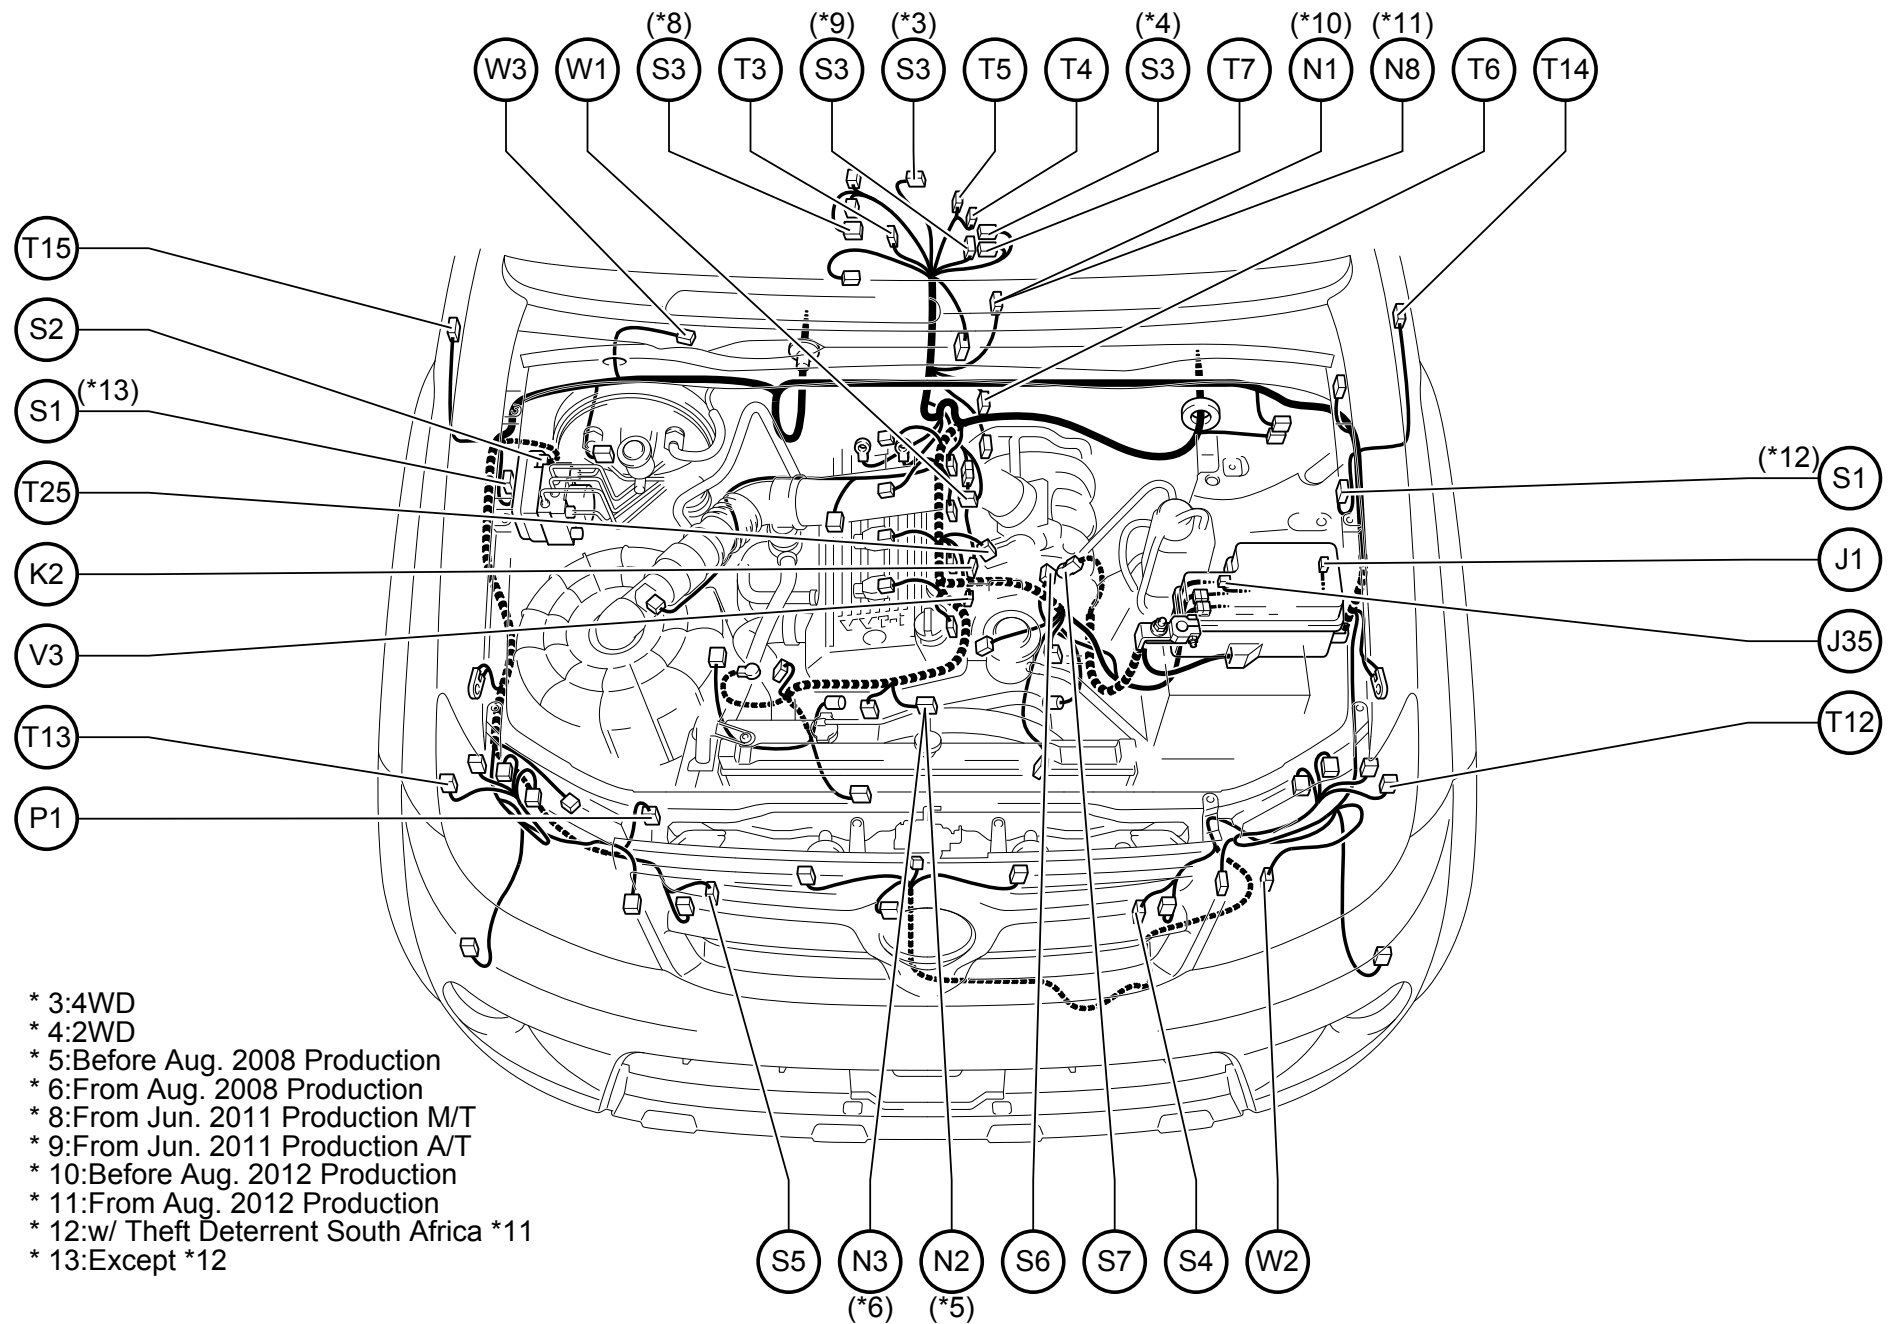

- J 1 Junction Connector
- J 35 Junction Connector

- K 2 Knock Control Sensor (Bank 1)

- N 1 Park/Neutral Position SW
- N 2 Noise Filter (Ignition)
- N 3 Noise Filter (Ignition)
- N 8 Park/Neutral Position SW

- P 1 Pressure SW

 
- S 1 Security Horn
- S 2 Skid Control ECU with Actuator
- S 3 Speed Sensor
- S 4 Speed Sensor (Front LH)
- S 5 Speed Sensor (Front RH)
- S 6 Starter
- S 7 Starter

 
 
 
 
 
 
 
 
 
 
 
 
 
- T 3 Transfer Indicator SW (4WD Position)
- T 4 Transfer Indicator SW (L4 Position)
- T 5 Transfer Indicator SW (Neutral Position)
- T 6 Transmission Revolution Sensor (Input)
- T 7 Transmission Revolution Sensor (Output)
- T 12 Turn Signal Lamp (Front LH)
- T 13 Turn Signal Lamp (Front RH)
- T 14 Turn Signal Lamp (Front Side LH)
- T 15 Turn Signal Lamp (Front Side RH)
- T 25 Throttle Body Assembly

 
- V 3 VSV (Purge)

 
- W 1 Water Temp. Sensor
- W 2 Windshield Washer Motor
- W 3 Windshield Wiper Motor

 
Position of Parts in Engine Compartment <RHD 1TR-FE, 2TR-FE>

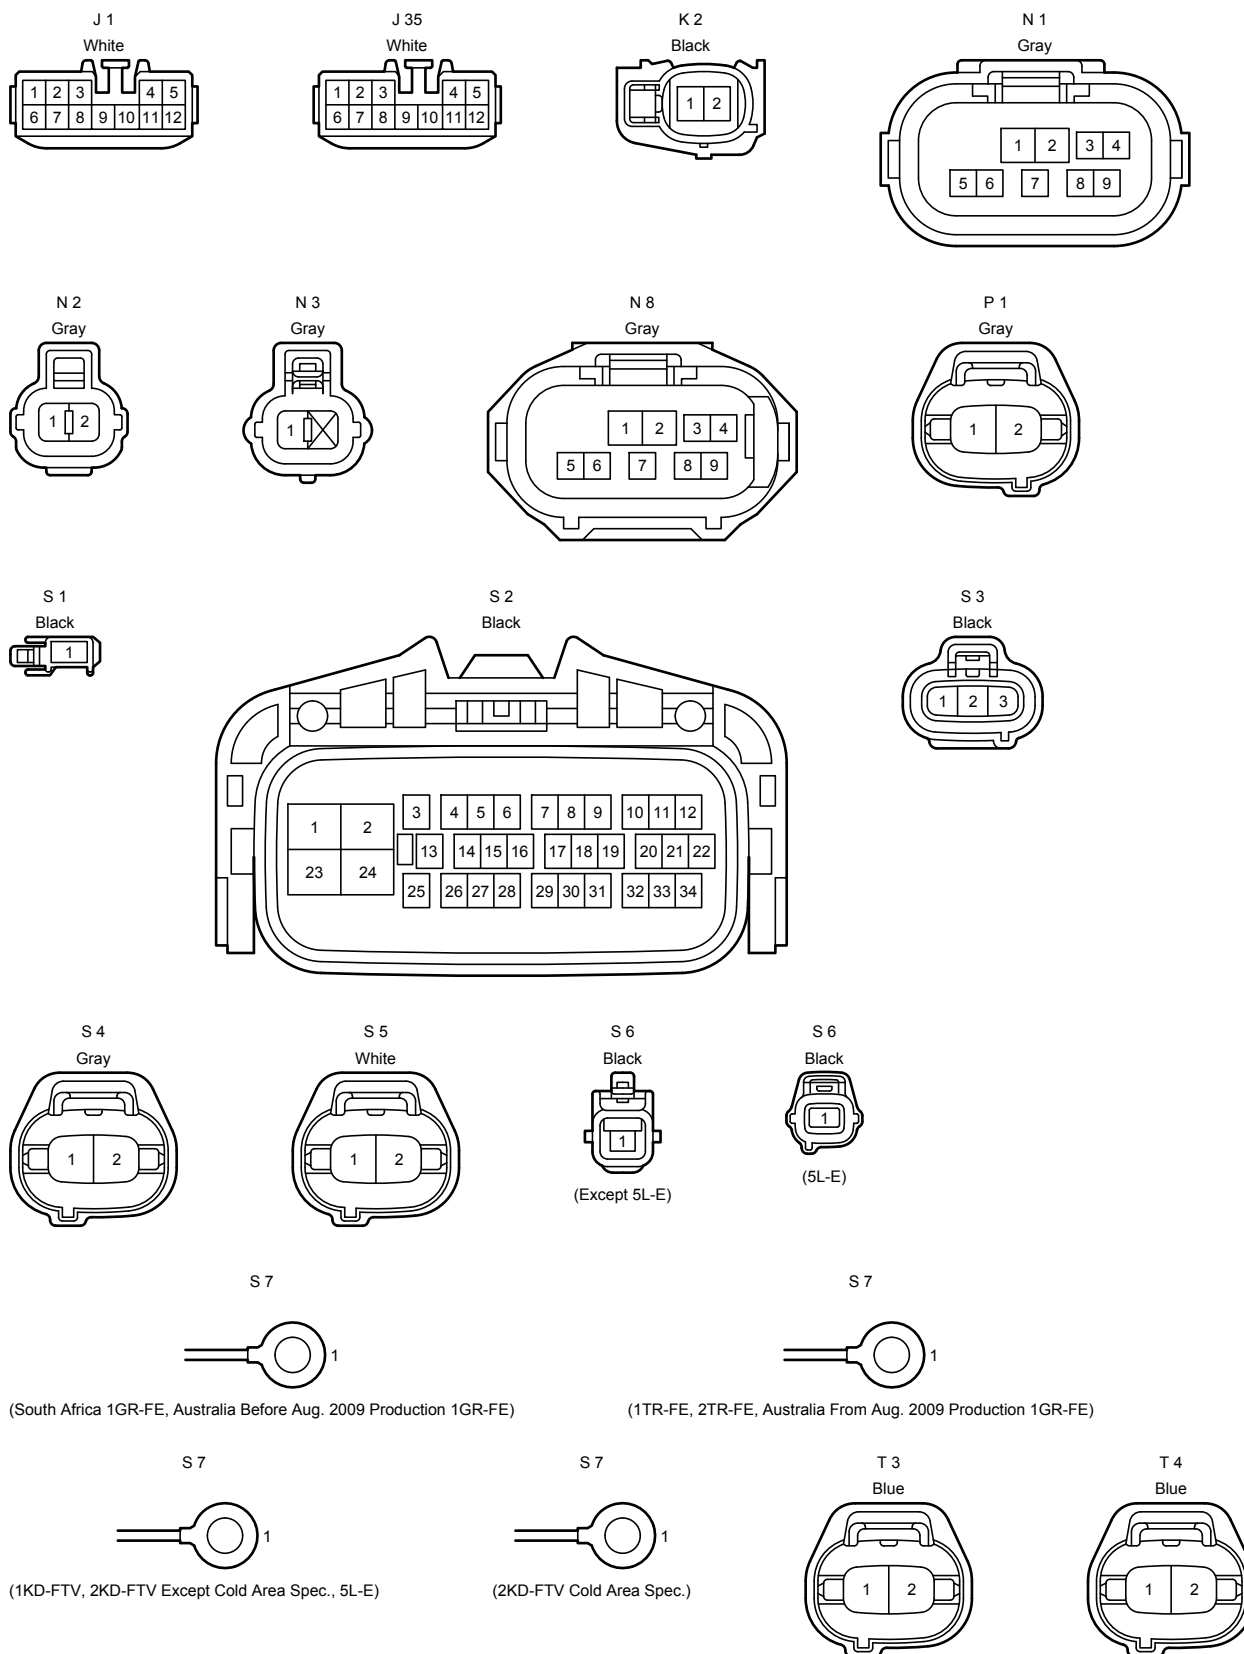

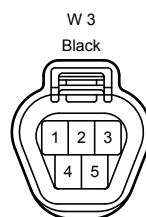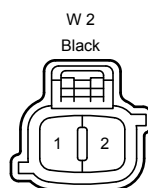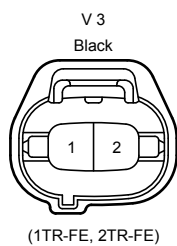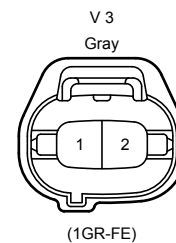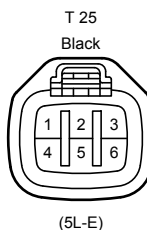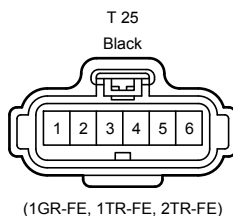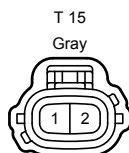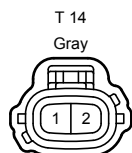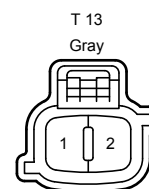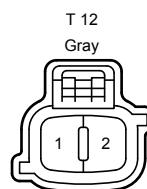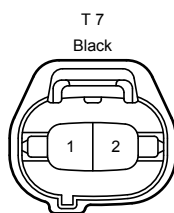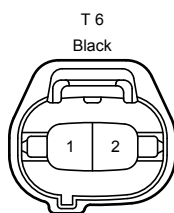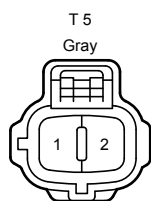

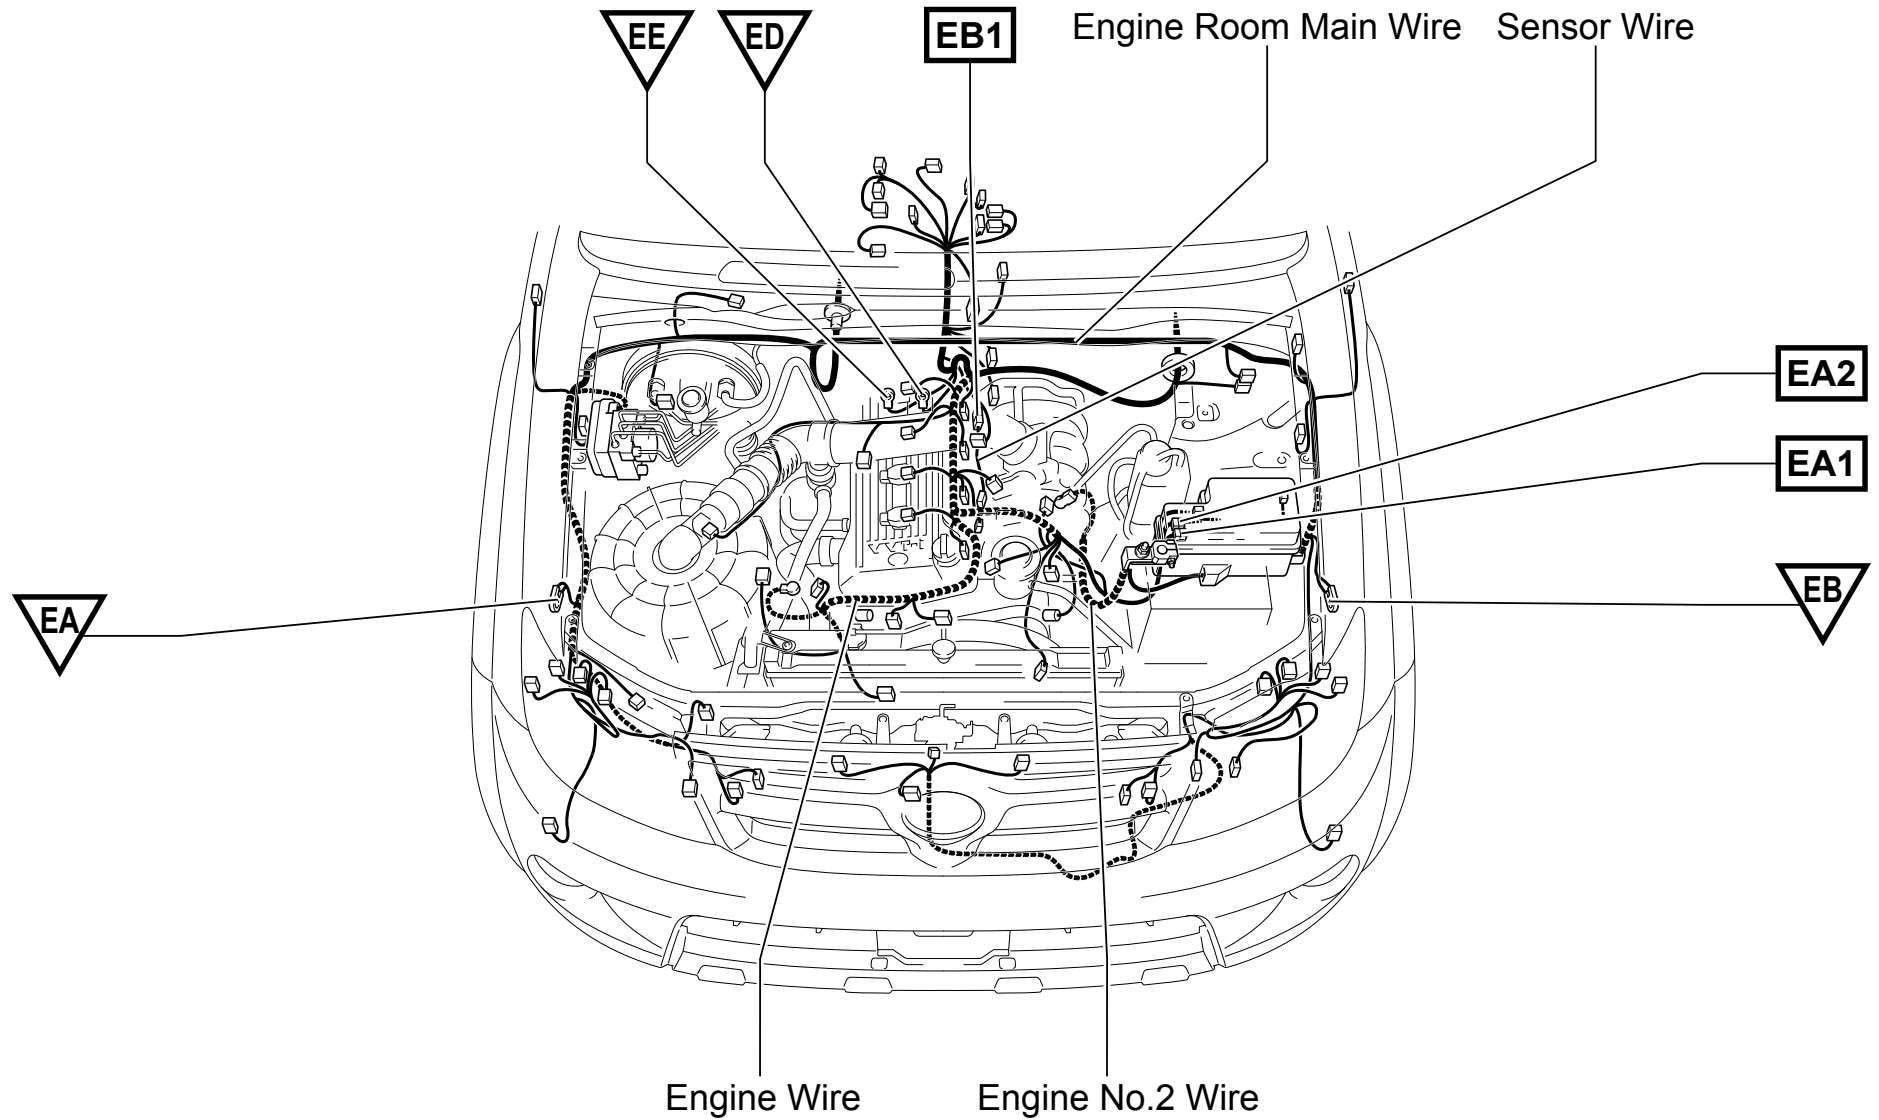

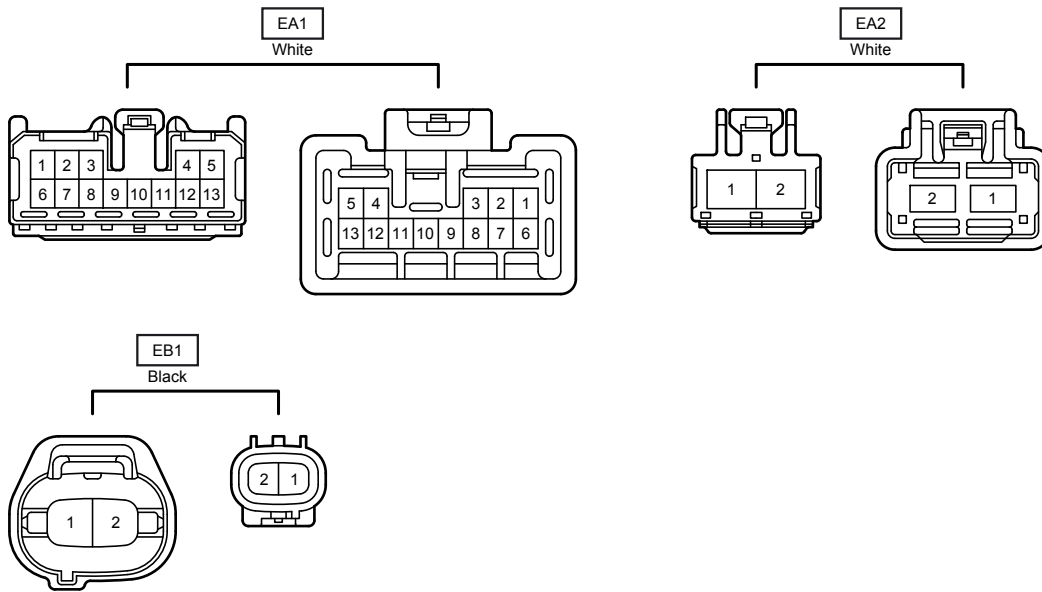

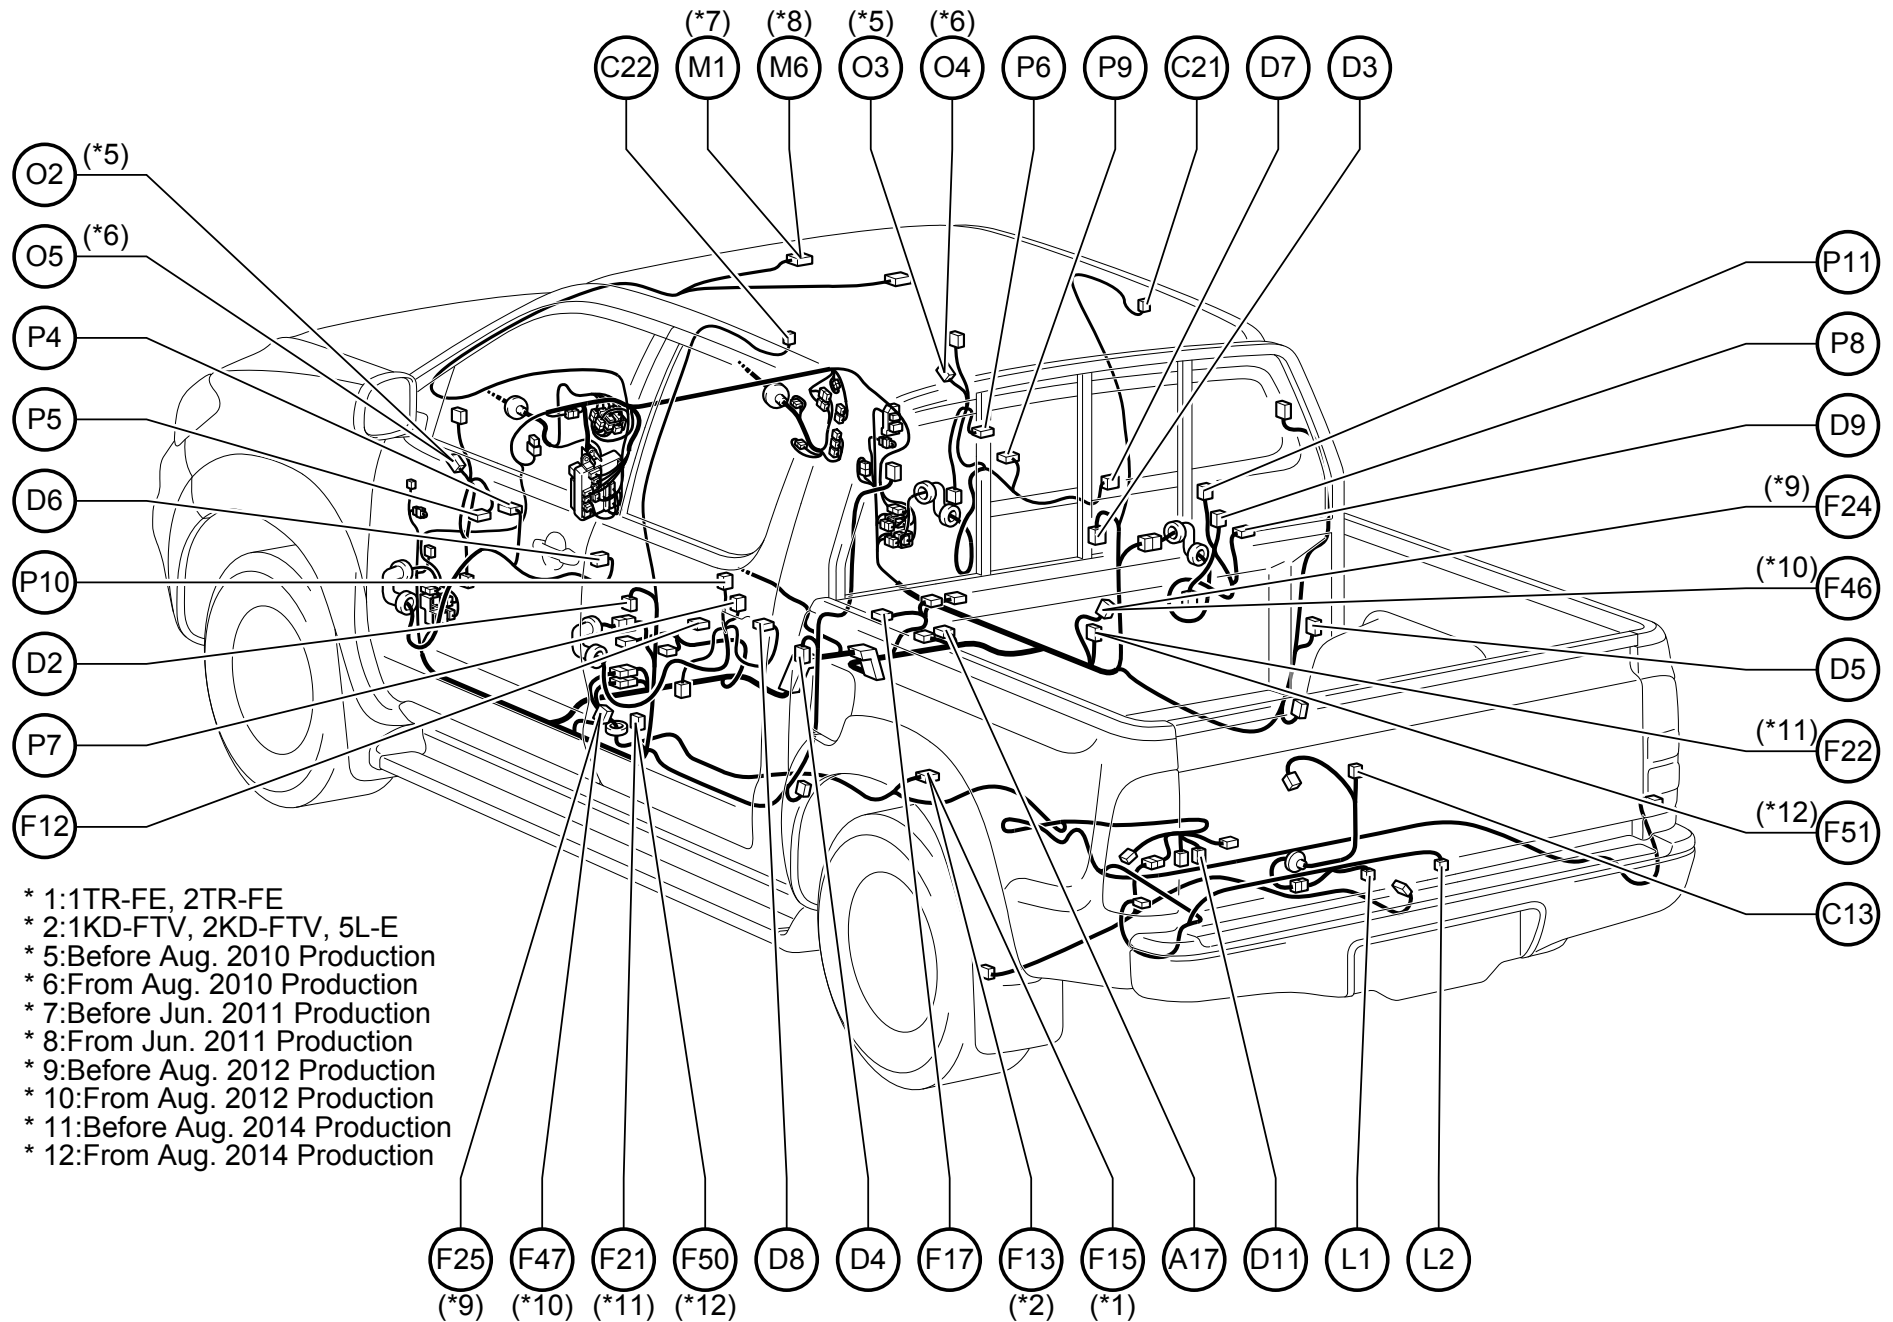

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp
- C 21 Curtain Shield Airbag Assembly RH
- C 22 Curtain Shield Airbag Assembly LH

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 4 Door Courtesy SW (Rear LH)
- D 5 Door Courtesy SW (Rear RH)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 8 Door Lock Assembly (Rear LH)
- D 9 Door Lock Assembly (Rear RH)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 24 Front Side Airbag Sensor RH
- F 25 Front Side Airbag Sensor LH
- F 46 Front Side Airbag Sensor RH
- F 47 Front Side Airbag Sensor LH
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

 
- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

- M 1 Map Lamp
- M 6 Map Lamp


- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)

- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 7 Power Window Regulator Motor (Rear LH)
- P 8 Power Window Regulator Motor (Rear RH)
- P 9 Power Window SW (Front Passenger's Side)
- P 10 Power Window SW (Rear LH)
- P 11 Power Window SW (Rear RH)


Position of Parts in Body <LHD Double Cab>

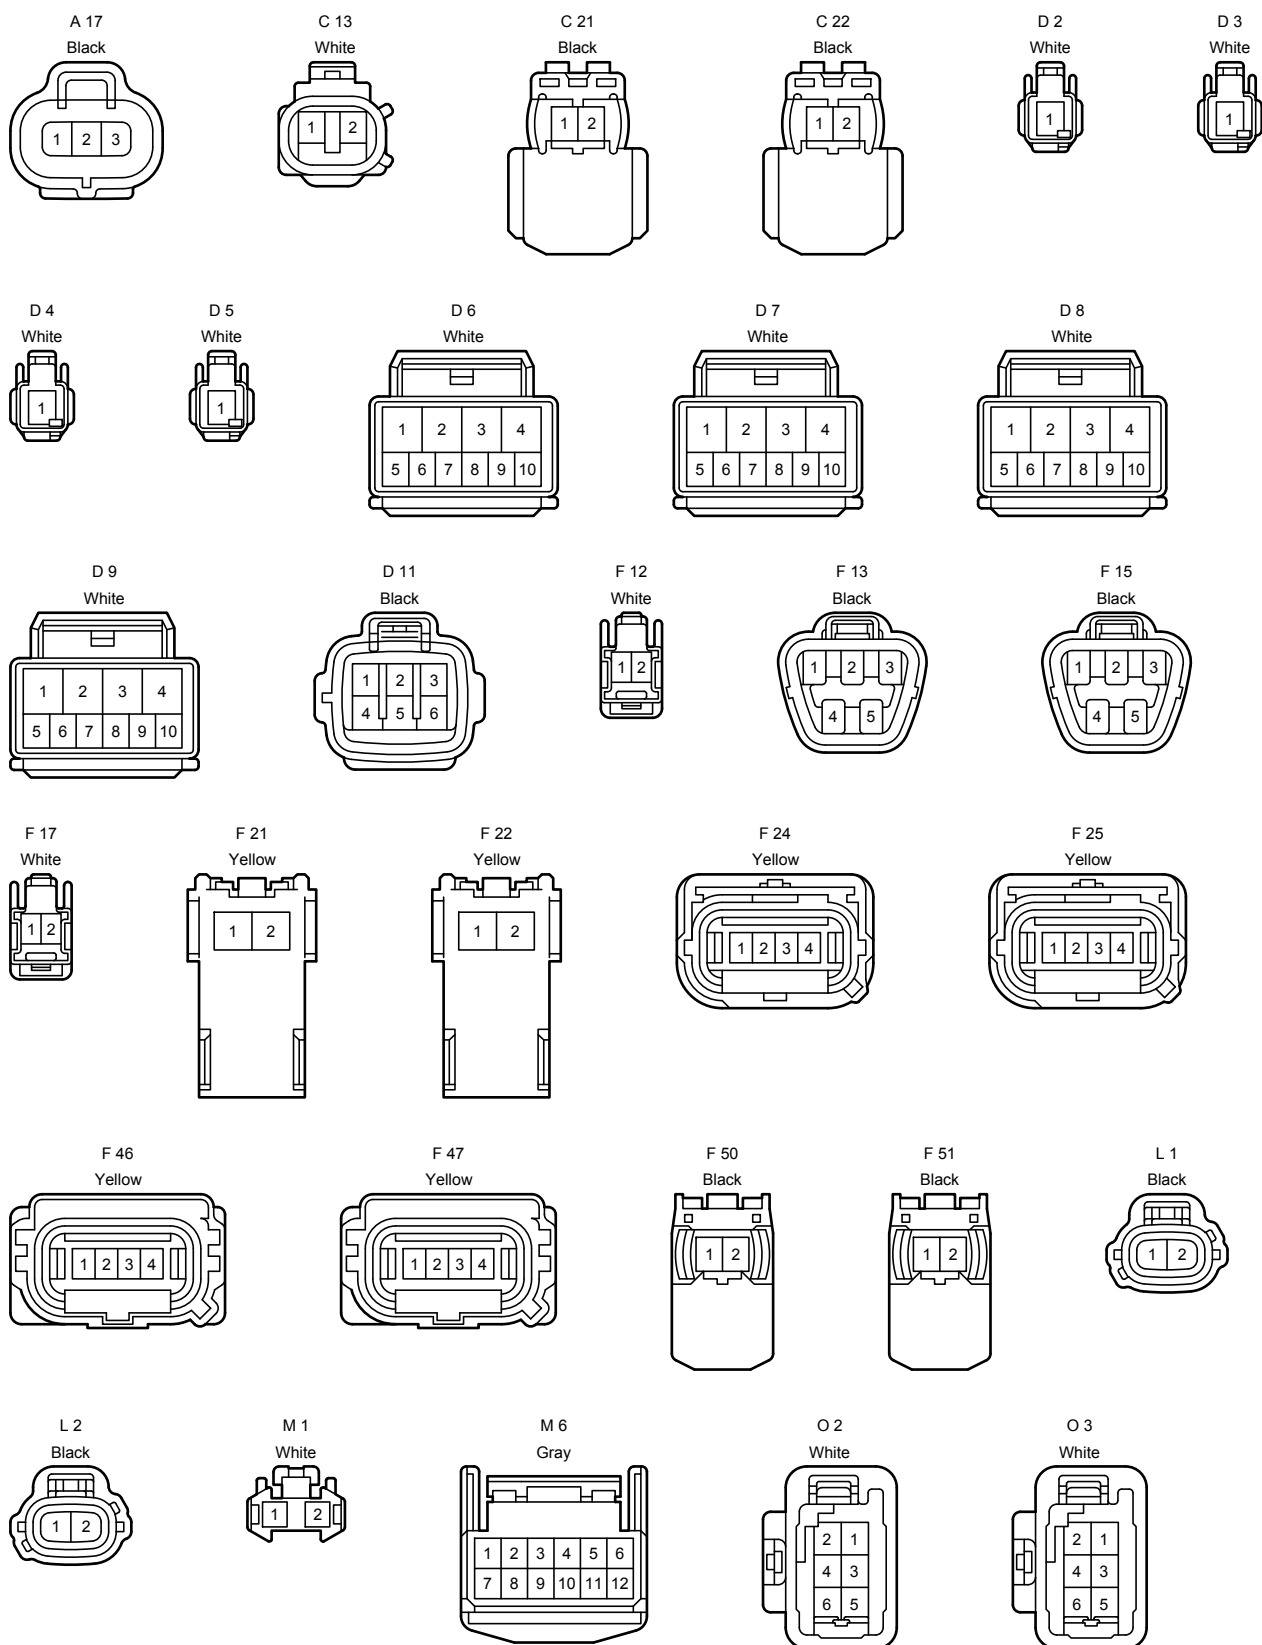


O 4
White

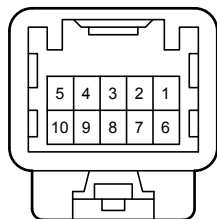 

O 5
White

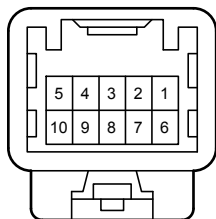 


P 4
White

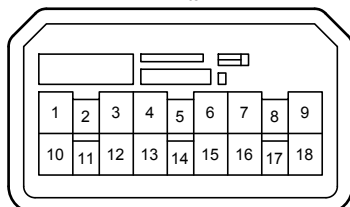 


(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

 P 4
White




(Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

 P 5
Black

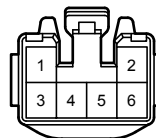

P 6
Black

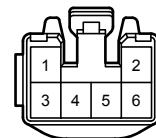 


P 7
Black




P 8
Black



 
P 9
Black

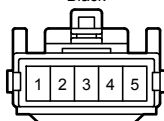


P 10
Black

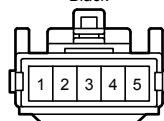 

P 11
Black

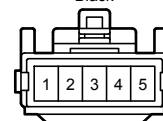 

 - * 3: Before Aug. 2009 Production
- * 4: From Aug. 2009 Production
- * 9: Before Aug. 2012 Production
- * 10: From Aug. 2012 Production

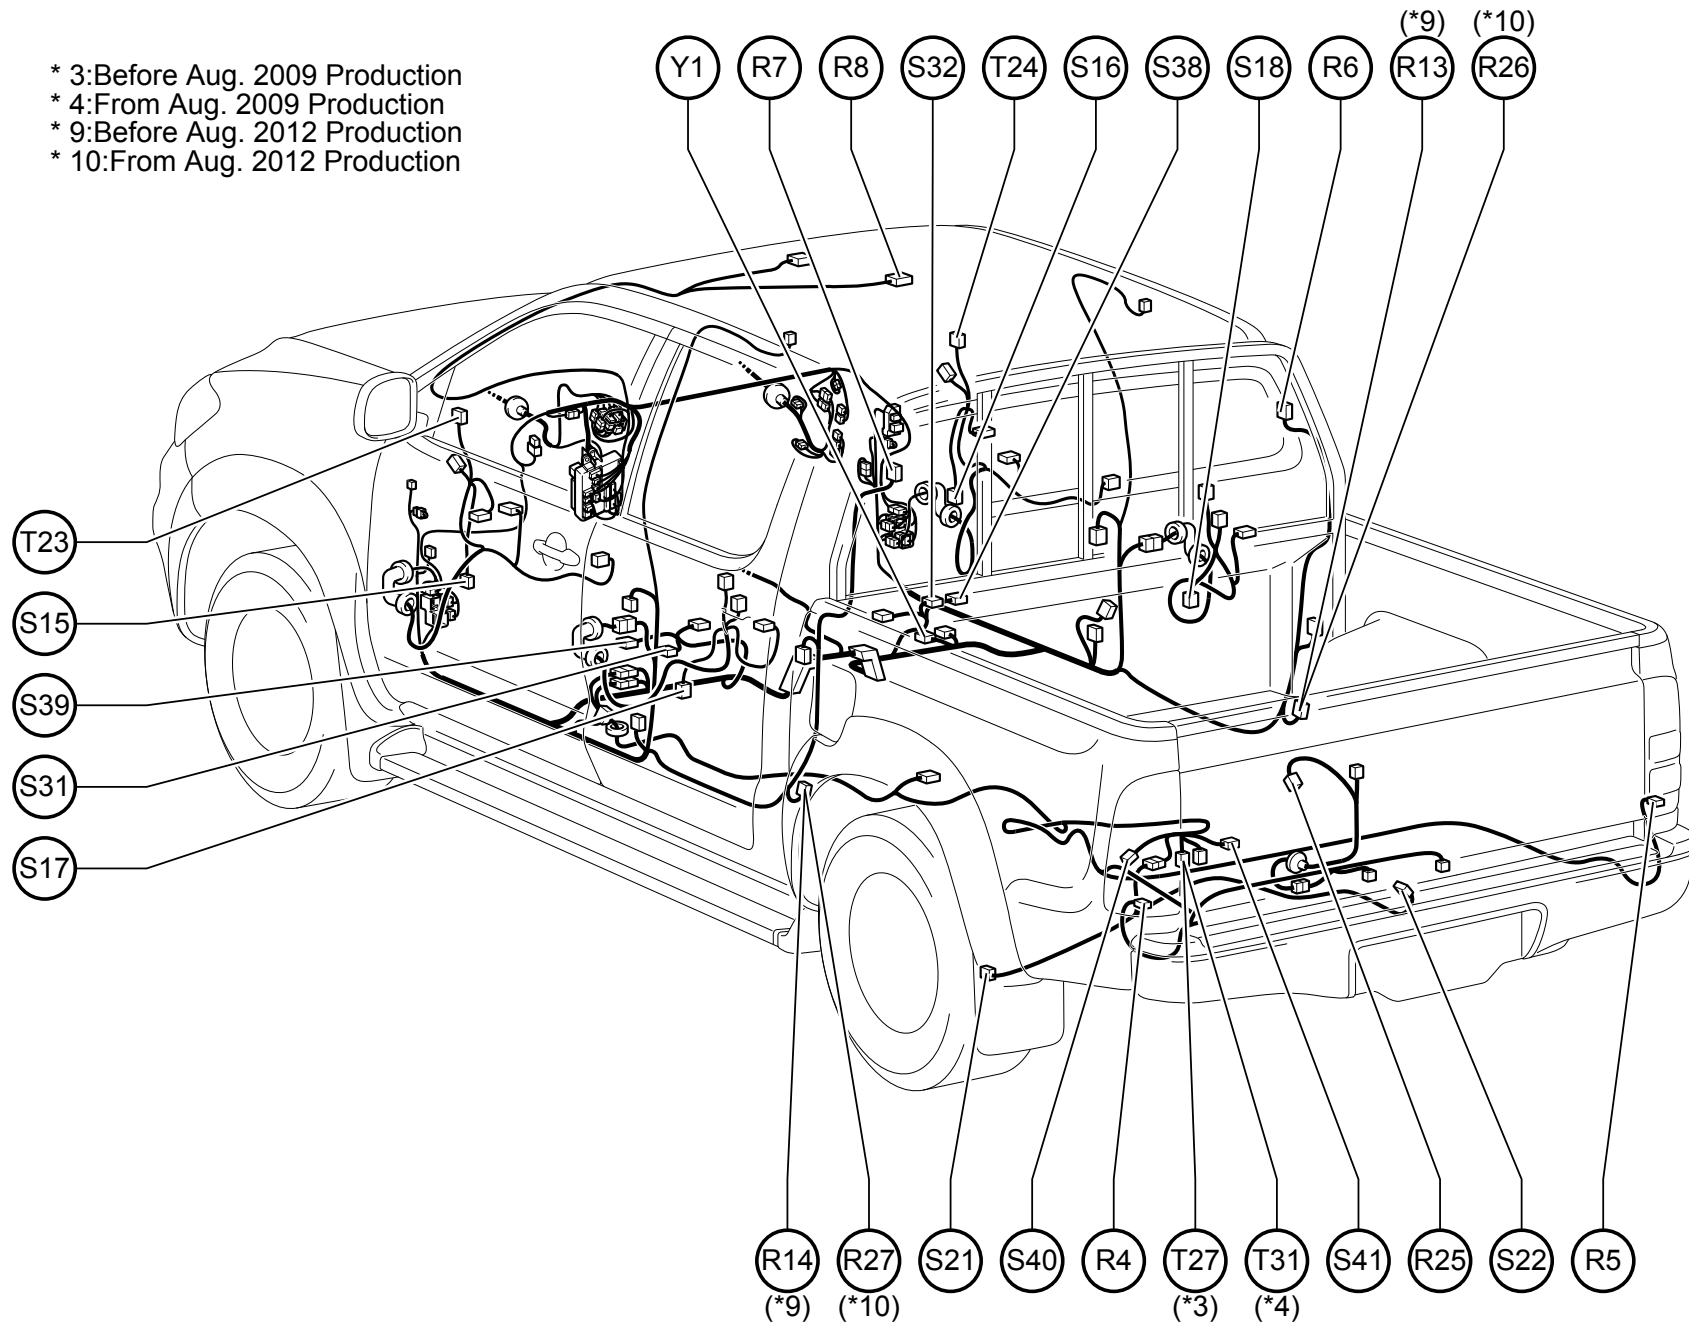

























- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 6 Rear Window Defogger
- R 7 Rear Window Defogger
- R 8 Room Lamp
- R 13 Rear Side Airbag Sensor Assembly RH
- R 14 Rear Side Airbag Sensor Assembly LH
- R 25 Rear Television Camera Assembly
- R 26 Rear Side Airbag Sensor Assembly RH
- R 27 Rear Side Airbag Sensor Assembly LH


- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 17 Speaker (Rear Door LH)
- S 18 Speaker (Rear Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 31 Seat Heater (LH)
- S 32 Seat Heater (RH)
- S 38 Side Airbag Squib Circuit RH
- S 39 Side Airbag Squib Circuit LH
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)


- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)


- Y 1 Yaw Rate Sensor Assembly

                           Position of Parts in Body <LHD Double Cab>

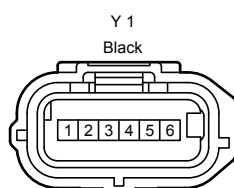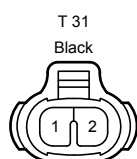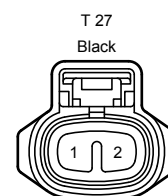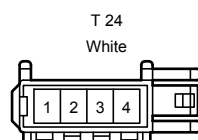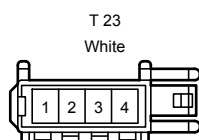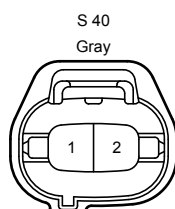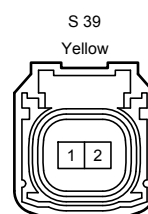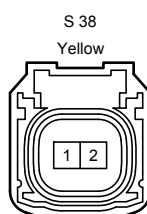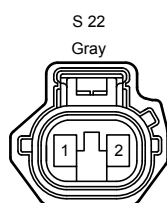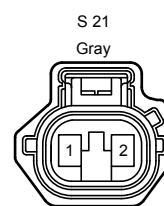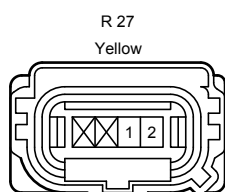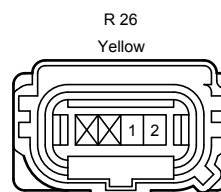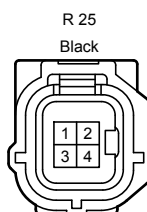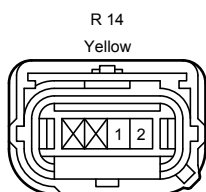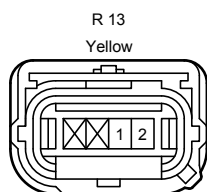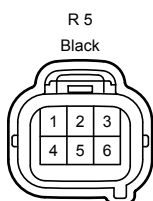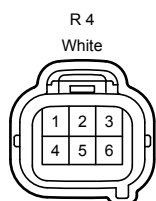

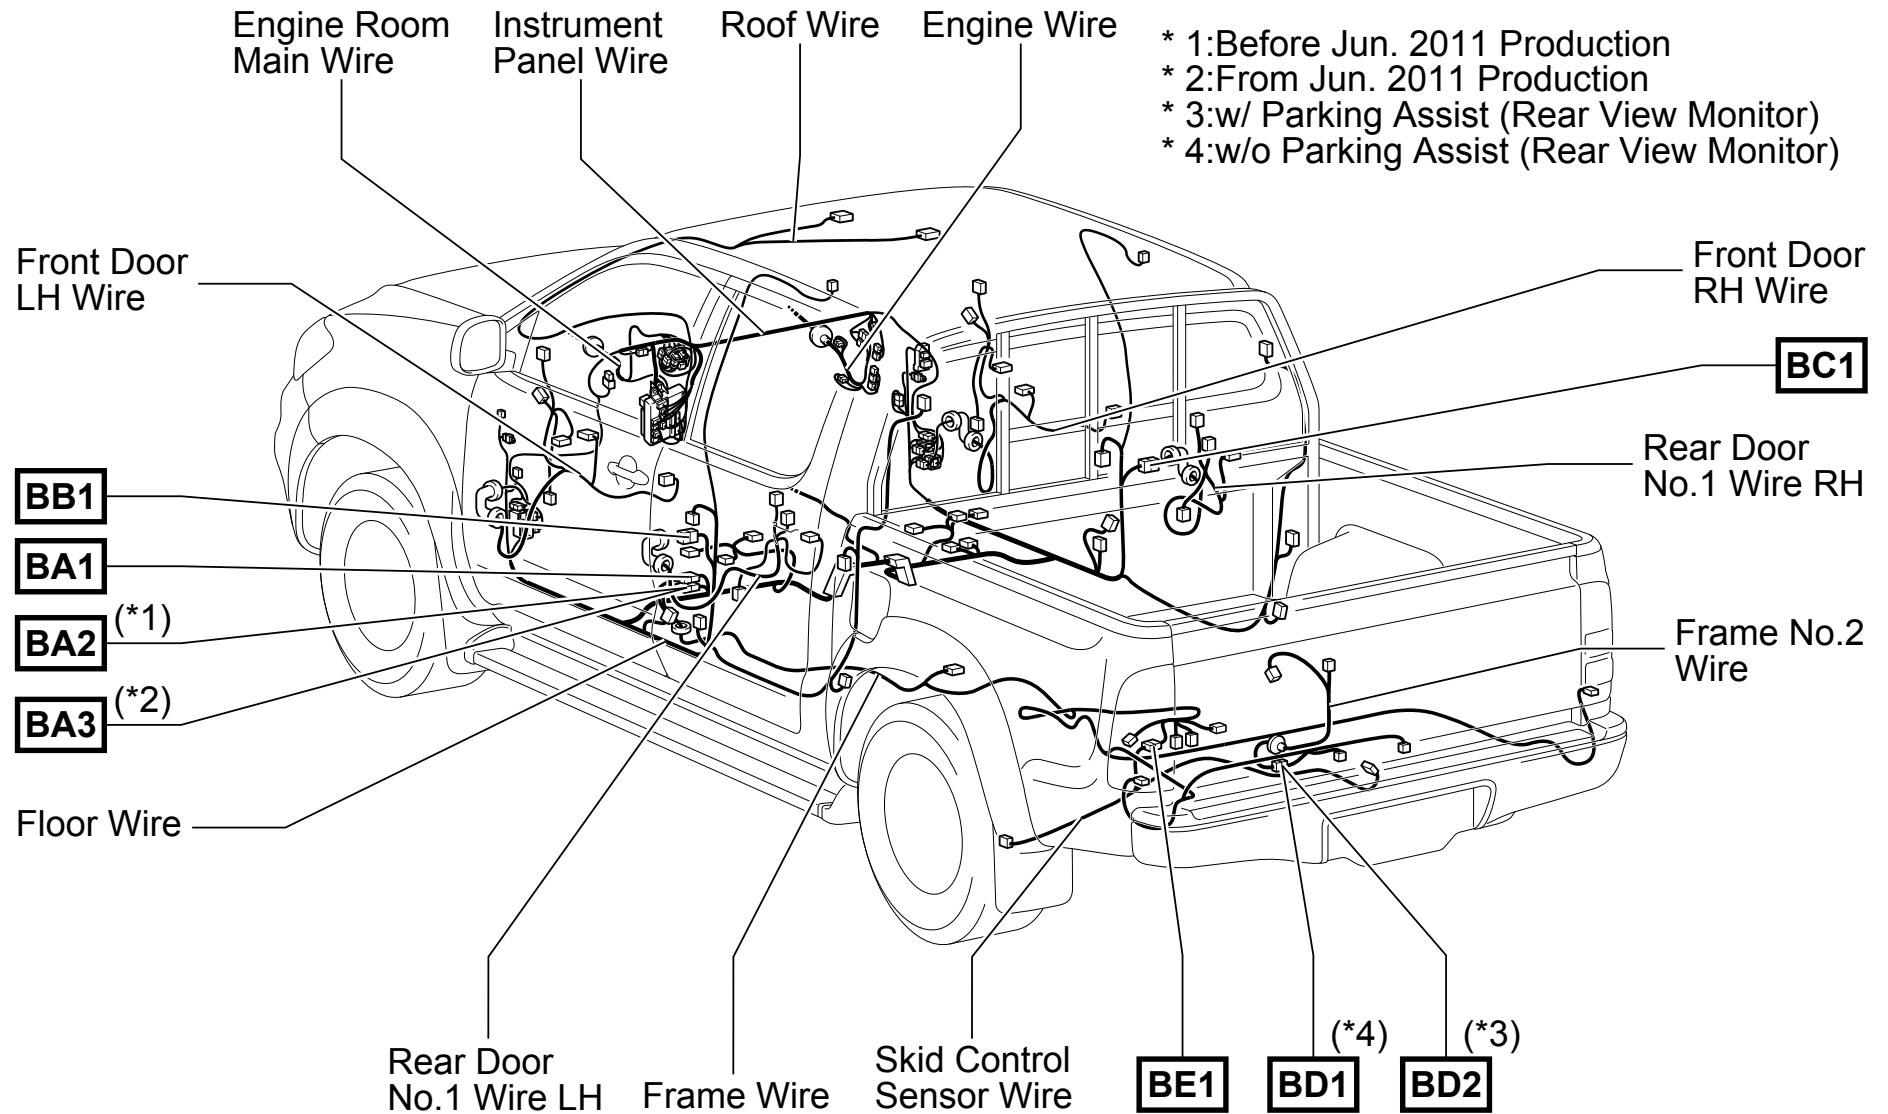

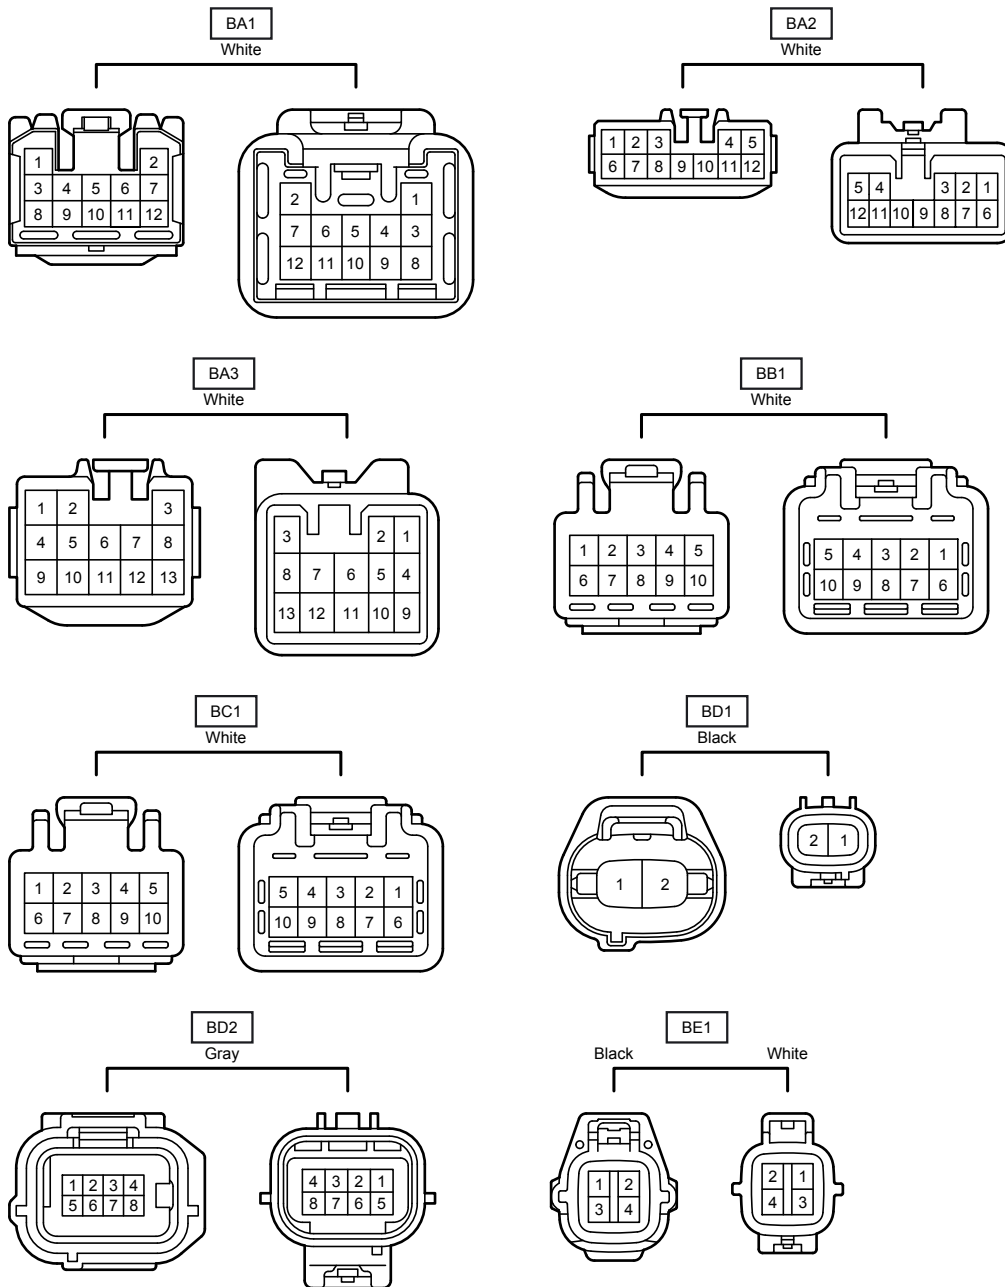

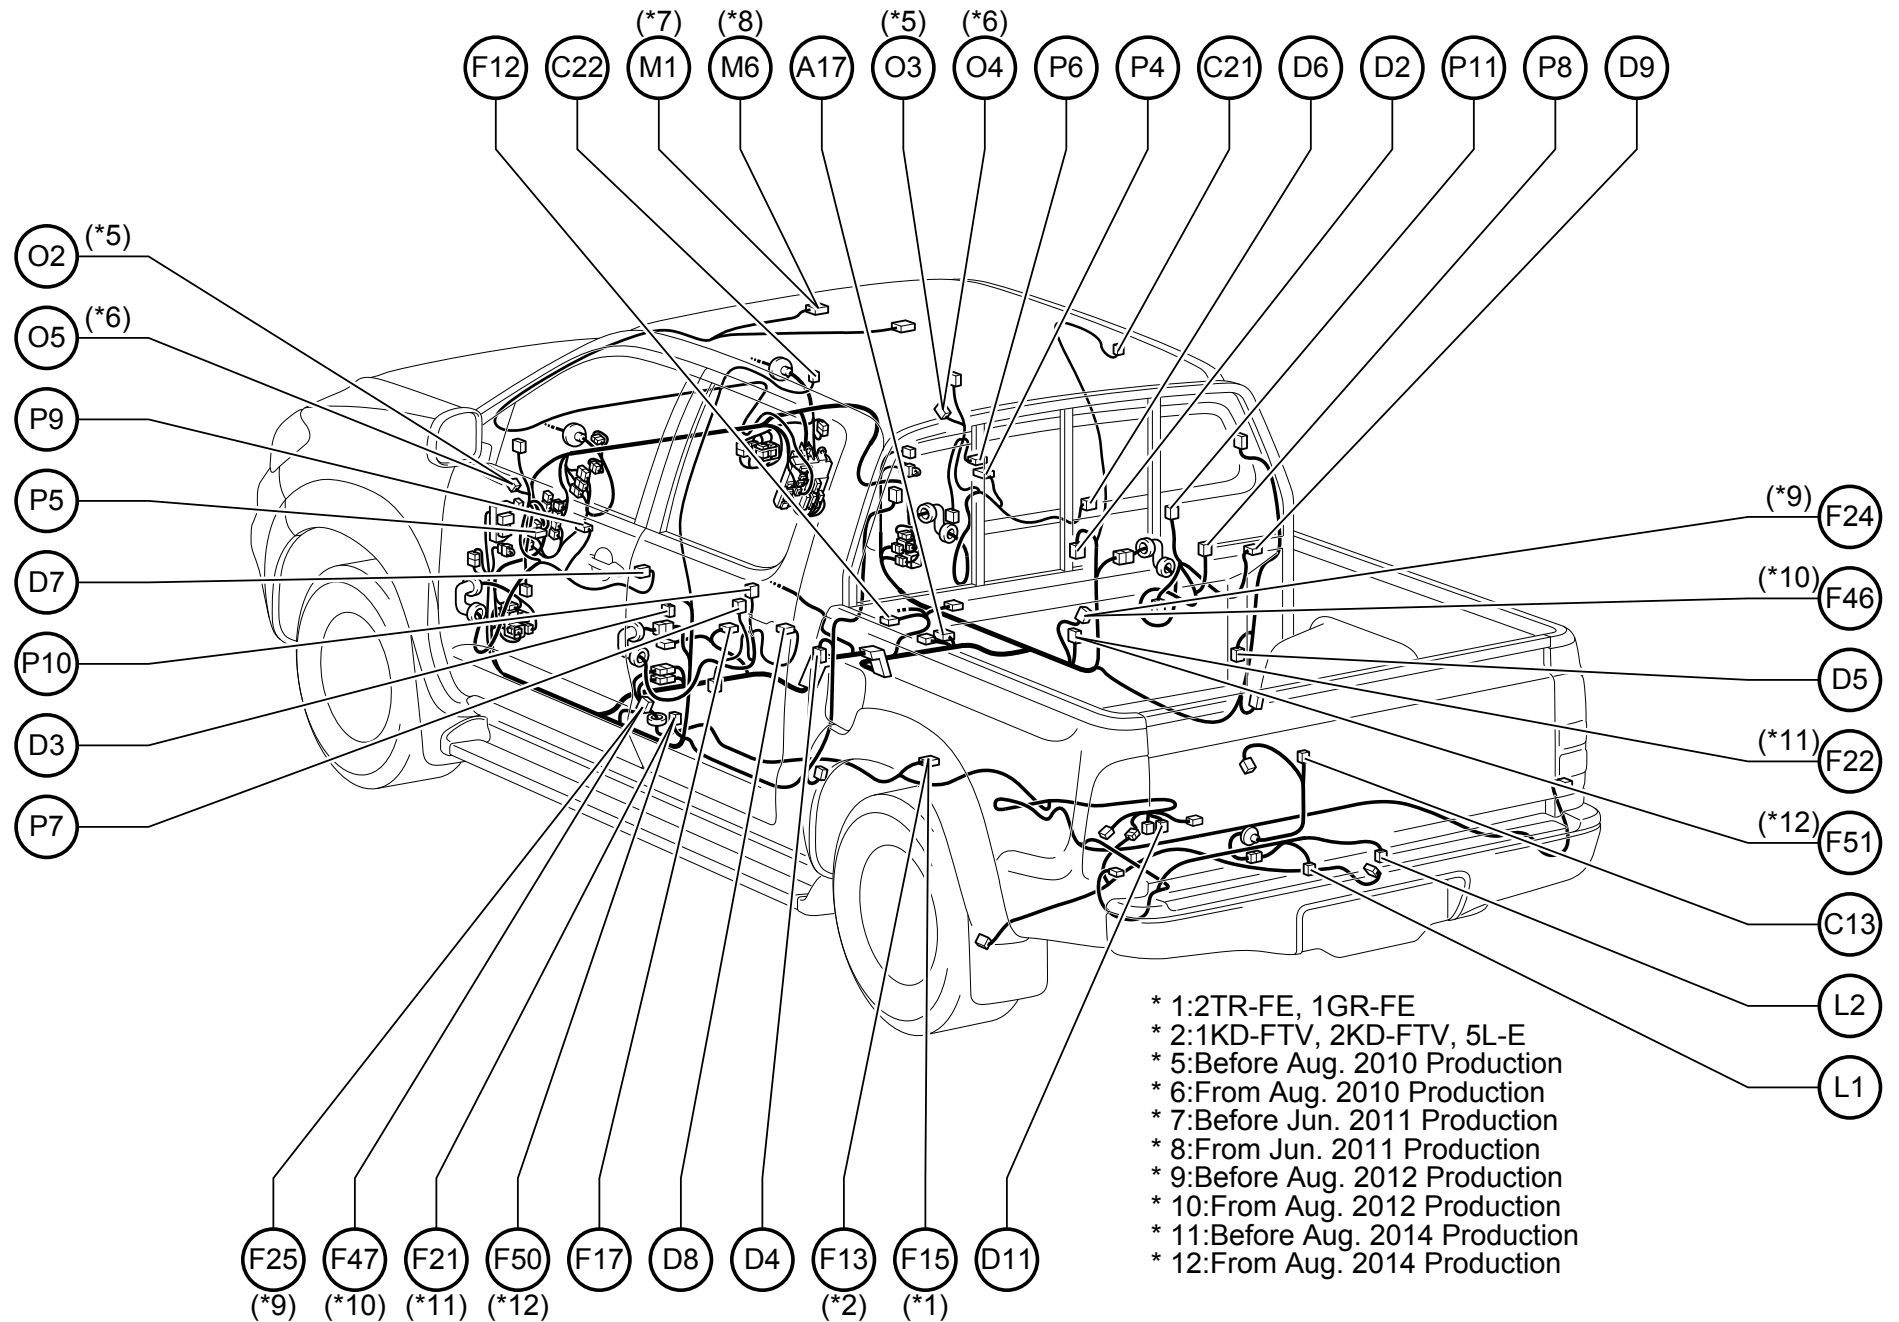

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp
- C 21 Curtain Shield Airbag Assembly RH
- C 22 Curtain Shield Airbag Assembly LH

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 4 Door Courtesy SW (Rear LH)
- D 5 Door Courtesy SW (Rear RH)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 8 Door Lock Assembly (Rear LH)
- D 9 Door Lock Assembly (Rear RH)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 24 Front Side Airbag Sensor RH
- F 25 Front Side Airbag Sensor LH
- F 46 Front Side Airbag Sensor RH
- F 47 Front Side Airbag Sensor LH
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

 
- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

 
 
 
- M 1 Map Lamp
- M 6 Map Lamp

- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)


- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 7 Power Window Regulator Motor (Rear LH)
- P 8 Power Window Regulator Motor (Rear RH)
- P 9 Power Window SW (Front Passenger's Side)
- P 10 Power Window SW (Rear LH)
- P 11 Power Window SW (Rear RH)

Position of Parts in Body <RHD Double Cab>







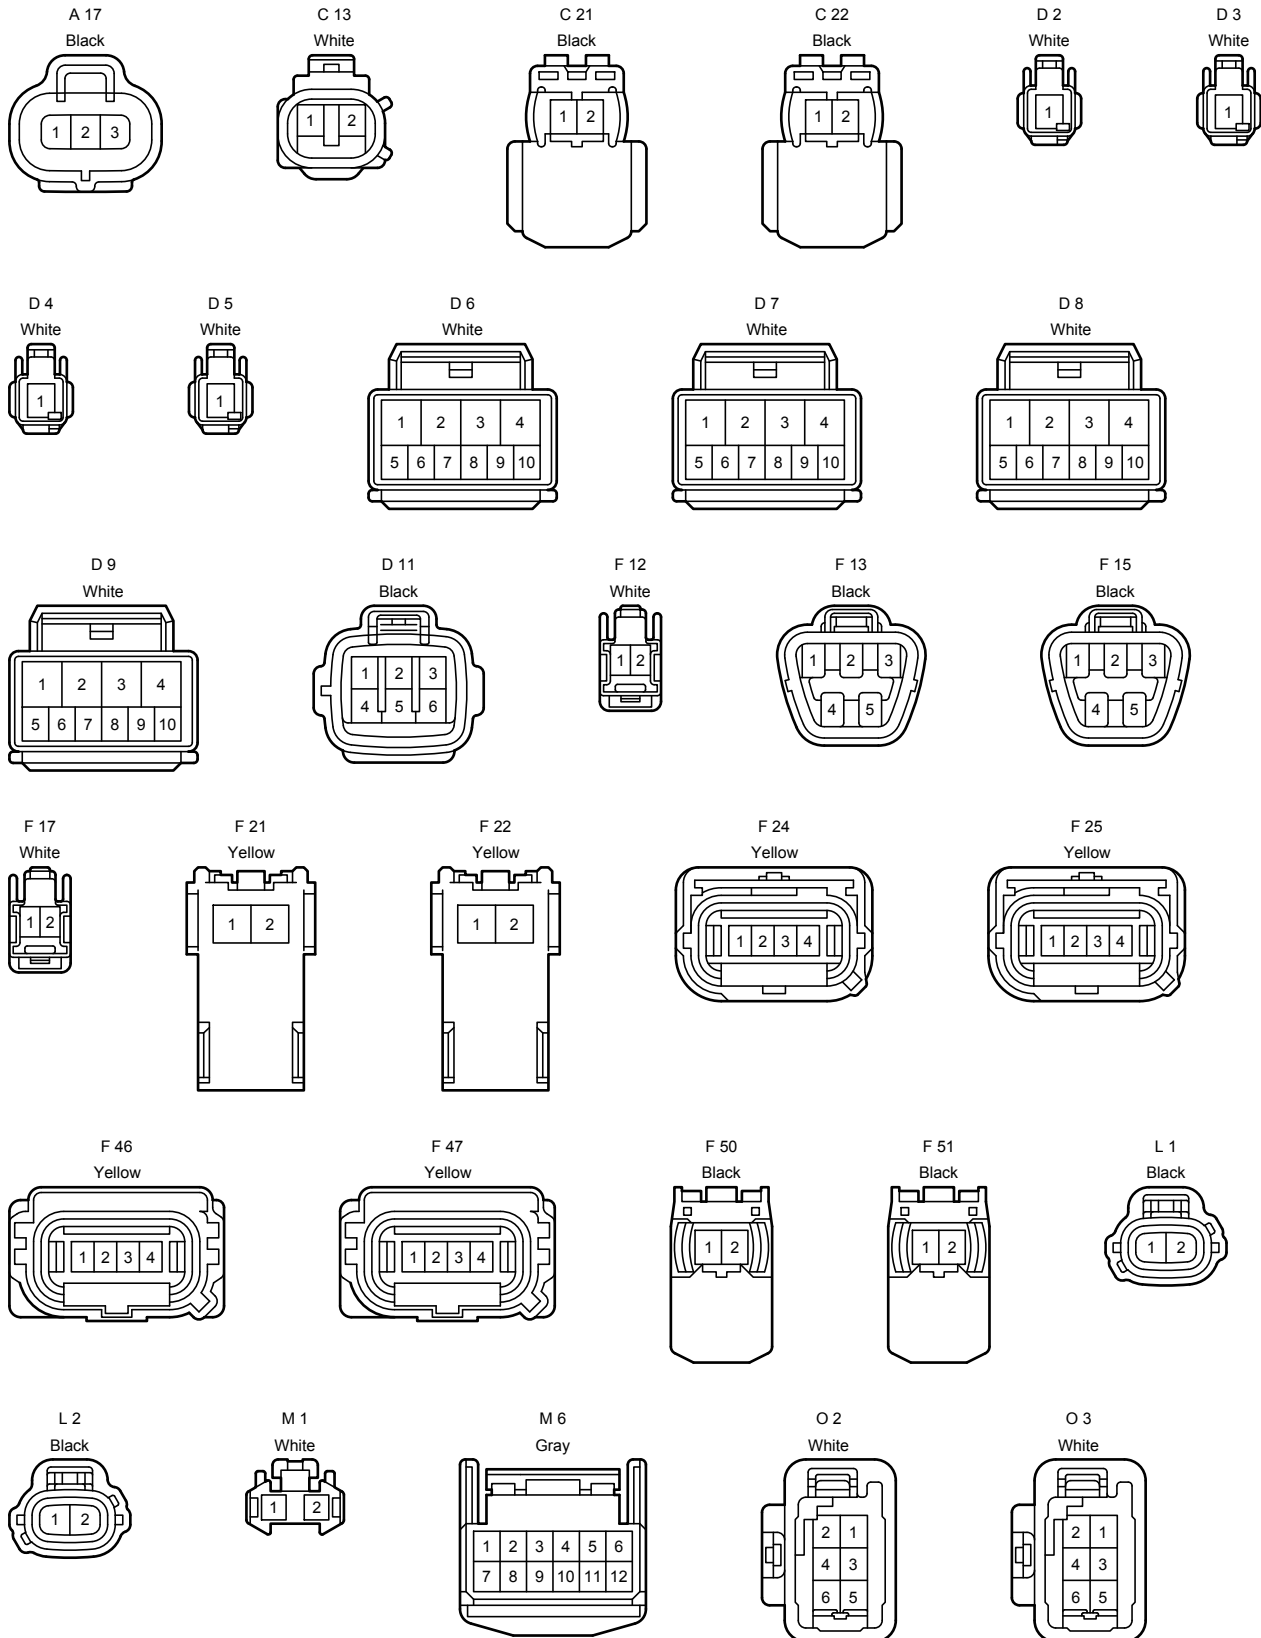


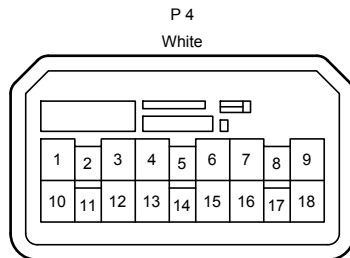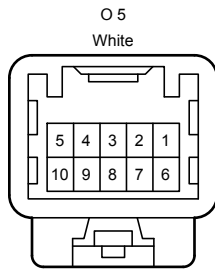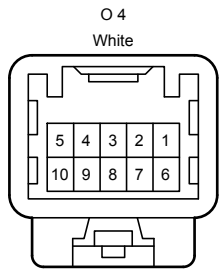

 
(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

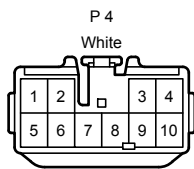

       (Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

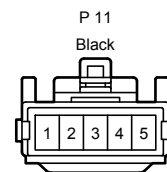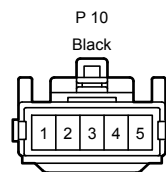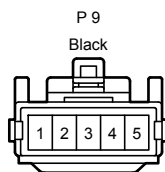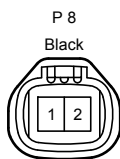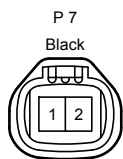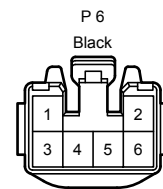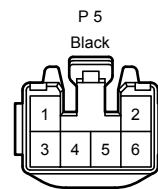

 - * 3: Before Aug. 2009 Production
- * 4: From Aug. 2009 Production
- * 9: Before Aug. 2012 Production
- * 10: From Aug. 2012 Production

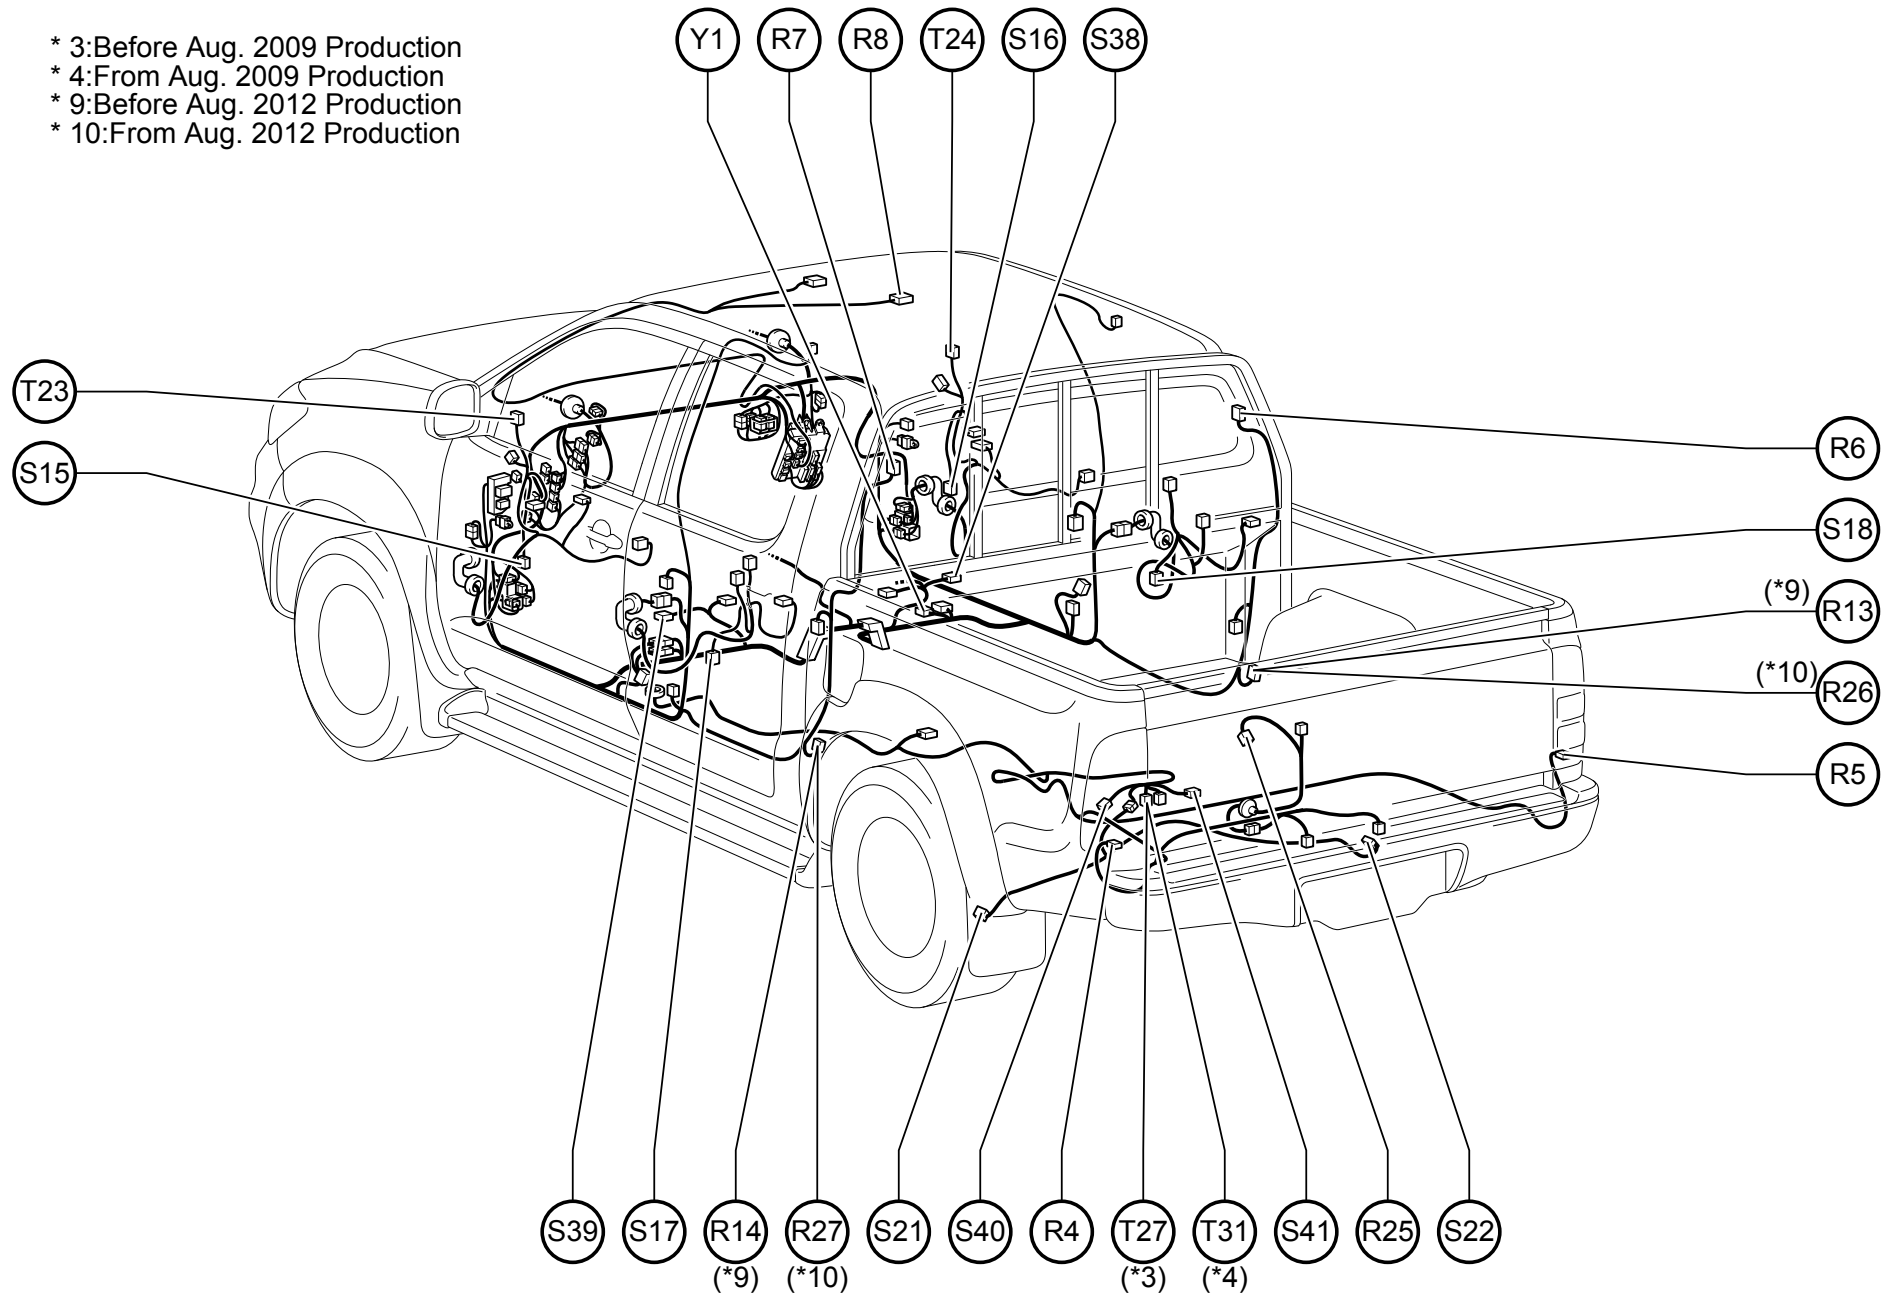























- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 6 Rear Window Defogger
- R 7 Rear Window Defogger
- R 8 Room Lamp
- R 13 Rear Side Airbag Sensor Assembly RH
- R 14 Rear Side Airbag Sensor Assembly LH
- R 25 Rear Television Camera Assembly
- R 26 Rear Side Airbag Sensor Assembly RH
- R 27 Rear Side Airbag Sensor Assembly LH


- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 17 Speaker (Rear Door LH)
- S 18 Speaker (Rear Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 38 Side Airbag Squib Circuit RH
- S 39 Side Airbag Squib Circuit LH
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)


- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)


- Y 1 Yaw Rate Sensor Assembly

                         Position of Parts in Body <RHD Double Cab>

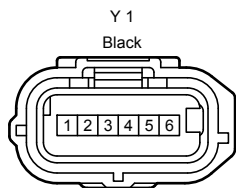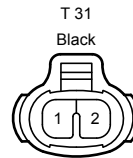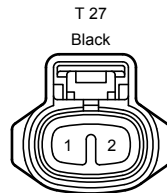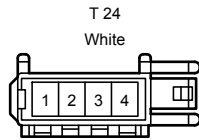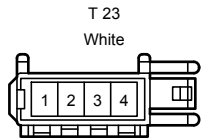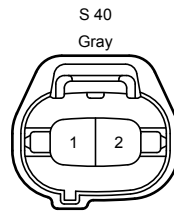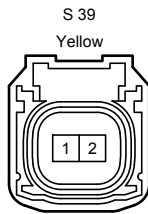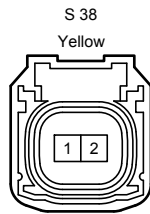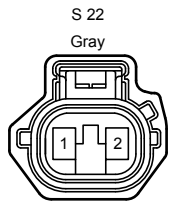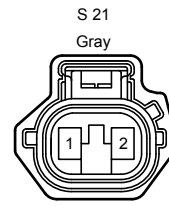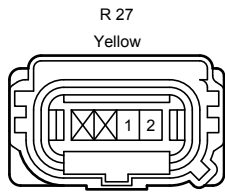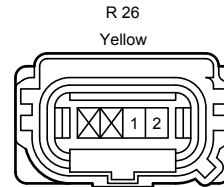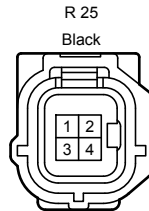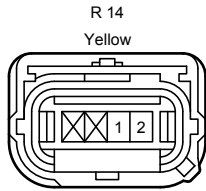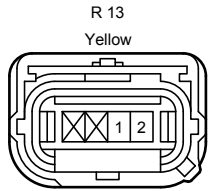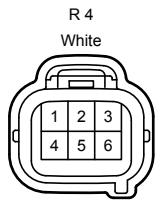

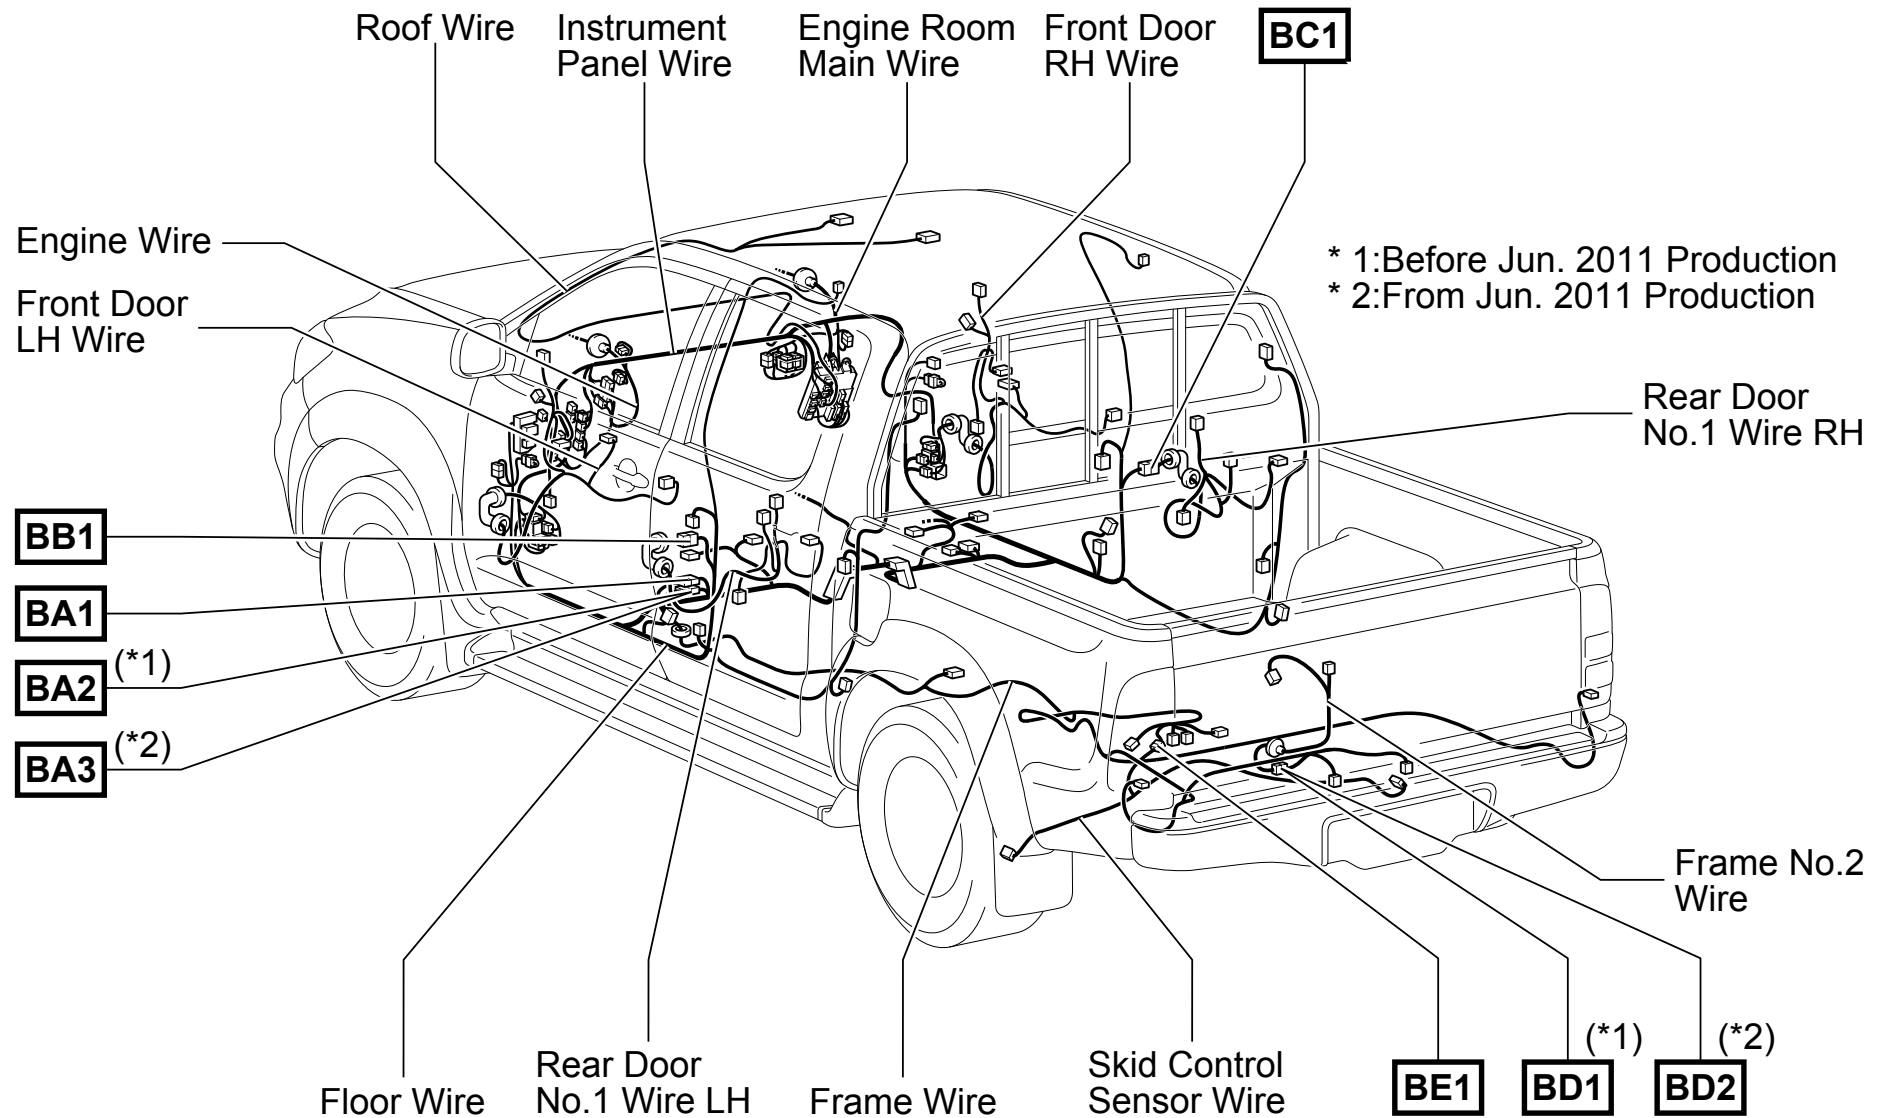


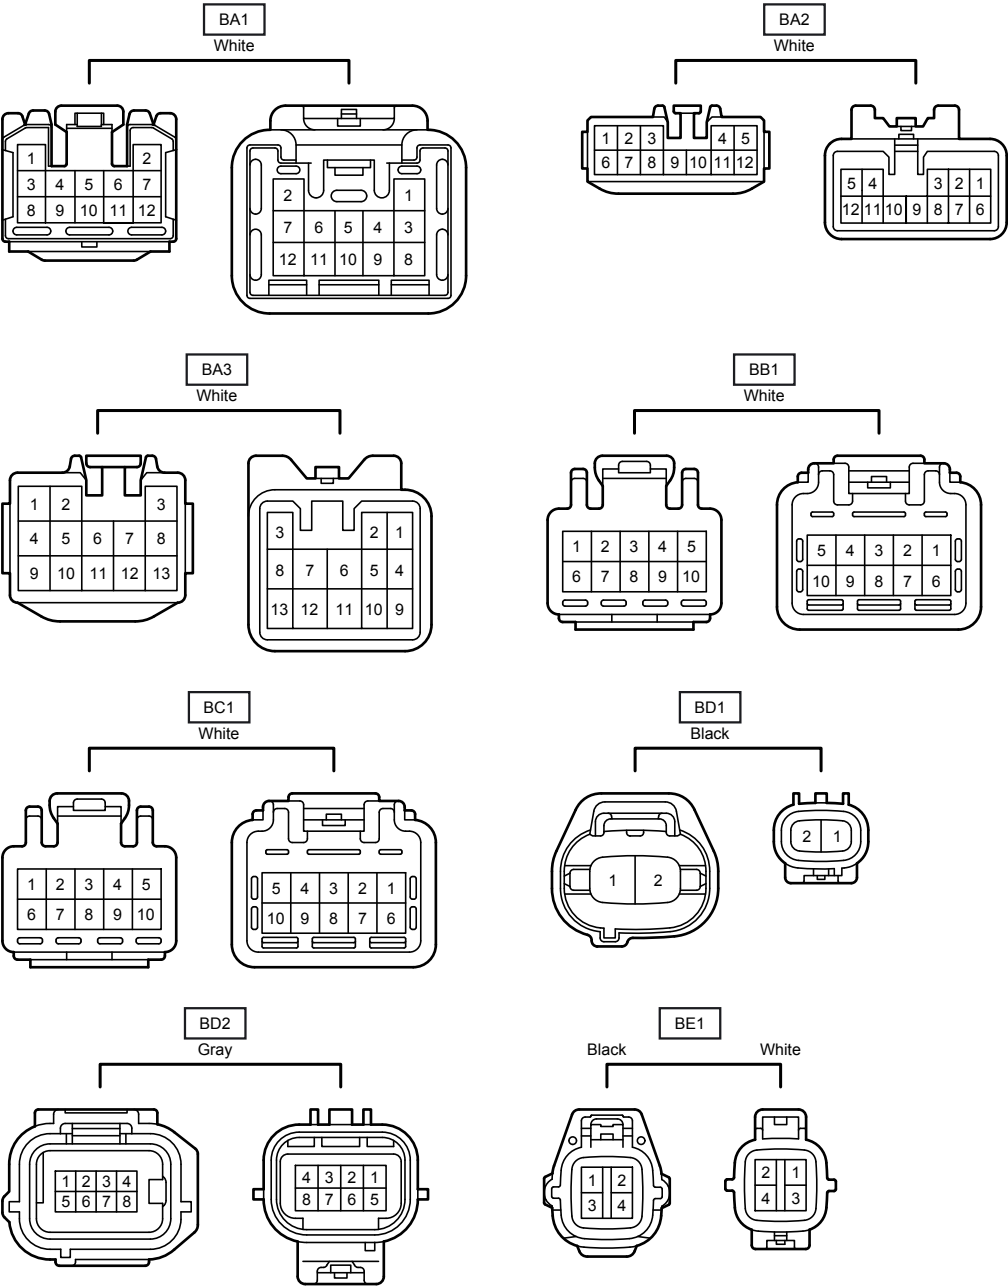



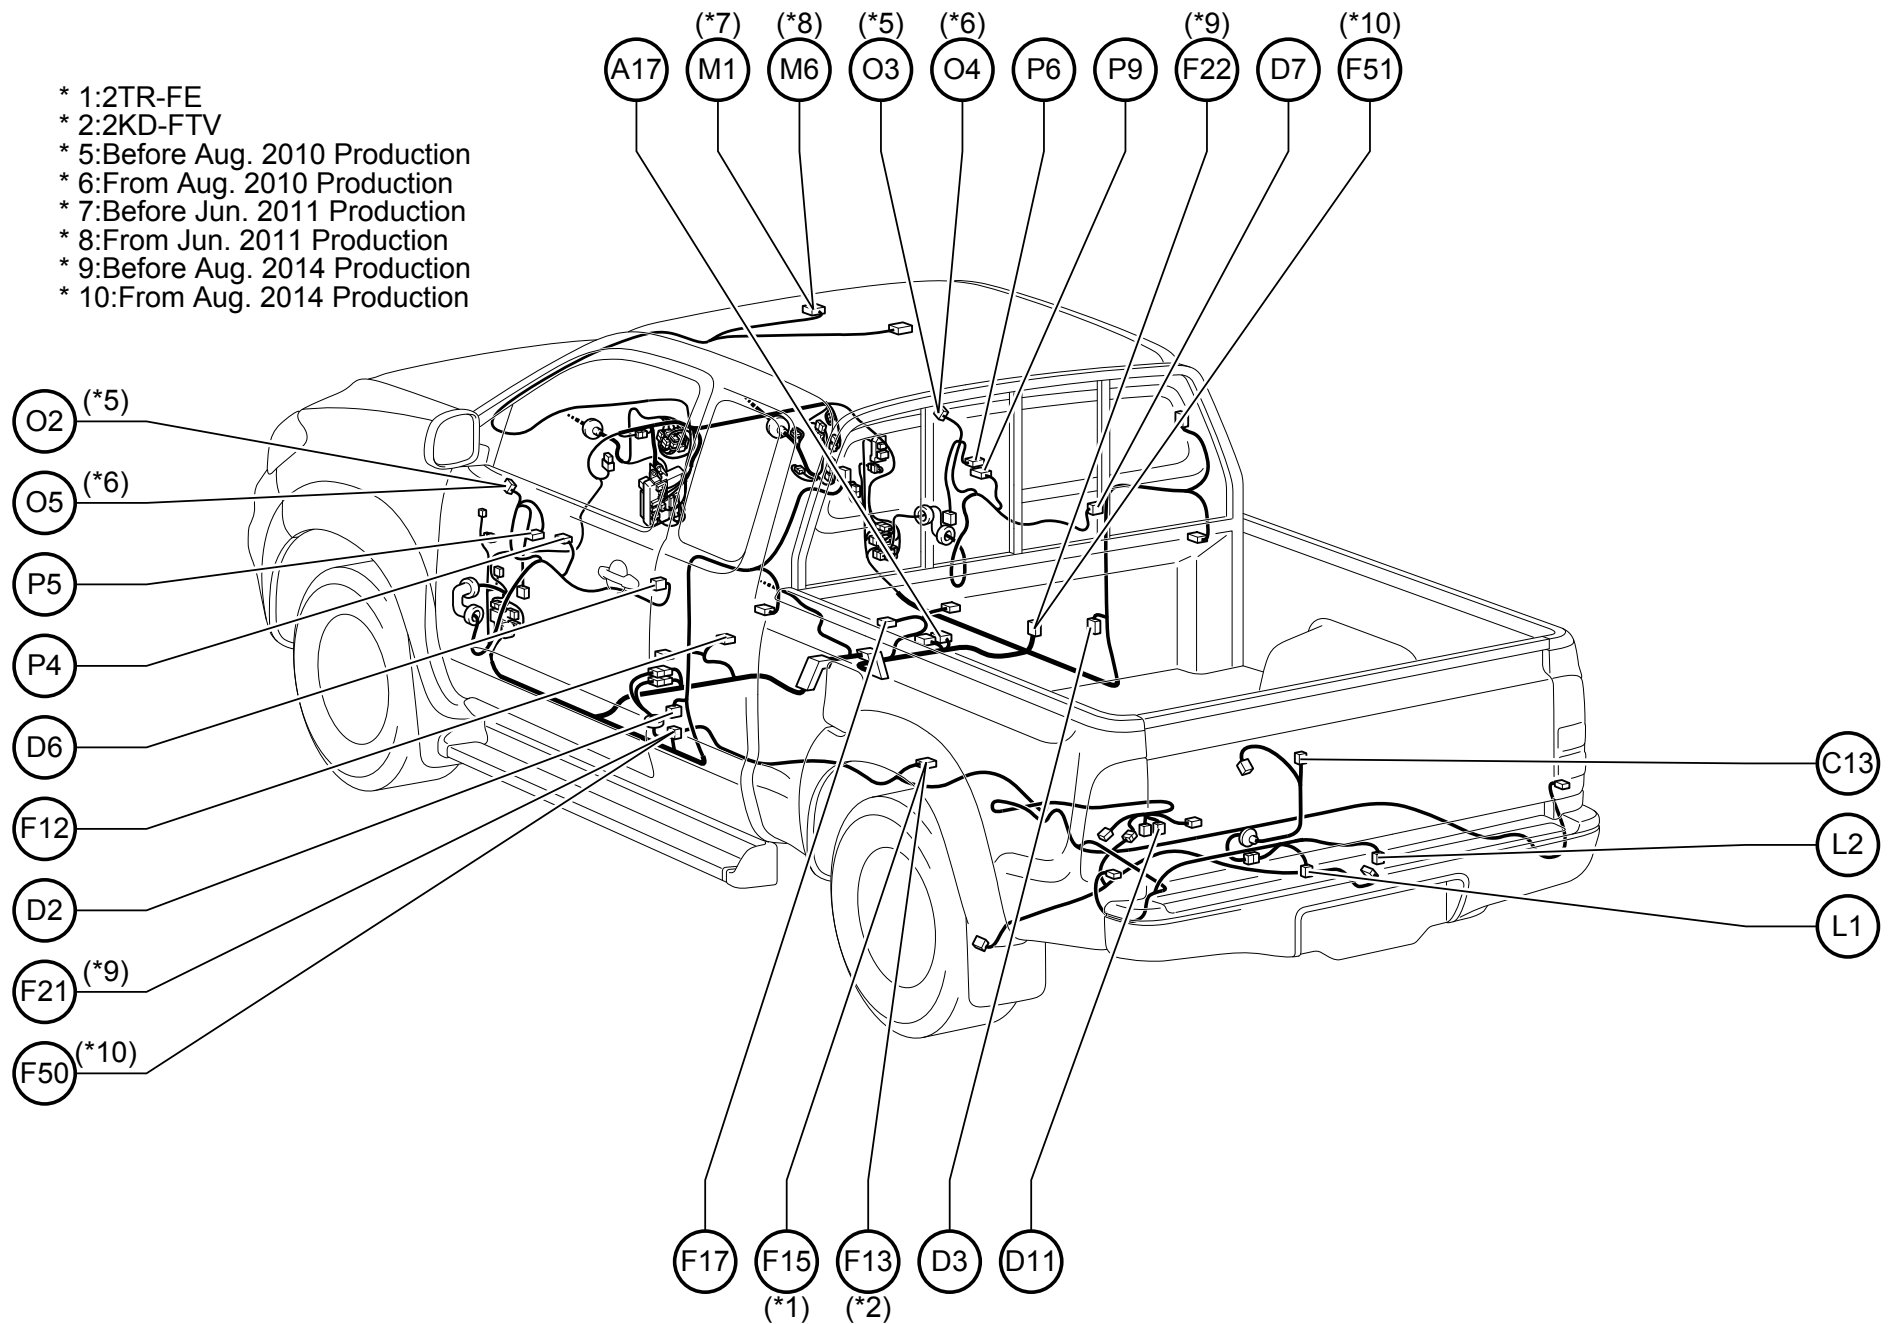


- A 17 ABS Deceleration Sensor
- C 13 Center Stop Lamp
- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 11 Diff. Lock Shift Actuator Assembly
- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)
- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH
- M 1 Map Lamp
- M 6 Map Lamp
- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)
- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)

 
Position of Parts in Body <LHD Extra Cab>

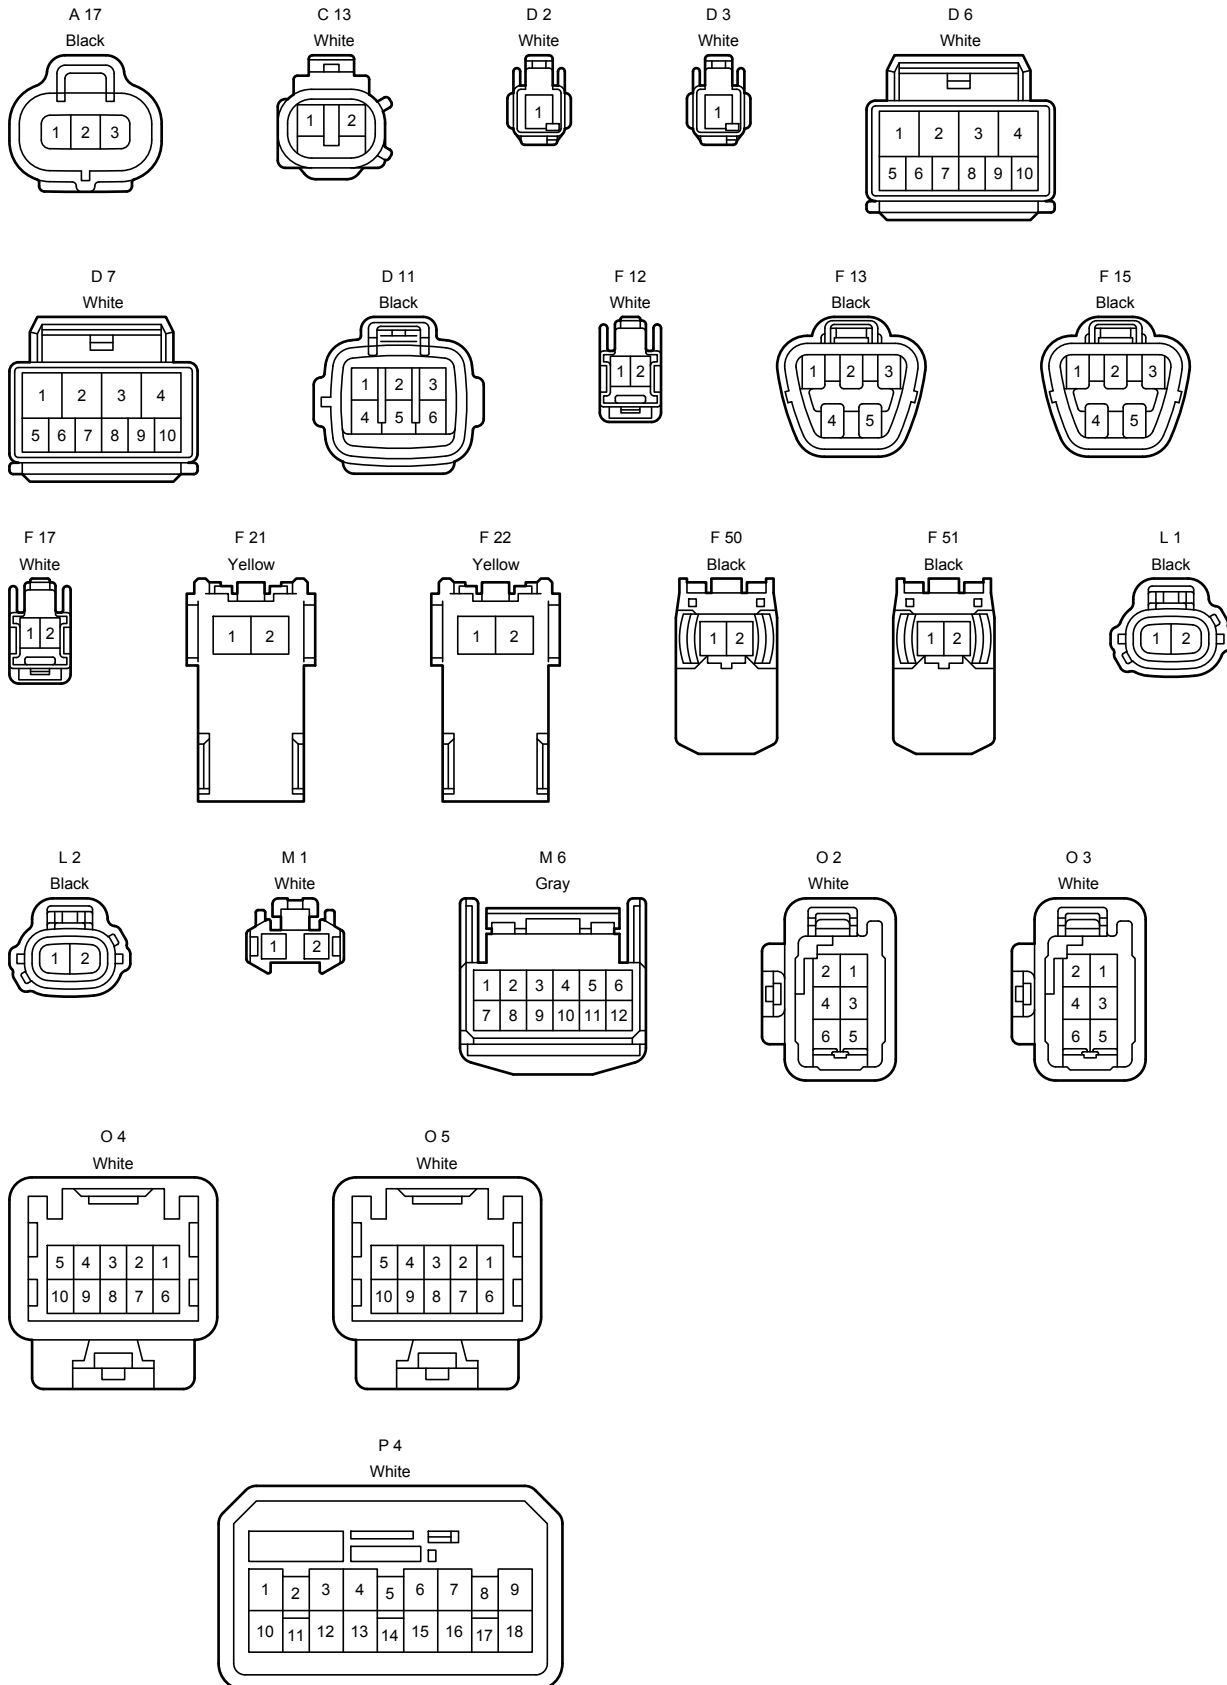

   
(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

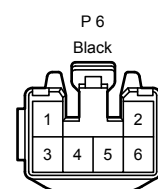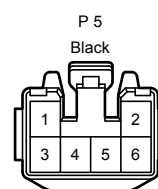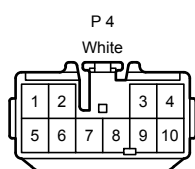

 (Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

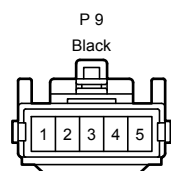

 - * 3: Before Aug. 2009 Production
- * 4: From Aug. 2009 Production

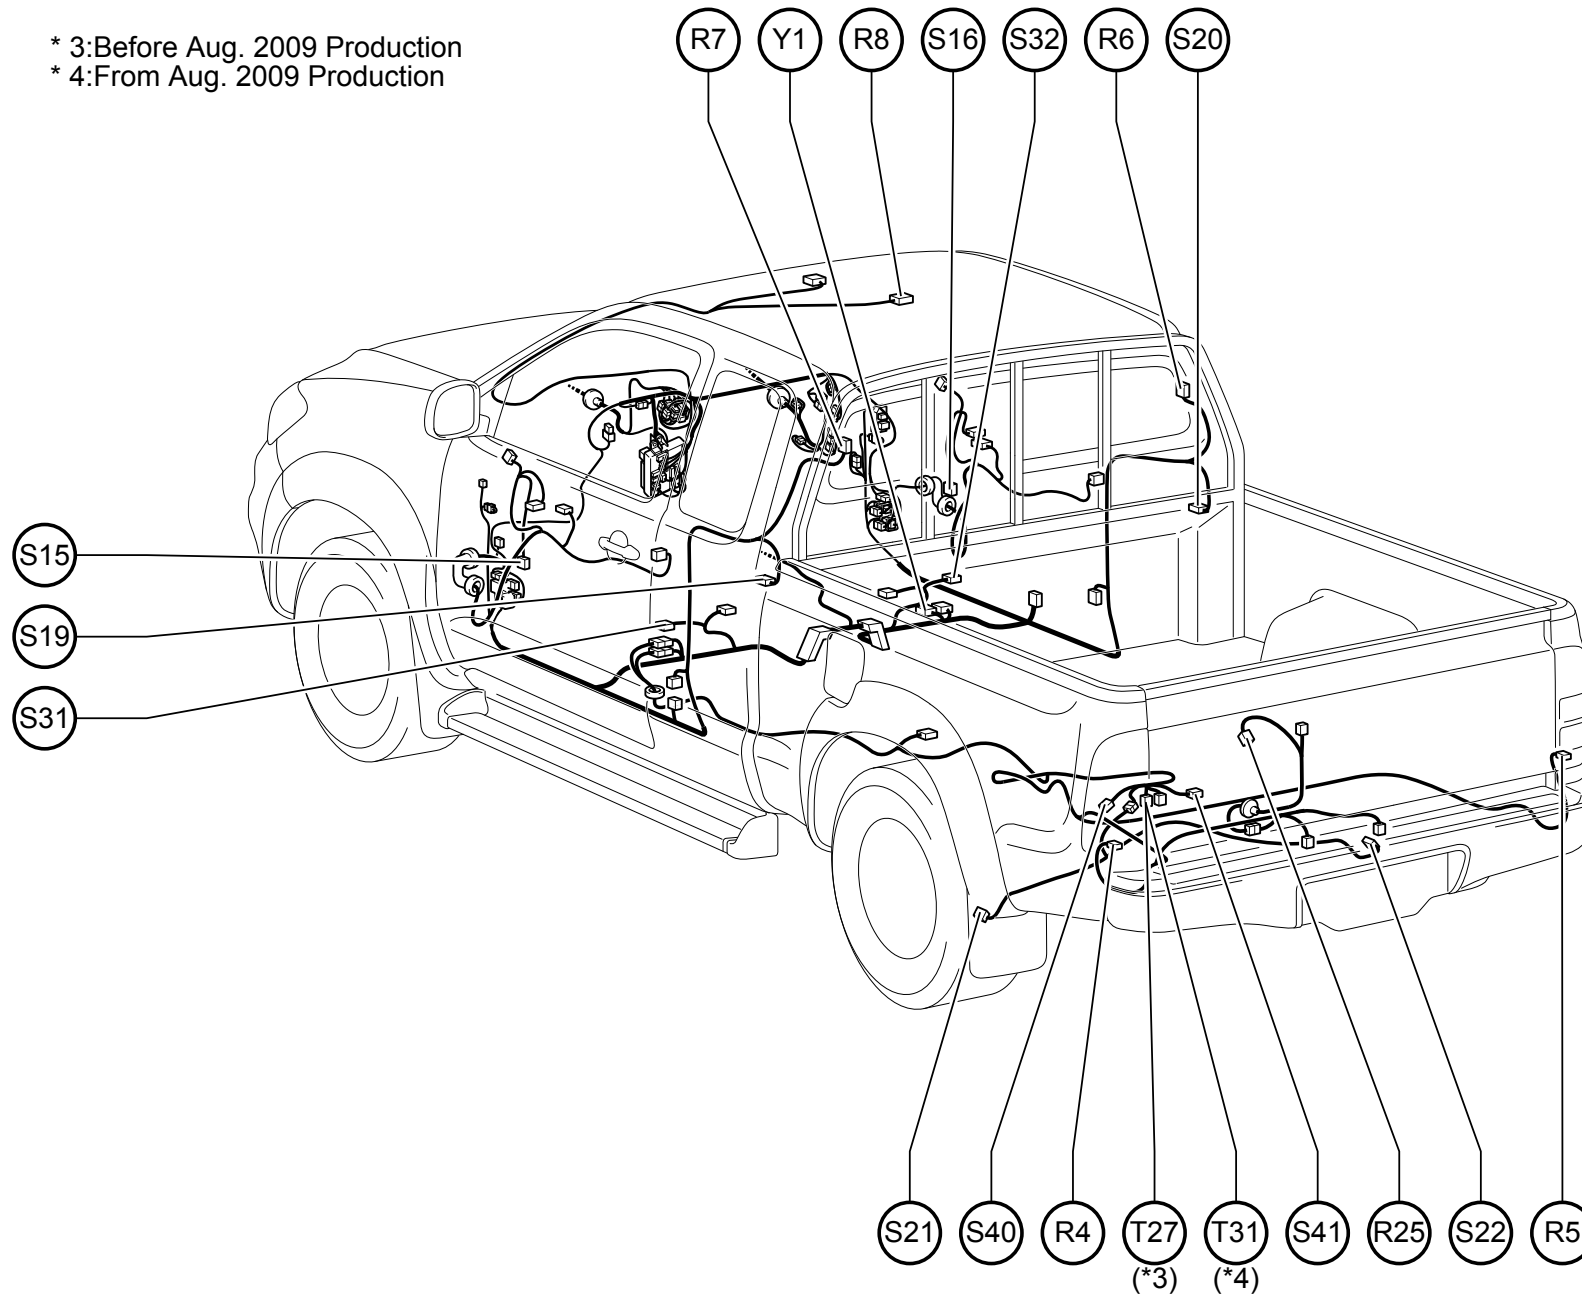


- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 6 Rear Window Defogger
- R 7 Rear Window Defogger
- R 8 Room Lamp
- R 25 Rear Television Camera Assembly

- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 19 Speaker (Rear LH)
- S 20 Speaker (Rear RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 31 Seat Heater (LH)
- S 32 Seat Heater (RH)
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)


- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)


- Y 1 Yaw Rate Sensor Assembly

 Position of Parts in Body <LHD Extra Cab>

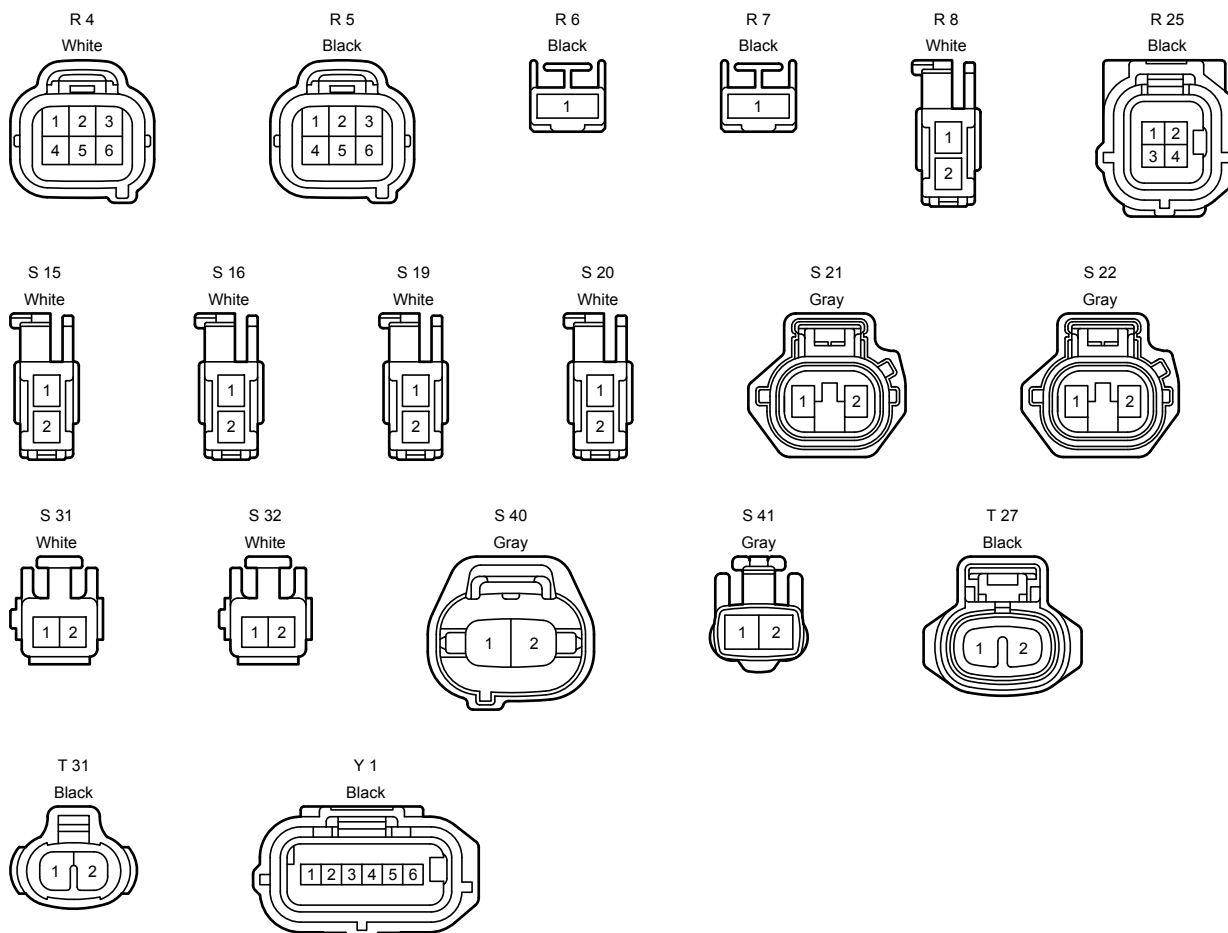


  - * 1:Before Jun. 2011 Production
- * 2:From Jun. 2011 Production
- * 3:w/ Parking Assist (Rear View Monitor)
- * 4:w/o Parking Assist (Rear View Monitor)

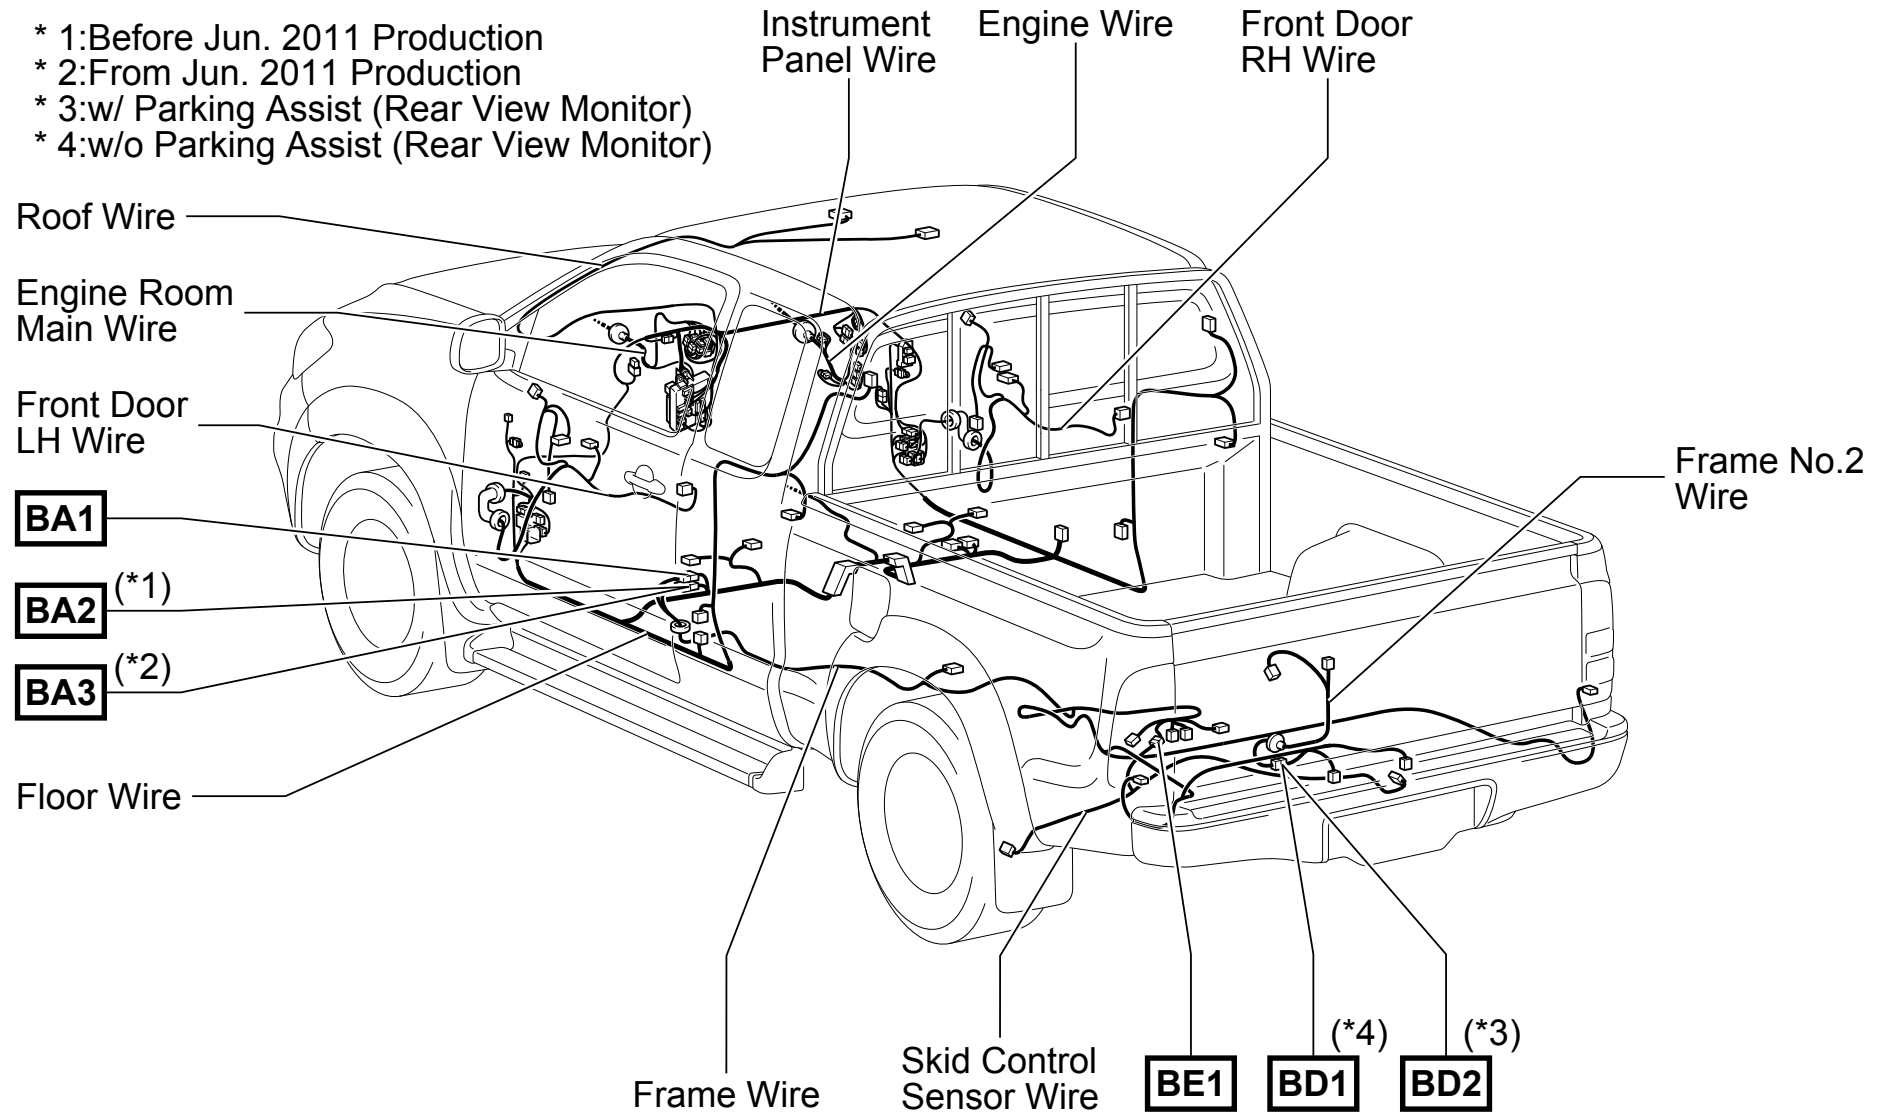

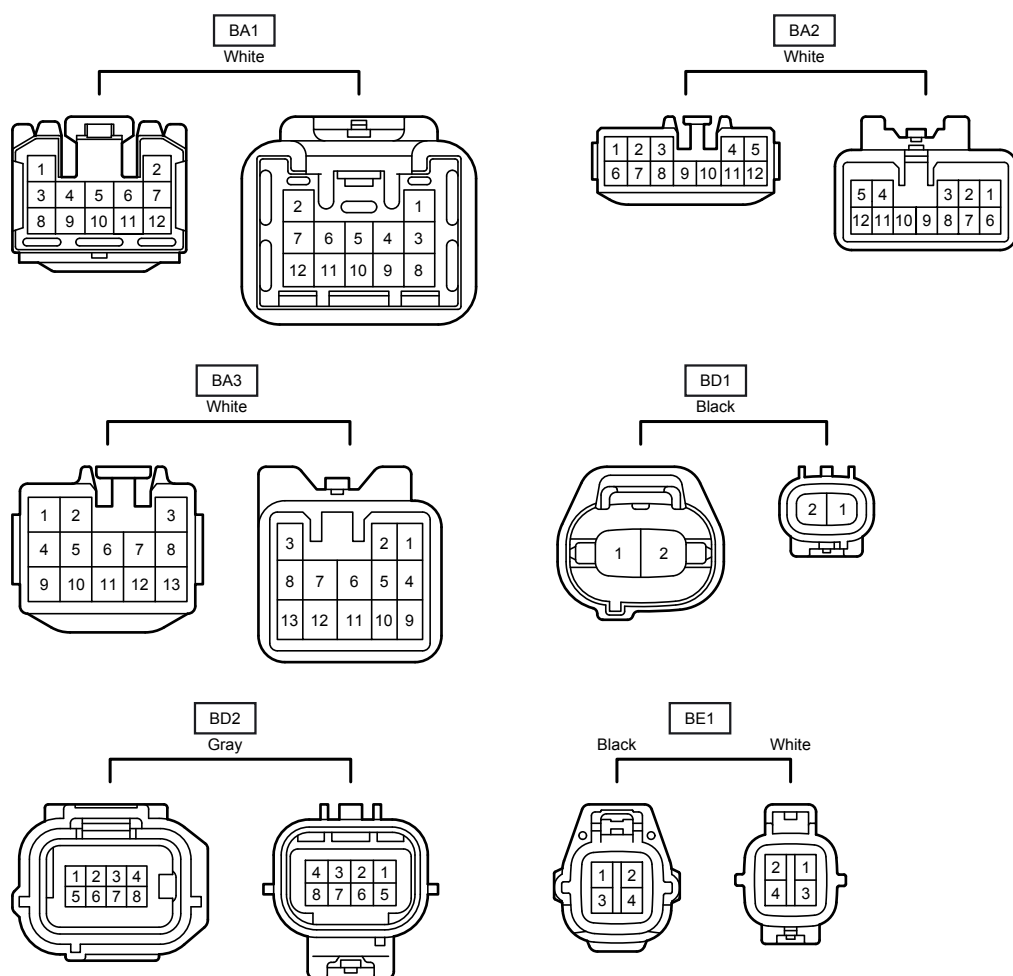

 - * 1:1GR-FE
- * 2:1KD-FTV, 2KD-FTV
- * 5:Before Aug. 2010 Production
- * 6:From Aug. 2010 Production
- * 7:Before Jun. 2011 Production
- * 8:From Jun. 2011 Production
- * 9:Before Aug. 2012 Production
- * 10:From Aug. 2012 Production
- * 11:Before Aug. 2014 Production
- * 12:From Aug. 2014 Production

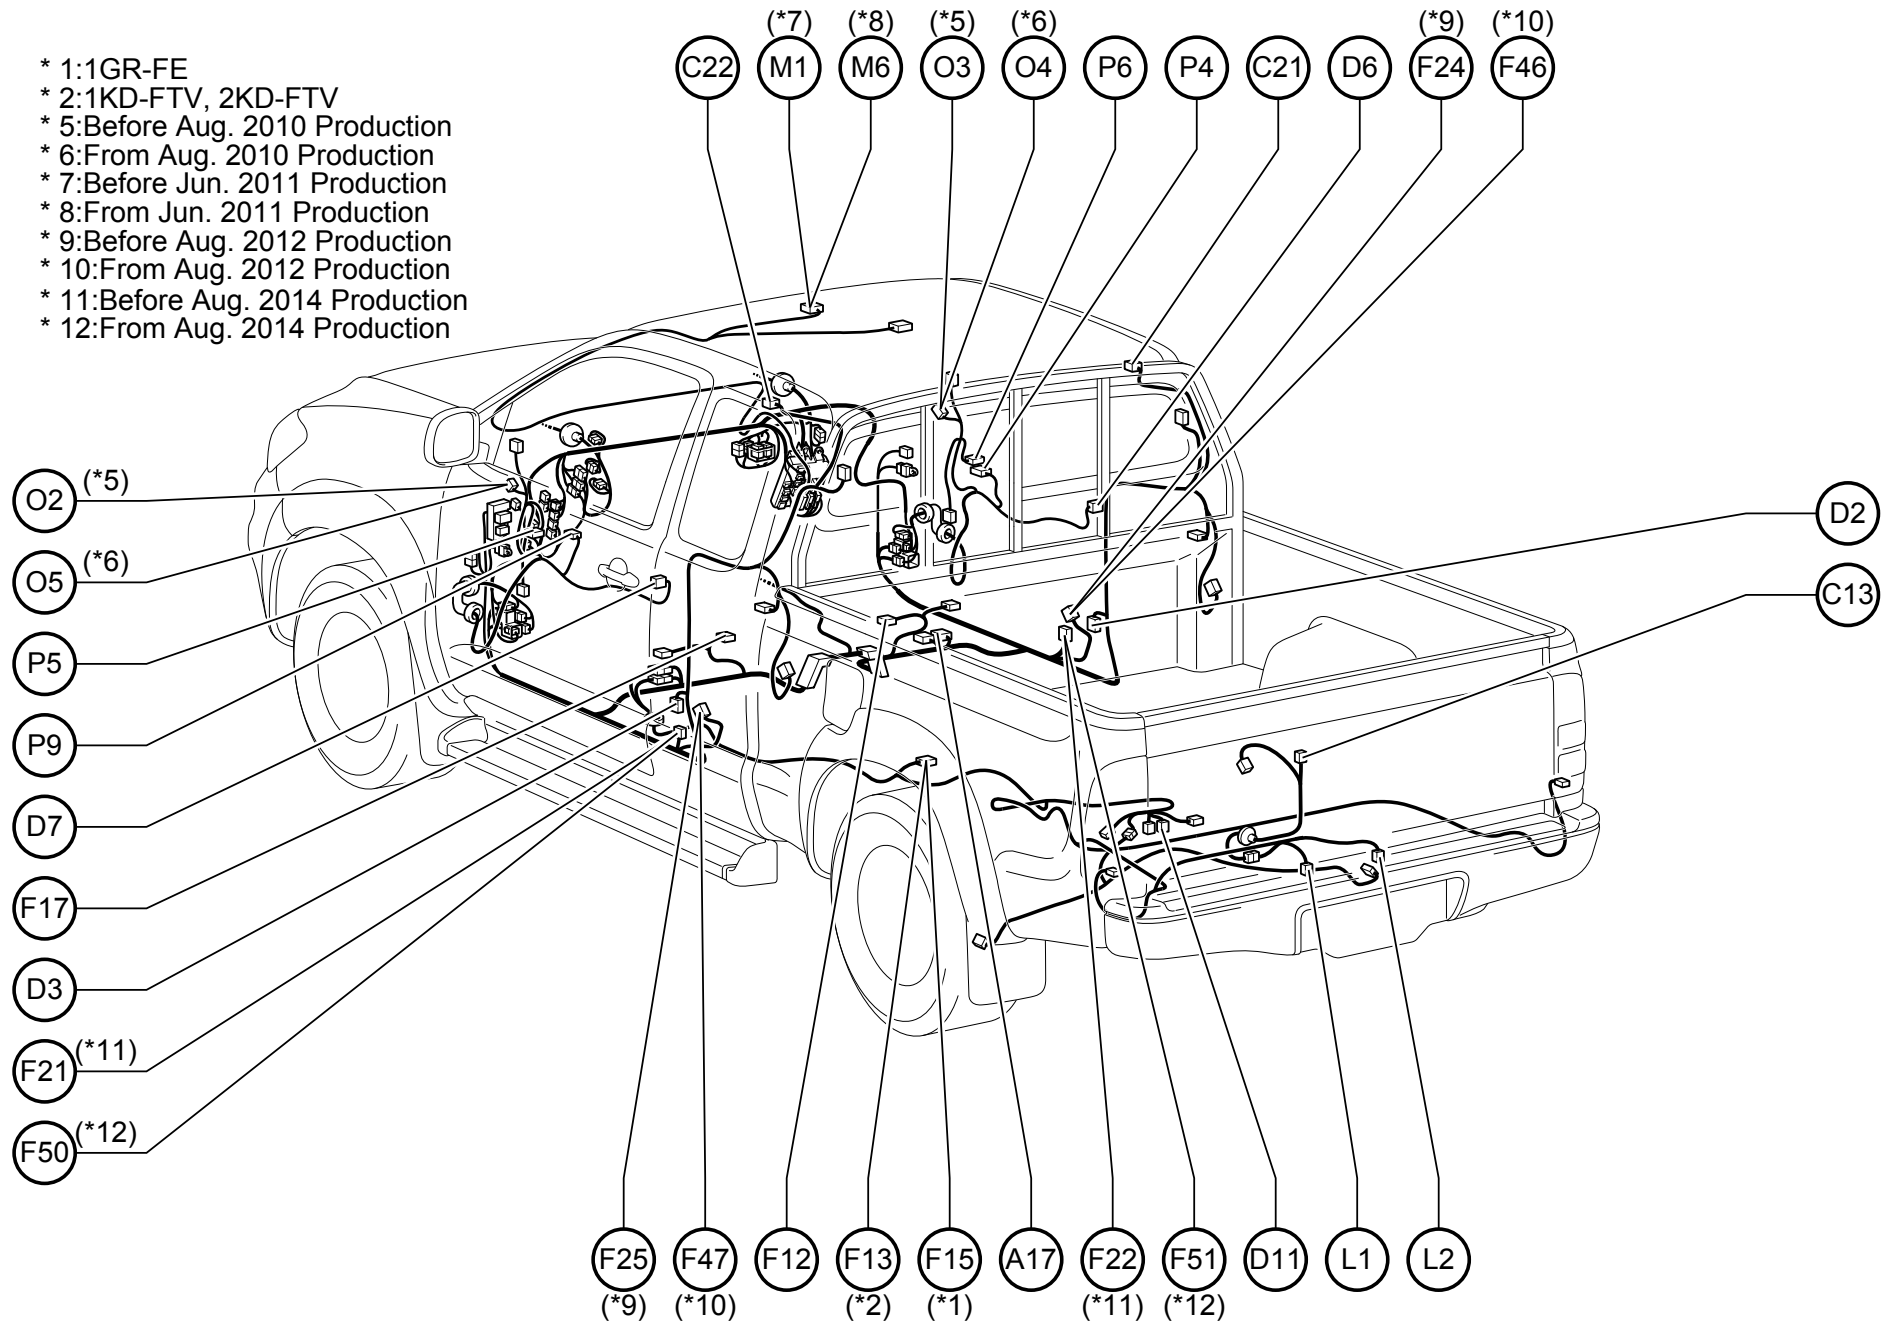

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp
- C 21 Curtain Shield Airbag Assembly RH
- C 22 Curtain Shield Airbag Assembly LH

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 24 Front Side Airbag Sensor RH
- F 25 Front Side Airbag Sensor LH
- F 46 Front Side Airbag Sensor RH
- F 47 Front Side Airbag Sensor LH
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

 
- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

 
- M 1 Map Lamp
- M 6 Map Lamp

- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)


- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)

Position of Parts in Body <RHD Extra Cab>



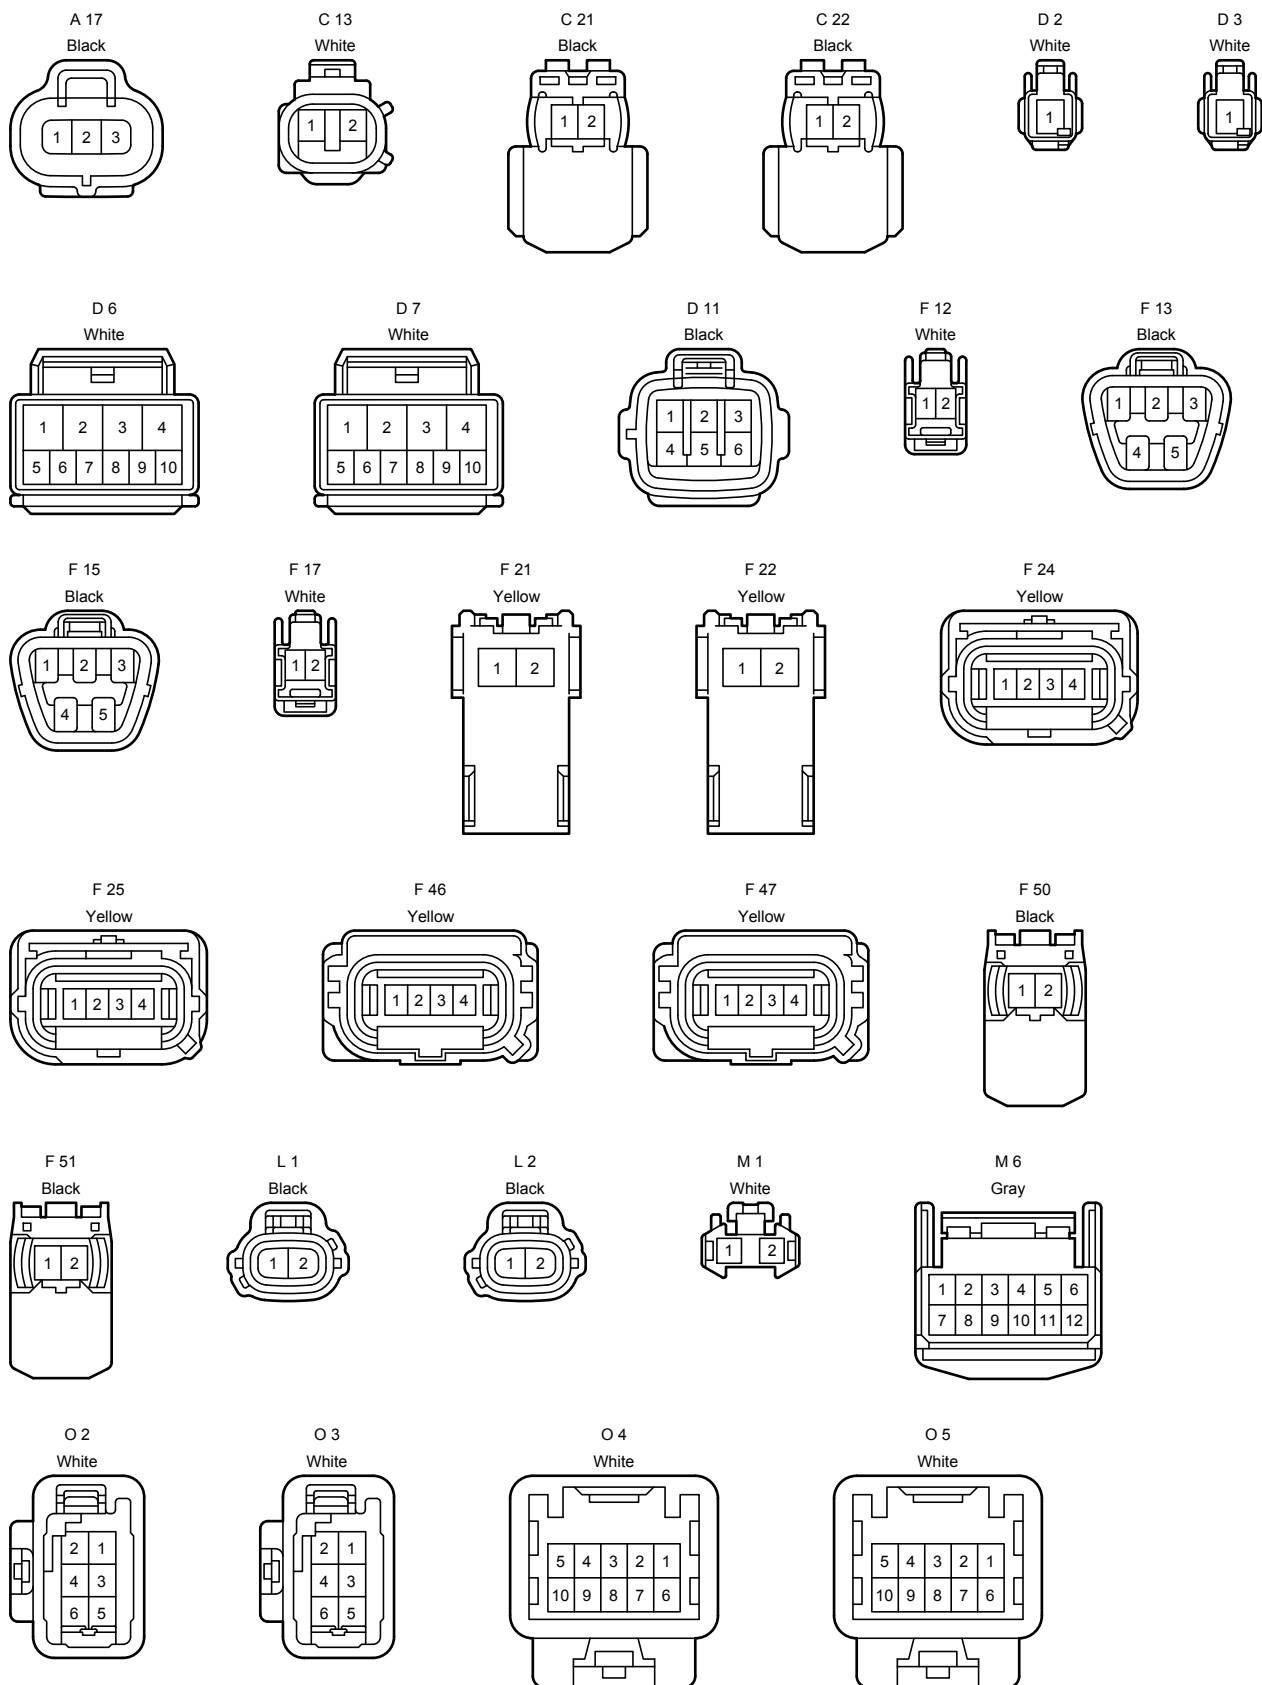


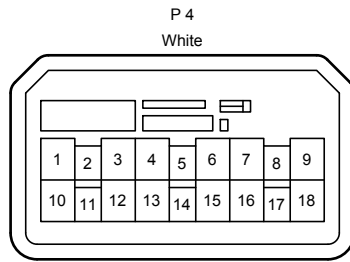

 
(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

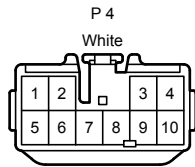

   (Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

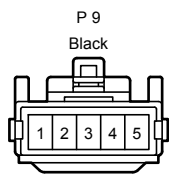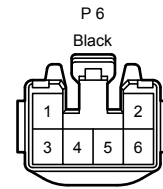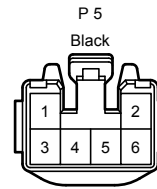

 - * 3: Before Aug. 2009 Production
- * 4: From Aug. 2009 Production
- * 9: Before Aug. 2012 Production
- * 10: From Aug. 2012 Production

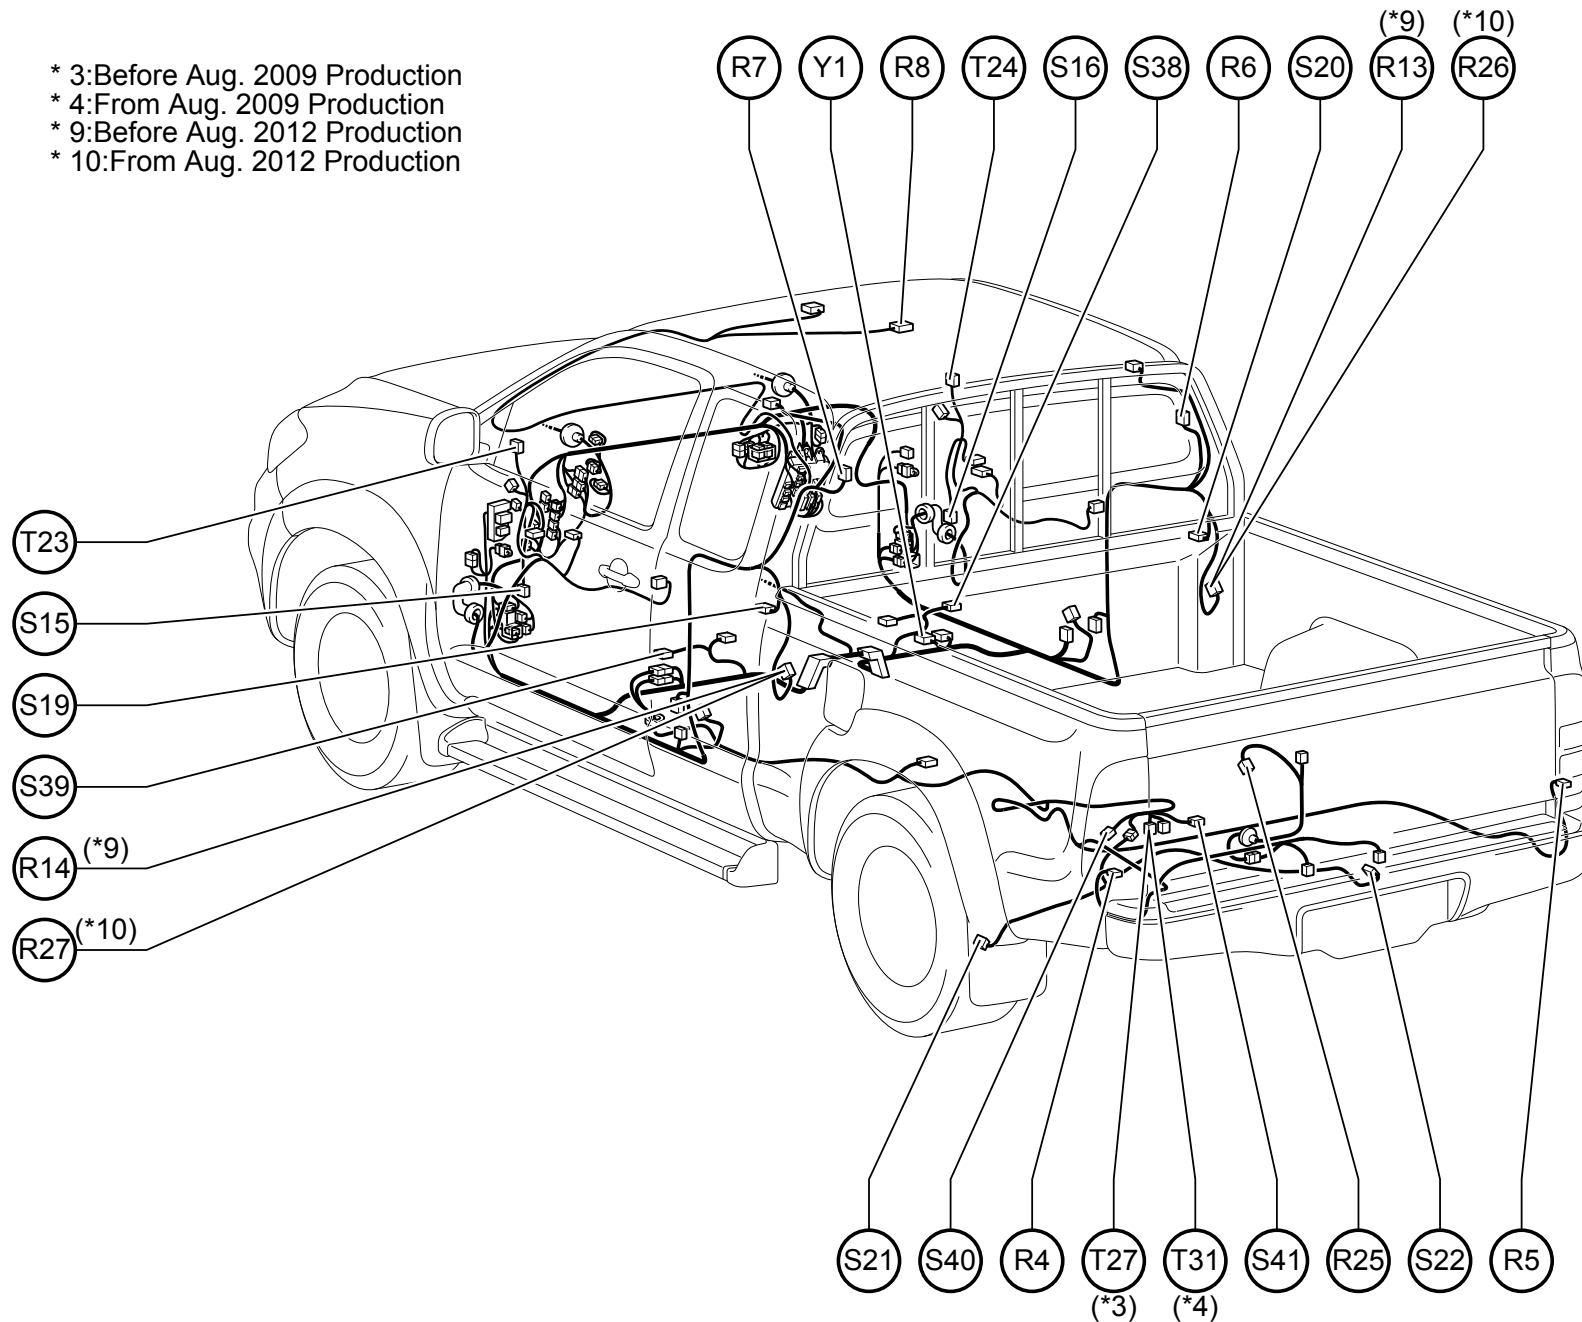
























- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 6 Rear Window Defogger
- R 7 Rear Window Defogger
- R 8 Room Lamp
- R 13 Rear Side Airbag Sensor Assembly RH
- R 14 Rear Side Airbag Sensor Assembly LH
- R 25 Rear Television Camera Assembly
- R 26 Rear Side Airbag Sensor Assembly RH
- R 27 Rear Side Airbag Sensor Assembly LH


- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 19 Speaker (Rear LH)
- S 20 Speaker (Rear RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 38 Side Airbag Squib Circuit RH
- S 39 Side Airbag Squib Circuit LH
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)


- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)


- Y 1 Yaw Rate Sensor Assembly

                          Position of Parts in Body <RHD Extra Cab>

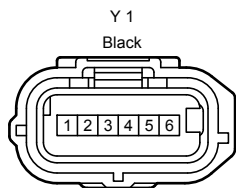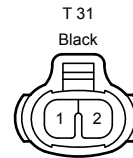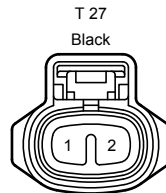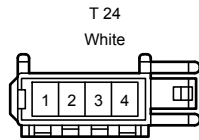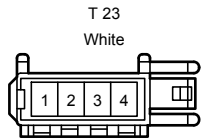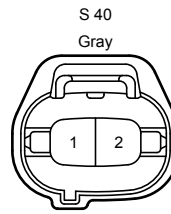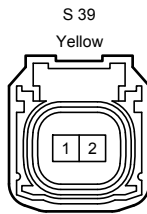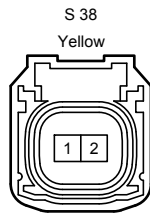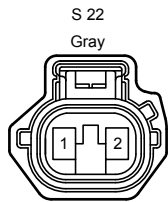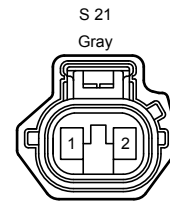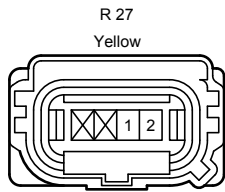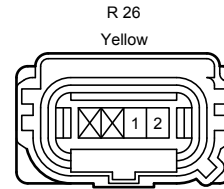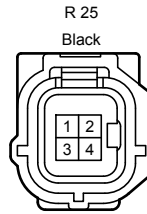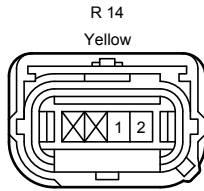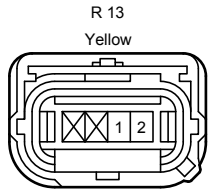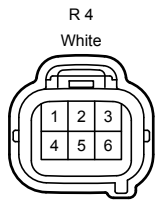

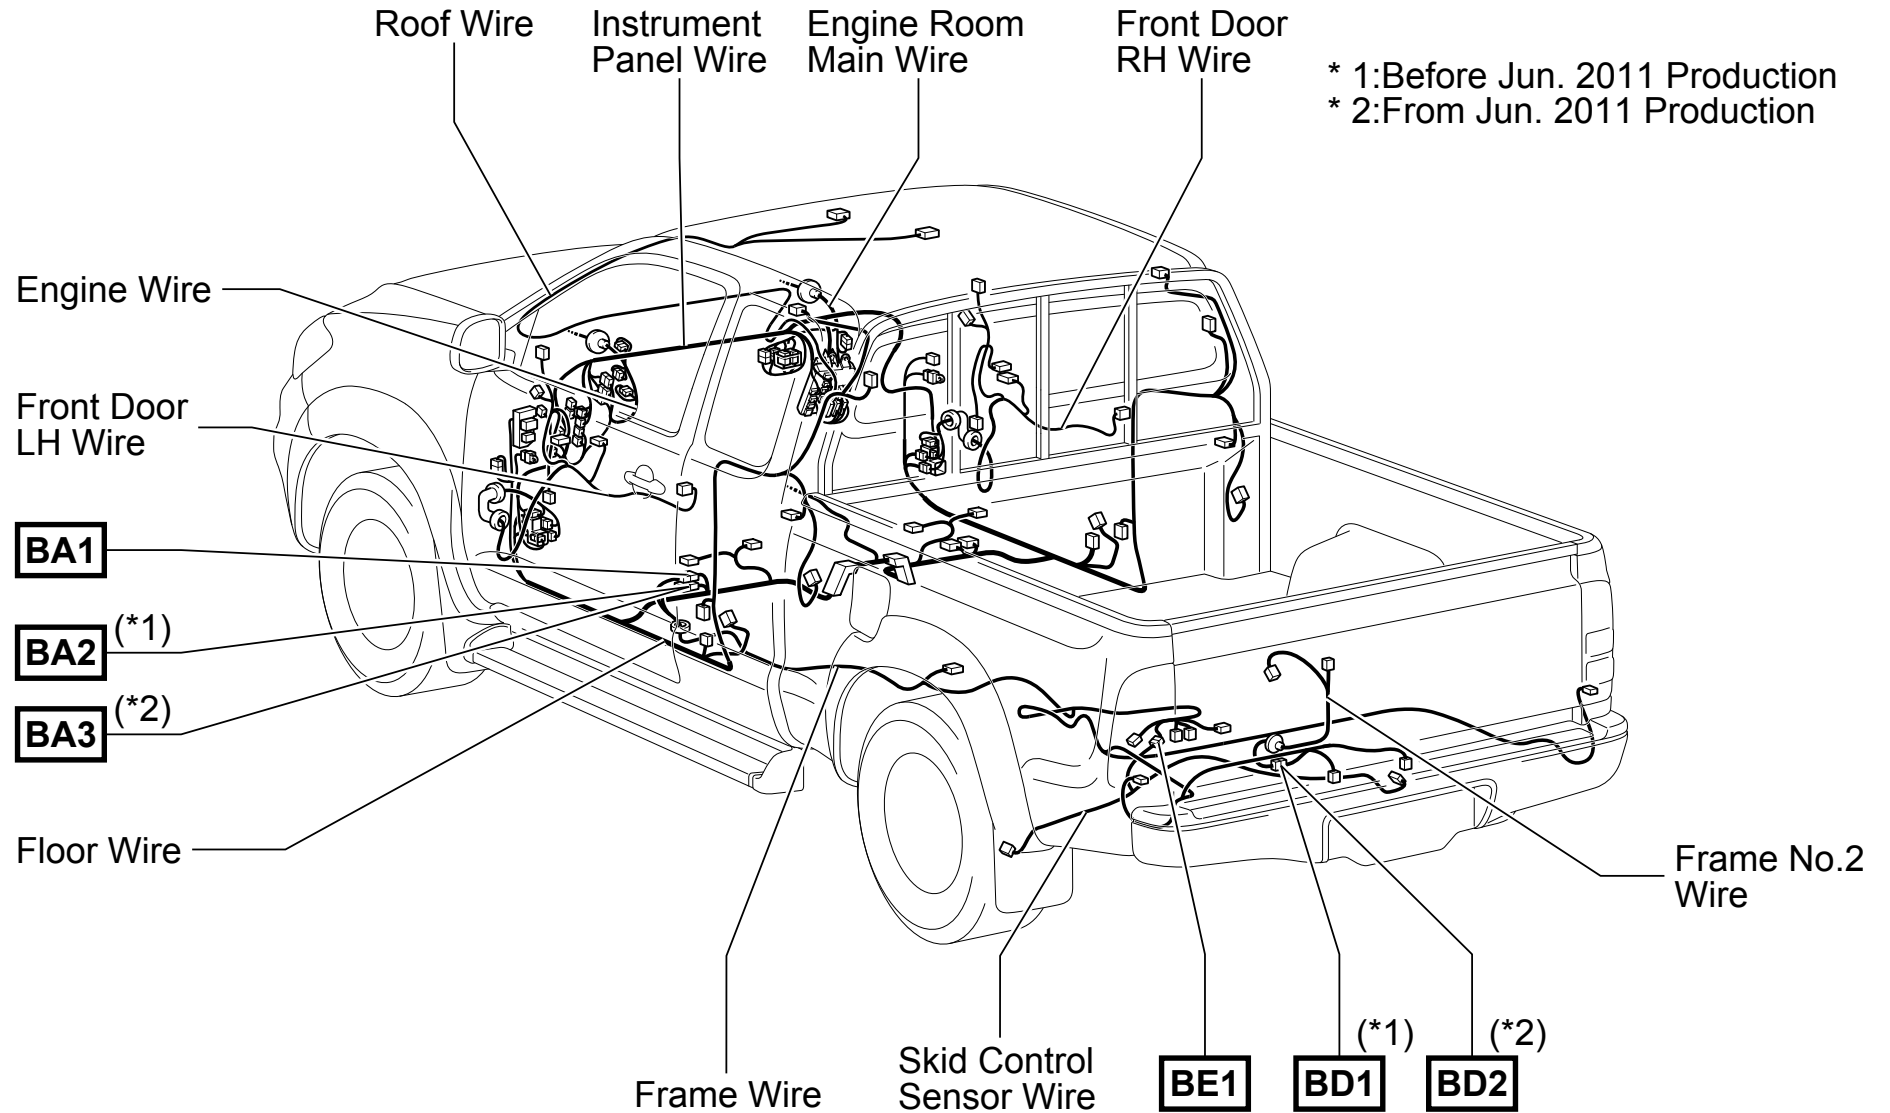

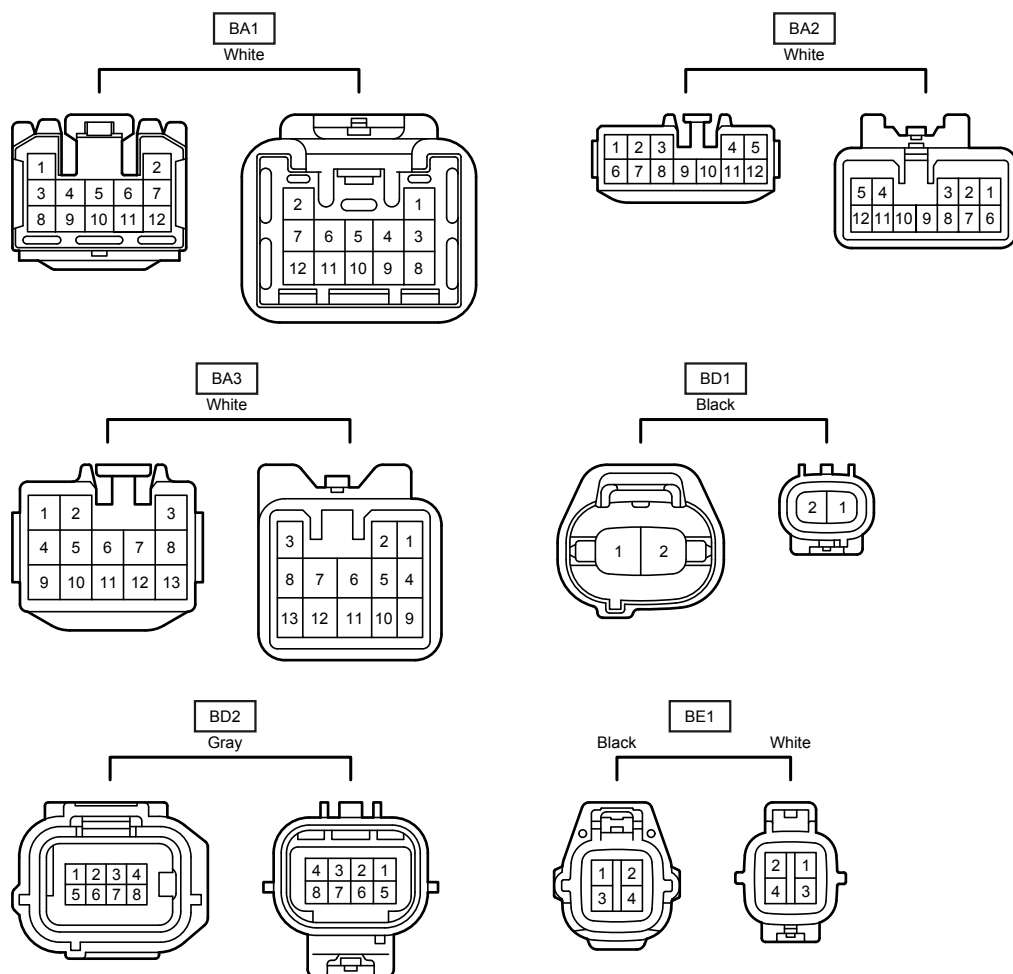

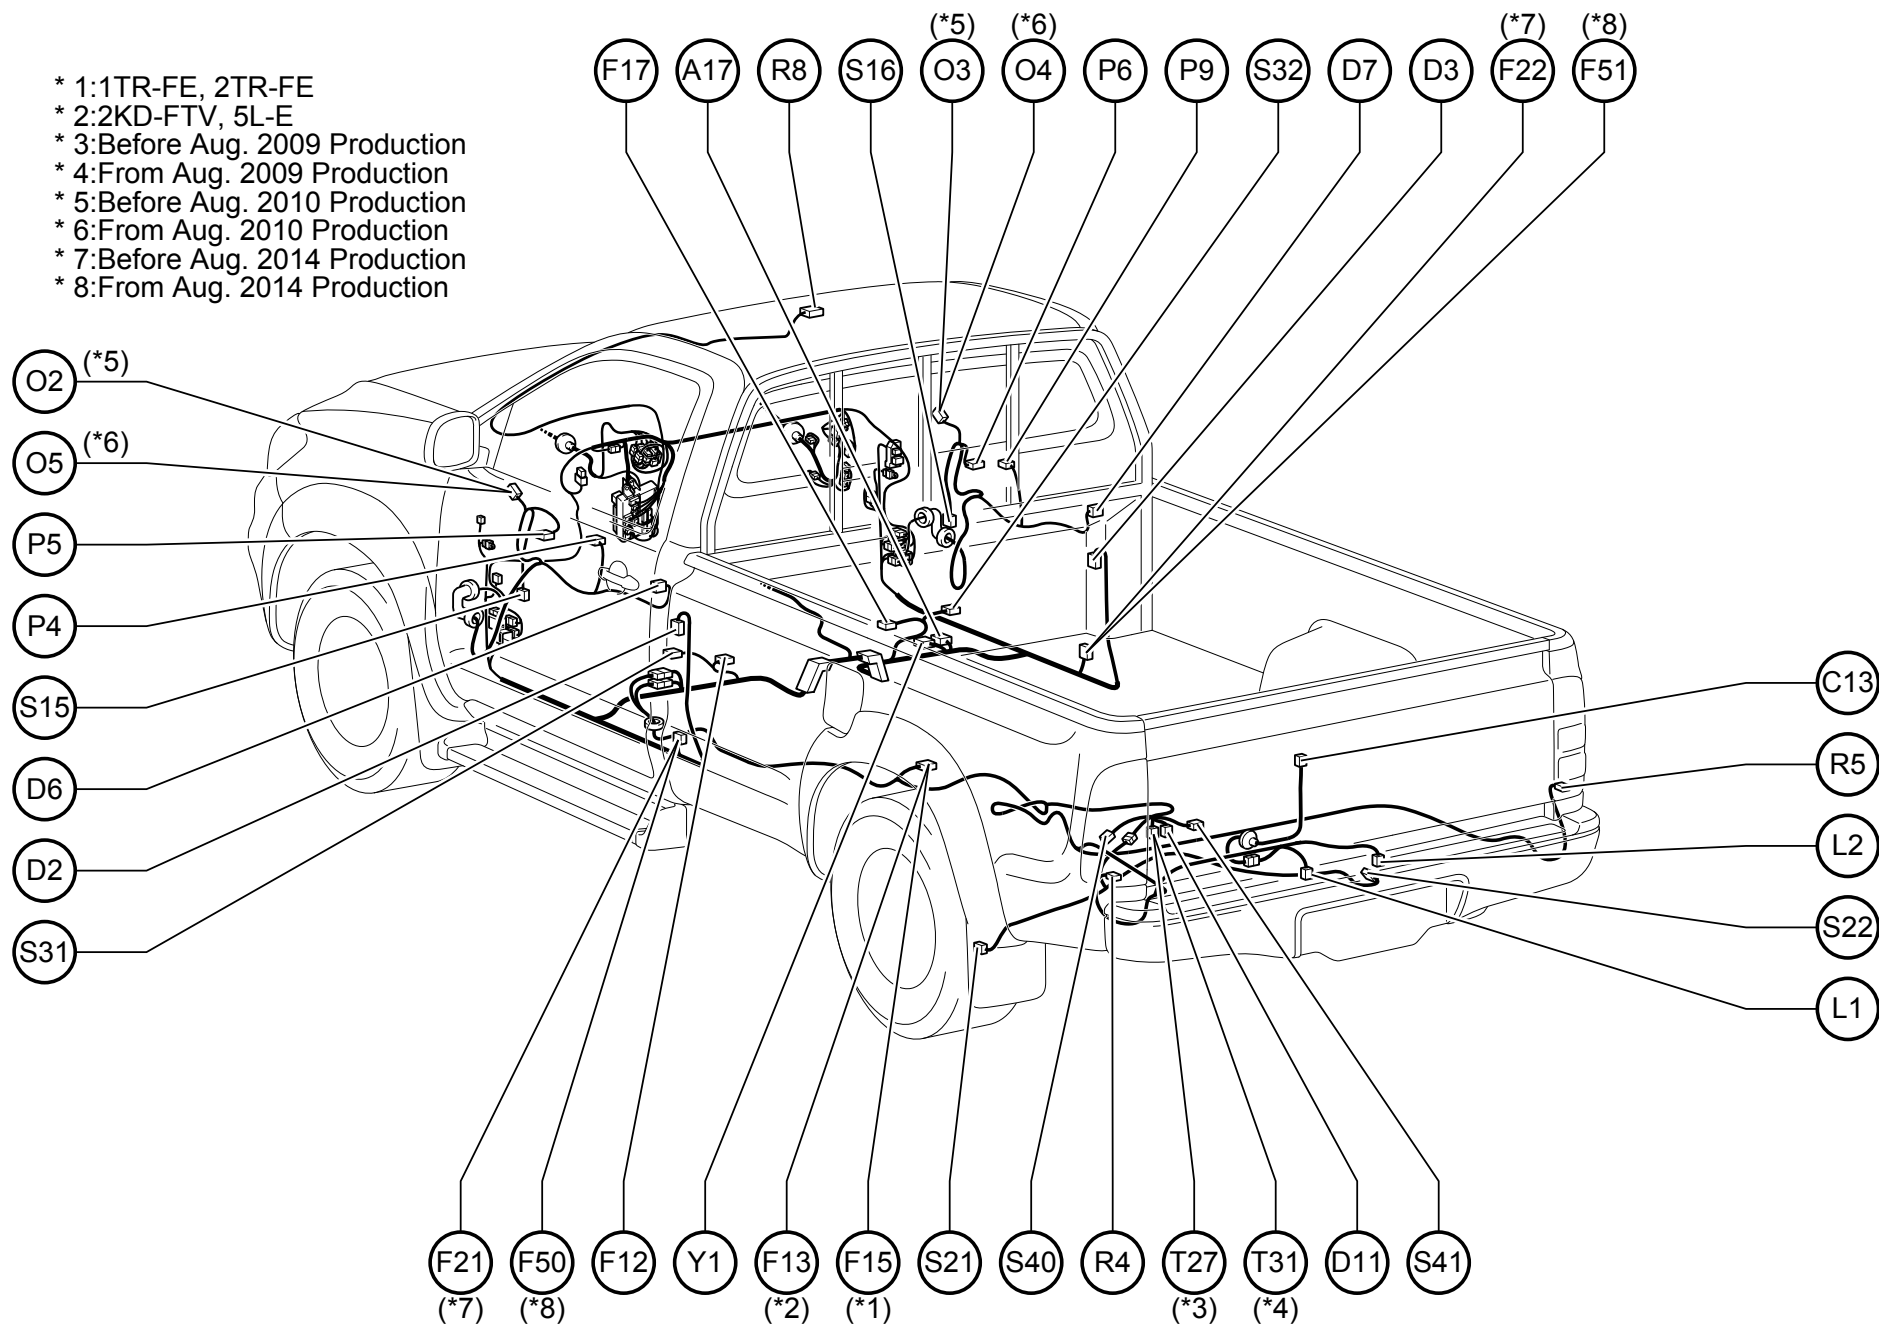

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)

- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 8 Room Lamp

- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 31 Seat Heater (LH)
- S 32 Seat Heater (RH)
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)




- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)

- Y 1 Yaw Rate Sensor Assembly

Position of Parts in Body <LHD Single Cab>

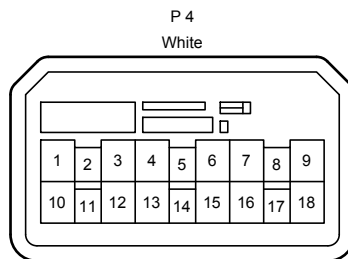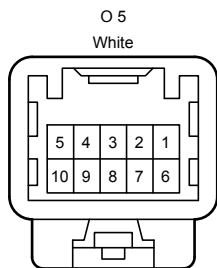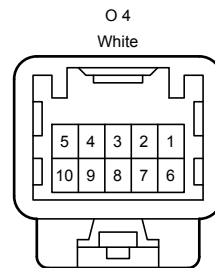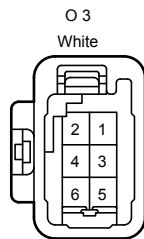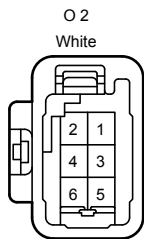
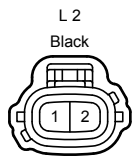
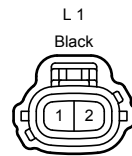


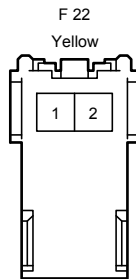
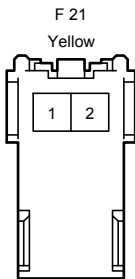
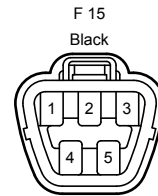
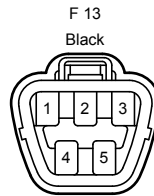
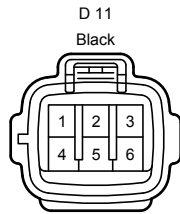
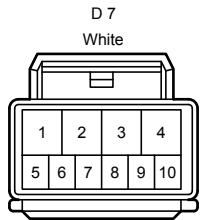
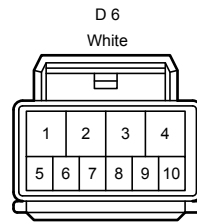
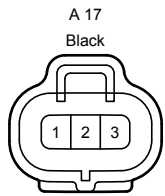


   
(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

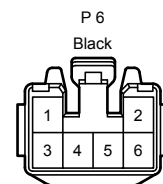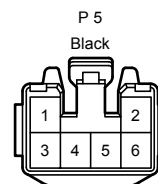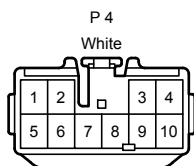


(Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

               
Position of Parts in Body <LHD Single Cab>

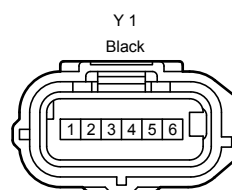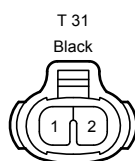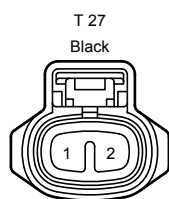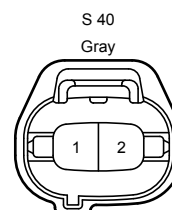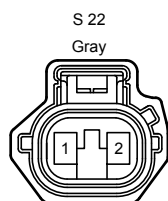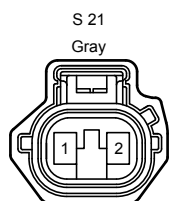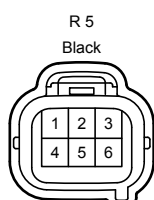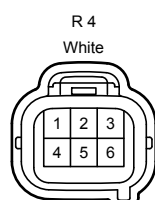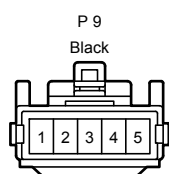

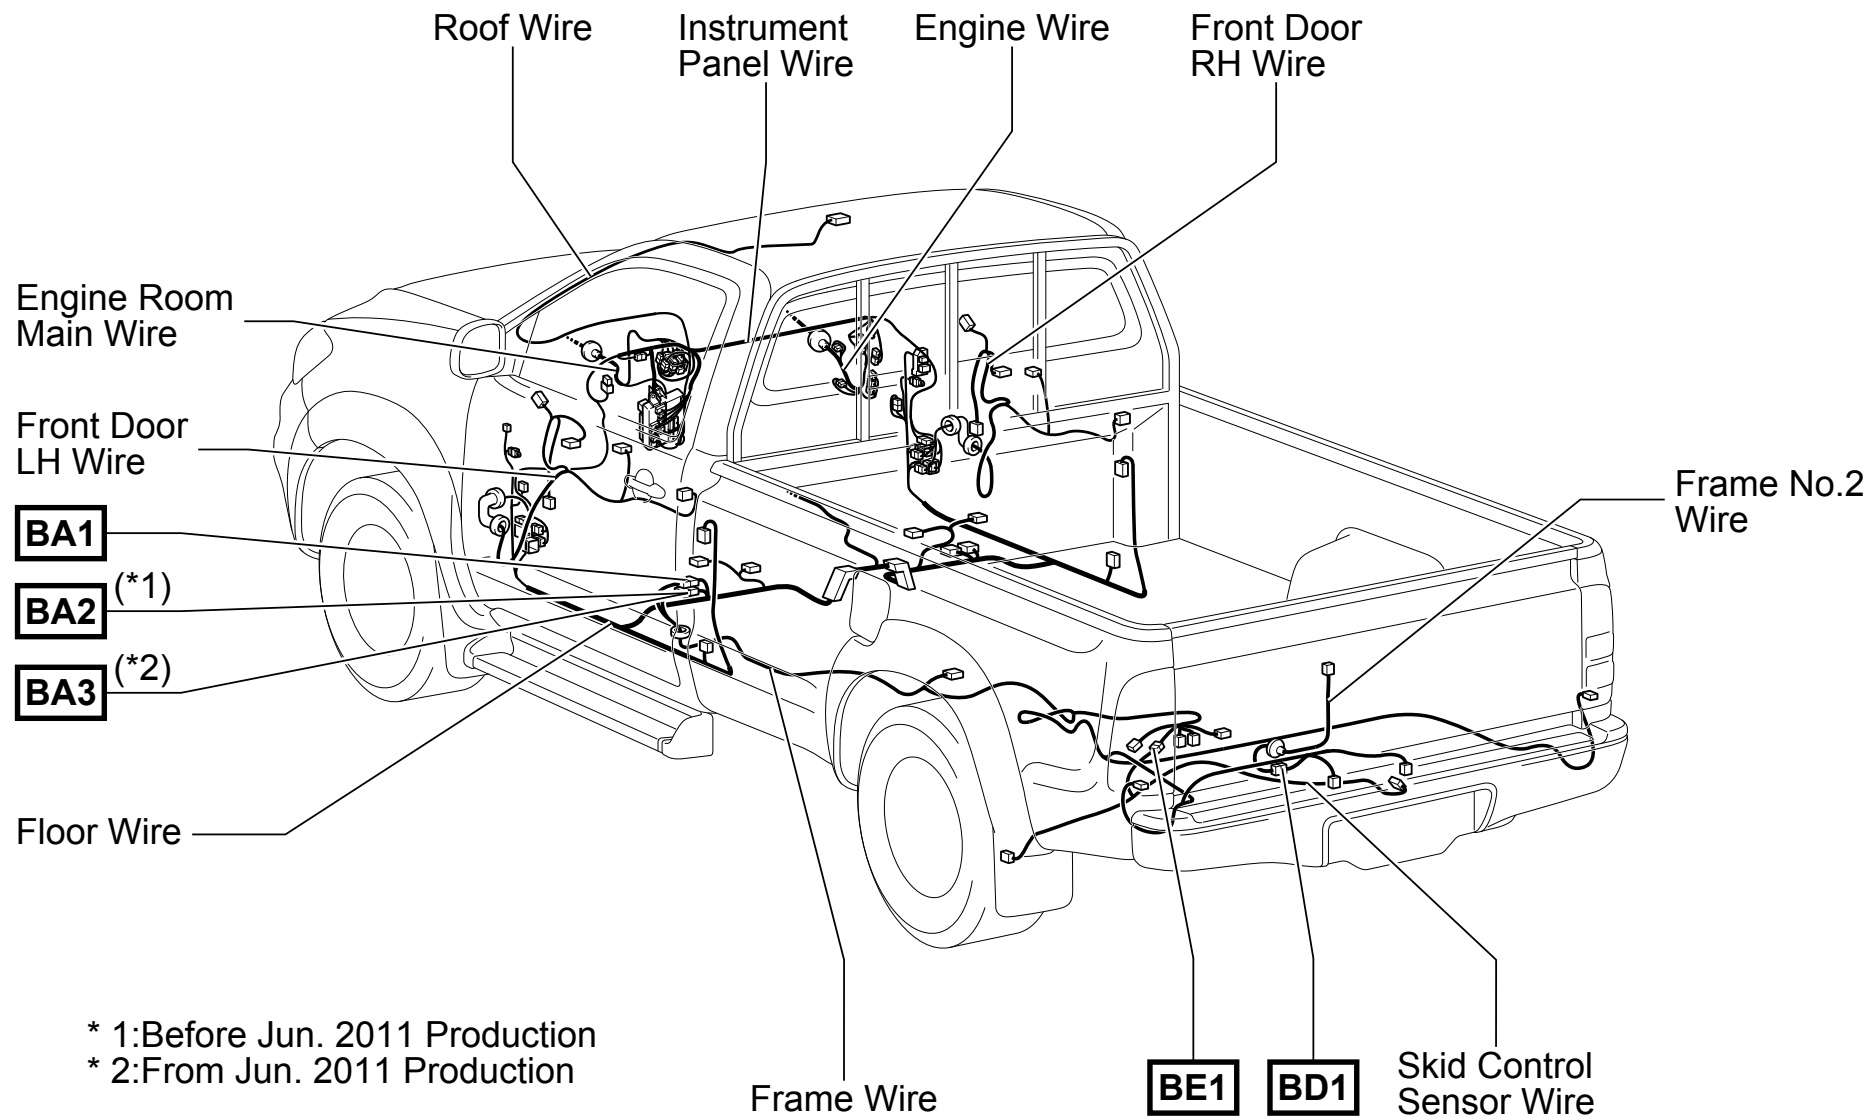

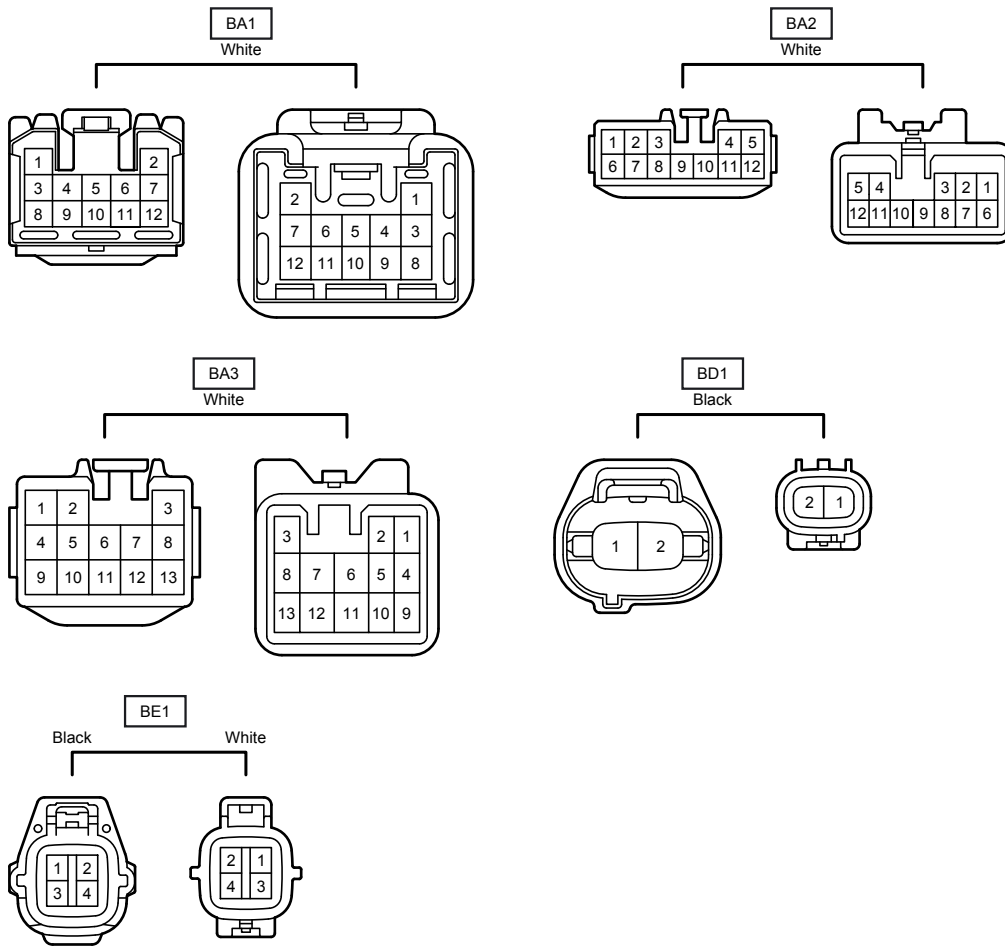

 - * 1:1TR-FE, 2TR-FE, 1GR-FE
- * 2:1KD-FTV, 2KD-FTV, 5L-E
- * 3:Before Aug. 2009 Production
- * 4:From Aug. 2009 Production
- * 5:Before Aug. 2010 Production
- * 6:From Aug. 2010 Production
- * 7:Before Aug. 2012 Production
- * 8:From Aug. 2012 Production
- * 9:Before Aug. 2014 Production
- * 10:From Aug. 2014 Production

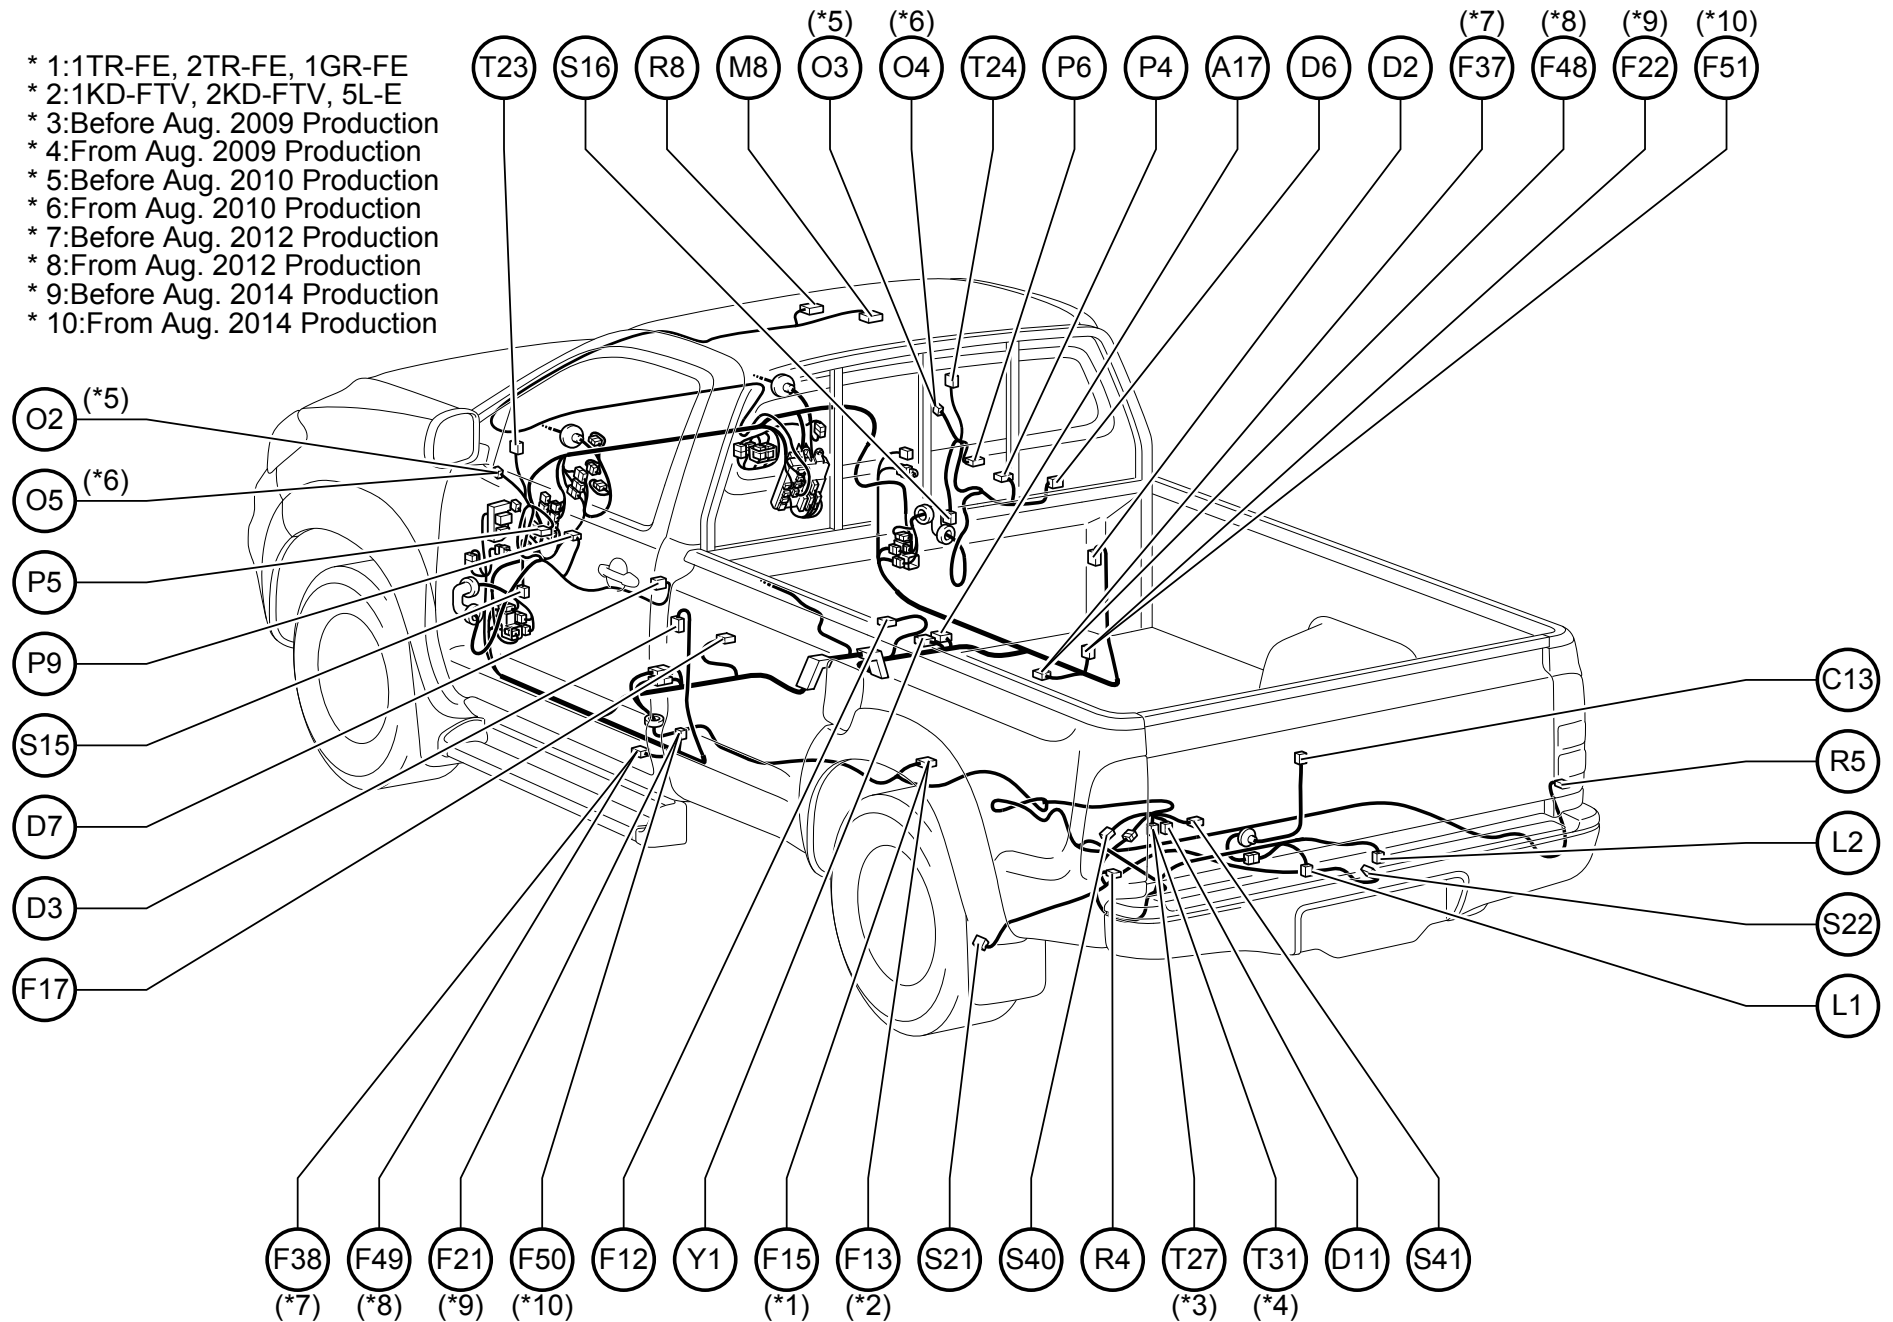

- A 17 ABS Deceleration Sensor

- C 13 Center Stop Lamp

- D 2 Door Courtesy SW (Driver's Side)
- D 3 Door Courtesy SW (Front Passenger's Side)
- D 6 Door Lock Assembly (Driver's Side)
- D 7 Door Lock Assembly (Front Passenger's Side)
- D 11 Diff. Lock Shift Actuator Assembly

- F 12 Front Seat Inner Belt (Driver's Side)
- F 13 Fuel Sender Gage
- F 15 Fuel Suction Pump and Gage Assembly
- F 17 Front Seat Inner Belt Assembly (Front Passenger's Side)
- F 21 Front Seat Outer Belt (LH)
- F 22 Front Seat Outer Belt (RH)
- F 37 Front Side Airbag Sensor RH
- F 38 Front Side Airbag Sensor LH
- F 48 Front Side Airbag Sensor RH
- F 49 Front Side Airbag Sensor LH
- F 50 Front Seat Outer Belt (LH)
- F 51 Front Seat Outer Belt (RH)

- L 1 License Plate Lamp LH
- L 2 License Plate Lamp RH

- M 8 Map Lamp

- O 2 Outer Rear View Mirror (LH)
- O 3 Outer Rear View Mirror (RH)
- O 4 Outer Rear View Mirror (RH)
- O 5 Outer Rear View Mirror (LH)

- P 4 Power Window Master SW
- P 5 Power Window Regulator Motor (Front LH)
- P 6 Power Window Regulator Motor (Front RH)
- P 9 Power Window SW (Front Passenger's Side)

 
- R 4 Rear Combination Lamp (LH)
- R 5 Rear Combination Lamp (RH)
- R 8 Room Lamp

- S 15 Speaker (Front Door LH)
- S 16 Speaker (Front Door RH)
- S 21 Speed Sensor (Rear LH)
- S 22 Speed Sensor (Rear RH)
- S 40 Speed Sensor (Rear LH)
- S 41 Speed Sensor (Rear RH)




- T 23 Tweeter (LH)
- T 24 Tweeter (RH)
- T 27 Transfer Indicator SW (Rear Diff. Lock Position)
- T 31 Transfer Indicator SW (Rear Diff. Lock Position)

- Y 1 Yaw Rate Sensor Assembly














Position of Parts in Body <RHD Single Cab>

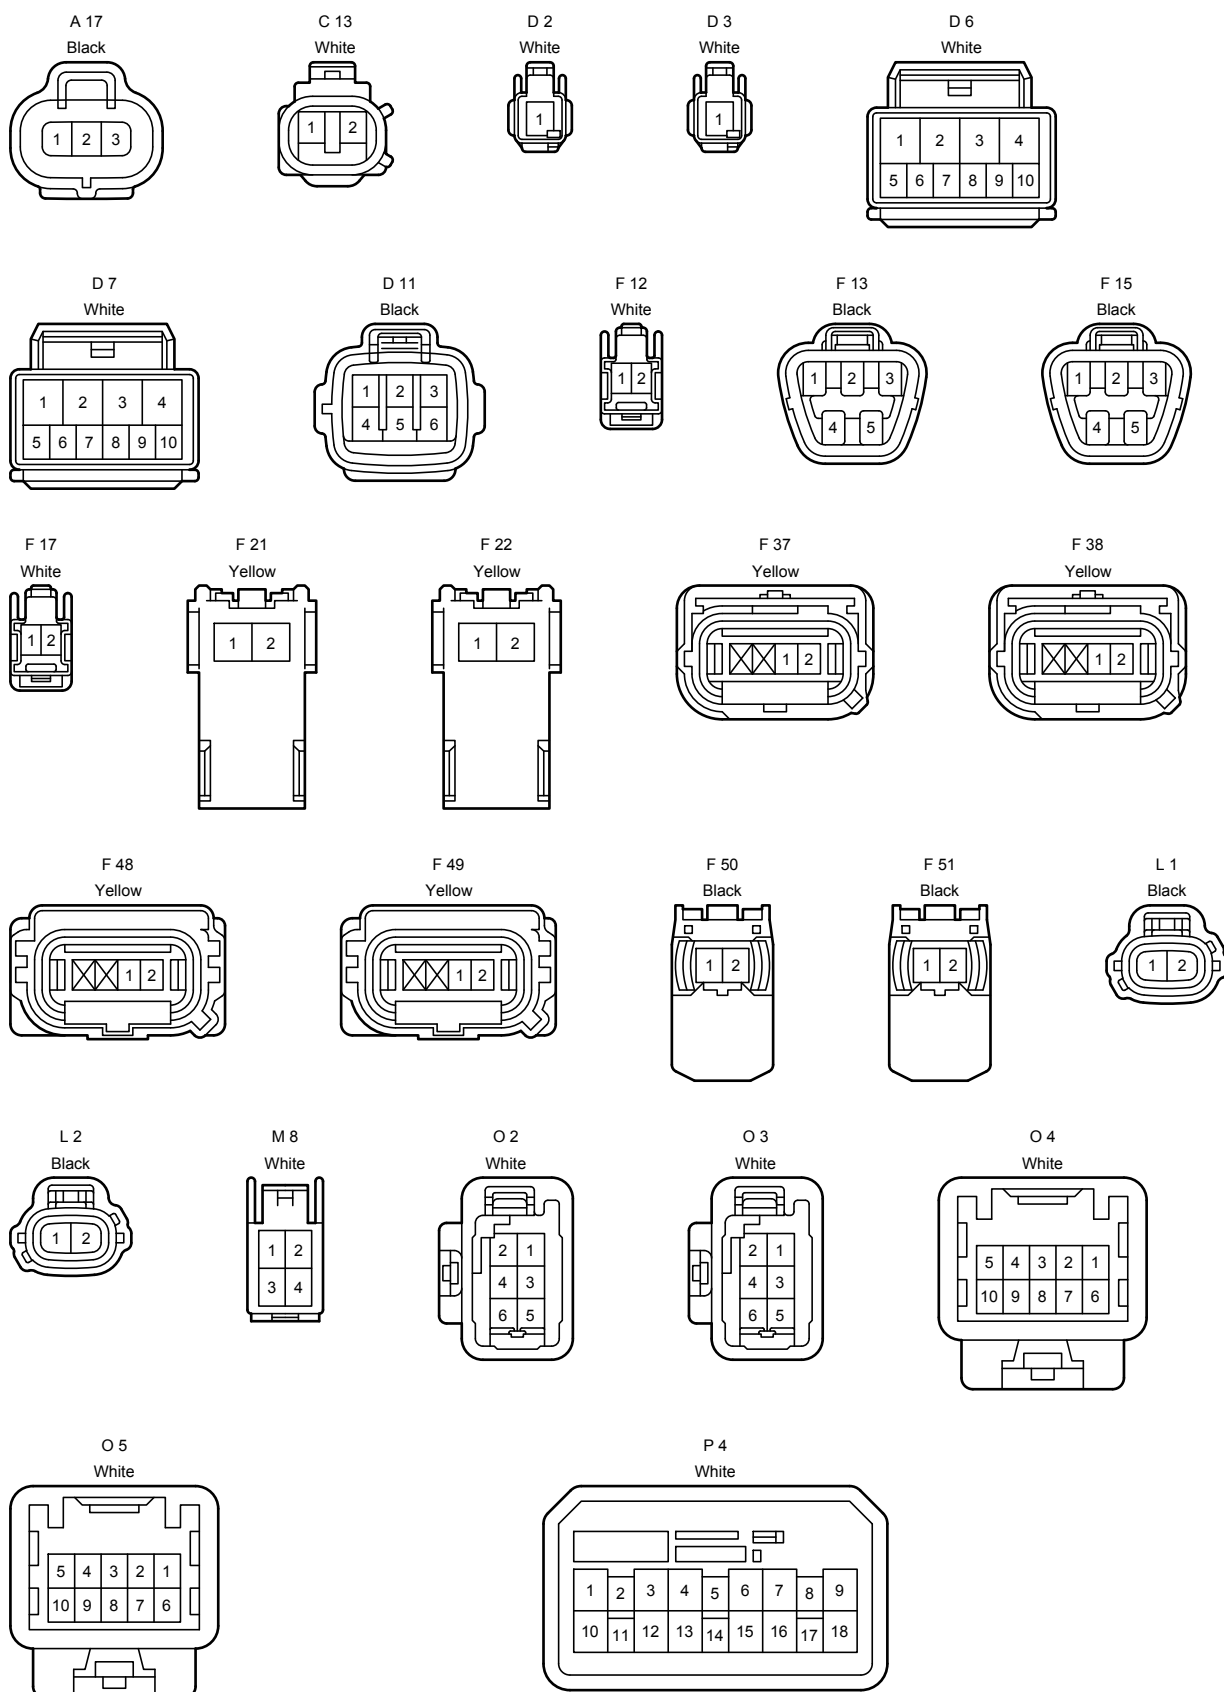


   
(Double Cab, Extra Cab w/ Driver's Window Jam Protection, Single Cab w/ Driver's Window Jam Protection)

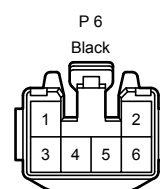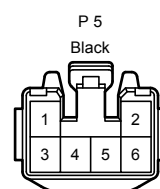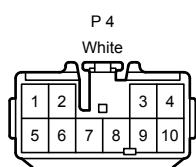


                 
(Single Cab w/o Driver's Window Jam Protection, Extra Cab w/o Driver's Window Jam Protection)

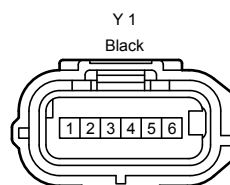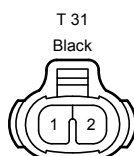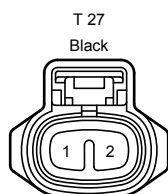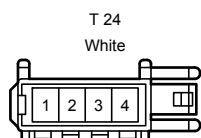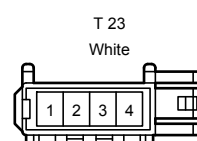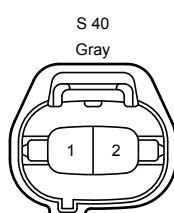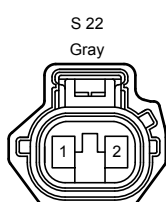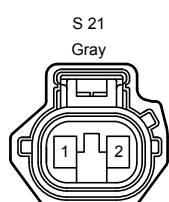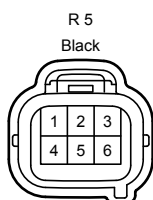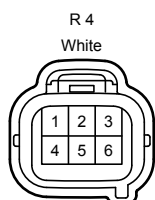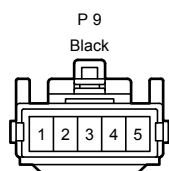

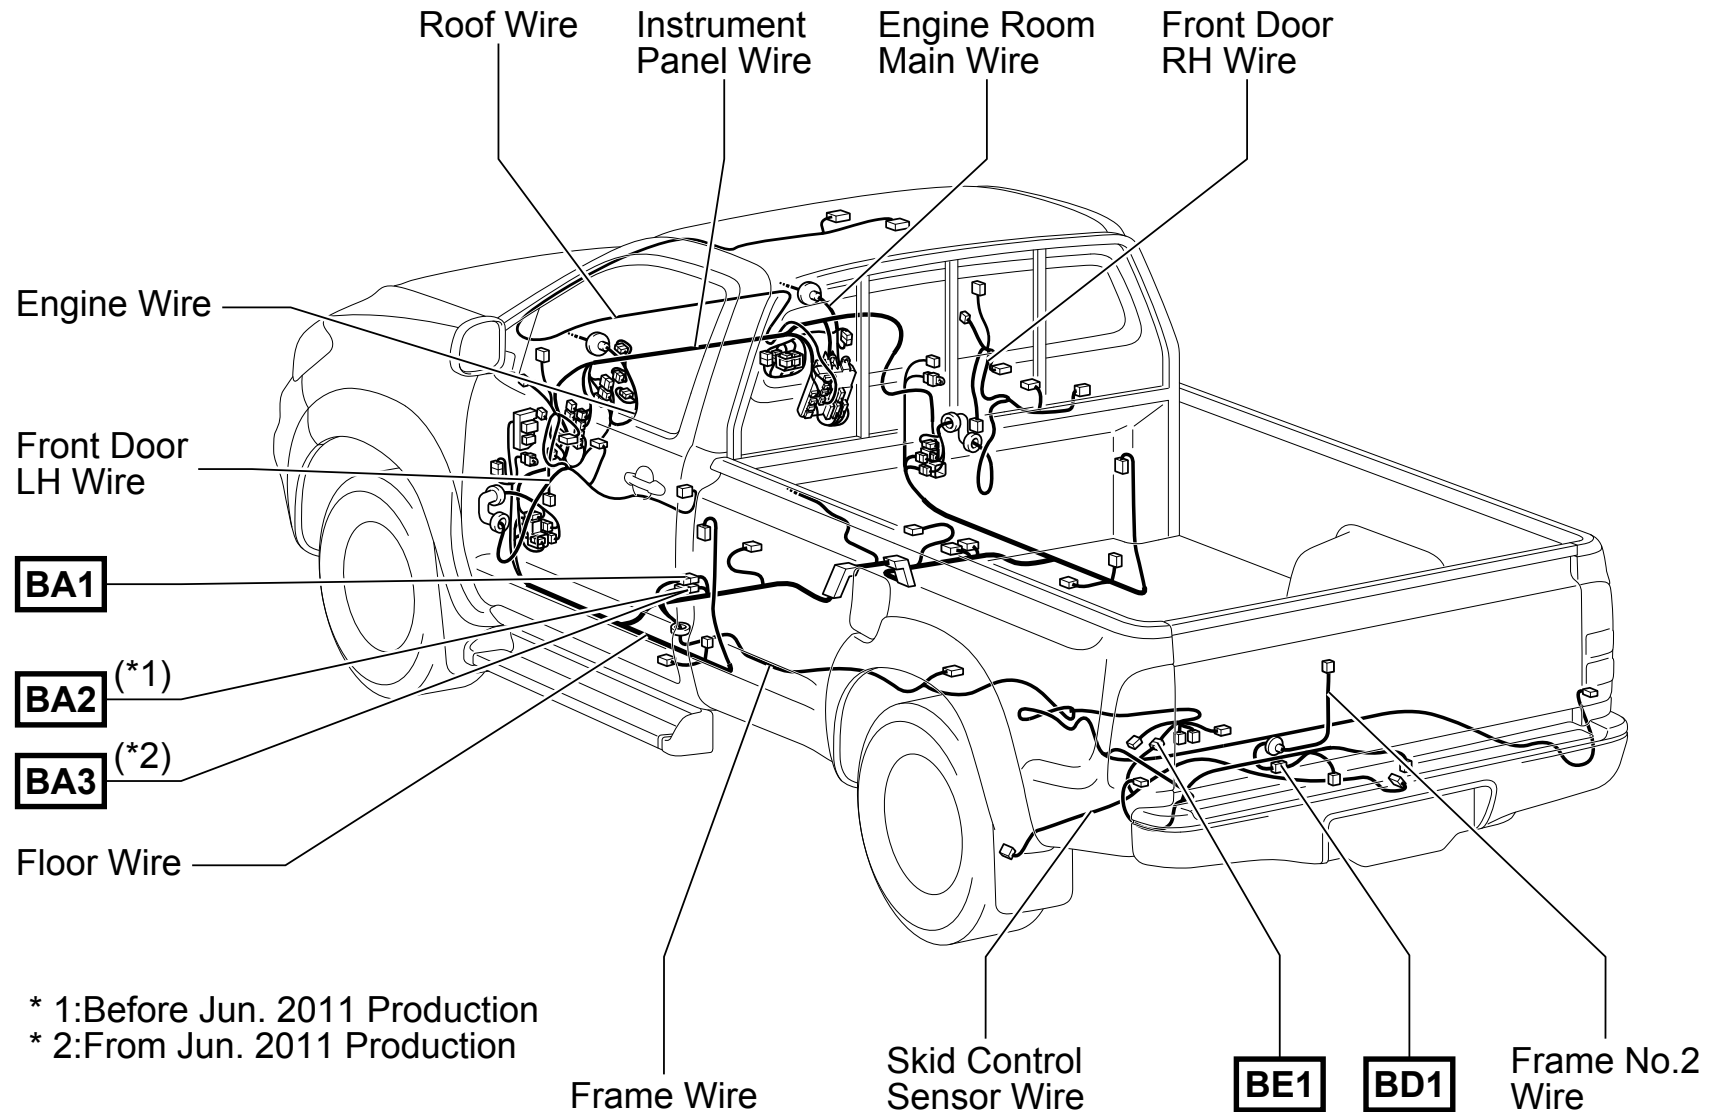

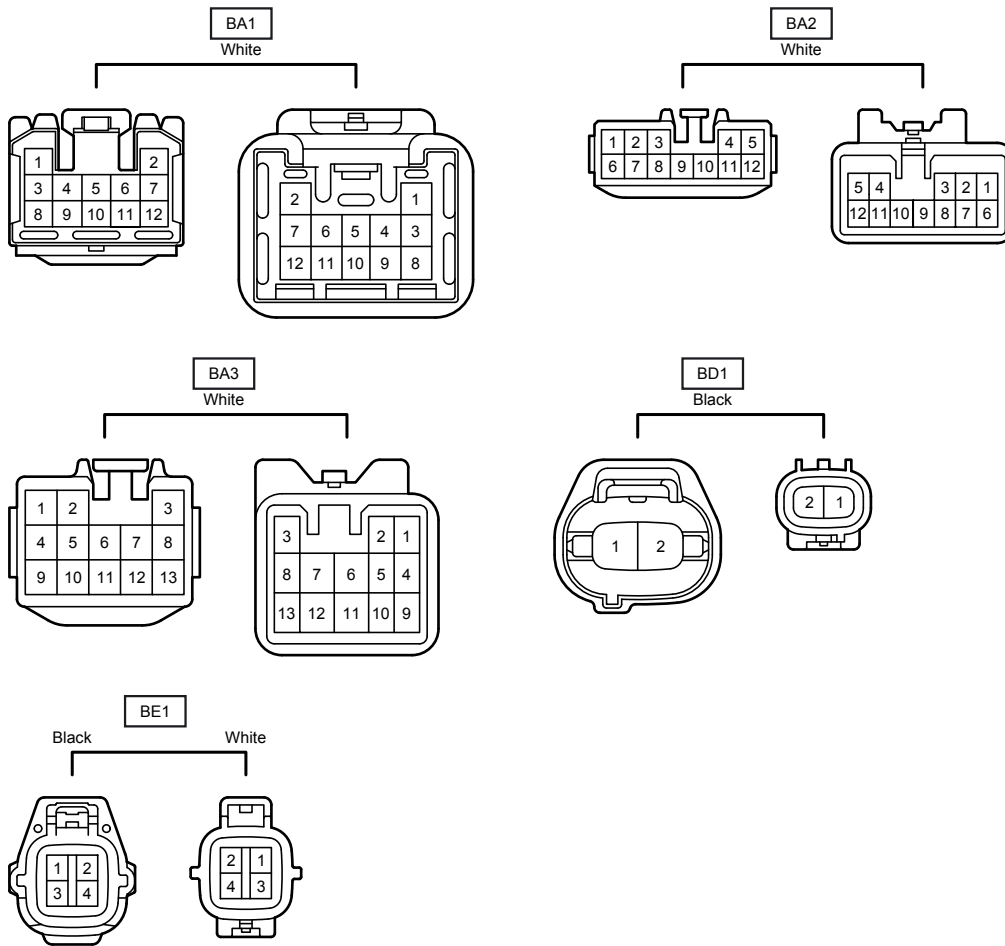


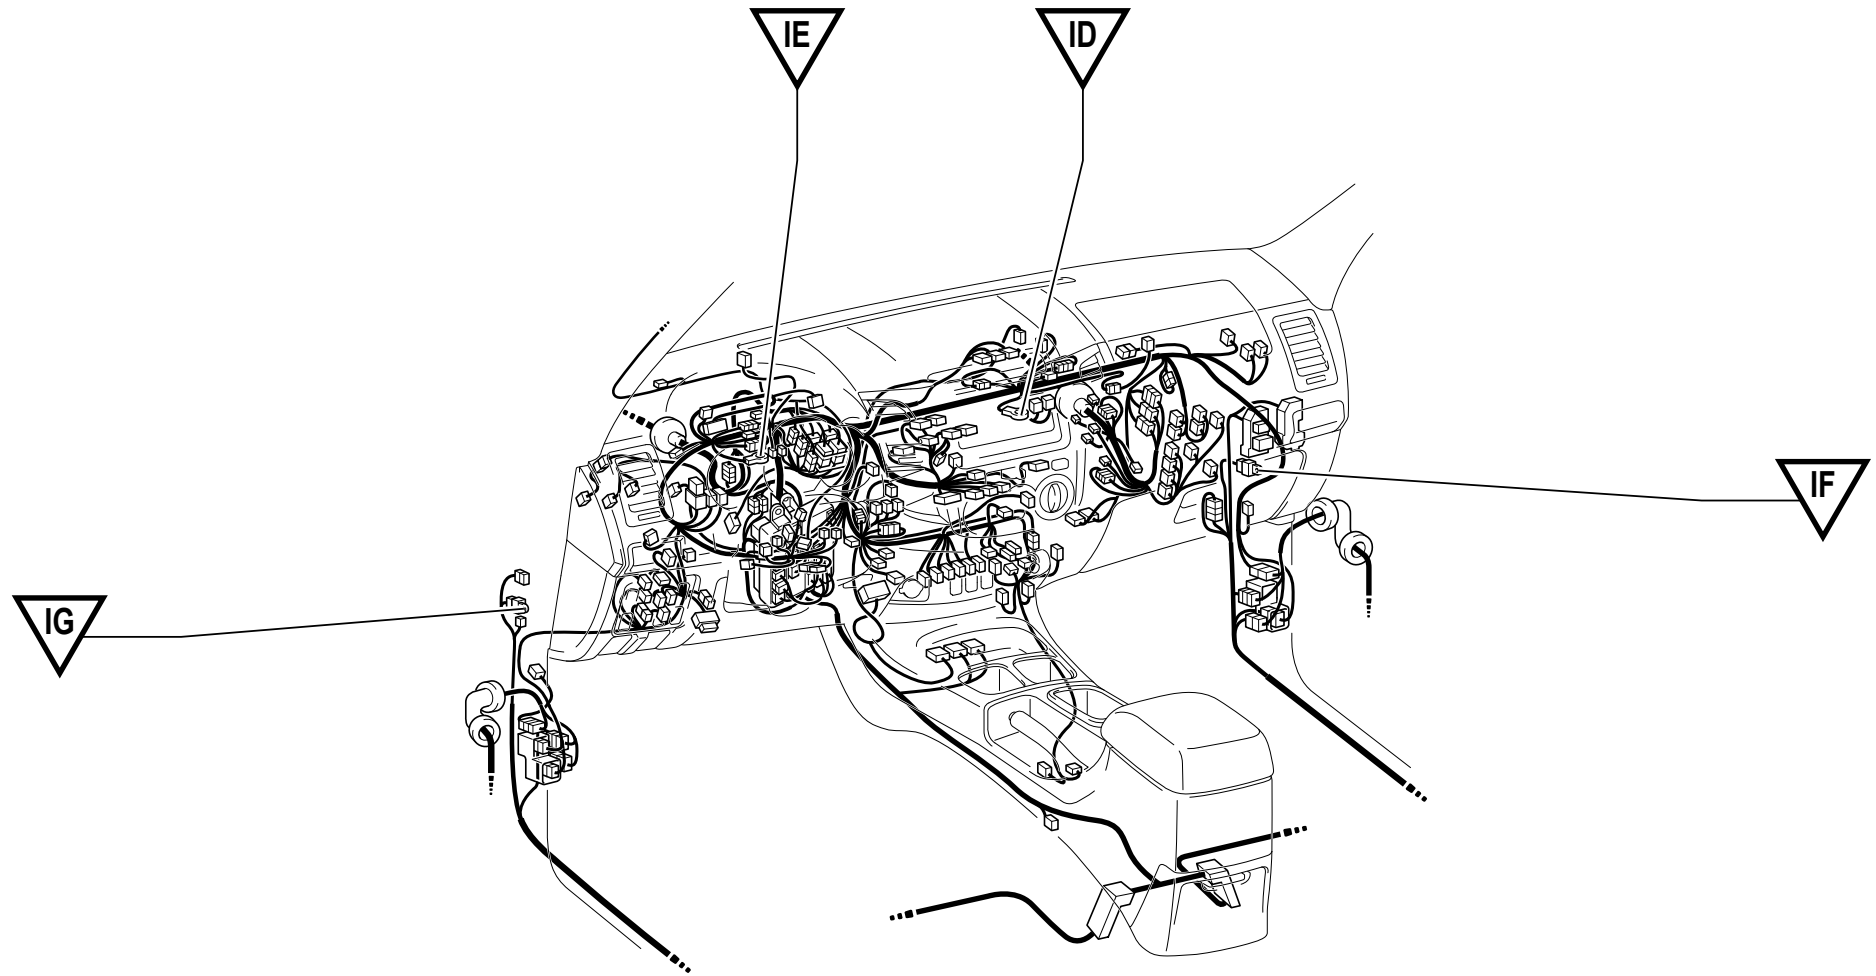

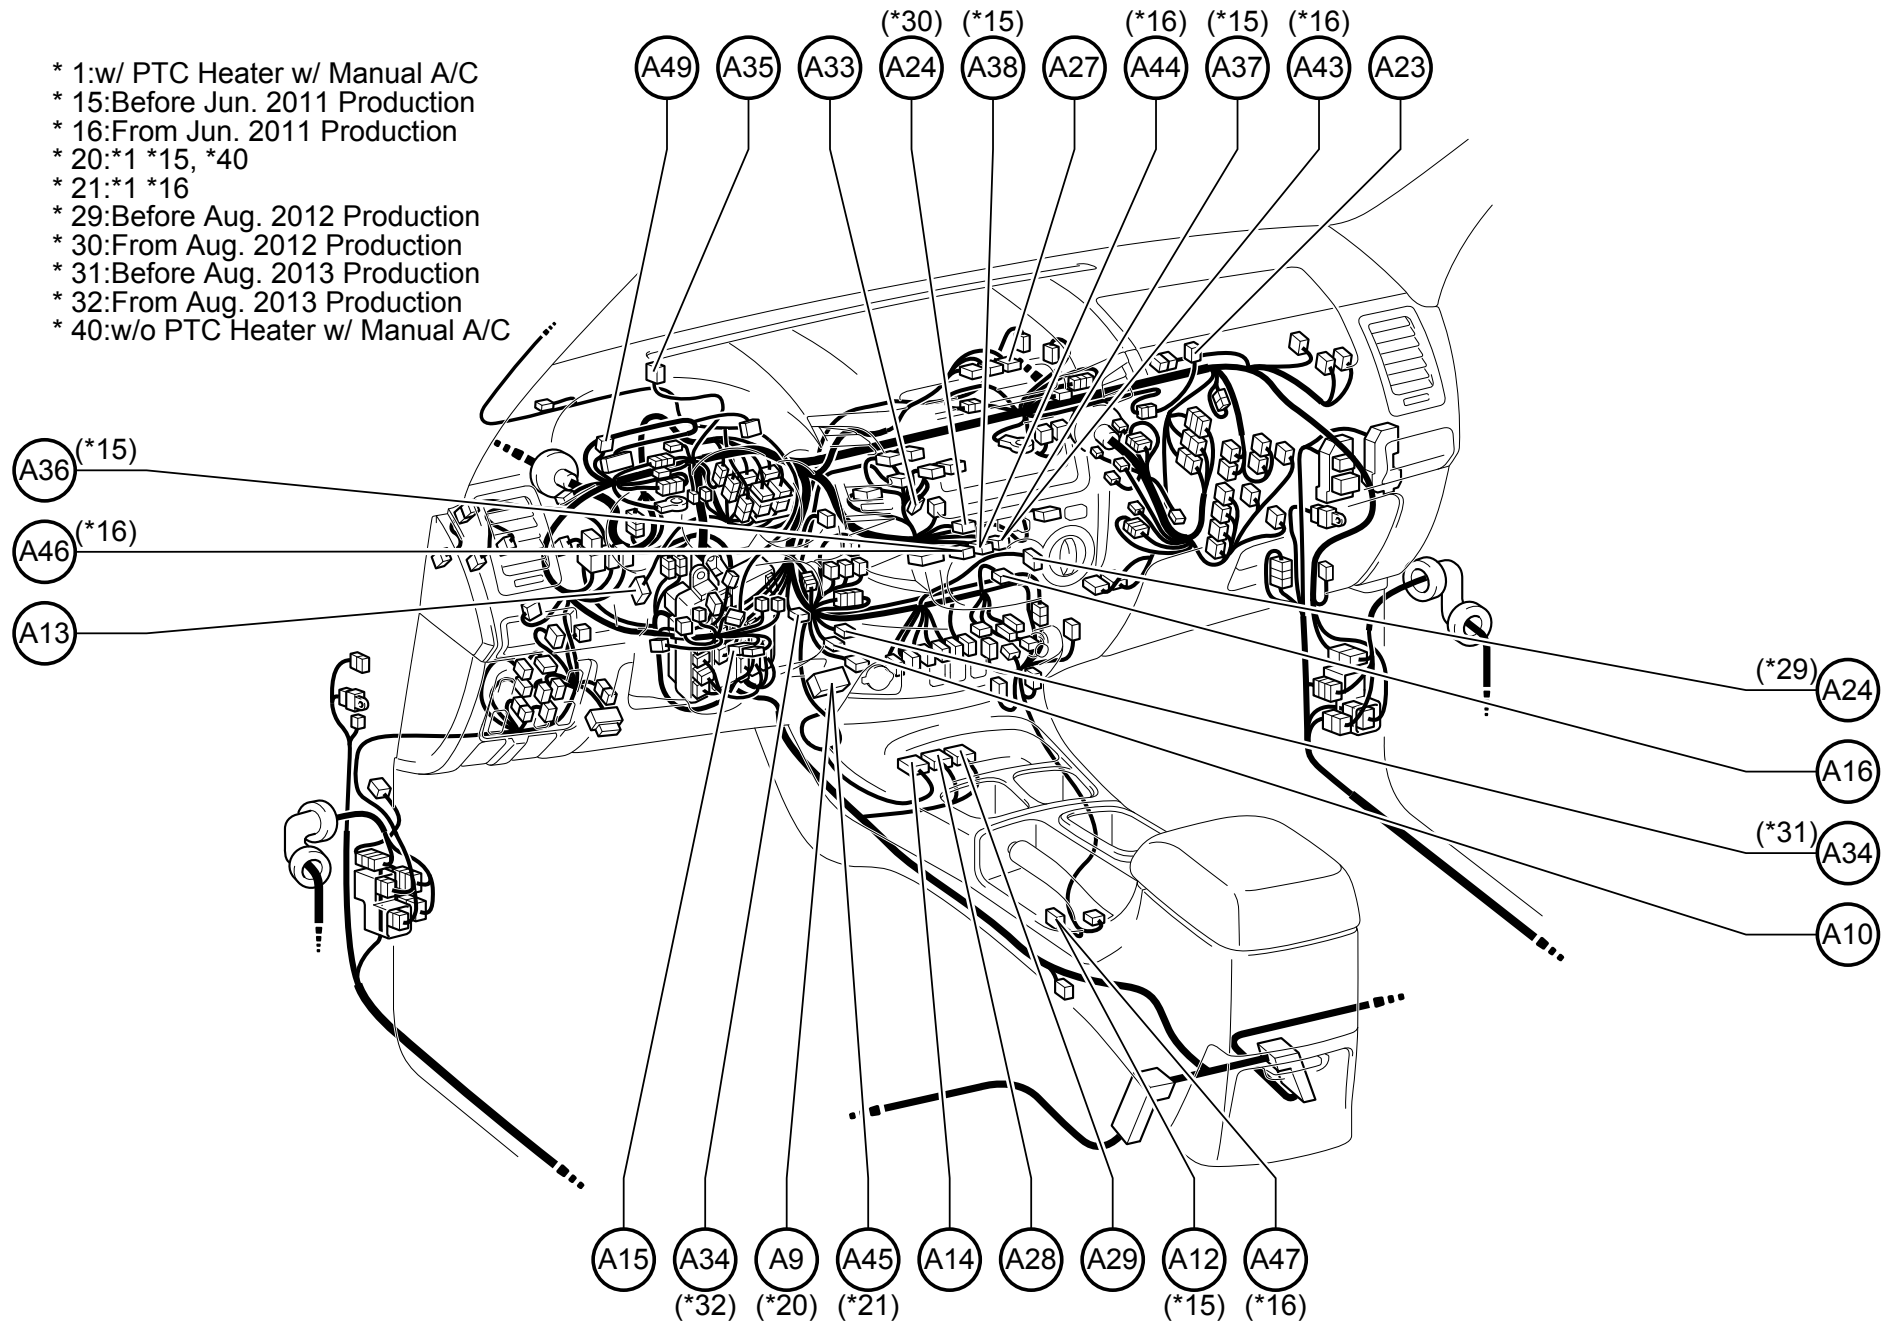


- A 9 A/C Amplifier
- A 10 A/C Thermistor
- A 12 A/T Shift Lever Illumination
- A 13 Accelerator Position Sensor
- A 14 Airbag Sensor Assembly Center
- A 15 Airbag Squib (Steering Wheel Pad)
- A 16 Ashtray Illumination
- A 23 Airbag Squib (Front Passenger's Airbag Assembly)
- A 24 A/C SW
- A 27 Accessory Meter
- A 28 Airbag Sensor Assembly Center
- A 29 Airbag Sensor Assembly Center
- A 33 Antenna Amplifier
- A 34 A/C Room Temp. Sensor
- A 35 A/C Solar Sensor
- A 36 A/C Control Assembly
- A 37 A/C Control Assembly
- A 38 A/C Control Assembly
- A 43 A/C Control Assembly
- A 44 A/C Control Assembly
- A 45 A/C Amplifier
- A 46 A/C Control Assembly
- A 47 A/T Shift Lever Illumination
- A 49 Automatic Light Control Sensor

 
Position of Parts in Instrument Panel <LHD>

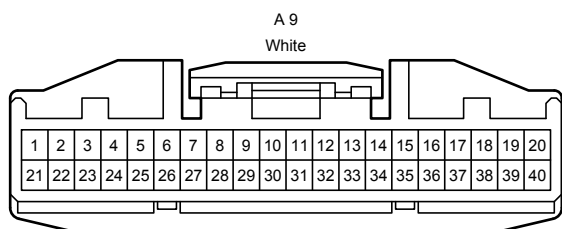














 
(Australia w/ PTC Heater Before Jun. 2011 Production, Europe Except Cold Area Spec. Before Jun. 2011 Production)







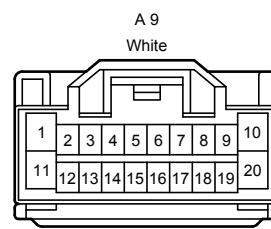


(w/o PTC Heater)

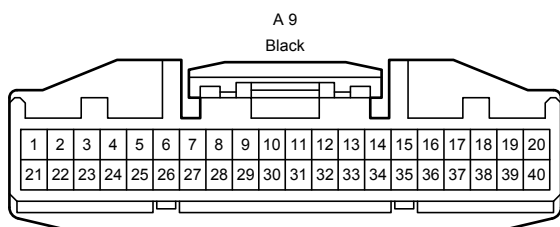 


                     (Cold Area Spec. Before Jun. 2011 Production)

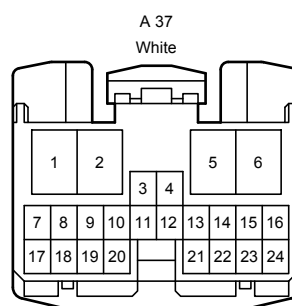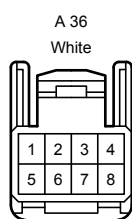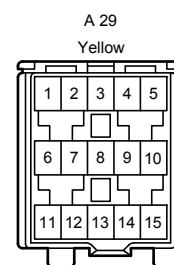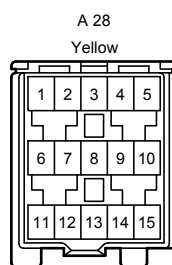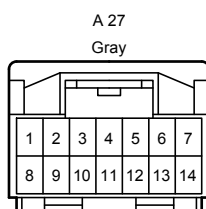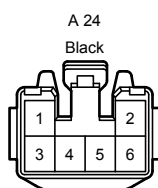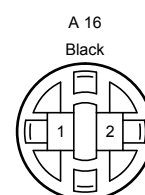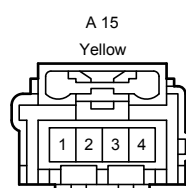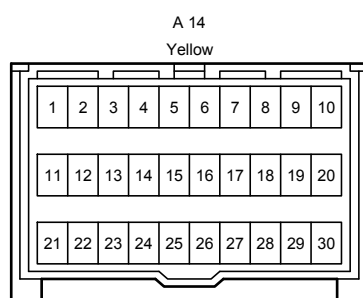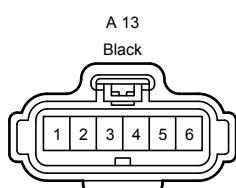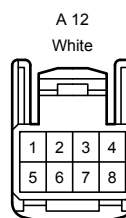

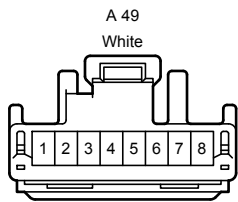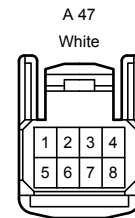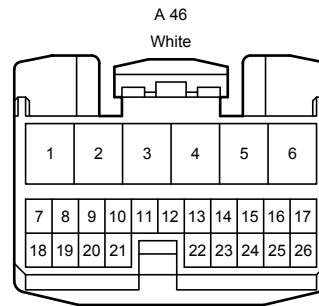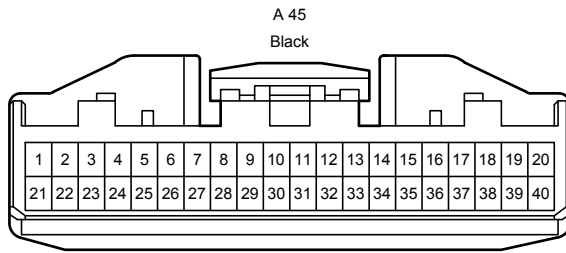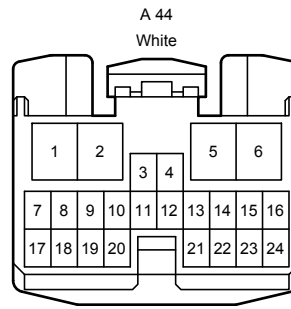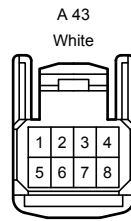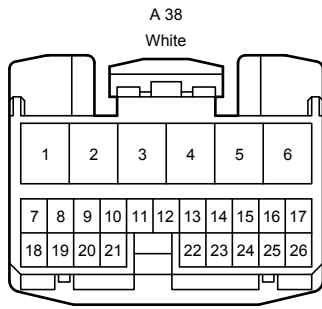




















 
- * 12:Before Aug. 2008 Production
- * 13:From Aug. 2008 Production
- * 15:Before Jun. 2011 Production
- * 16:From Jun. 2011 Production
- * 17:w/ Automatic Light Control System
- * 18:w/o Automatic Light Control System
- * 29:Before Aug. 2012 Production
- * 30:From Aug. 2012 Production

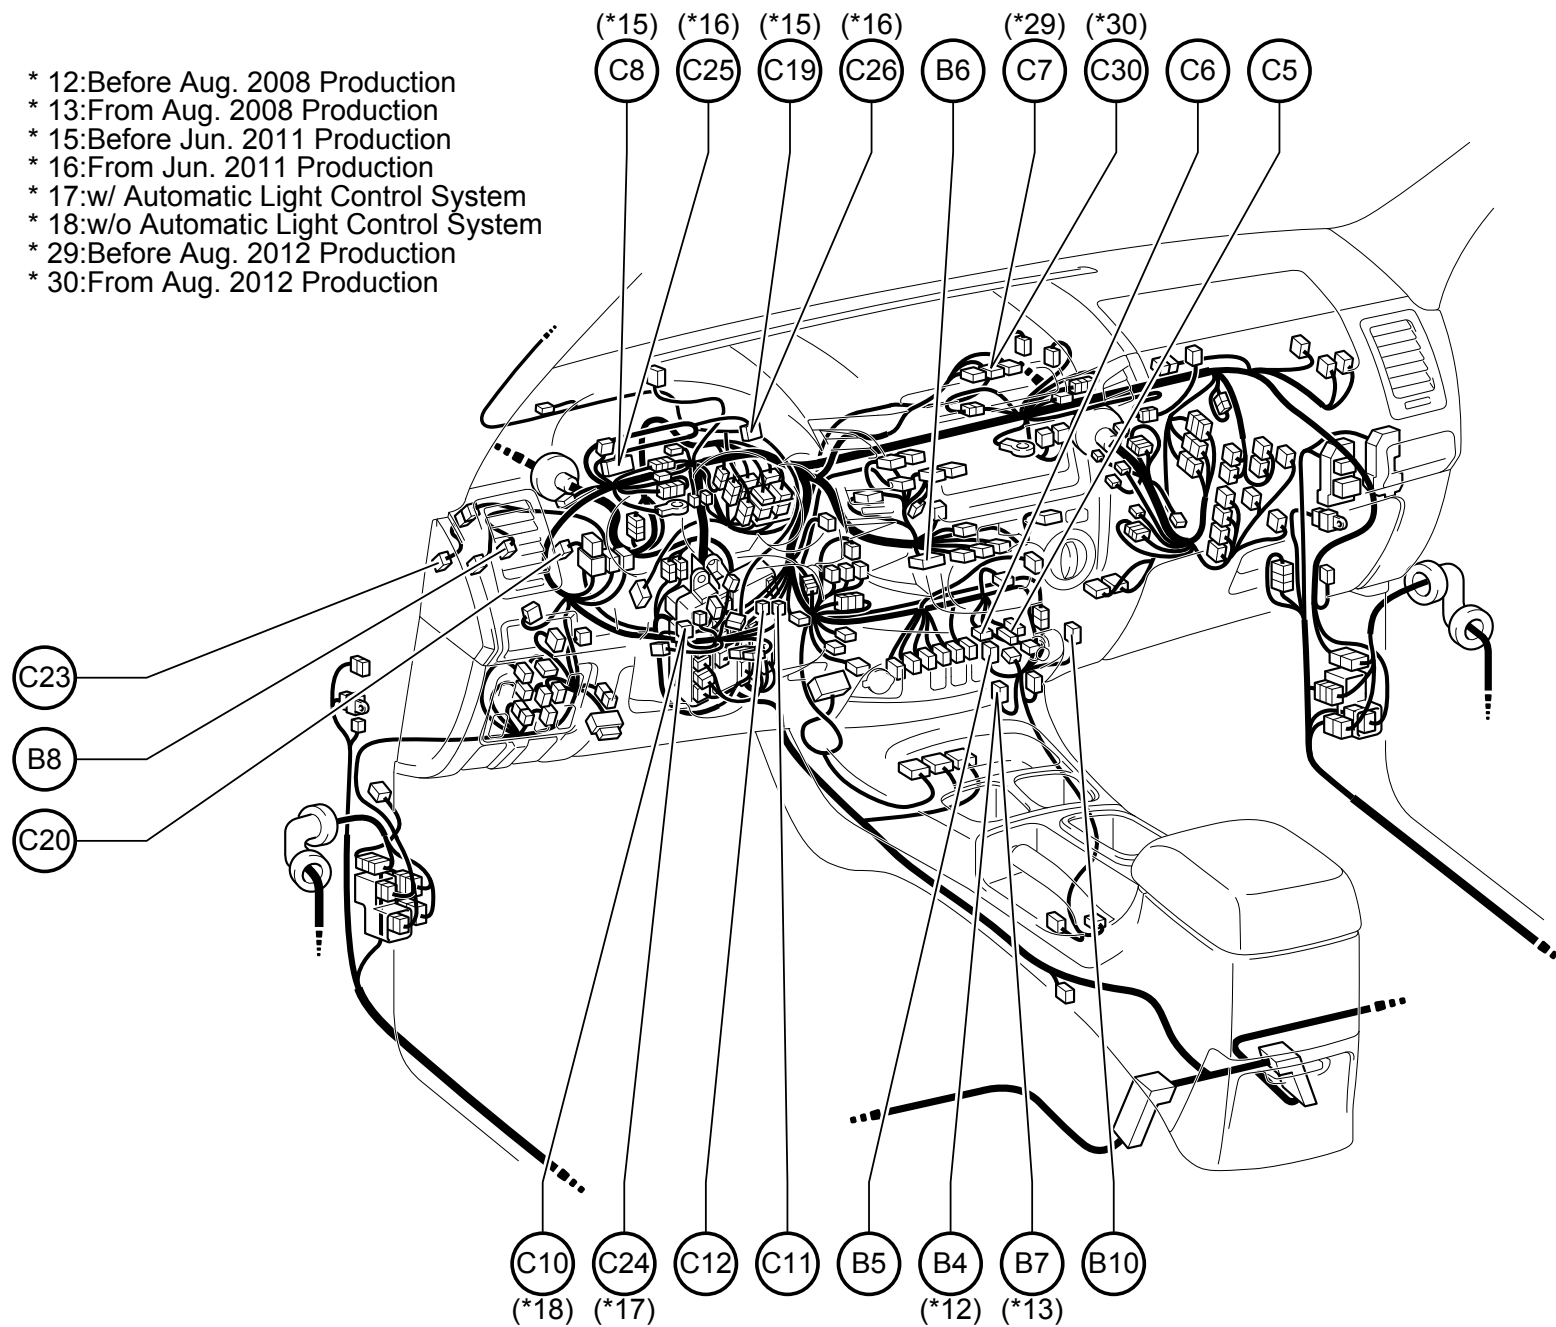

B 4 Blower Motor
B 5 Blower Resistor
B 6 Blower SW
B 7 Blower Motor
B 8 Brake Pedal Load Sensing Switch
B 10 Blower Motor Controller


C 5 Cigarette Lighter
C 6 Cigarette Lighter Illumination
C 7 Clock
C 8 Combination Meter
C 10 Combination SW
C 11 Combination SW
C 12 Combination SW
C 19 Combination Meter
C 20 Cruise Control Clutch Switch
C 23 Clutch Switch Assembly
C 24 Combination SW
C 25 Combination Meter
C 26 Combination Meter
C 30 Clock

                    Position of Parts in Instrument Panel <LHD>

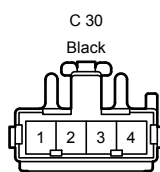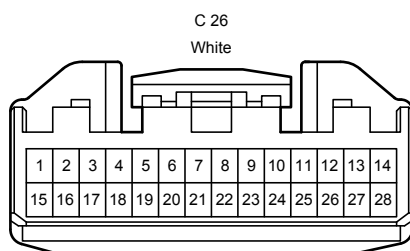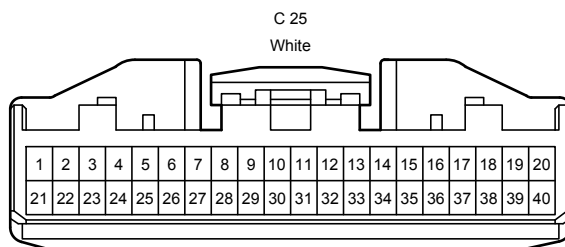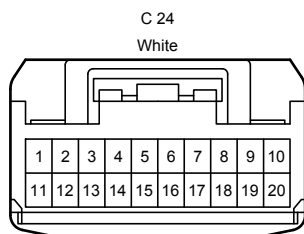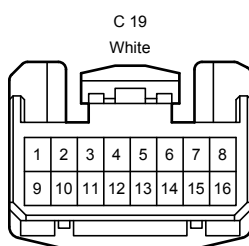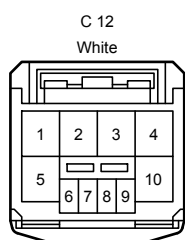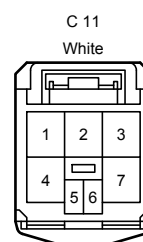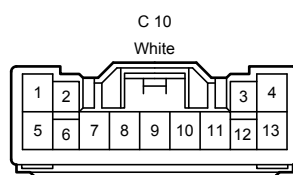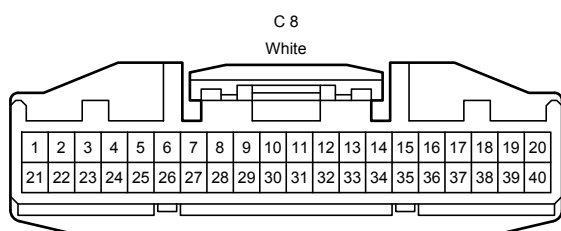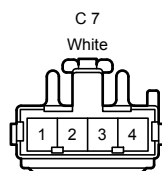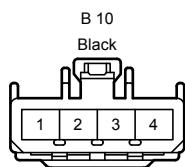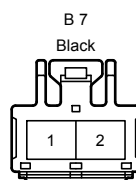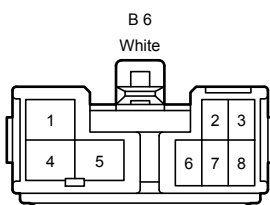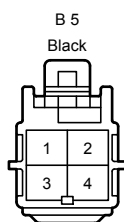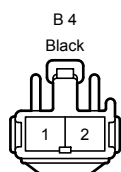












* 41:Except Ecuador From Aug. 2014 Production

 * 42:Ecuador From Aug. 2014 Production

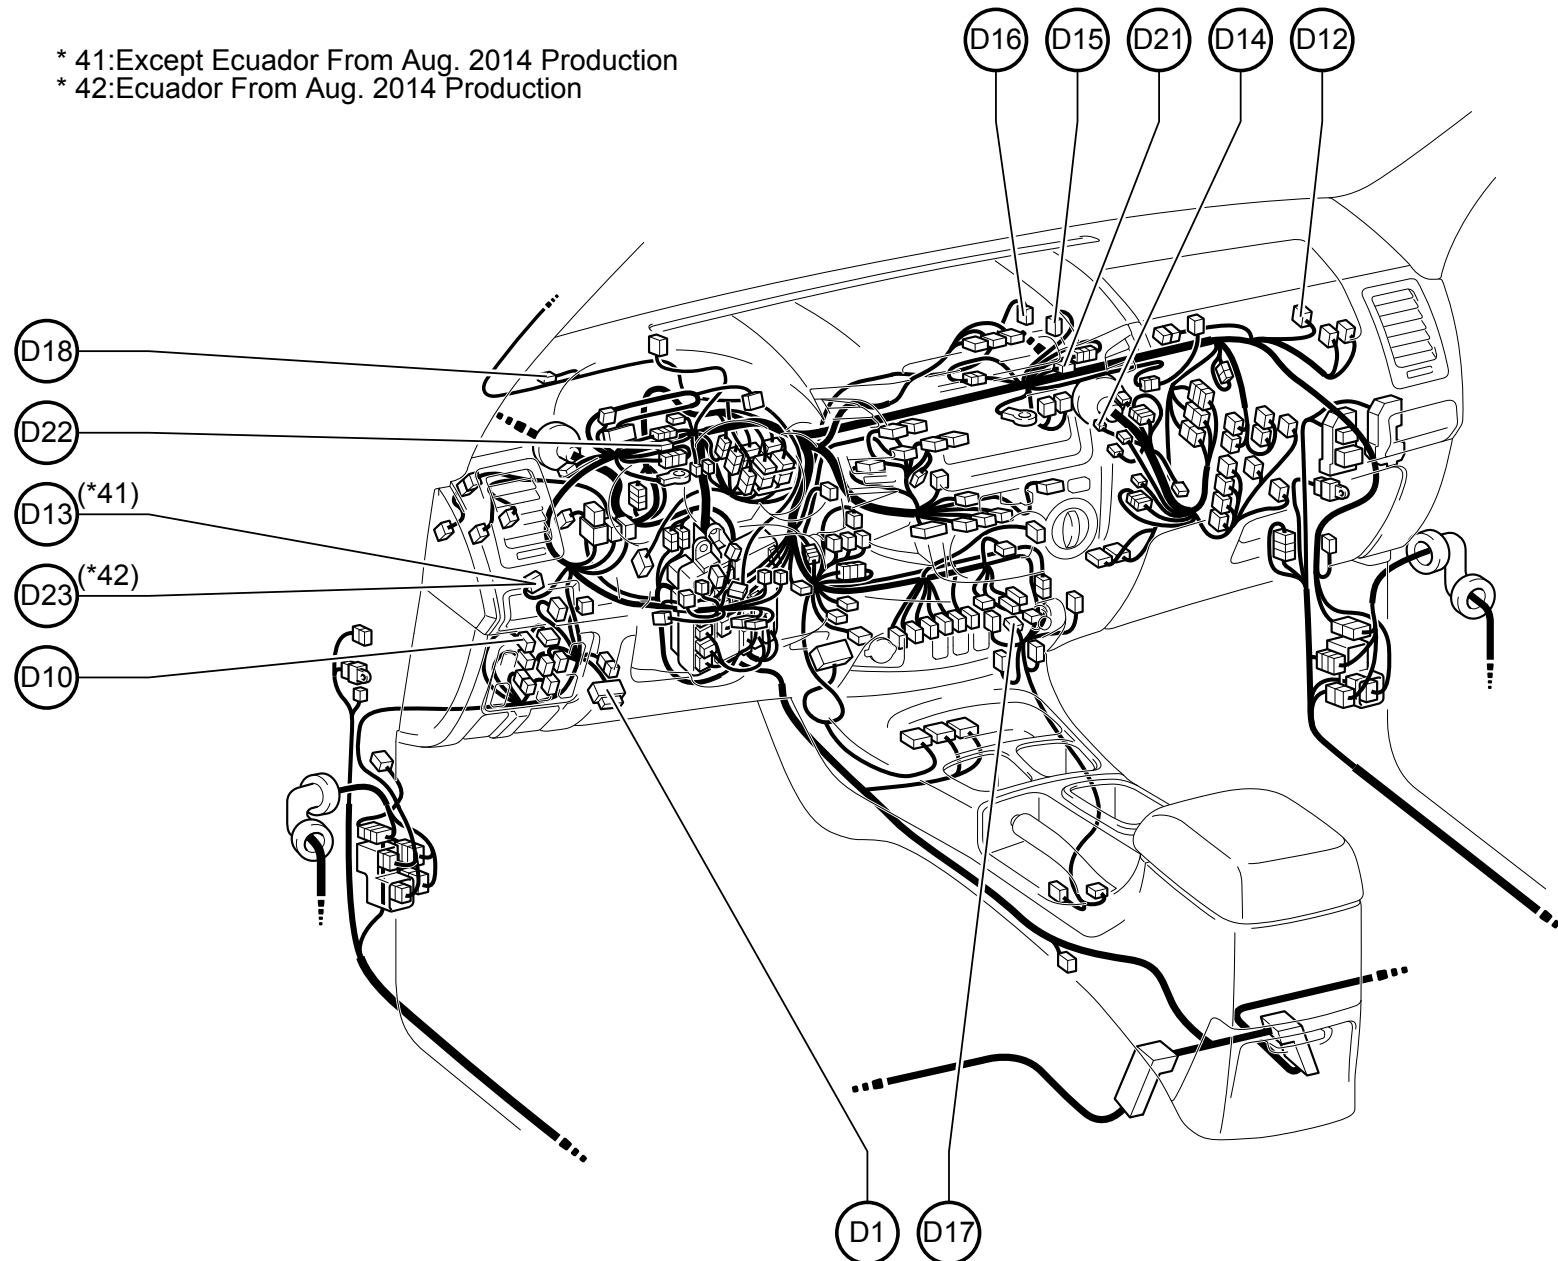


- D 1 DLC3
- D 10 Diff. Lock SW
- D 12 Door Control Receiver
- D 13 Daytime Running Light Relay
- D 14 Diode (for EGR No.2 Valve)
- D 15 Damper Servo Motor (Air Inlet)
- D 16 Damper Servo Motor (Air Vent Mode)
- D 17 Damper Servo Motor (Air Mix)
- D 18 Diode (Door Courtesy SW)
- D 21 Diode (Automatic Light Control Sensor)
- D 22 Diode (Magnet Clutch Relay)
- D 23 Daytime Running Light Relay

           Position of Parts in Instrument Panel <LHD>

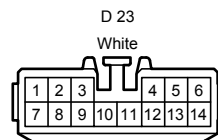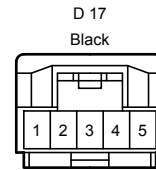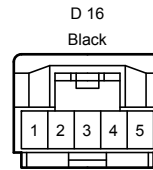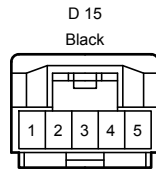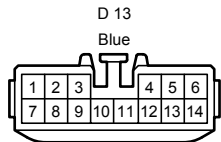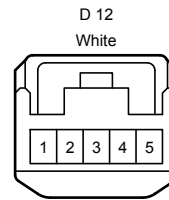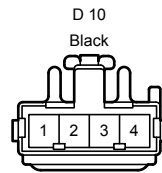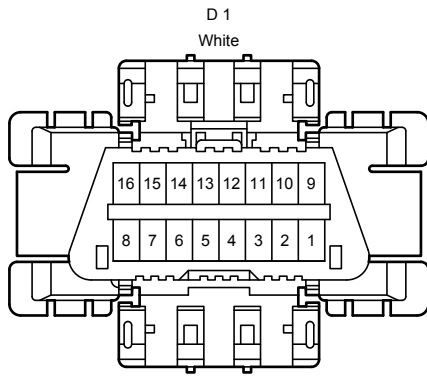

 - * 2:1TR-FE, 2TR-FE
- * 4:5L-E
- * 5:w/o Engine Immobiliser System
- * 6:w/ Rear Diff. Lock Control
- * 15:Before Jun. 2011 Production
- * 16:From Jun. 2011 Production
- * 26:1KD-FTV w/ DPF, 2KD-FTV w/ DPF
- * 27:1KD-FTV w/o DPF, 2KD-FTV w/o DPF

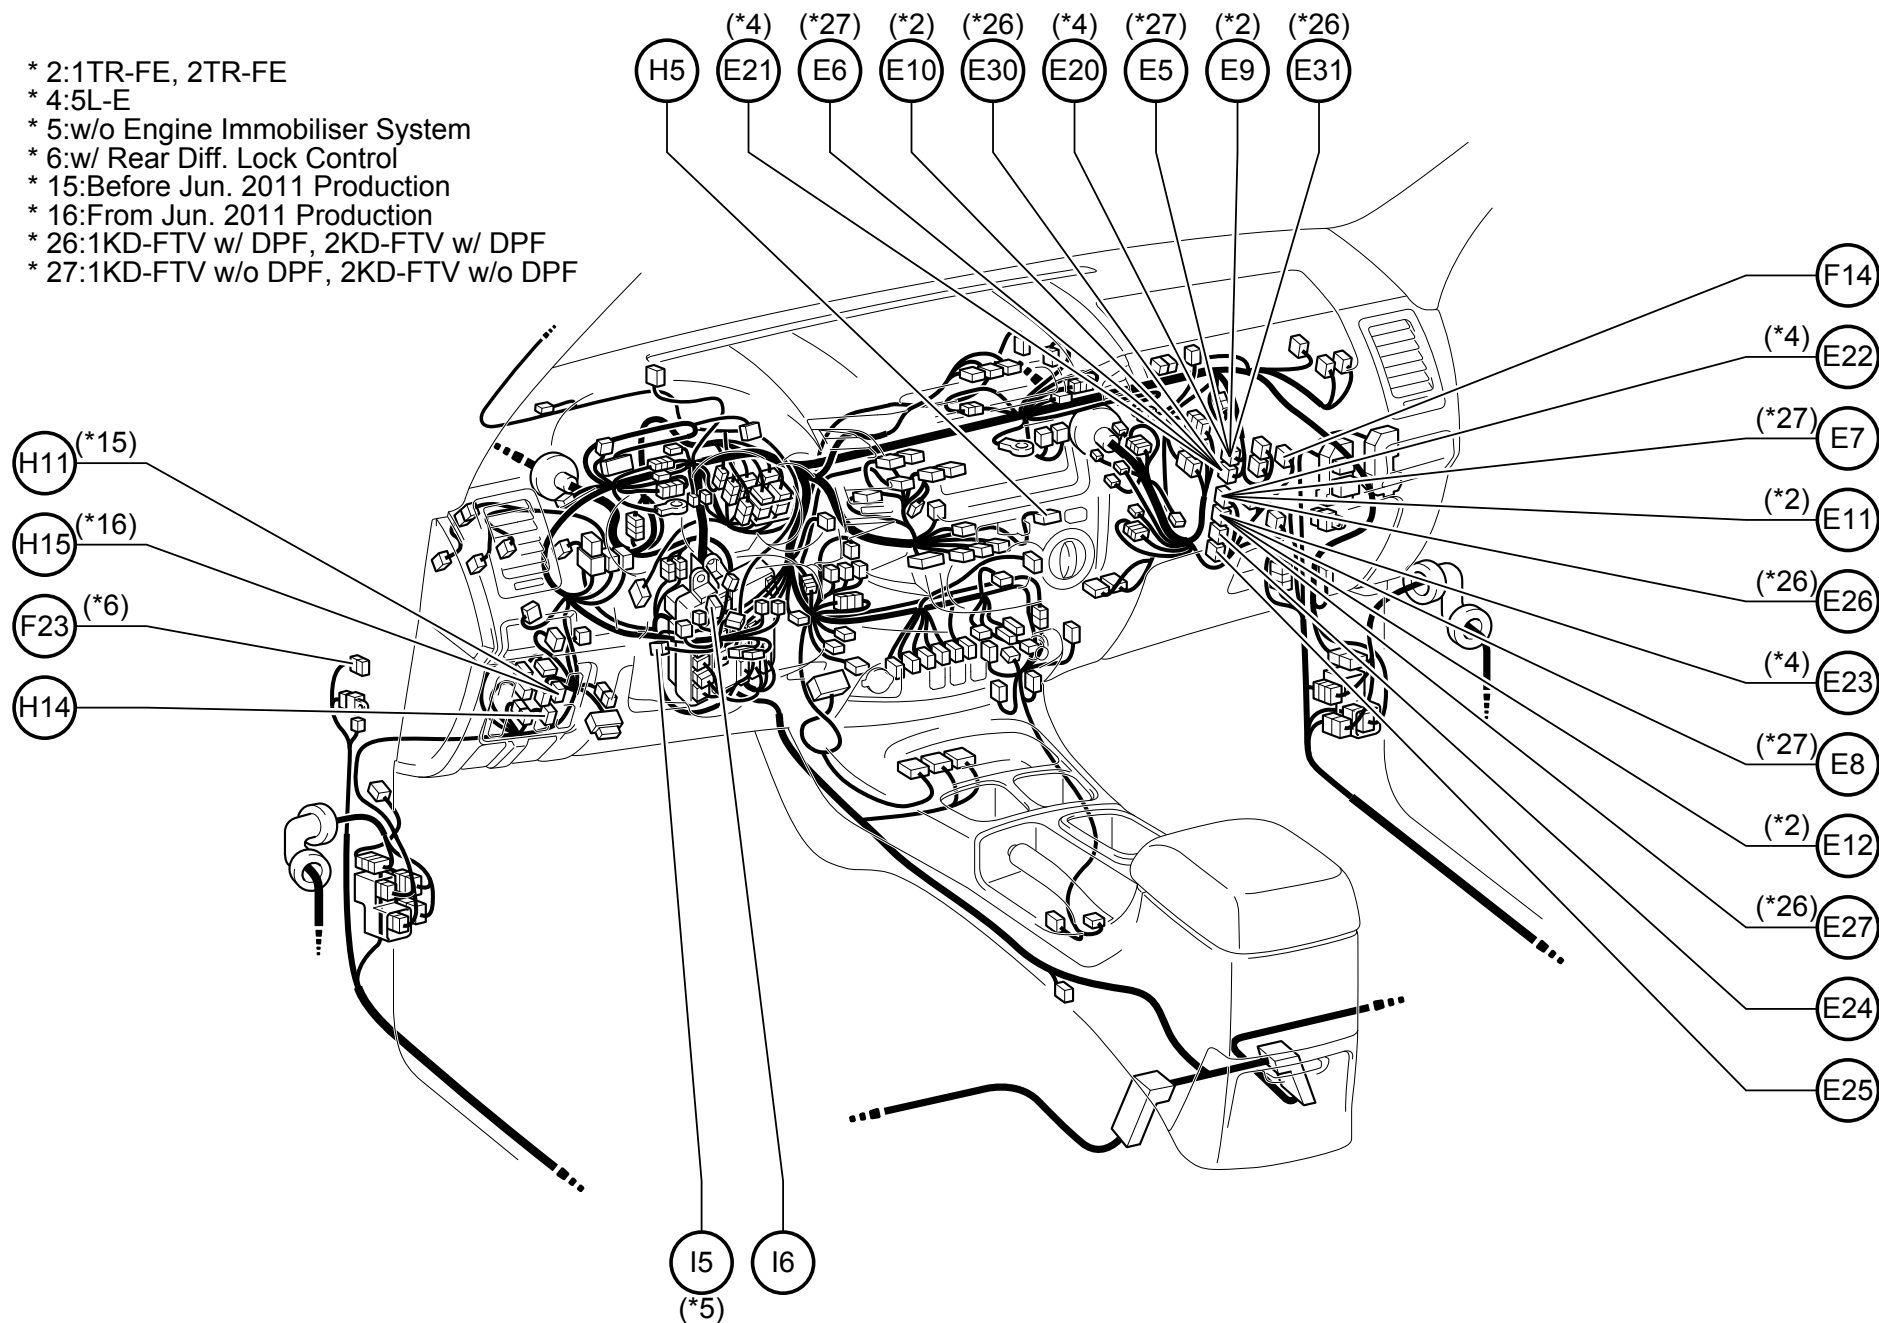
















E 5 Engine ECU
E 6 Engine ECU
E 7 Engine ECU
E 8 Engine ECU
E 9 Engine ECU
E 10 Engine ECU
E 11 Engine ECU
E 12 Engine ECU
E 20 Engine ECU
E 21 Engine ECU
E 22 Engine ECU
E 23 Engine ECU
E 24 Engine ECU
E 25 Engine ECU
E 26 Engine ECU
E 27 Engine ECU
E 30 Engine ECU
E 31 Engine ECU

F 14 4WD Control ECU
F 23 4WD Control ECU (Rear Diff. Lock)


H 5 Hazard Warning Signal SW
H 11 Headlamp Leveling SW
H 14 Headlight Cleaner Switch
H 15 Headlamp Leveling SW

I 5 Ignition Key Cylinder Lamp
I 6 Ignition SW

               
Position of Parts in Instrument Panel <LHD>

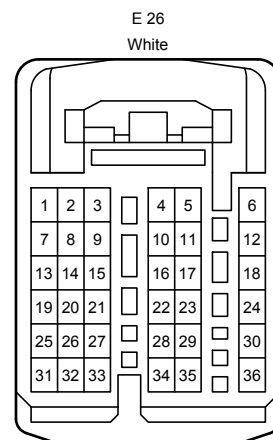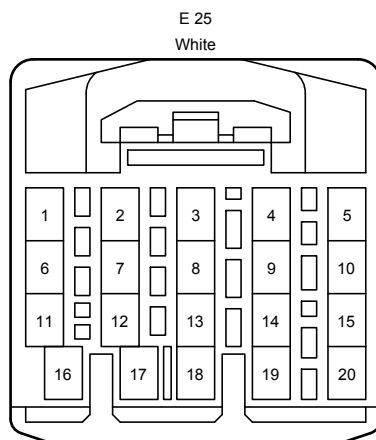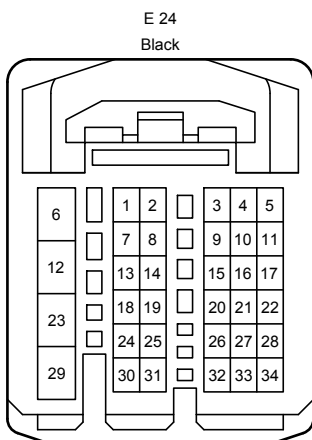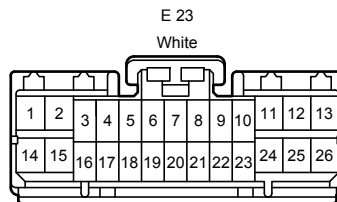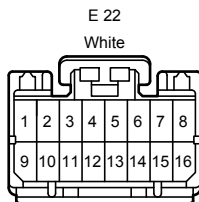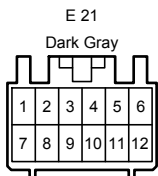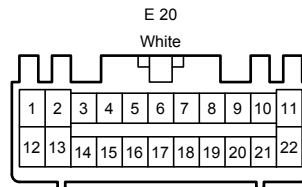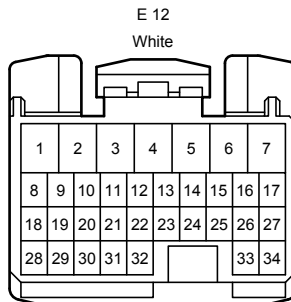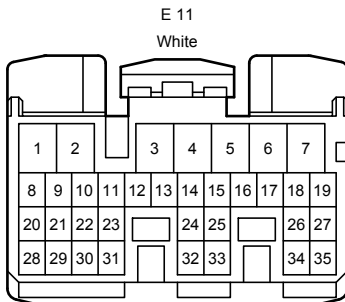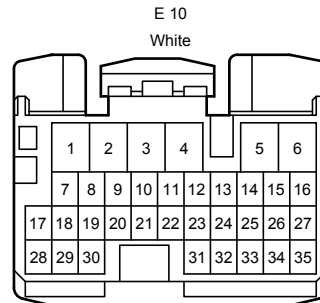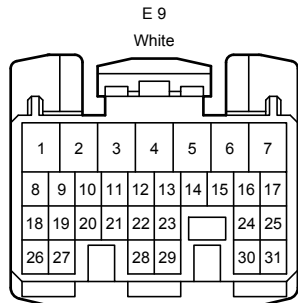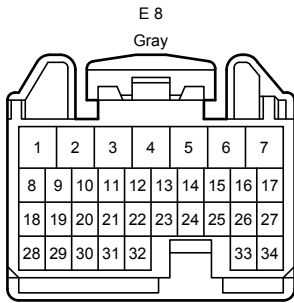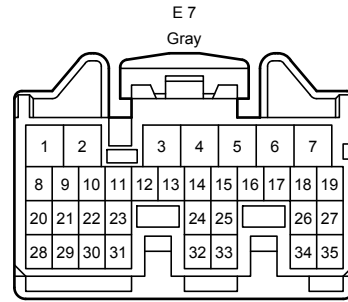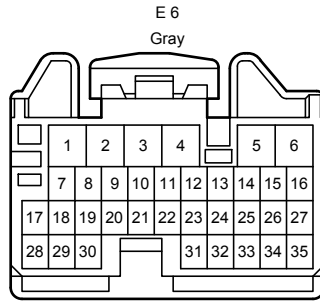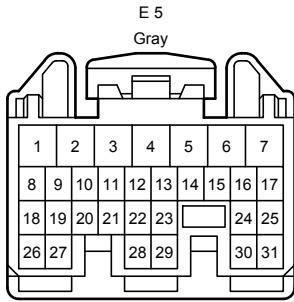


E 27
Gray

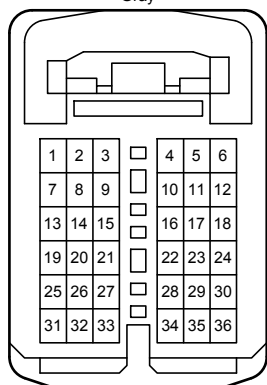 


E 30
White

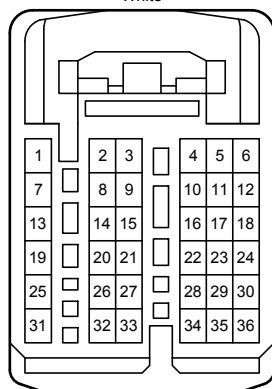 


E 31
White

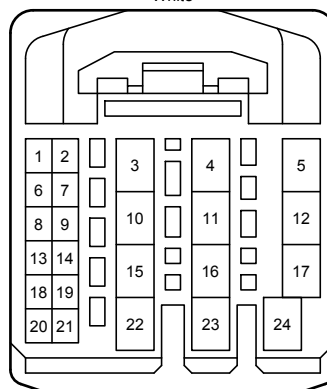 


F 14
Green

 


F 23
White

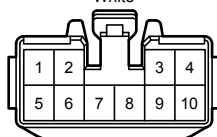 


H 5
White

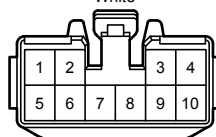 

H 11
White

 


H 14
Black

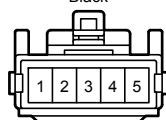 


H 15
White




 I 5
Black

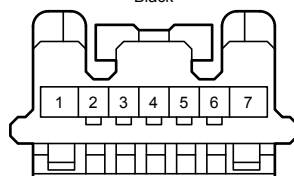




























I 6
White

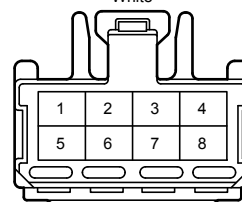 


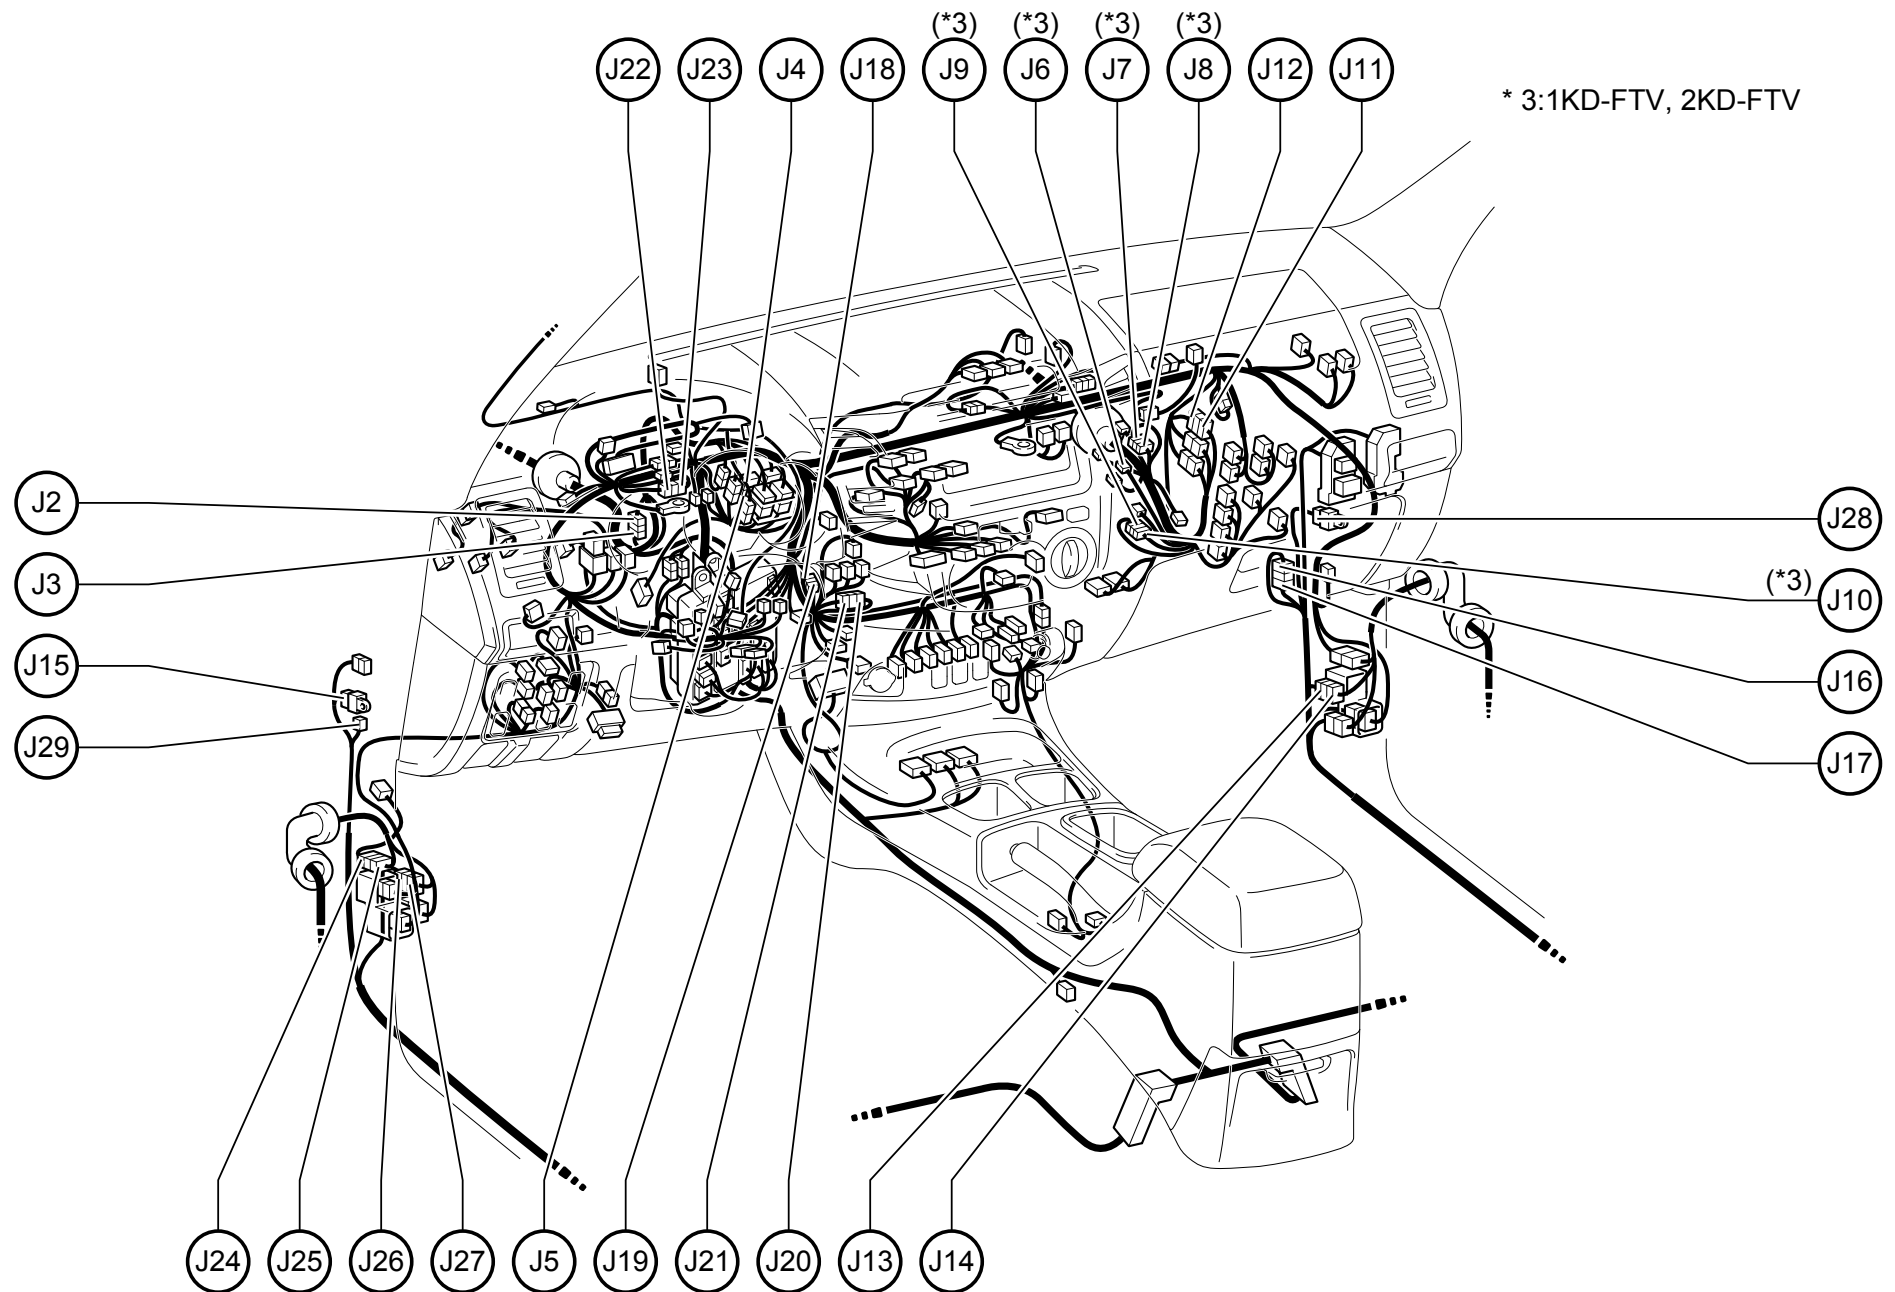 


J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector

                             Position of Parts in Instrument Panel <LHD>

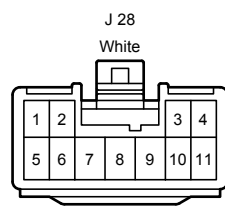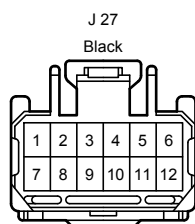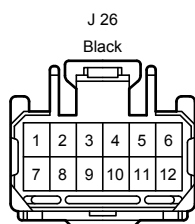
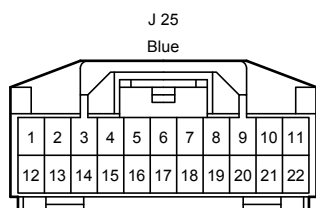
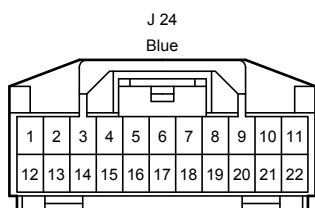
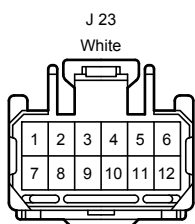
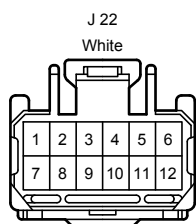
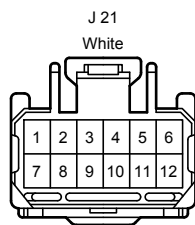
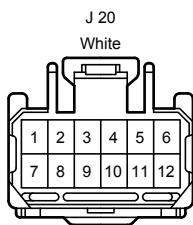
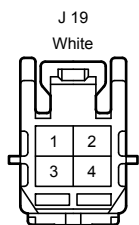
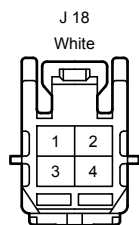
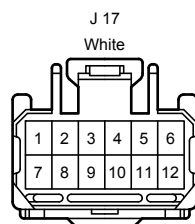
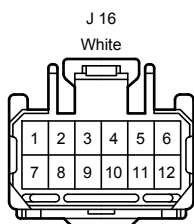
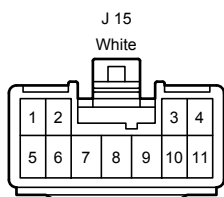
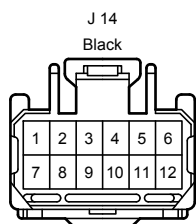
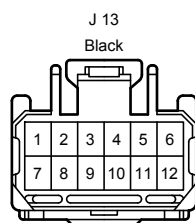
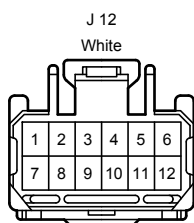
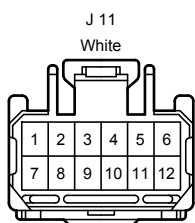
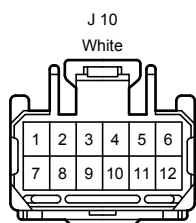
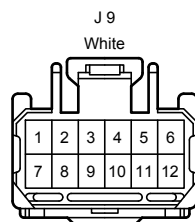
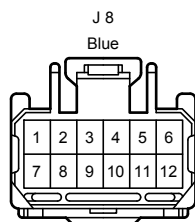
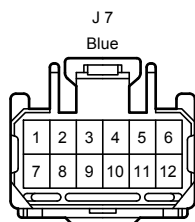
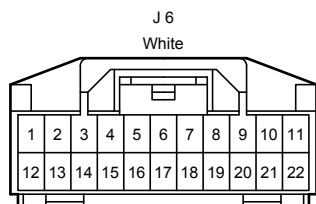
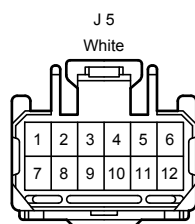
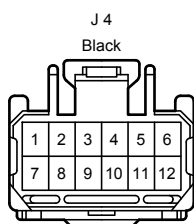
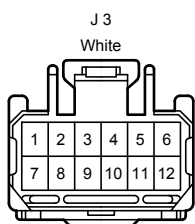
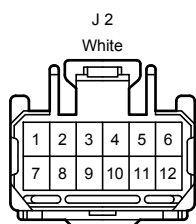



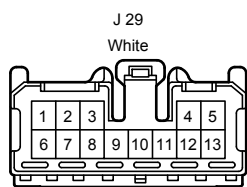


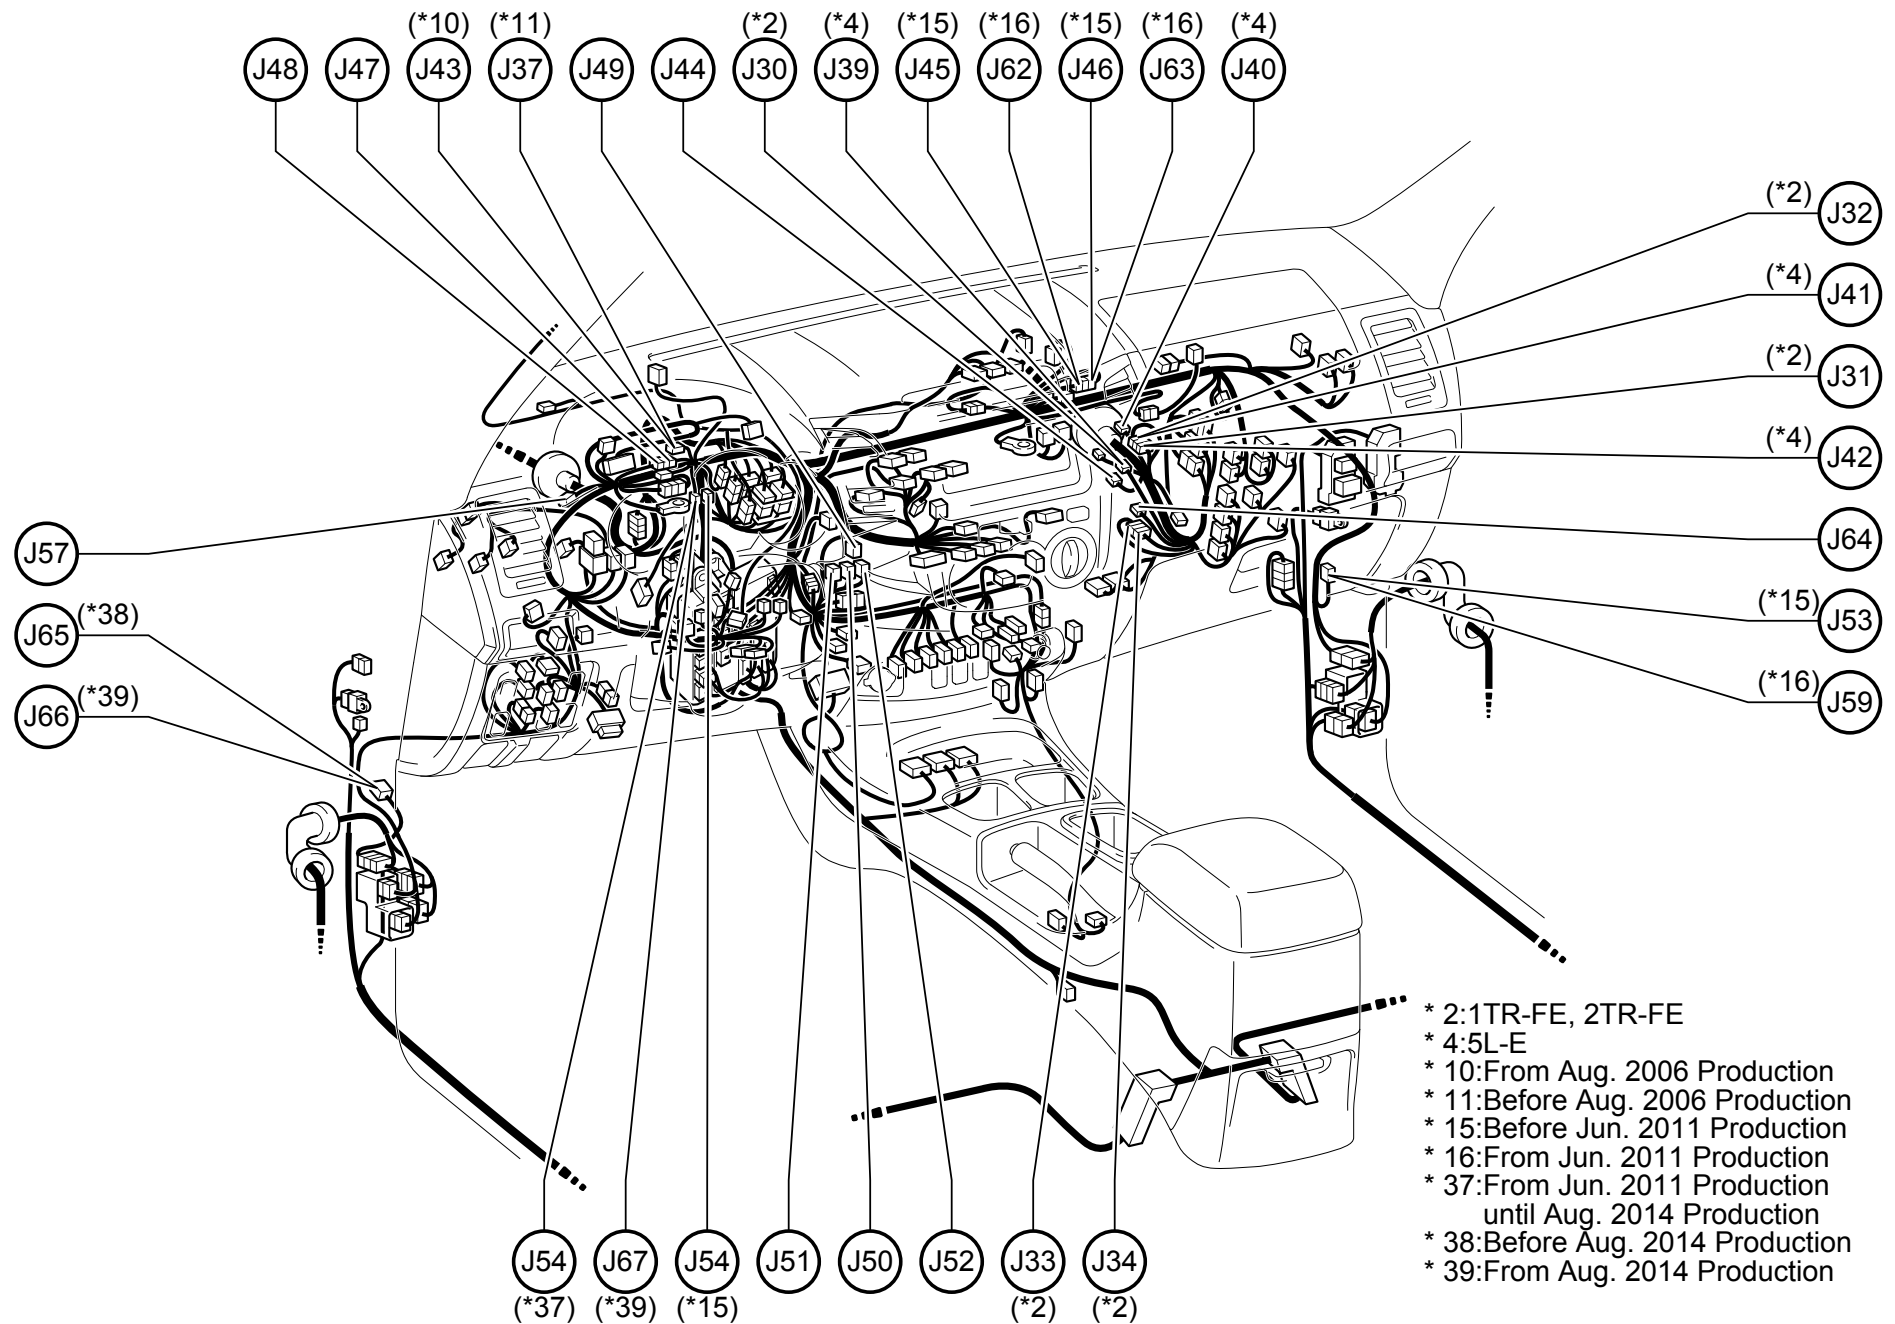


J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 37 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector
J 43 Junction Connector
J 44 Junction Connector
J 45 Junction Connector
J 46 Junction Connector
J 47 Junction Connector
J 48 Junction Connector
J 49 Junction Connector
J 50 Junction Connector
J 51 Junction Connector
J 52 Junction Connector
J 53 Junction Connector
J 54 Junction Connector
J 57 Junction Connector
J 59 Junction Connector
J 62 Junction Connector
J 63 Junction Connector
J 64 Junction Connector
J 65 Junction Connector
J 66 Junction Connector
J 67 Junction Connector

                           Position of Parts in Instrument Panel <LHD>

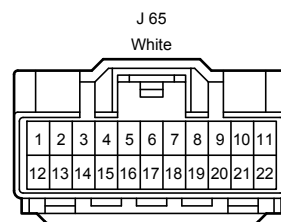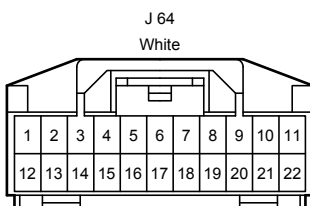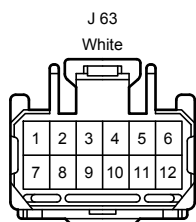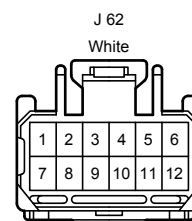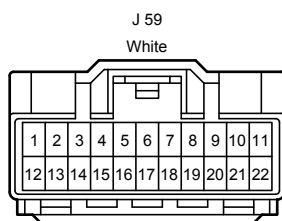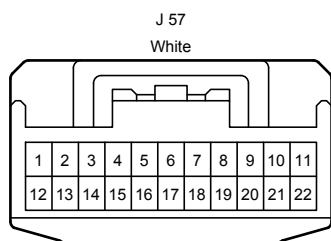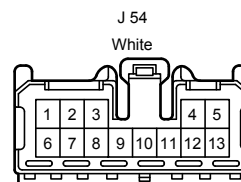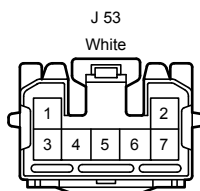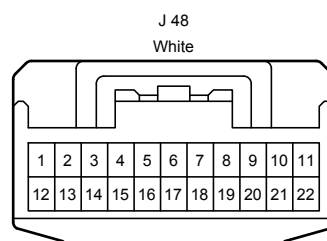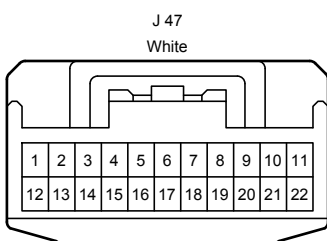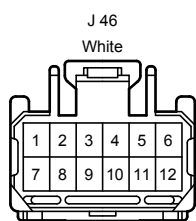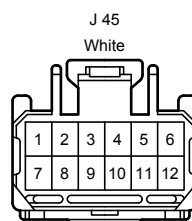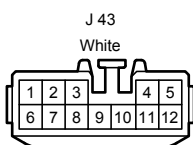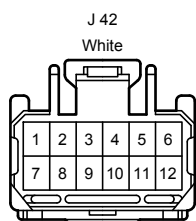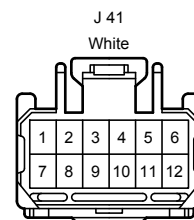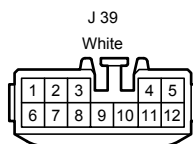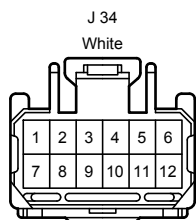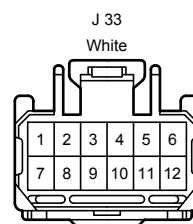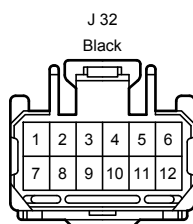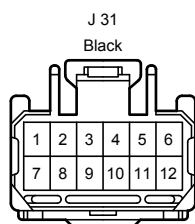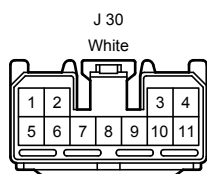

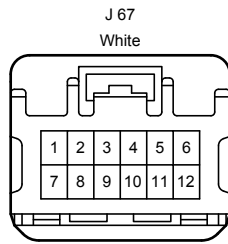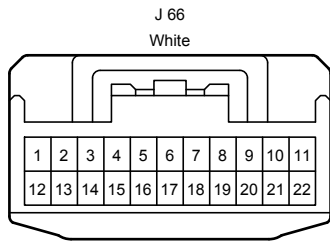







- * 12:Before Aug. 2008 Production
- * 15:Before Jun. 2011 Production
- * 16:From Jun. 2011 Production
- * 19:From Aug. 2008 Production until Jun. 2011 Production
- * 22:w/ Multi Display
- * 23:w/o Multi Display
- * 31:Before Aug. 2013 Production
- * 32:From Aug. 2013 Production
- * 33:w/ Multi Display Before Aug. 2013 Production
- * 34:w/ Multi Display From Aug. 2013 Production
- * 36:From Aug. 2006 Production until Aug. 2013 Production

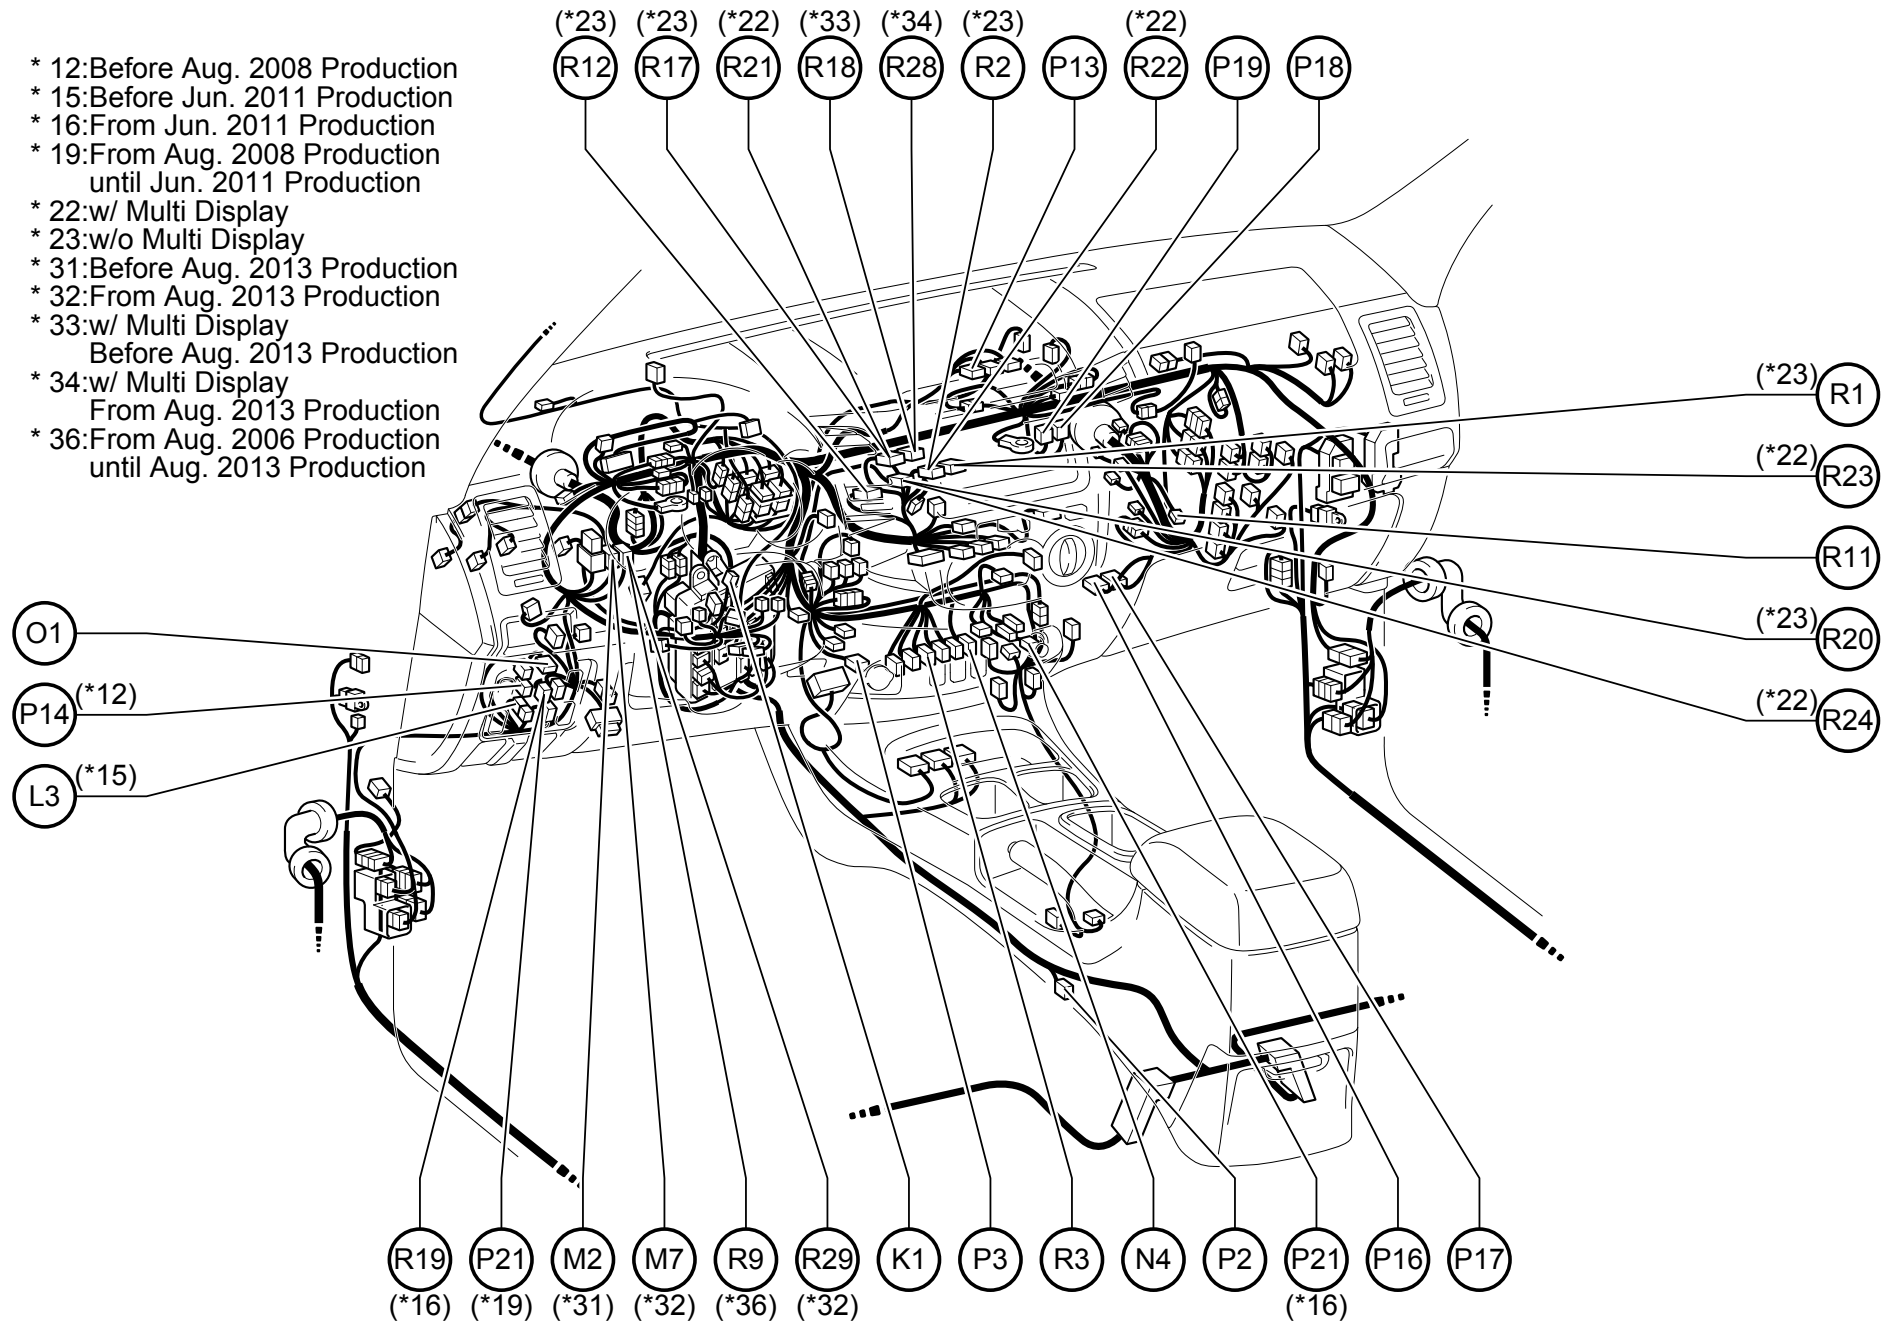 


K	1	Key Interlock Solenoid
L	3	Light Control Rheostat
M	2	Magnet Clutch Relay
M	7	Magnet Clutch Relay
N	4	No. 1 Stereo Jack Adapter Assembly
O	1	Outer Mirror SW
P	2	Parking Brake SW
P	3	Power Outlet Socket
P	13	Passenger Seat Belt Warning Lamp
P	14	Power Heater SW
P	16	PTC Heater
P	17	PTC Heater
P	18	PTC Heater Relay (No.1)
P	19	PTC Heater Relay (No.2)
P	21	Power Heater SW
R	1	Radio Receiver Assembly
R	2	Radio Receiver Assembly
R	3	Rear Window Defogger SW
R	9	Rear Fog Lamp Relay
R	11	Resistor (L4 Position)
R	12	Radio Receiver Assembly
R	17	Radio Receiver Assembly
R	18	Radio & Display Receiver Assembly
R	19	Rear Fog Light Switch
R	20	Radio Receiver Assembly
R	21	Radio & Display Receiver Assembly
R	22	Radio & Display Receiver Assembly
R	23	Radio & Display Receiver Assembly
R	24	Radio & Display Receiver Assembly
R	28	Radio & Display Receiver Assembly
R	29	Rear Fog Lamp Relay

      Position of Parts in Instrument Panel <LHD>

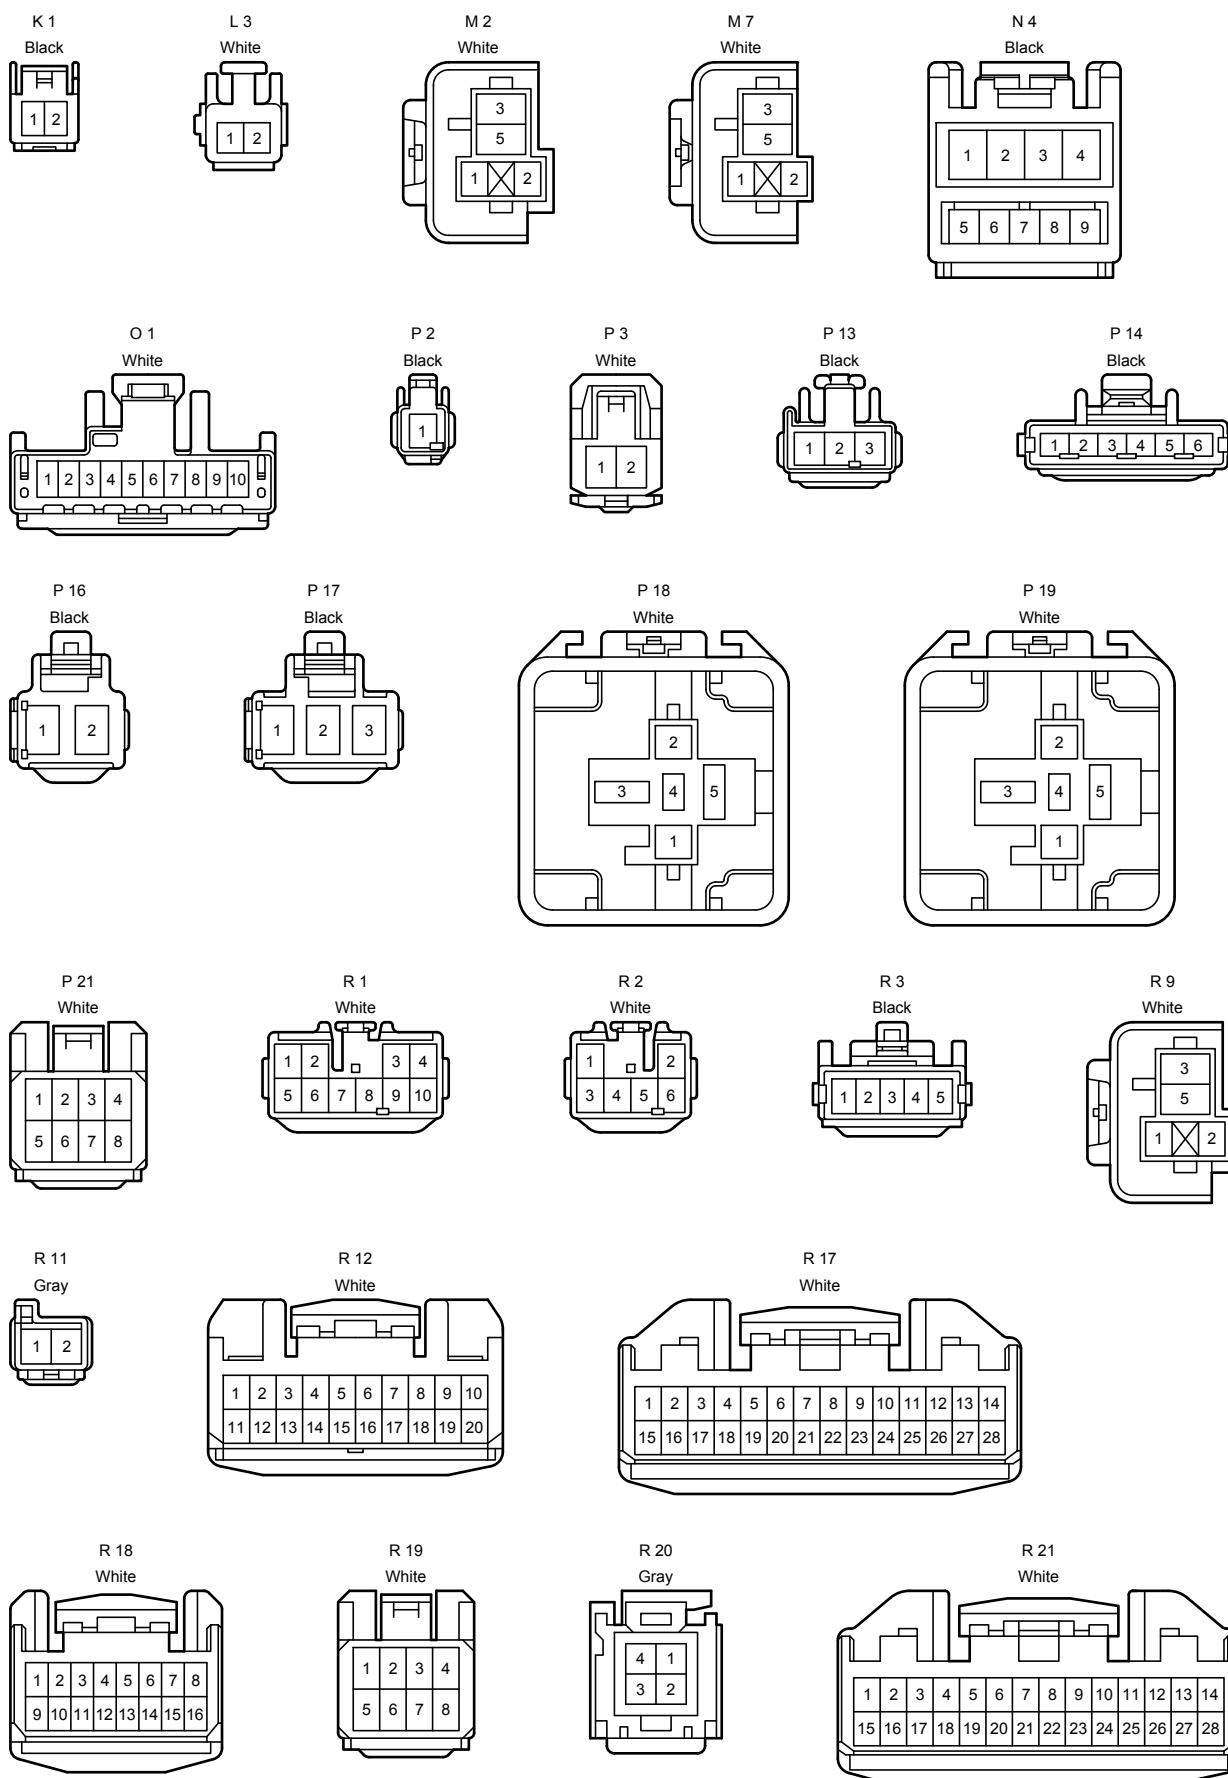

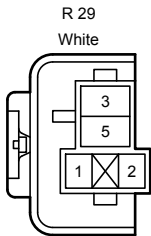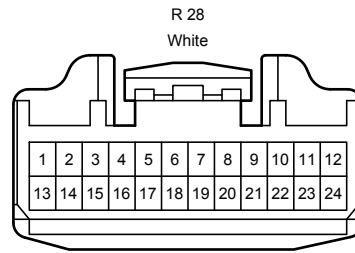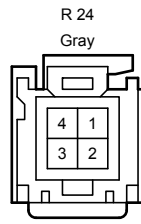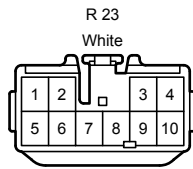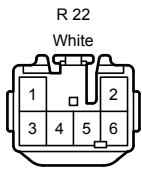

- * 7:w/o Air Conditioner
- * 8:w/ Engine Immobiliser System
- * 9:w/o Rear Diff. Lock Control
w/ Short Connector (4WD Control ECU)
- * 11:Before Aug. 2006 Production
- * 14:Refer to the Service Bulletin
for the installation position of the parts.
- * 15:Before Jun. 2011 Production
- * 16:From Jun. 2011 Production
- * 28:From Aug. 2006 Production
until Jun. 2011 Production
- * 32:From Aug. 2013 Production
- * 35:From Jun. 2011 Production
until Aug. 2013 Production

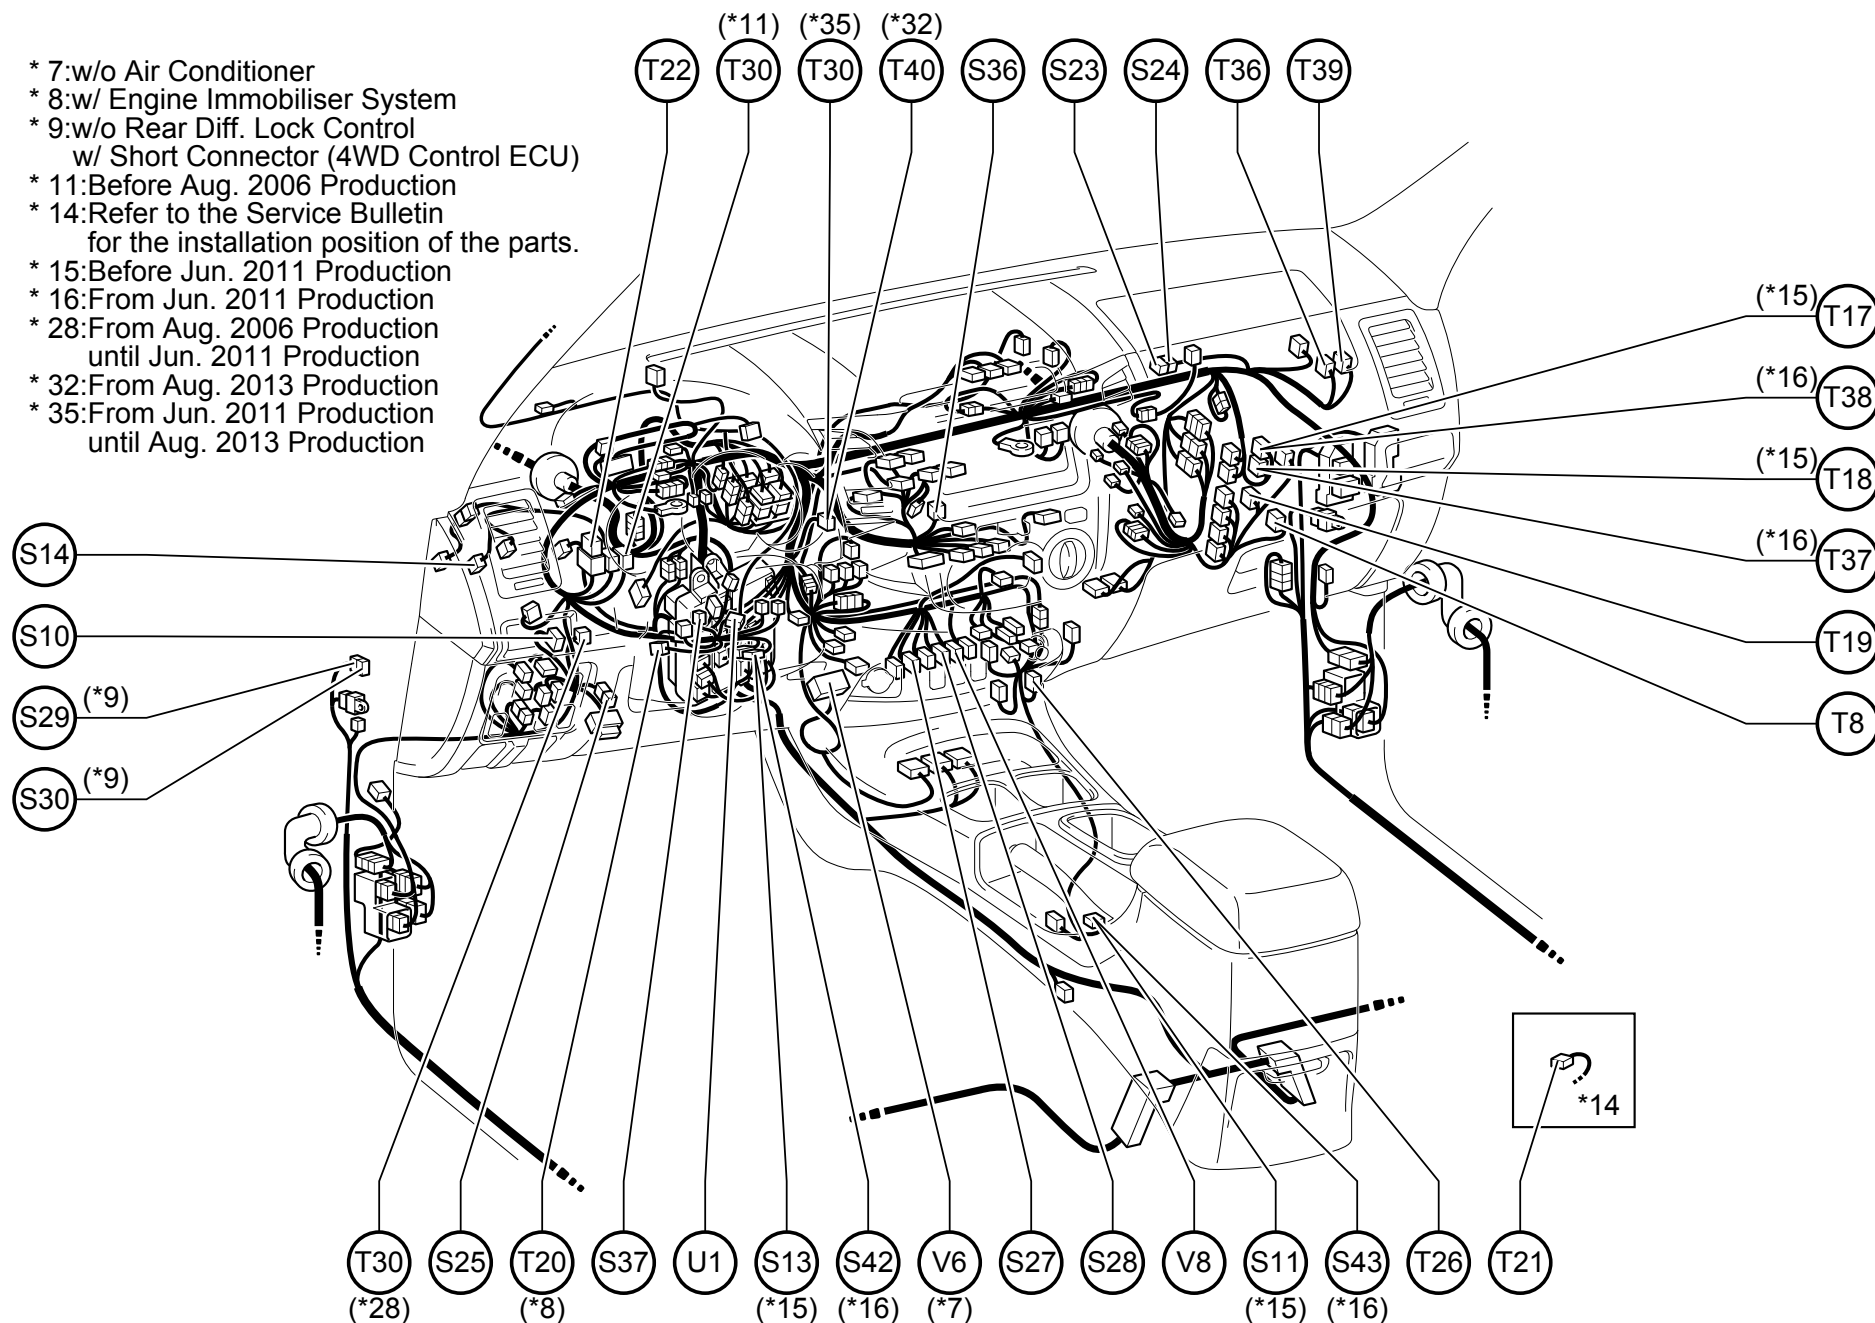 









S 10 Security Indicator Lamp
 S 11 Shift Lock Control ECU
 S 13 Spiral Cable
 S 14 Stop Lamp SW
 S 23 Short Connector (Theft Warning ECU)
 S 24 Short Connector (Theft Warning ECU)
 S 25 Short Connector (Light Control Rheostat)
 S 27 Seat Heater SW (LH)
 S 28 Seat Heater SW (RH)
 S 29 Short Connector (4WD Control ECU)
 S 30 Short Connector (4WD Control ECU)
 S 36 Skid Control Buzzer
 S 37 Steering Sensor
 S 42 Spiral Cable
 S 43 Shift Lock Control ECU

T 8 Turbo Motor Driver
 T 17 Transmission Control ECU
 T 18 Transmission Control ECU
 T 19 Transmission Control ECU
 T 20 Transponder Key Amplifier
 T 21 Transponder Key ECU
 T 22 Turn Signal Flasher
 T 26 Temp. Control SW (Max Hot)
 T 30 Tail Lamp Relay
 T 36 Theft Warning ECU
 T 37 Transmission Control ECU
 T 38 Transmission Control ECU
 T 39 Theft Warning ECU
 T 40 Tail Lamp Relay


U 1 Unlock Warning SW

V 6 Viscous Heater Amplifier
 V 8 VSC OFF Switch

        
Position of Parts in Instrument Panel <LHD>

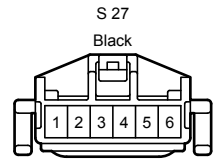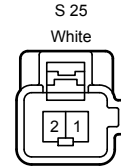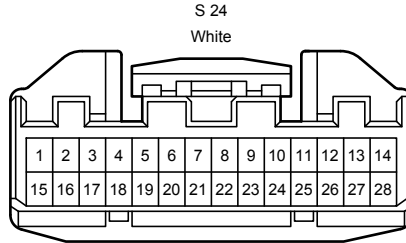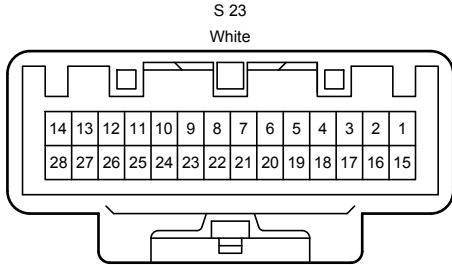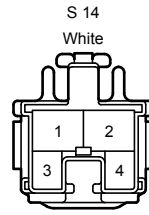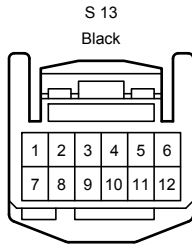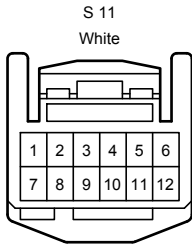


(Before Jun. 2011 Production)

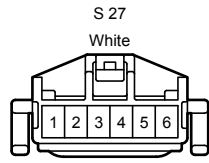 








(From Jun. 2011 Production)

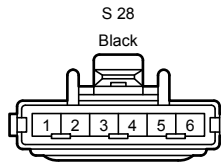 


(Before Jun. 2011 Production)

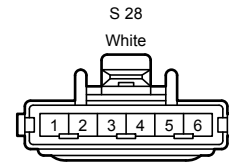 


(From Jun. 2011 Production)

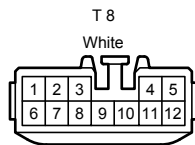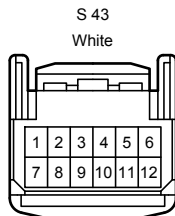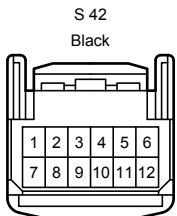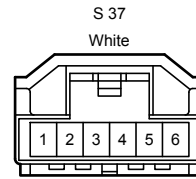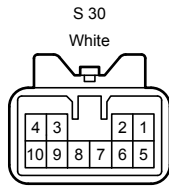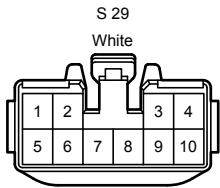       
















 
(Europe 1KD-FTV, Australia From Aug. 2006 Production, 2KD-FTV VN Turbocharger, South Africa 1KD-FTV From Aug. 2010 Production)

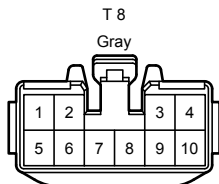


 
(South Africa 1KD-FTV Before Aug. 2010 Production, Australia Before Aug. 2006 Production)

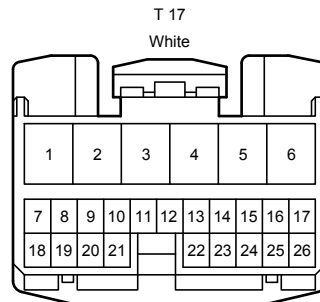

                  
Position of Parts in Instrument Panel <LHD>

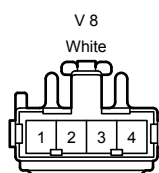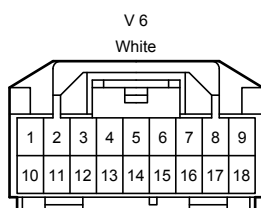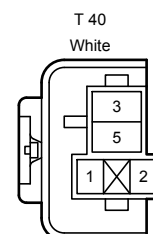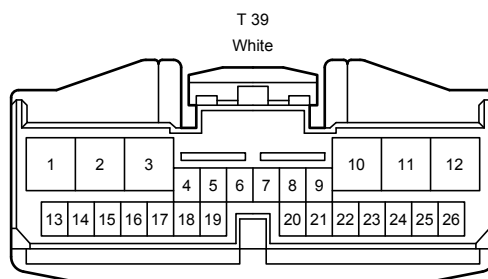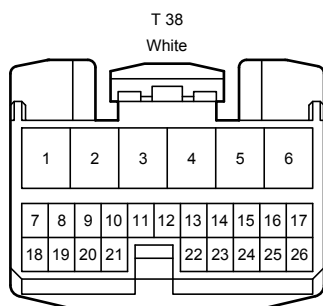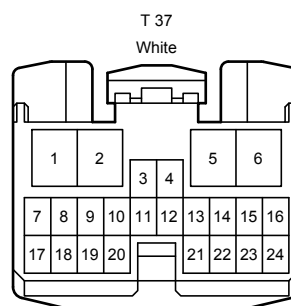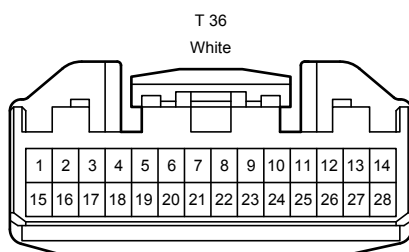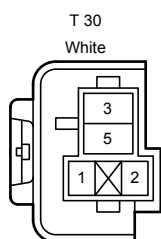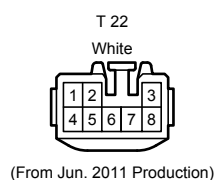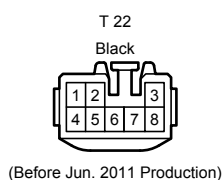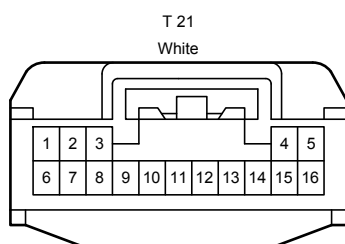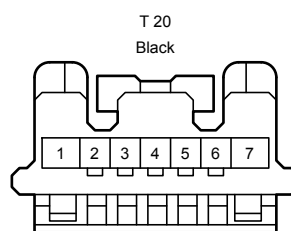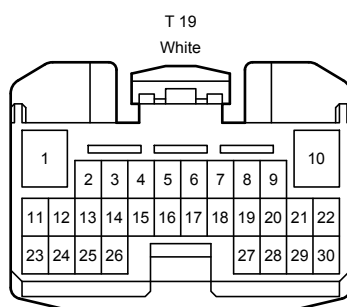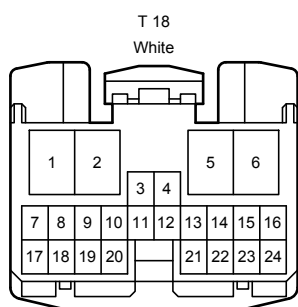


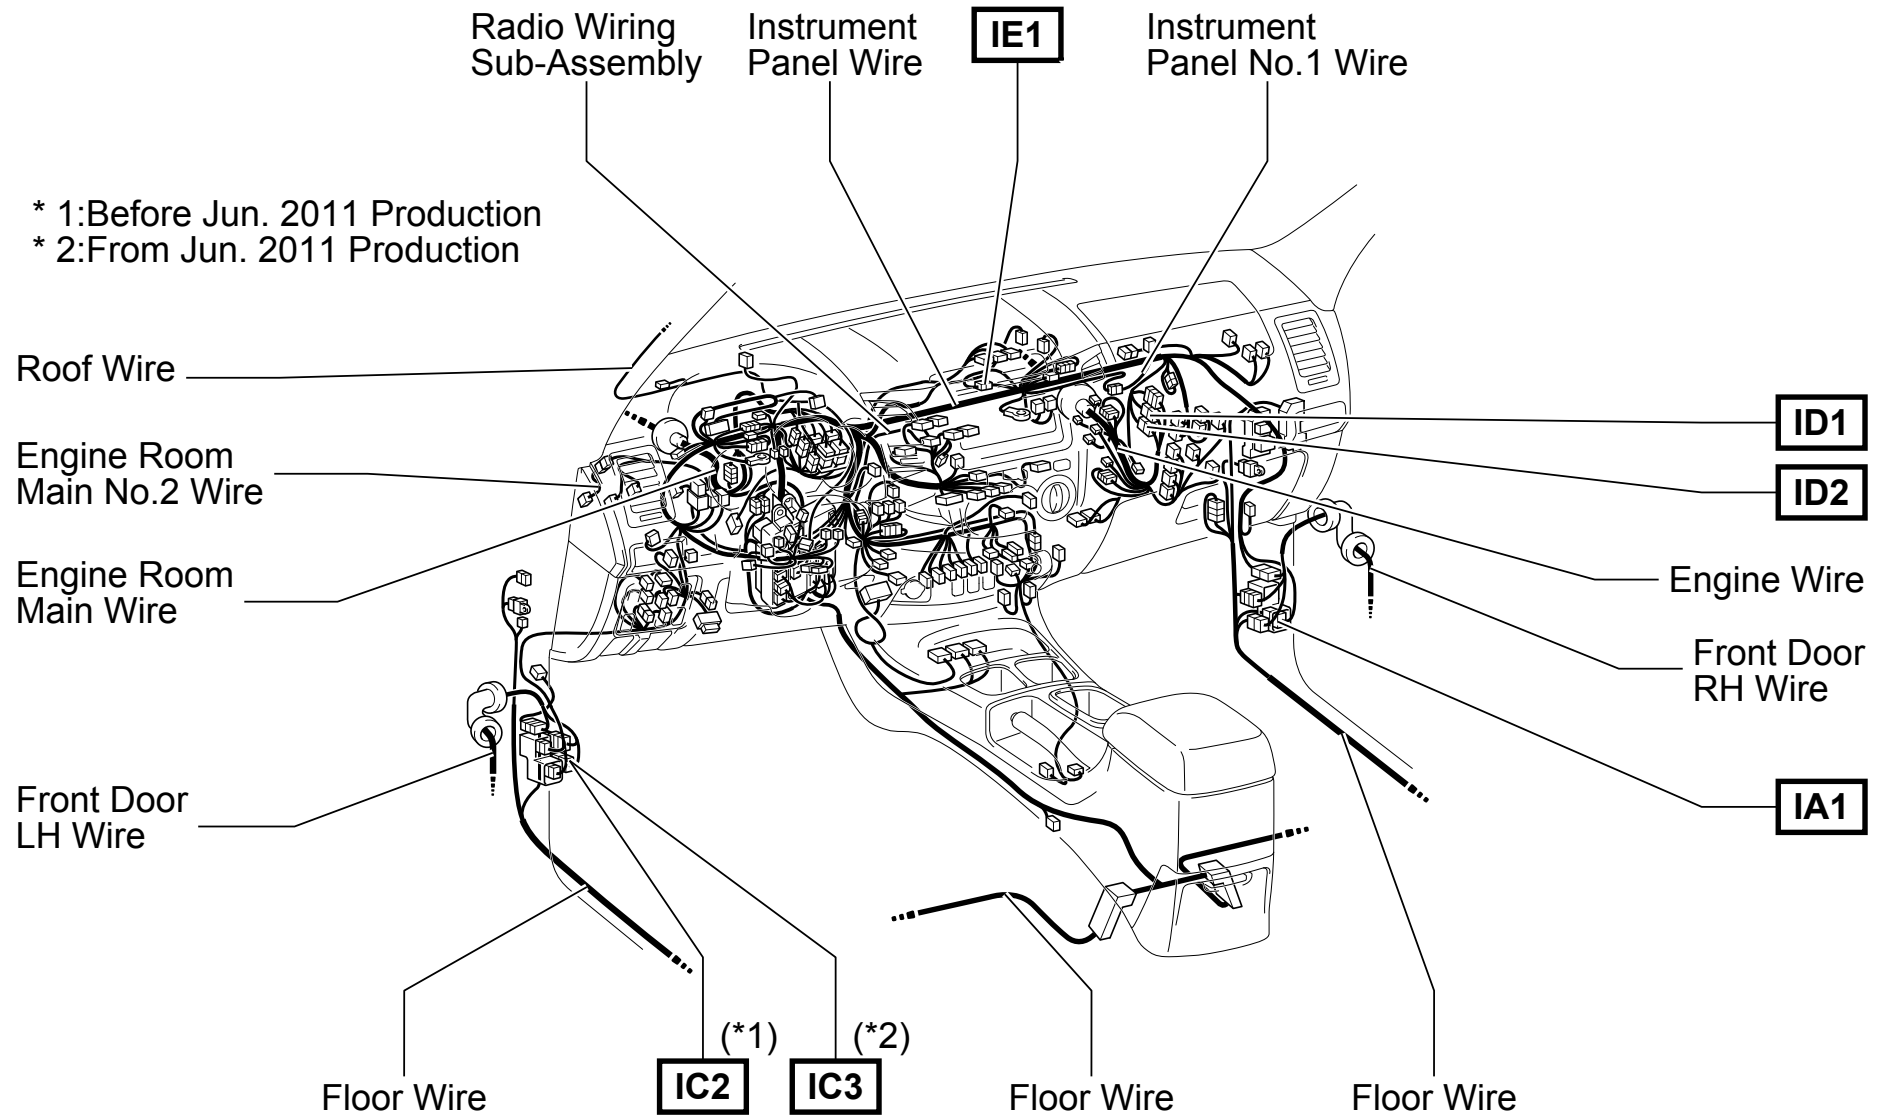


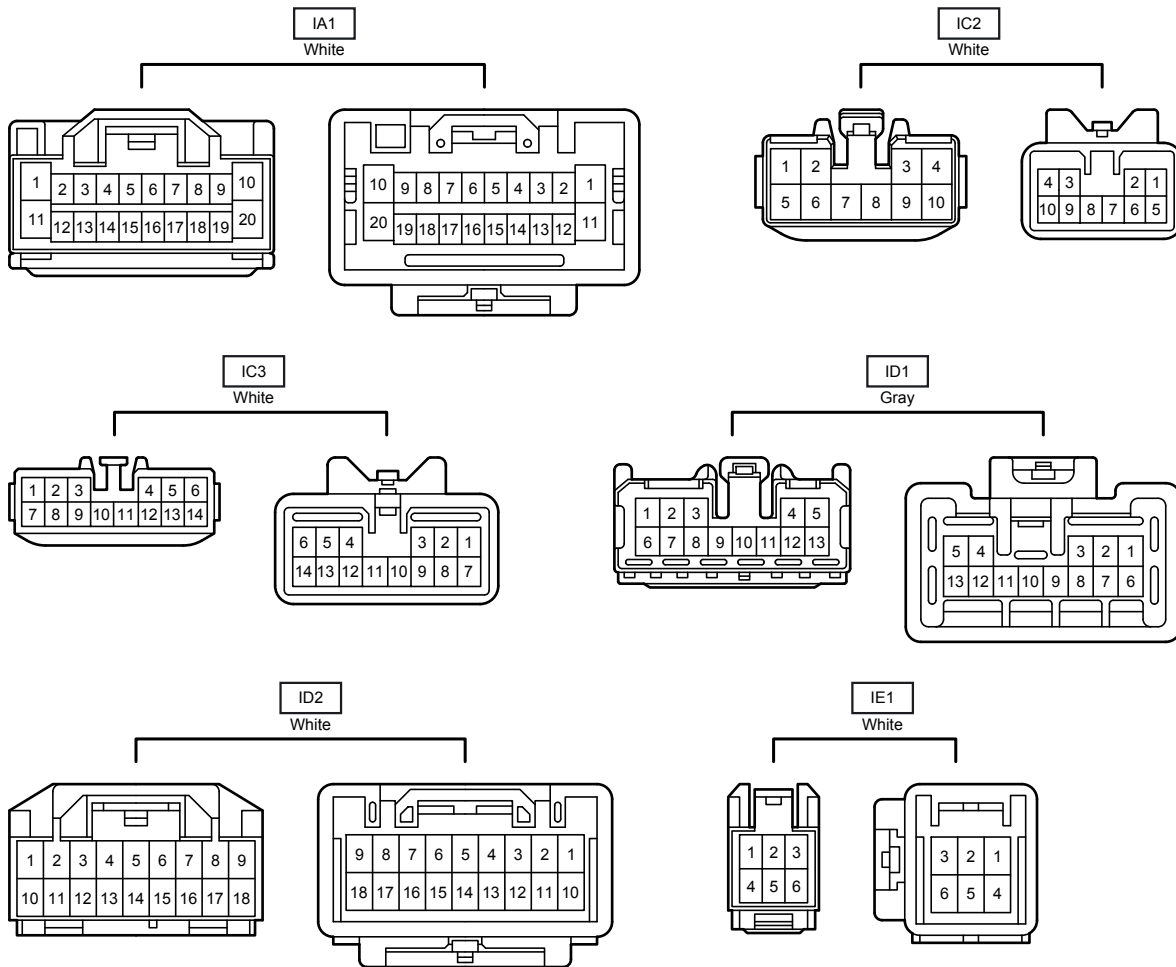

   
- * 1:Before Aug. 2008 Production
- * 2:From Aug. 2008 Production
- * 3:Before Jun. 2011 Production
- * 4:From Jun. 2011 Production
- * 5:*4 w/ PTC Heater
- * 6:*4 w/o PTC Heater

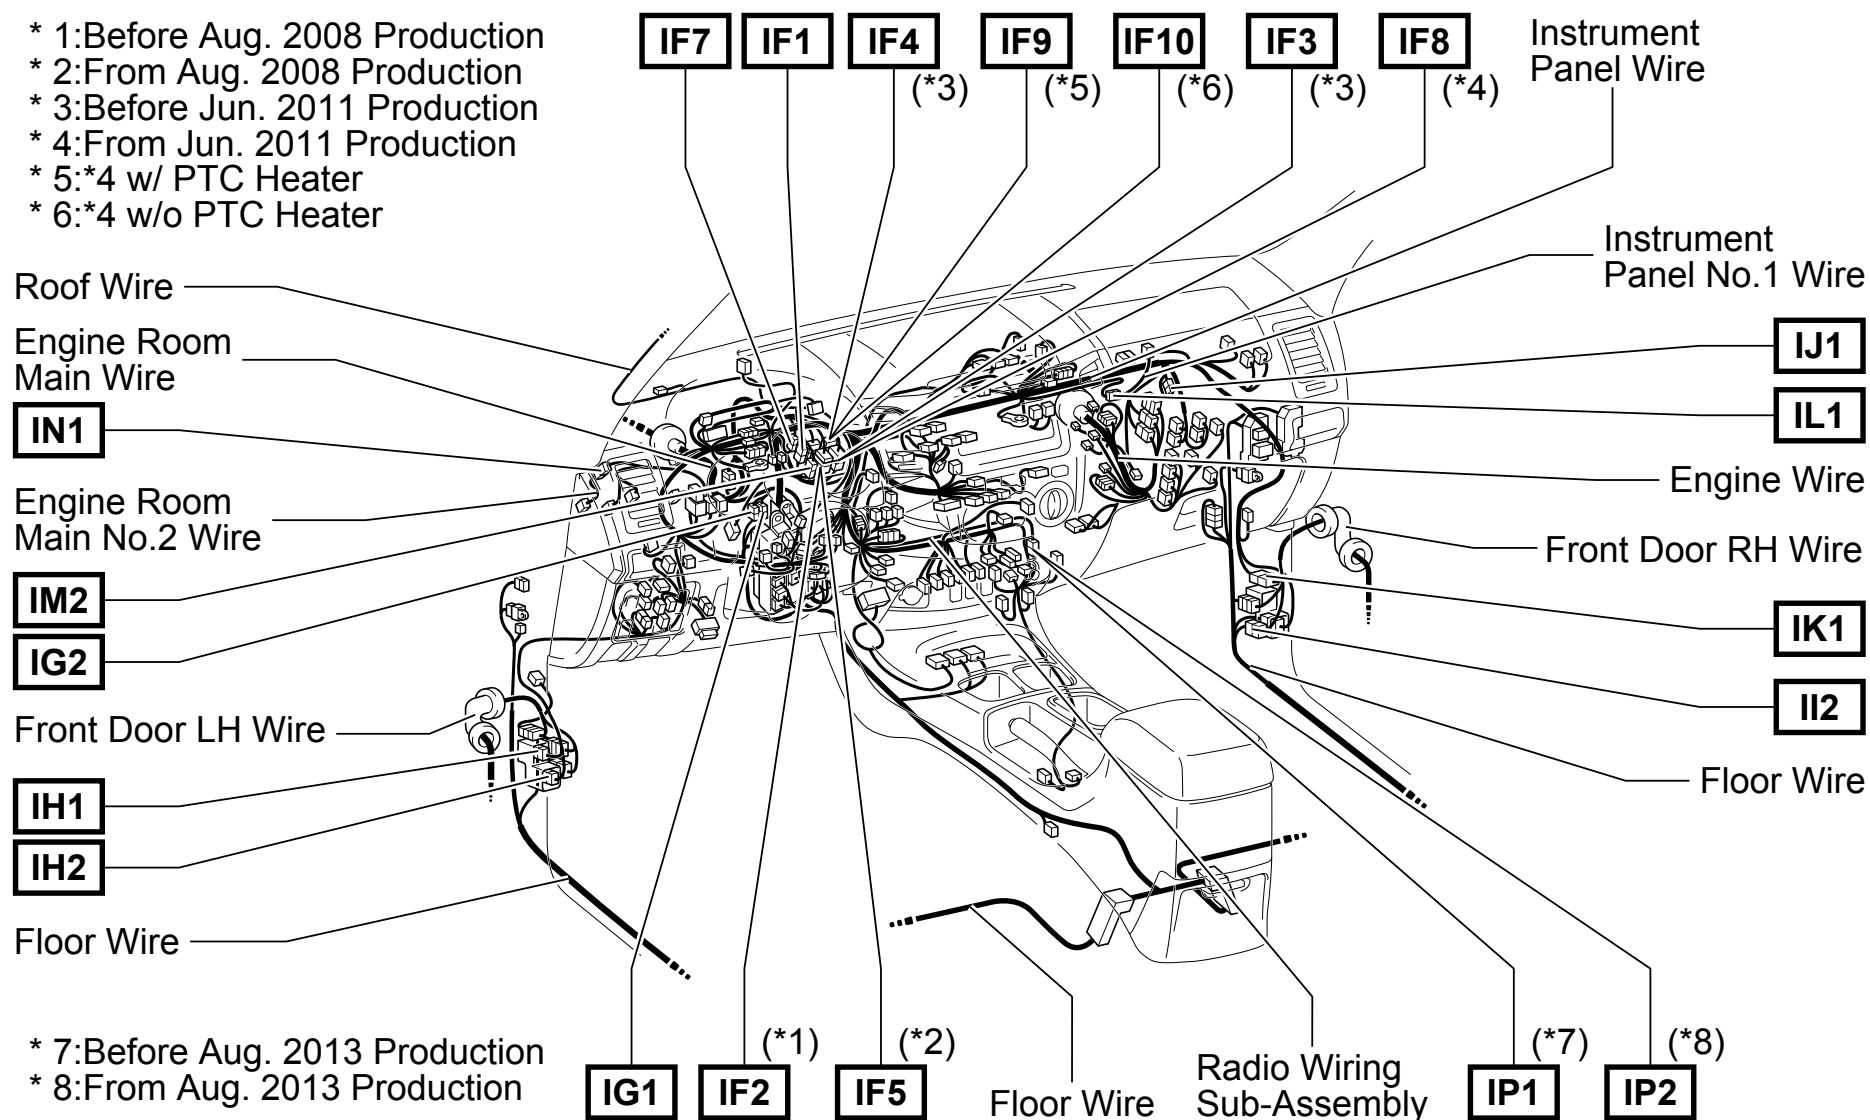


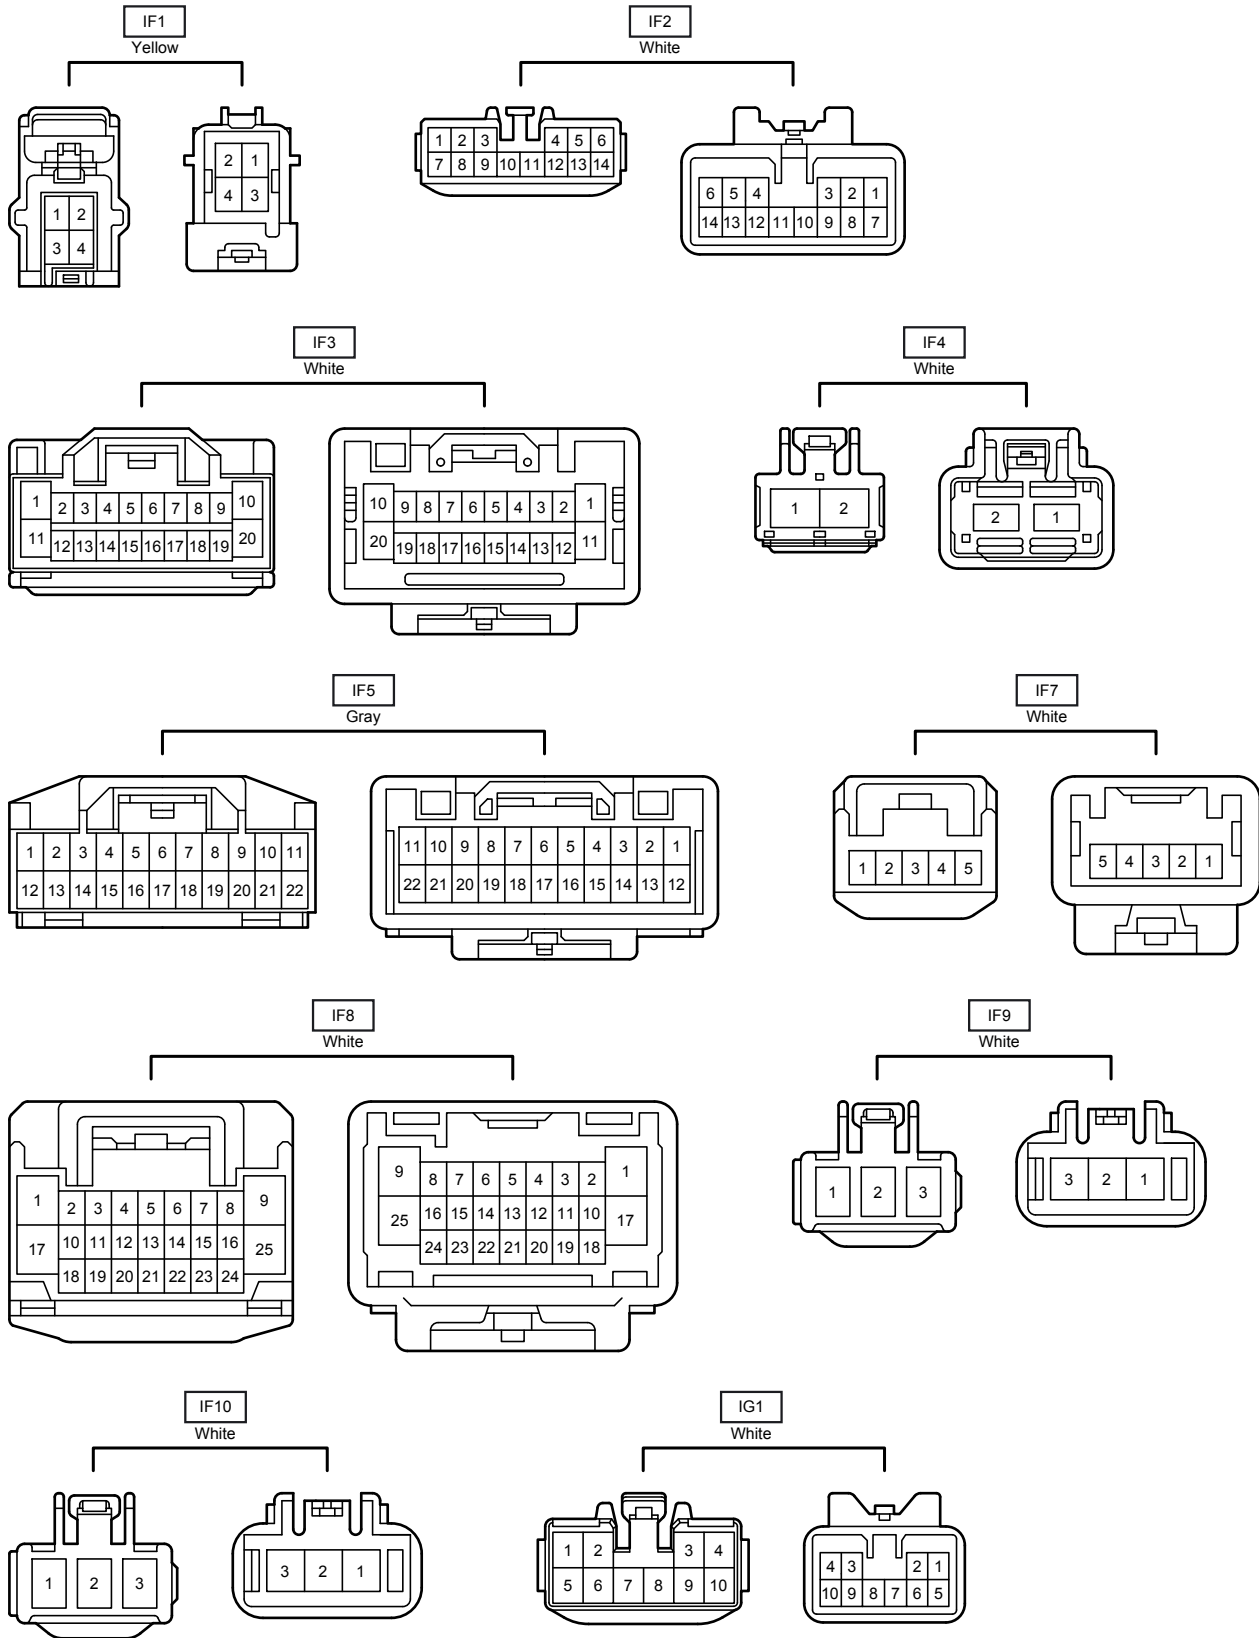

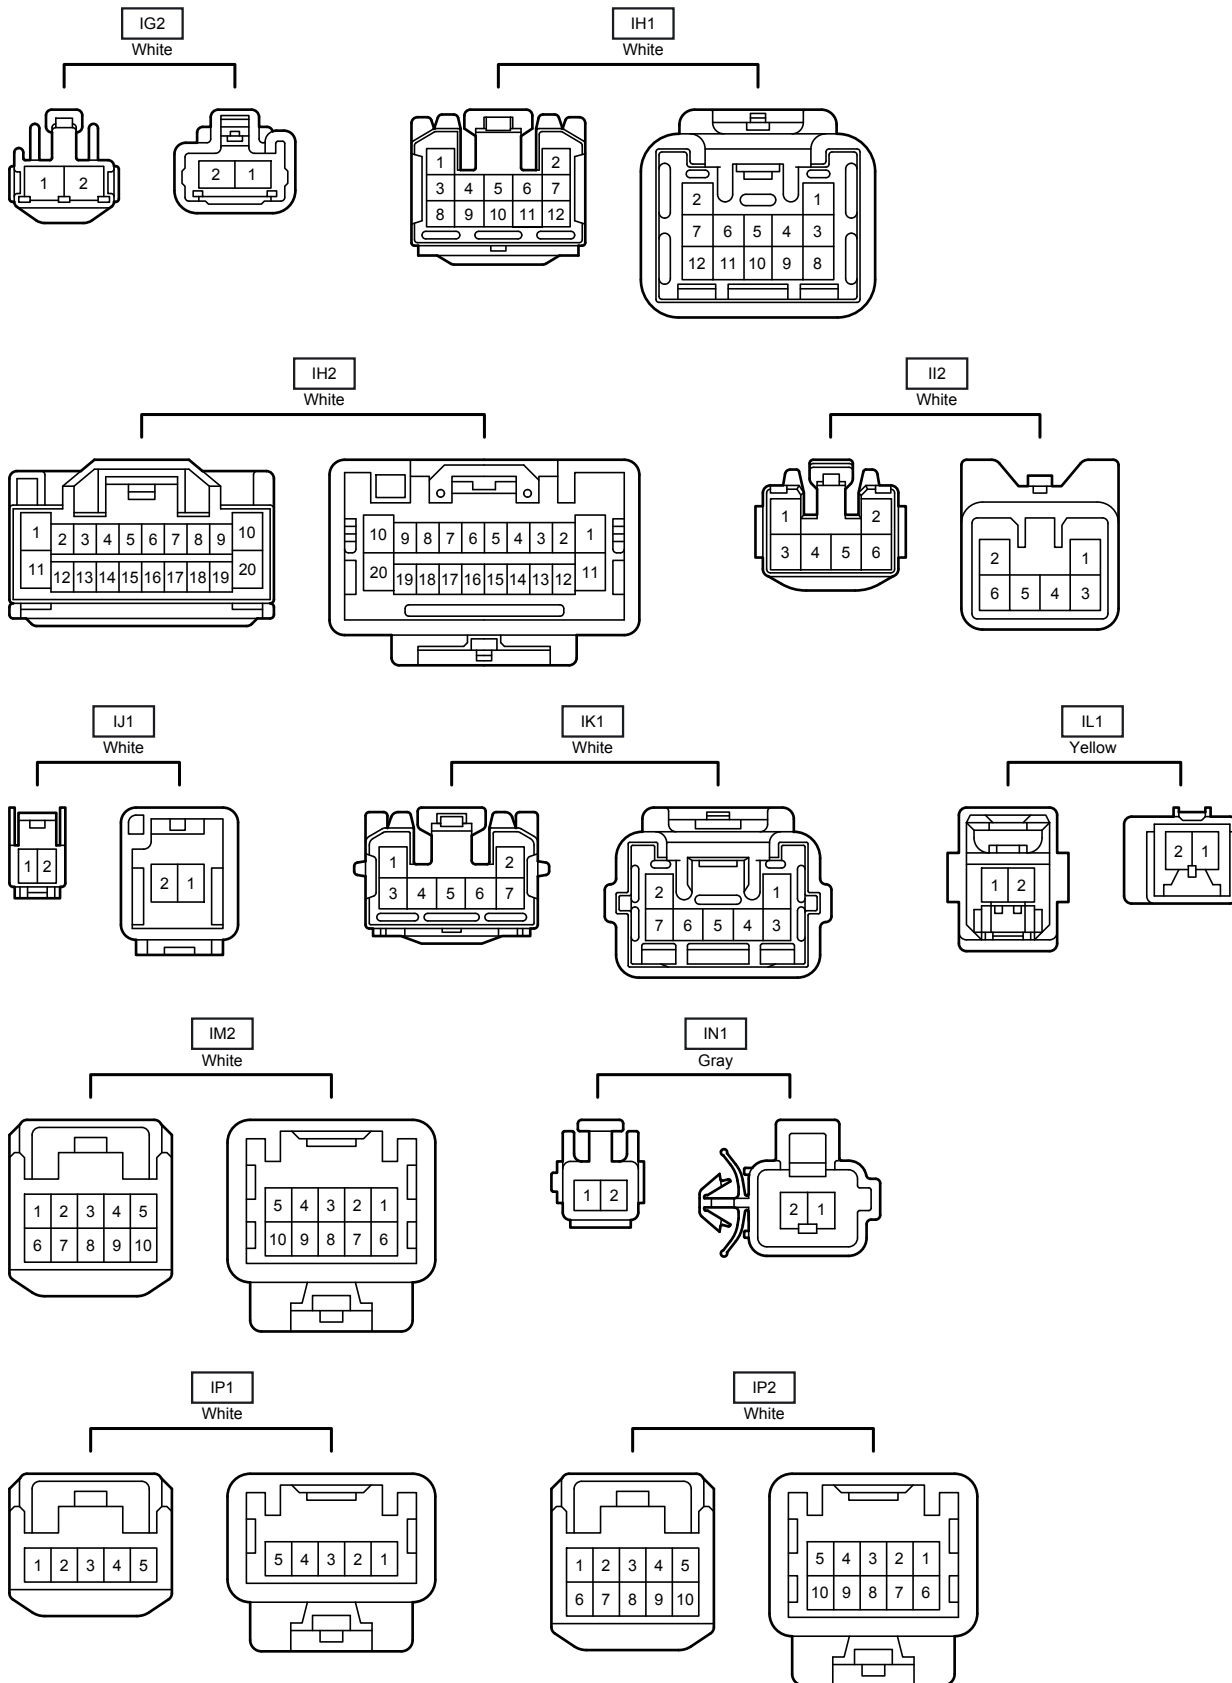


Ground Points in Instrument Panel <RHD>

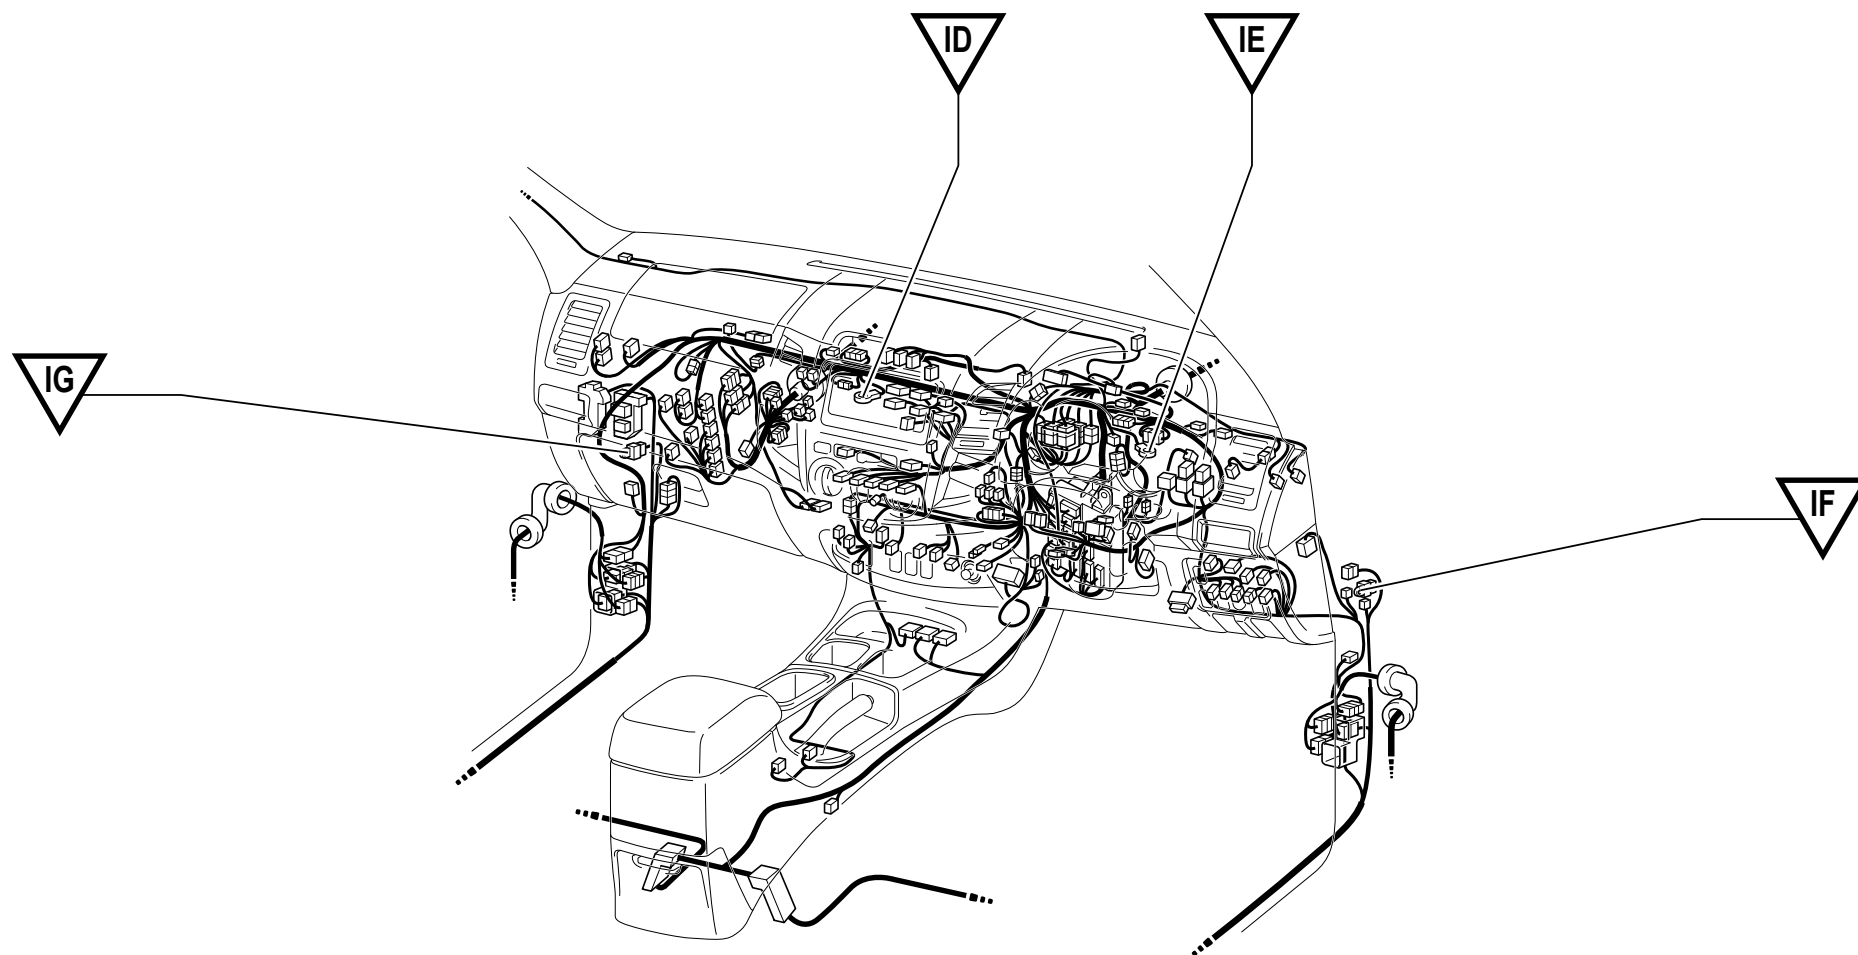 

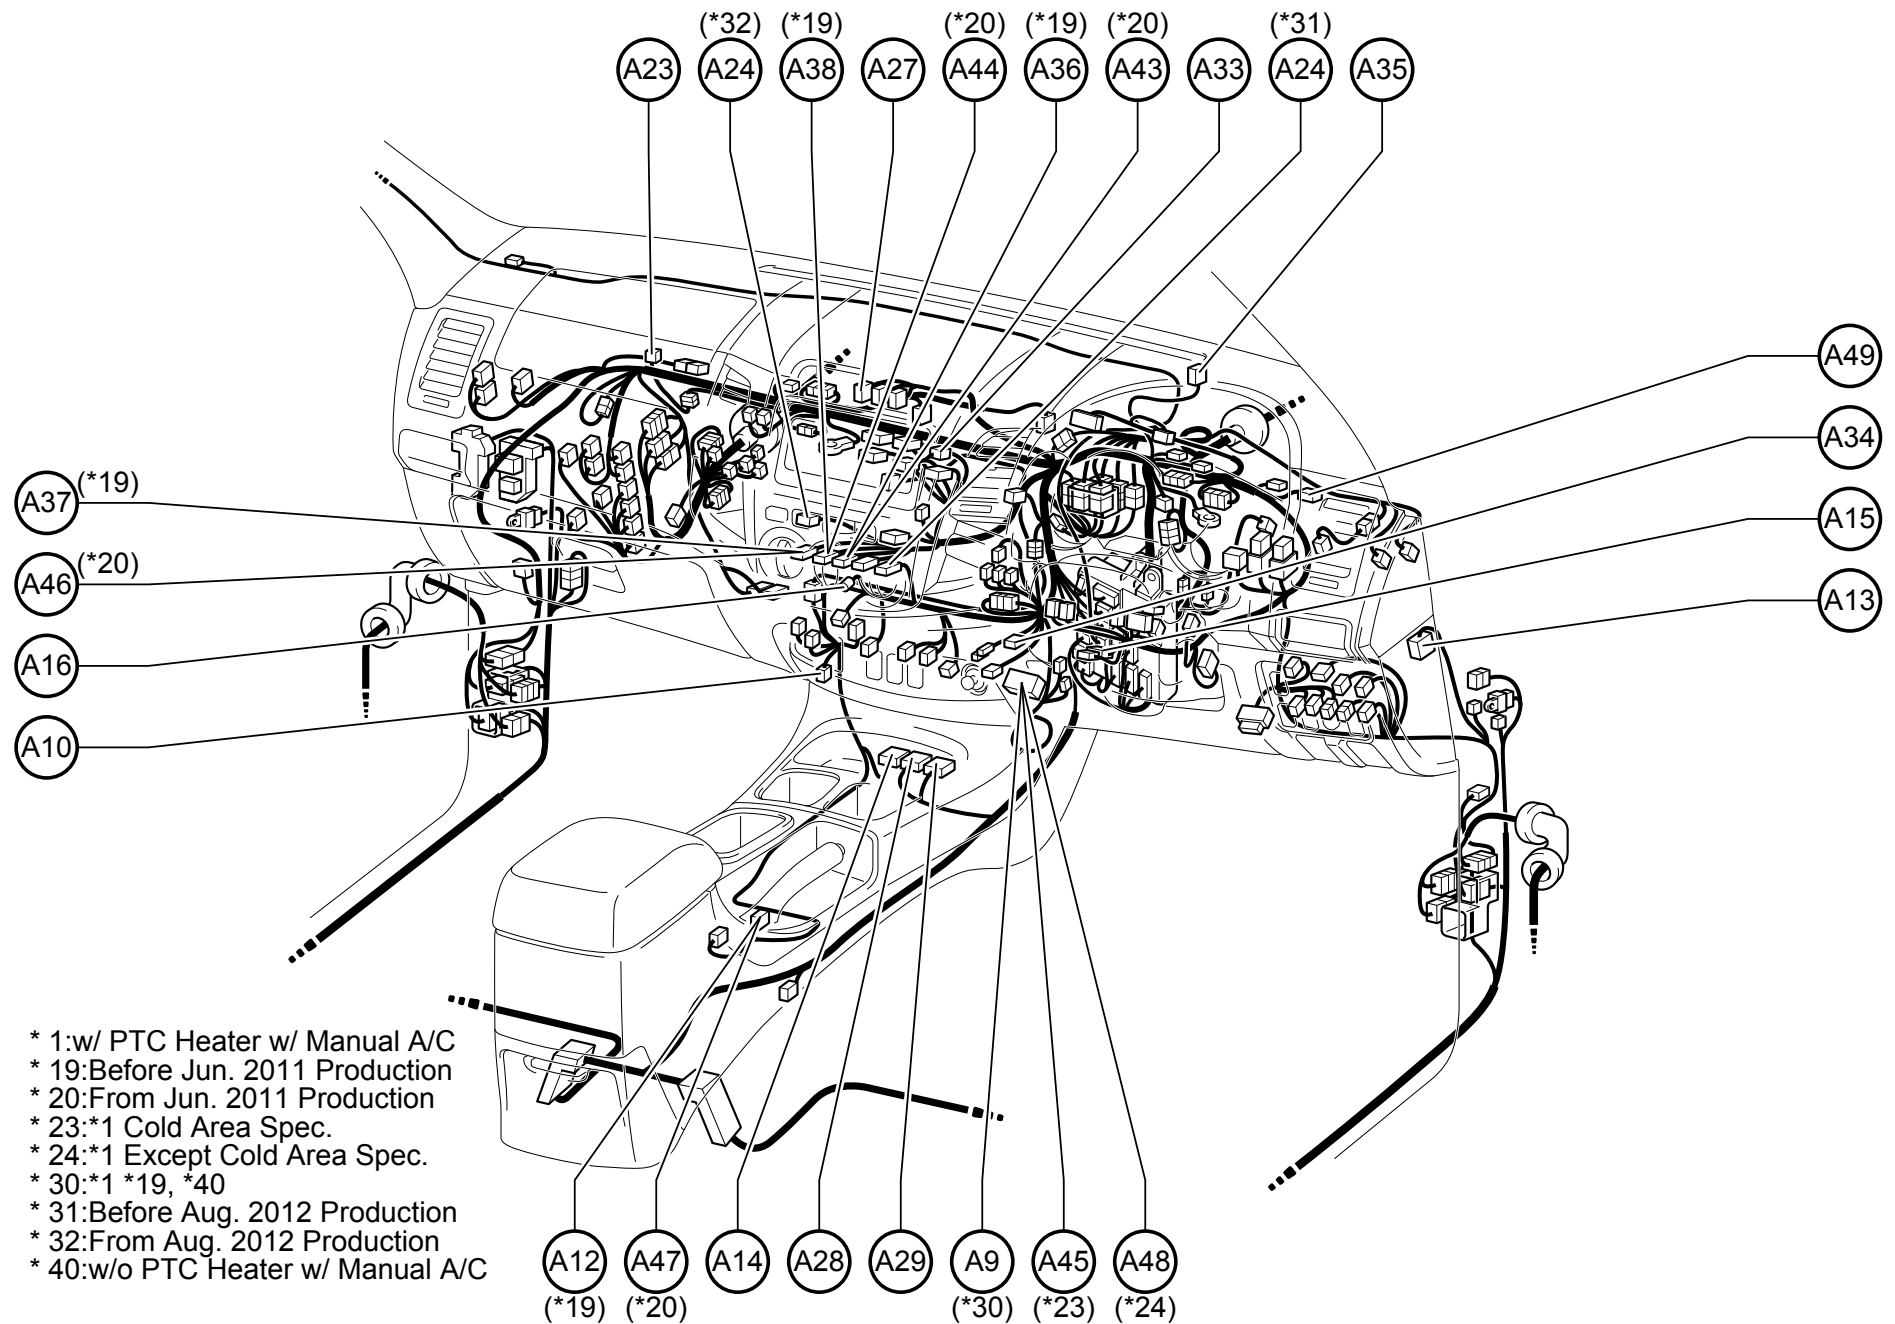 


- A 9 A/C Amplifier
- A 10 A/C Thermistor
- A 12 A/T Shift Lever Illumination
- A 13 Accelerator Position Sensor
- A 14 Airbag Sensor Assembly Center
- A 15 Airbag Squib (Steering Wheel Pad)
- A 16 Ashtray Illumination
- A 23 Airbag Squib (Front Passenger's Airbag Assembly)
- A 24 A/C SW
- A 27 Accessory Meter
- A 28 Airbag Sensor Assembly Center
- A 29 Airbag Sensor Assembly Center
- A 33 Antenna Amplifier
- A 34 A/C Room Temp. Sensor
- A 35 A/C Solar Sensor
- A 36 A/C Control Assembly
- A 37 A/C Control Assembly
- A 38 A/C Control Assembly
- A 43 A/C Control Assembly
- A 44 A/C Control Assembly
- A 45 A/C Amplifier
- A 46 A/C Control Assembly
- A 47 A/T Shift Lever Illumination
- A 48 A/C Amplifier
- A 49 Automatic Light Control Sensor

 
Position of Parts in Instrument Panel <RHD>

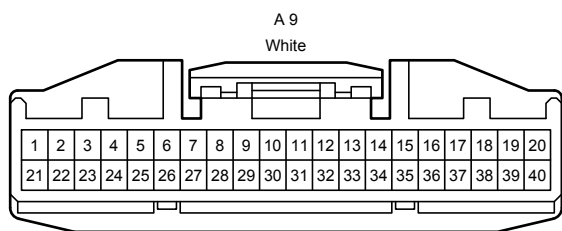














 
(Australia w/ PTC Heater Before Jun. 2011 Production, Europe Except Cold Area Spec. Before Jun. 2011 Production)

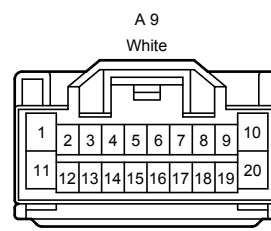


(w/o PTC Heater)

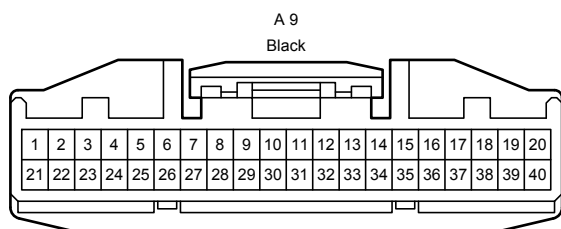 

              
(Cold Area Spec. Before Jun. 2011 Production)

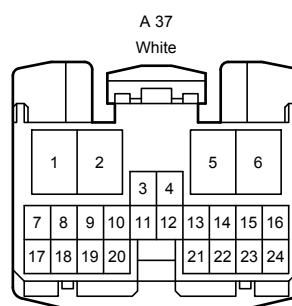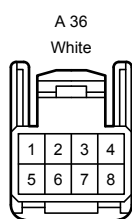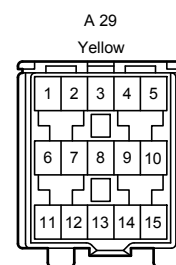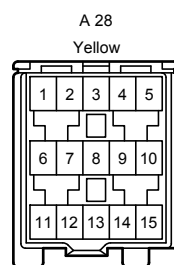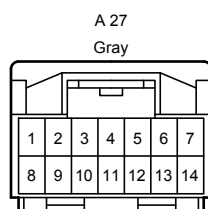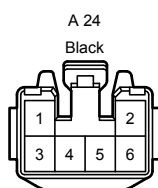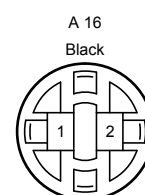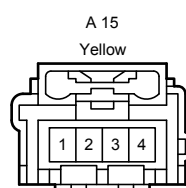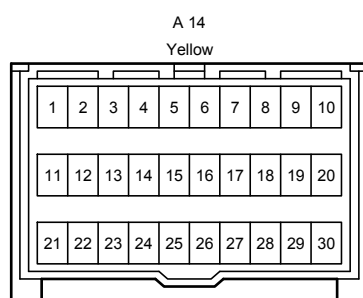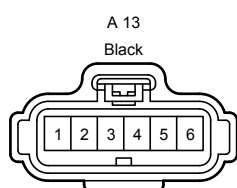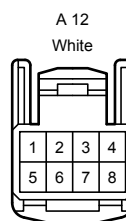


A 38
White

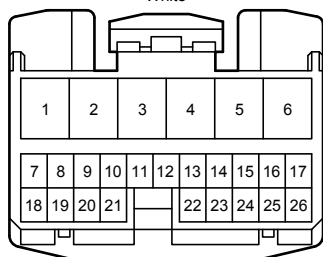 


A 43
White

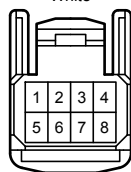 


A 44
White

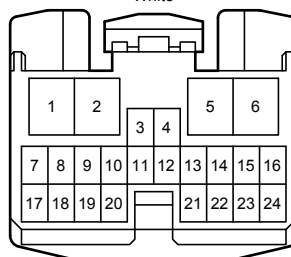 


A 45
Black

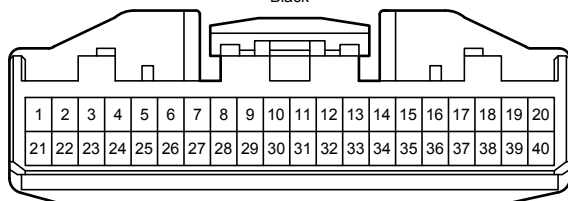 


A 46
White

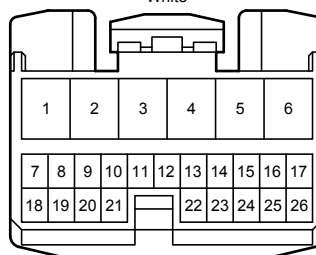 


A 47
White

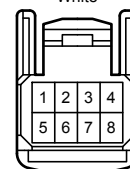 


A 48
White

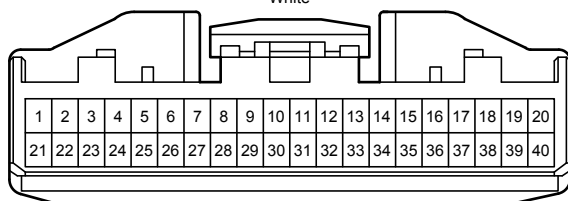 

A 49
White




















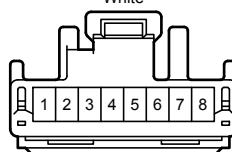 


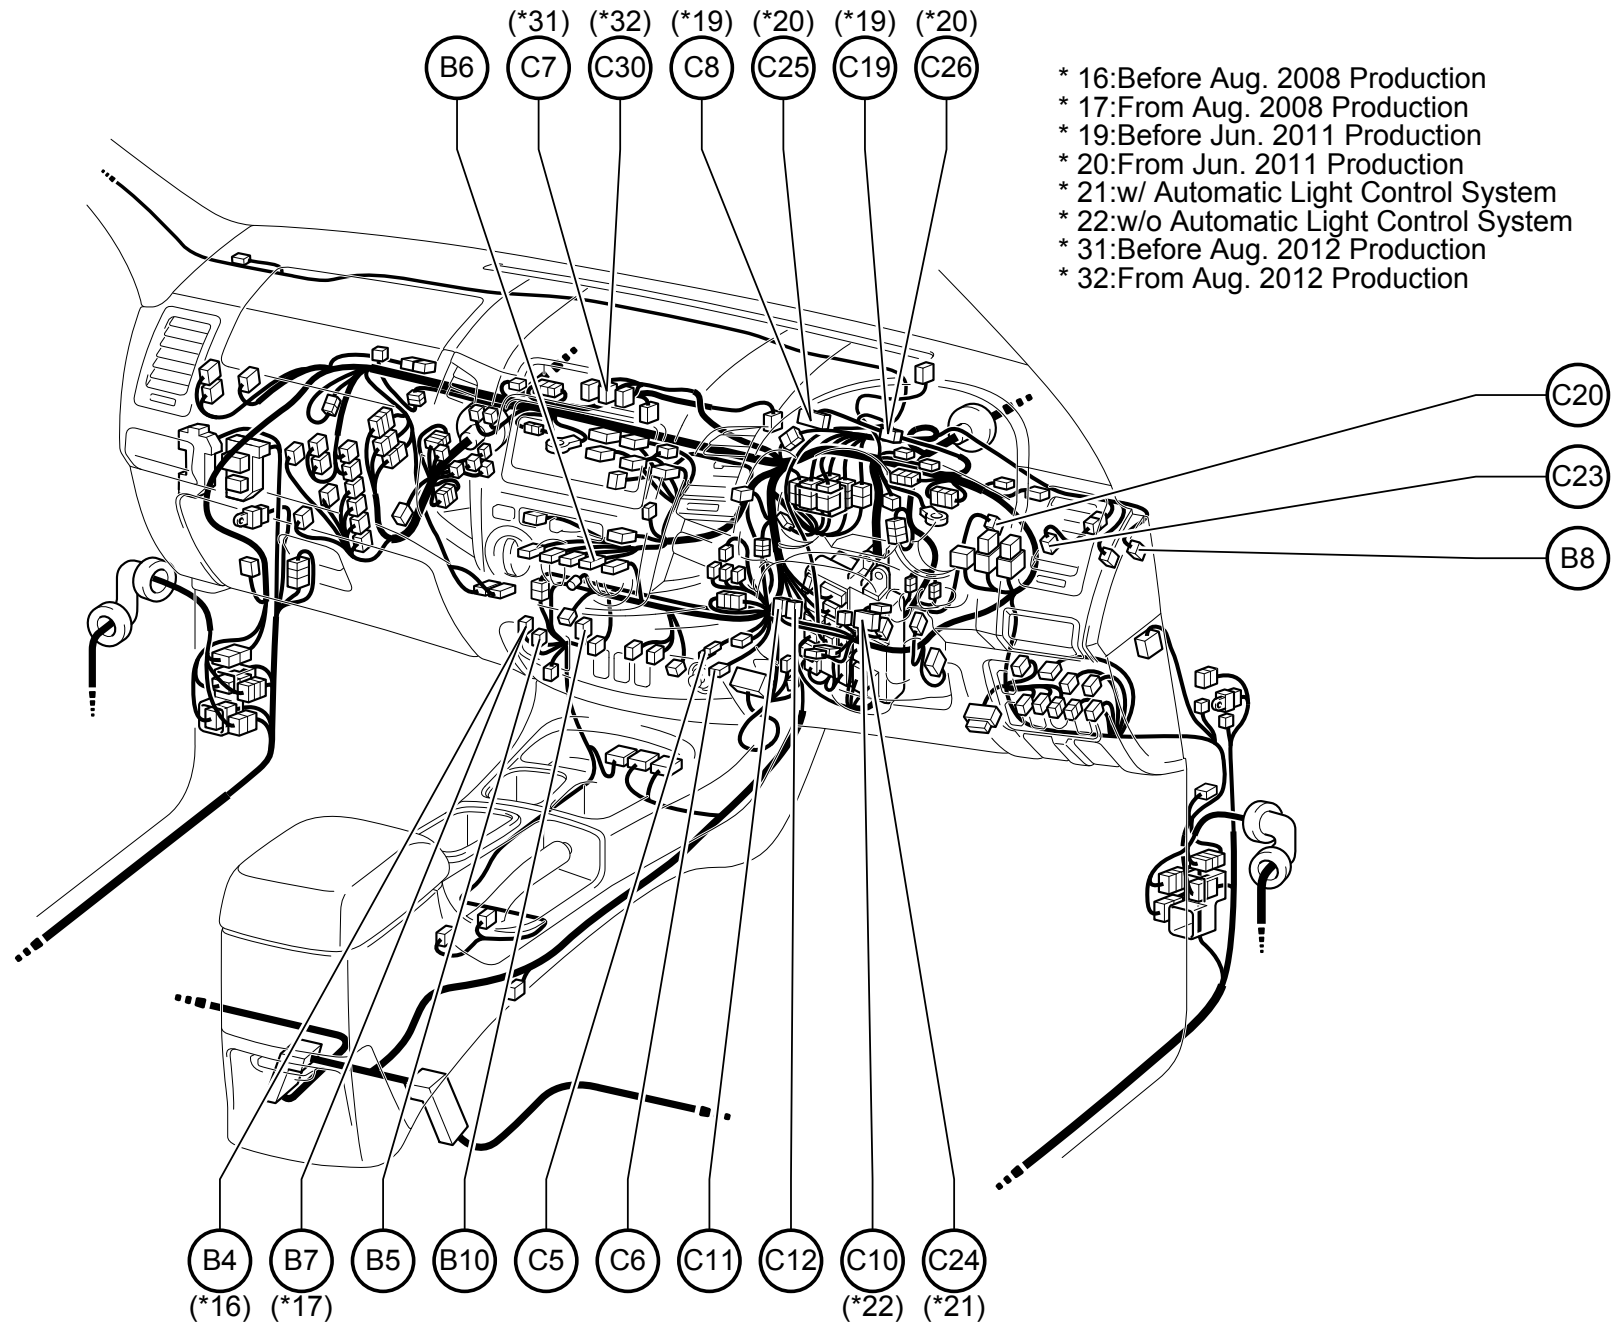 


B 4 Blower Motor
B 5 Blower Resistor
B 6 Blower SW
B 7 Blower Motor
B 8 Brake Pedal Load Sensing Switch
B 10 Blower Motor Controller

C 5 Cigarette Lighter
C 6 Cigarette Lighter Illumination
C 7 Clock
C 8 Combination Meter
C 10 Combination SW
C 11 Combination SW
C 12 Combination SW
C 19 Combination Meter
C 20 Cruise Control Clutch Switch
C 23 Clutch Switch Assembly
C 24 Combination SW
C 25 Combination Meter
C 26 Combination Meter
C 30 Clock

            
 
 
 
 
 
 
 
 
 
Position of Parts in Instrument Panel <RHD>

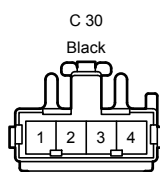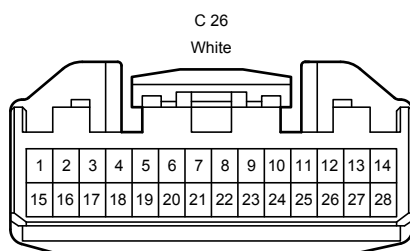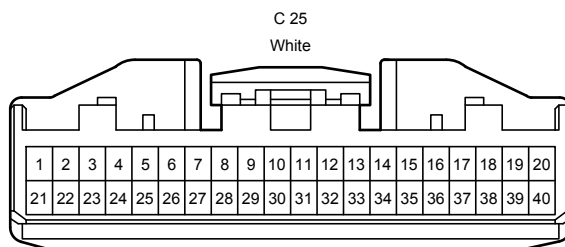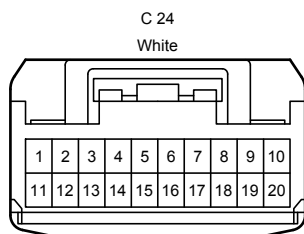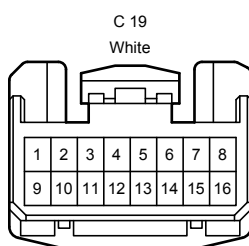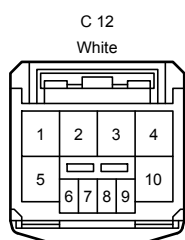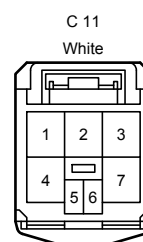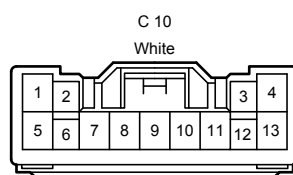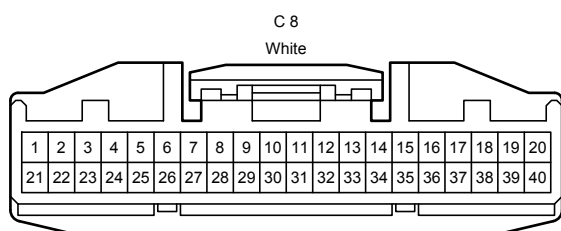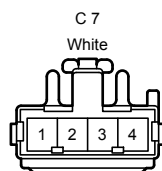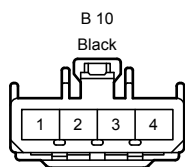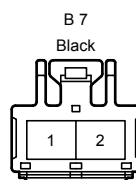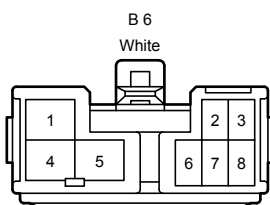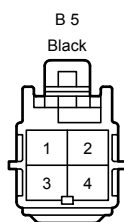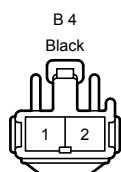


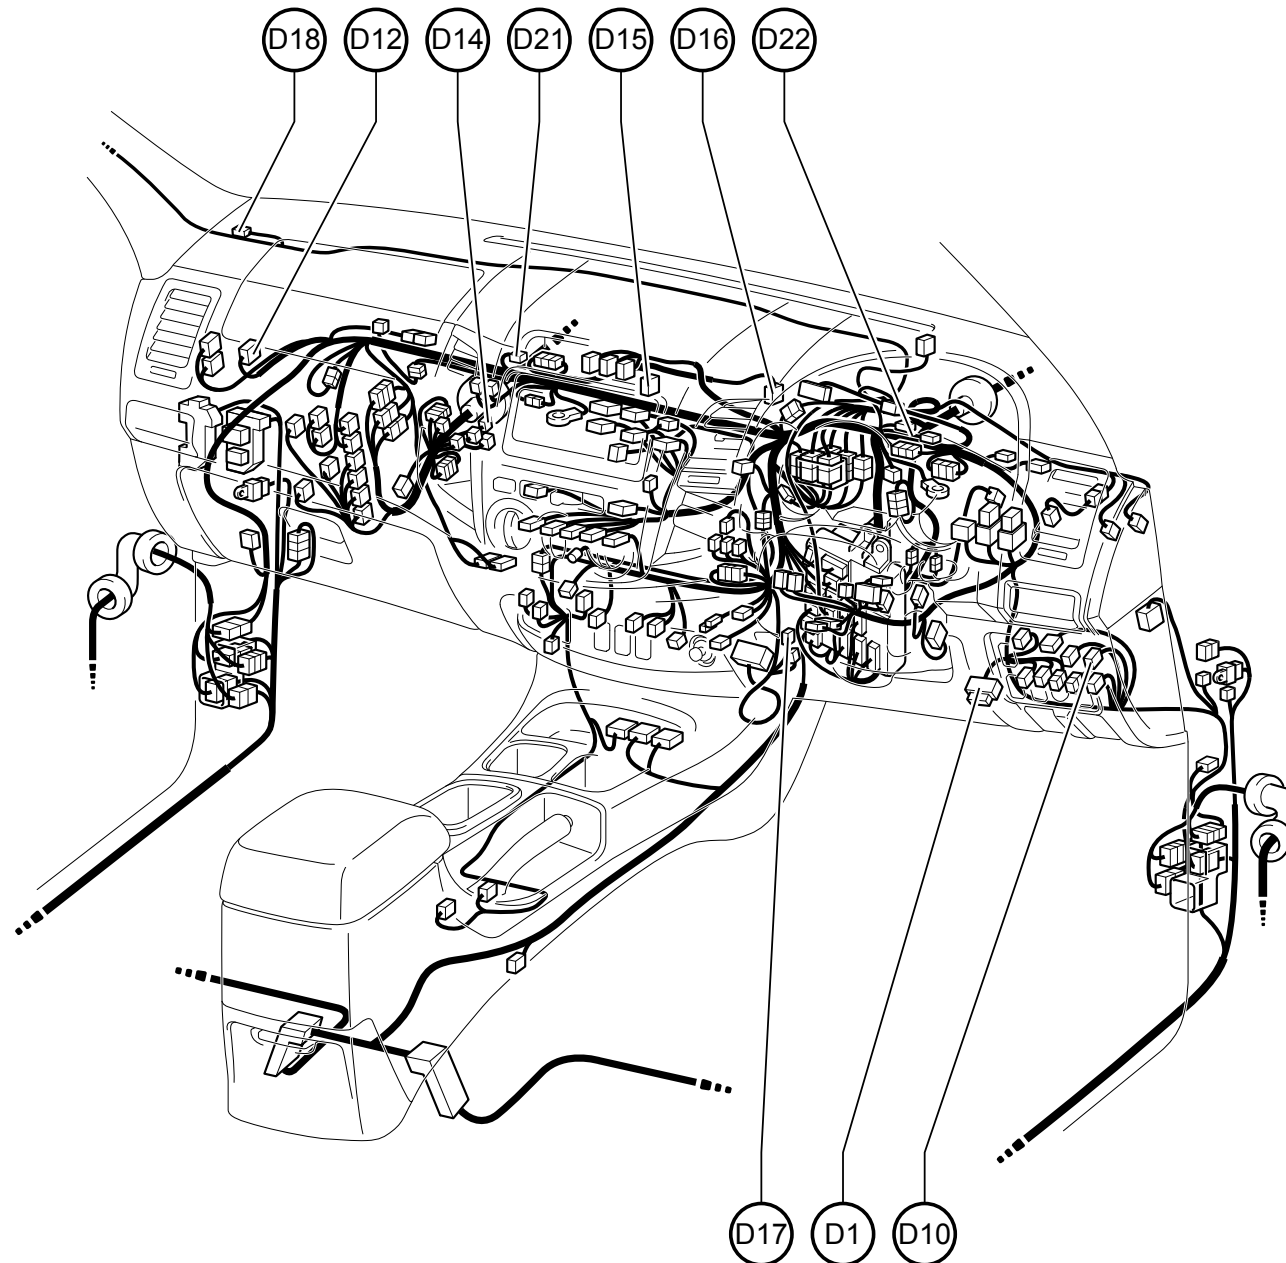

- D 1 DLC3
- D 10 Diff. Lock SW
- D 12 Door Control Receiver
- D 14 Diode (for EGR No.2 Valve)
- D 15 Damper Servo Motor (Air Inlet)
- D 16 Damper Servo Motor (Air Vent Mode)
- D 17 Damper Servo Motor (Air Mix)
- D 18 Diode (Door Courtesy SW)
- D 21 Diode (Automatic Light Control Sensor)
- D 22 Diode (Magnet Clutch Relay)

           Position of Parts in Instrument Panel <RHD>

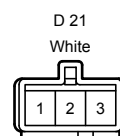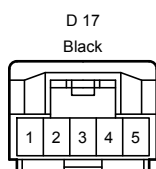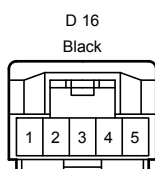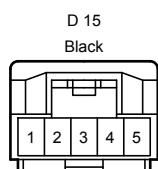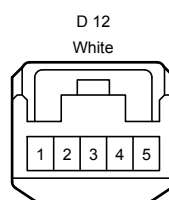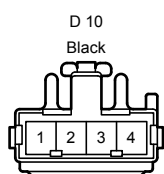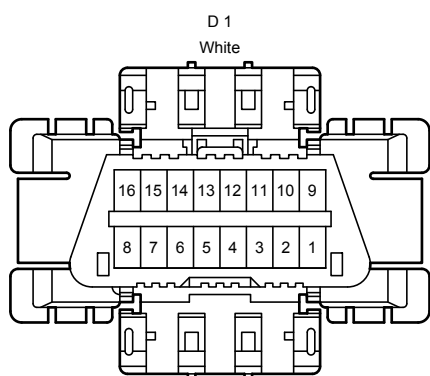

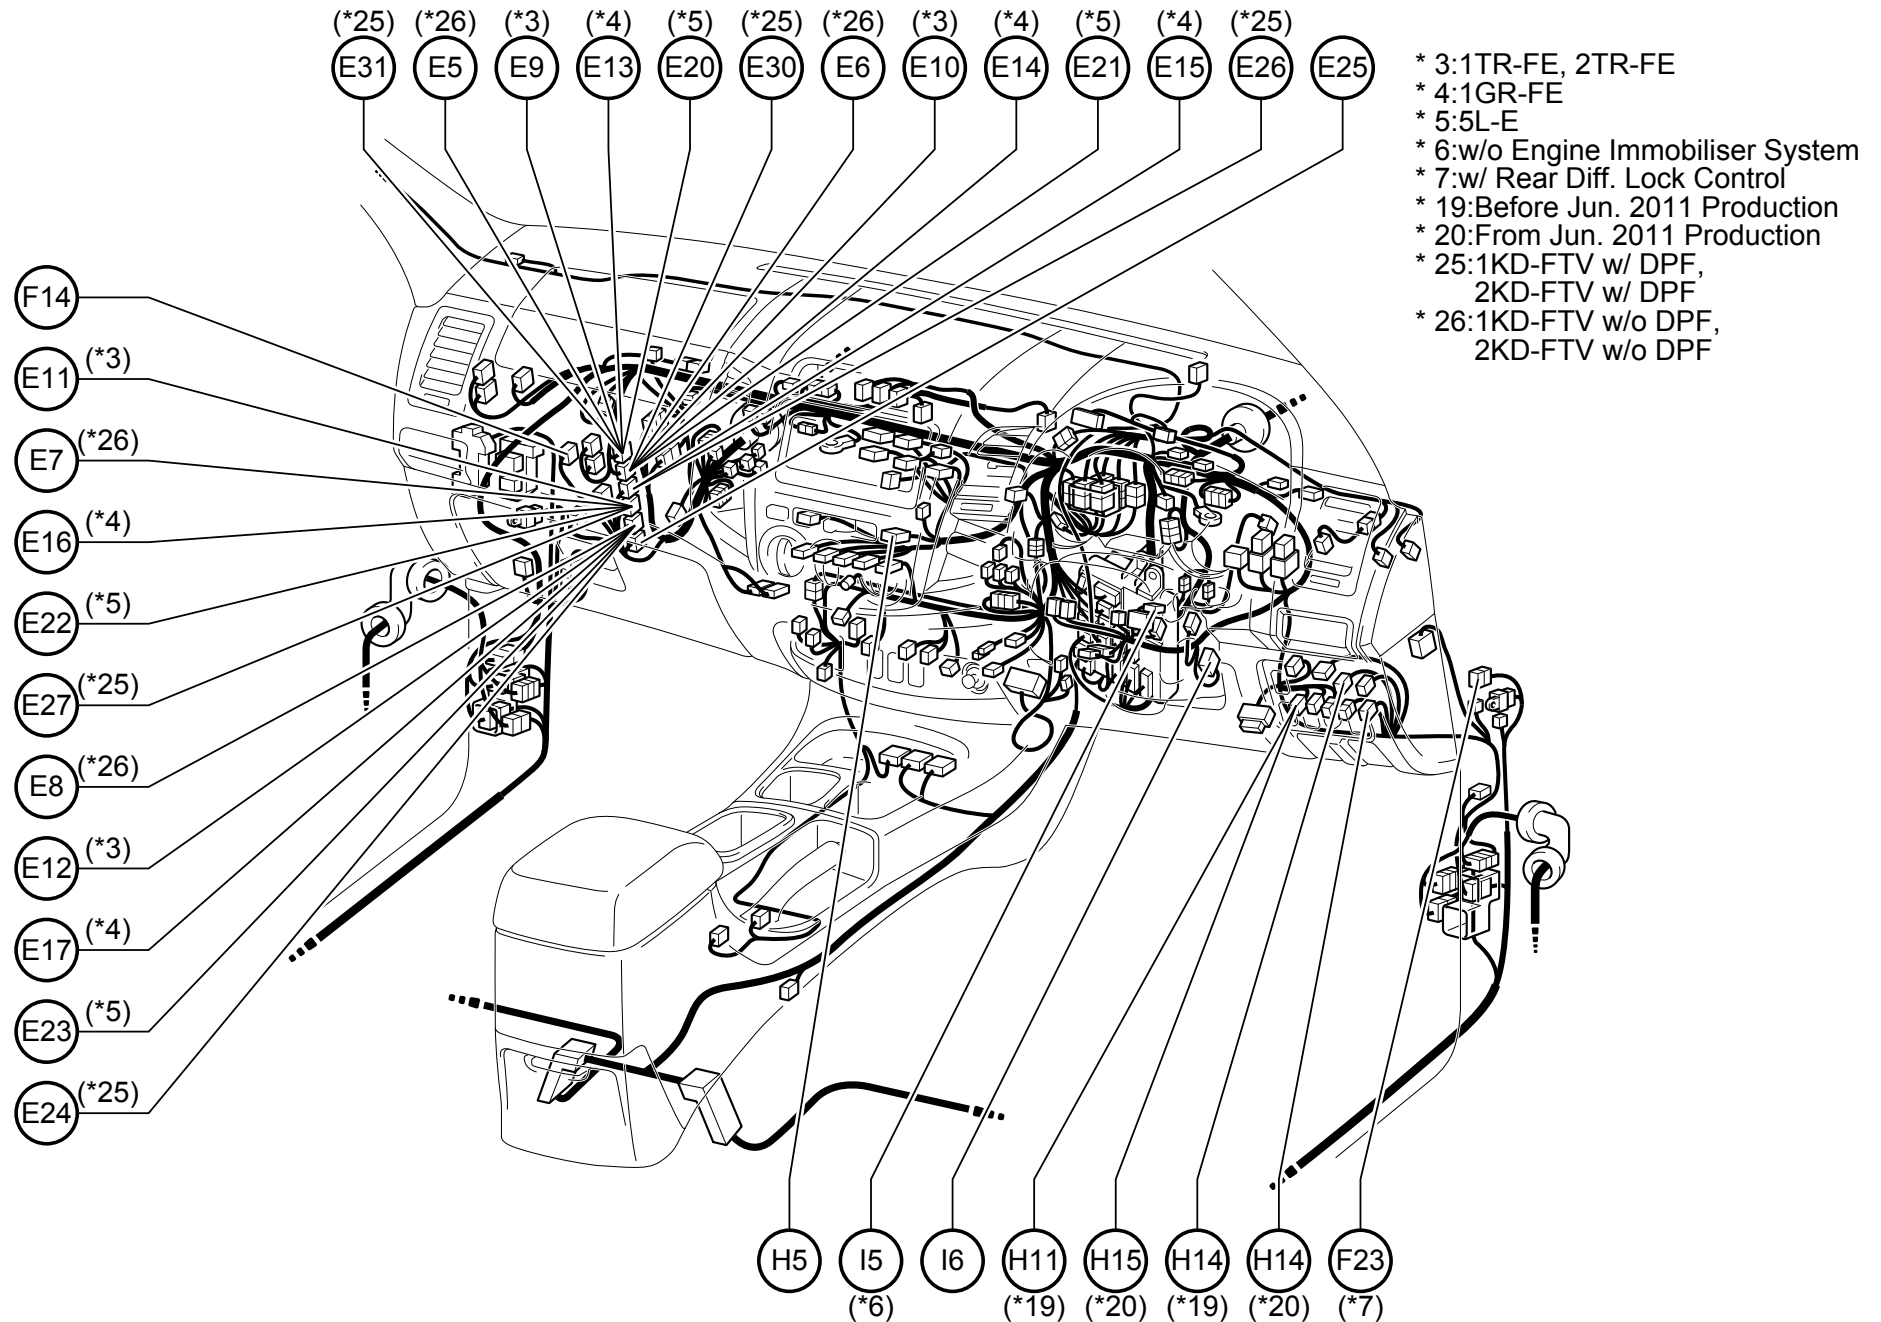

- E 5 Engine ECU
- E 6 Engine ECU
- E 7 Engine ECU
- E 8 Engine ECU
- E 9 Engine ECU
- E 10 Engine ECU
- E 11 Engine ECU
- E 12 Engine ECU
- E 13 Engine ECU
- E 14 Engine ECU
- E 15 Engine ECU
- E 16 Engine ECU
- E 17 Engine ECU
- E 20 Engine ECU
- E 21 Engine ECU
- E 22 Engine ECU
- E 23 Engine ECU
- E 24 Engine ECU
- E 25 Engine ECU
- E 26 Engine ECU
- E 27 Engine ECU
- E 30 Engine ECU
- E 31 Engine ECU

 
- F 14 4WD Control ECU
- F 23 4WD Control ECU (Rear Diff. Lock)

- H 5 Hazard Warning Signal SW
- H 11 Headlamp Leveling SW
- H 14 Headlight Cleaner Switch
- H 15 Headlamp Leveling SW

- I 5 Ignition Key Cylinder Lamp
- I 6 Ignition SW


E 5

Gray

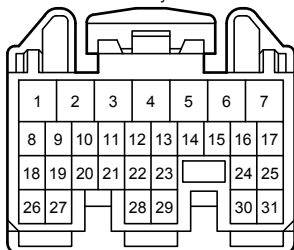


E 6

 Gray

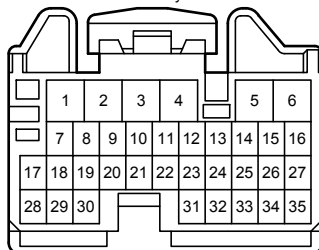


E 7

 Gray

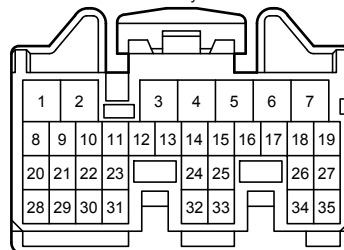


E 8

 Gray

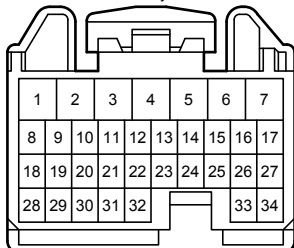


E 9

 White

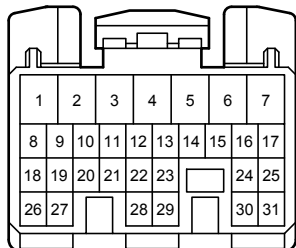


E 10

 White

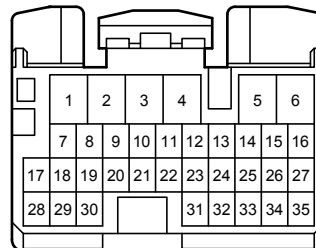


E 11

 White

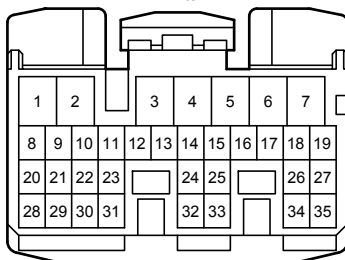


E 12

 White

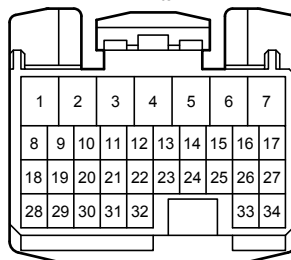


E 13

 White

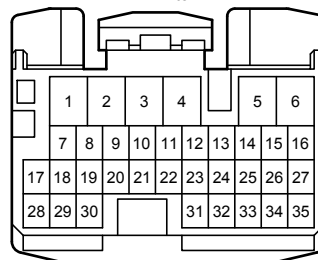


E 14

 White

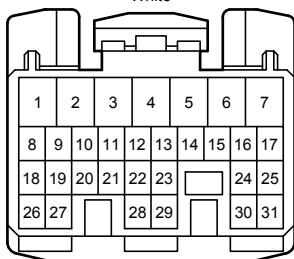


E 15

 White

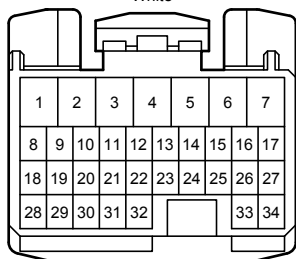


E 16

 White

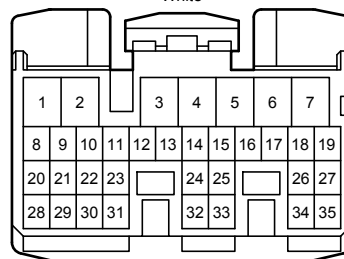


E 17

 White

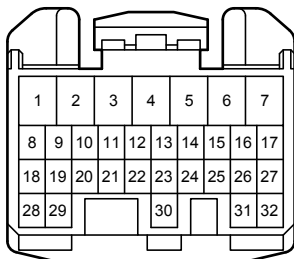


E 20

 White

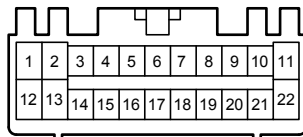


E 21

 Dark Gray

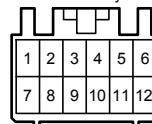


E 22

 White

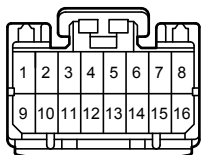


E 23

 White

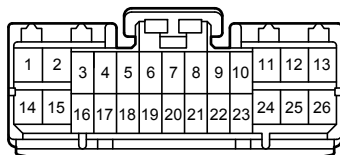


E 24

 Black

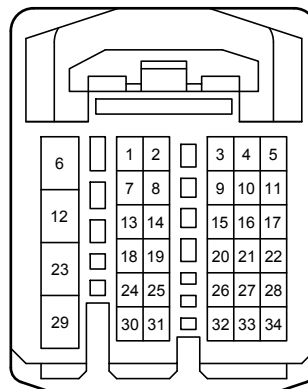


E 25

 White

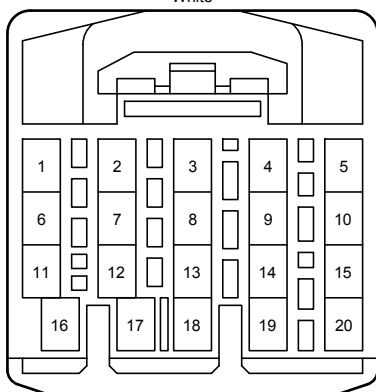


E 26

 White

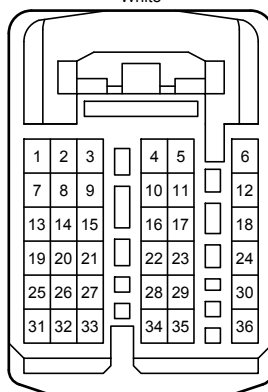


E 27

 Gray

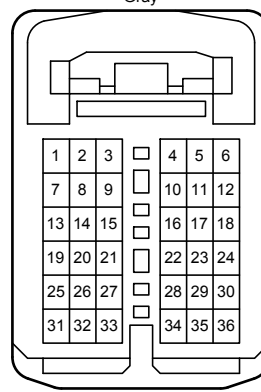


E 30

 White

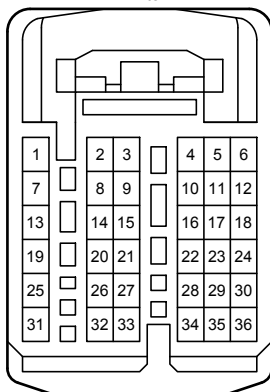


E 31

 White

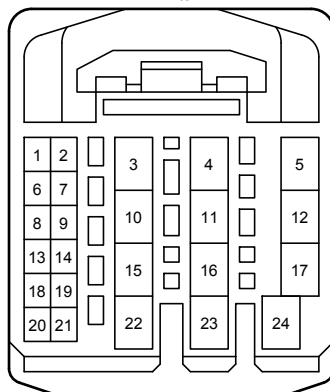


F 14

 Green




F 23

 White

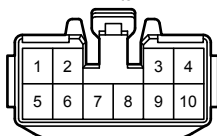


H 5

 White

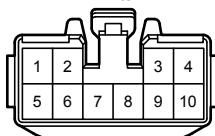


H 11



 
White




H 14

    Black



























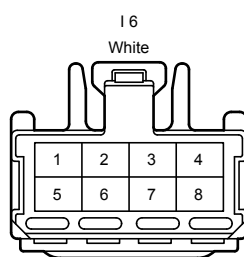
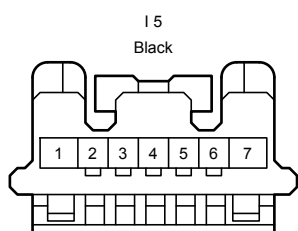
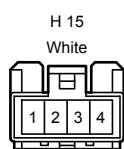


* 2:1KD-FTV, 2KD-FTV

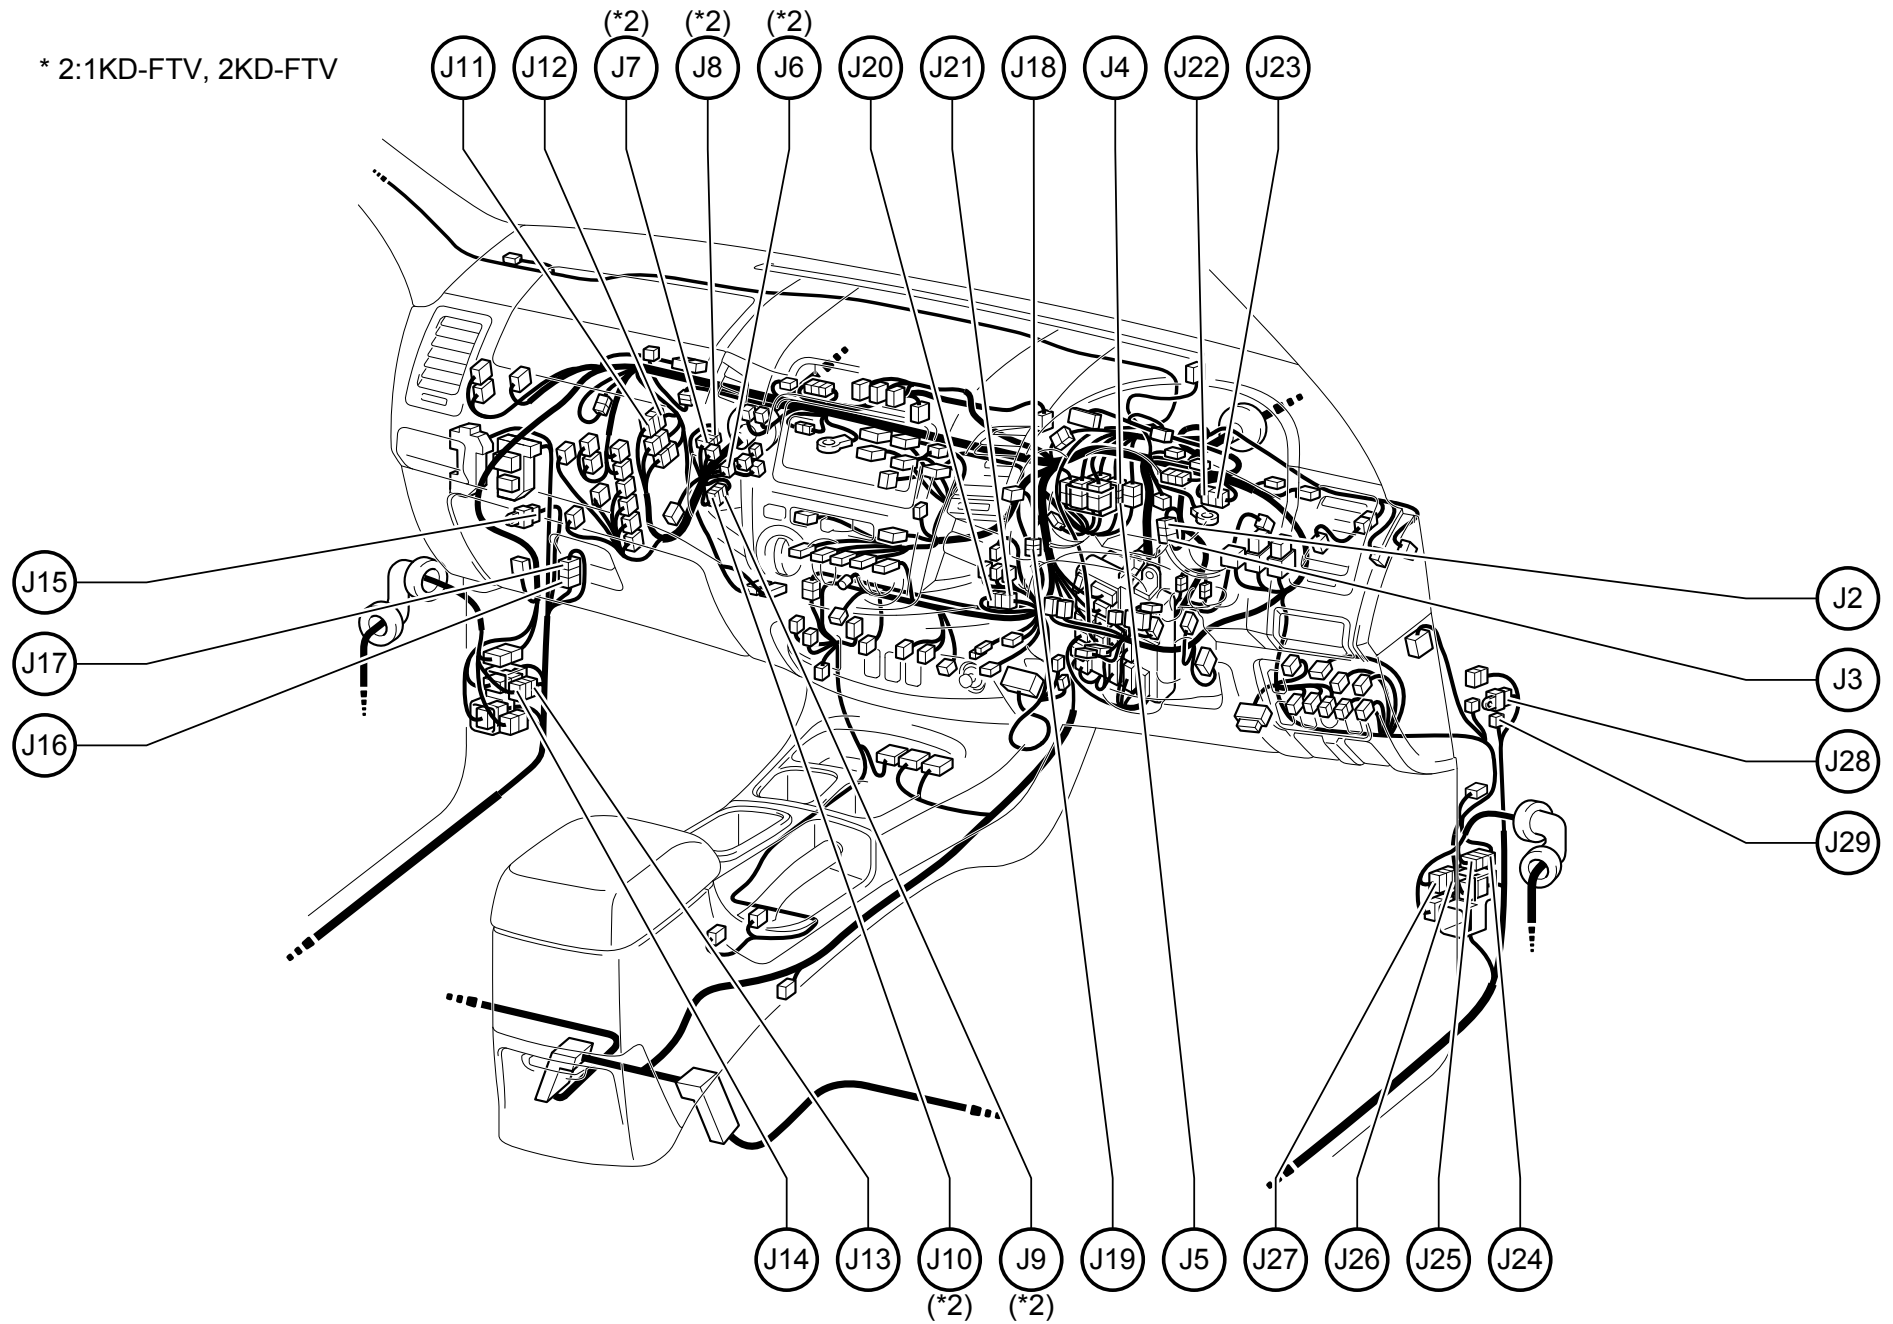 



J 2 Junction Connector
J 3 Junction Connector
J 4 Junction Connector
J 5 Junction Connector
J 6 Junction Connector
J 7 Junction Connector
J 8 Junction Connector
J 9 Junction Connector
J 10 Junction Connector
J 11 Junction Connector
J 12 Junction Connector
J 13 Junction Connector
J 14 Junction Connector
J 15 Junction Connector
J 16 Junction Connector
J 17 Junction Connector
J 18 Junction Connector
J 19 Junction Connector
J 20 Junction Connector
J 21 Junction Connector
J 22 Junction Connector
J 23 Junction Connector
J 24 Junction Connector
J 25 Junction Connector
J 26 Junction Connector
J 27 Junction Connector
J 28 Junction Connector
J 29 Junction Connector

                           Position of Parts in Instrument Panel <RHD>

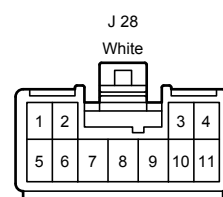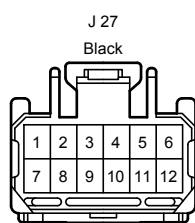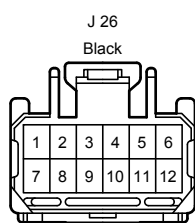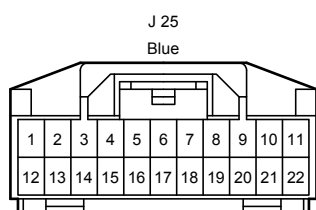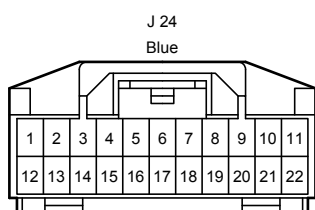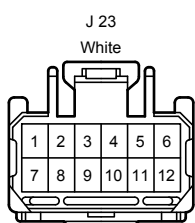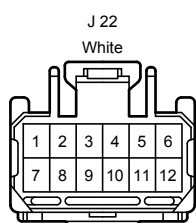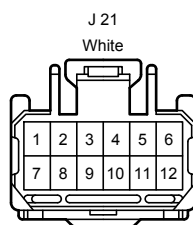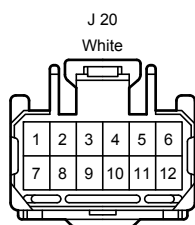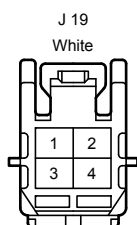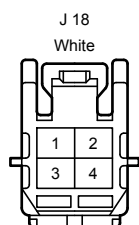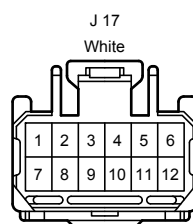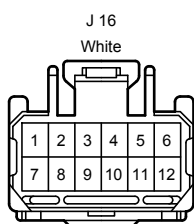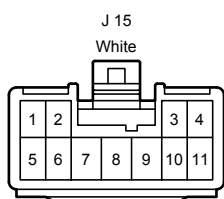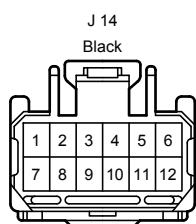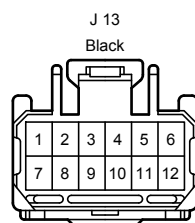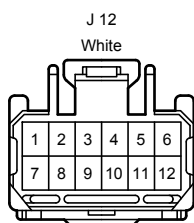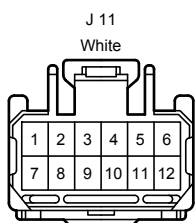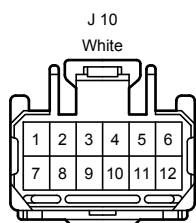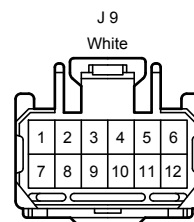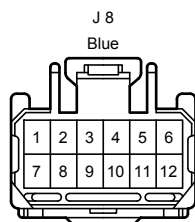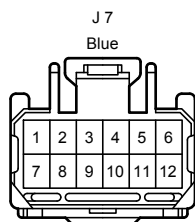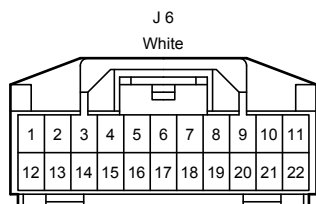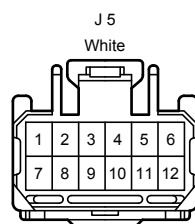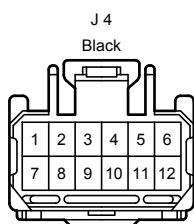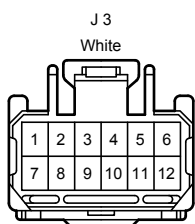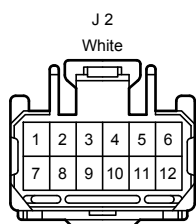
























J 29
White

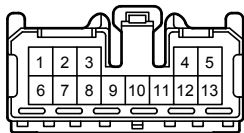 

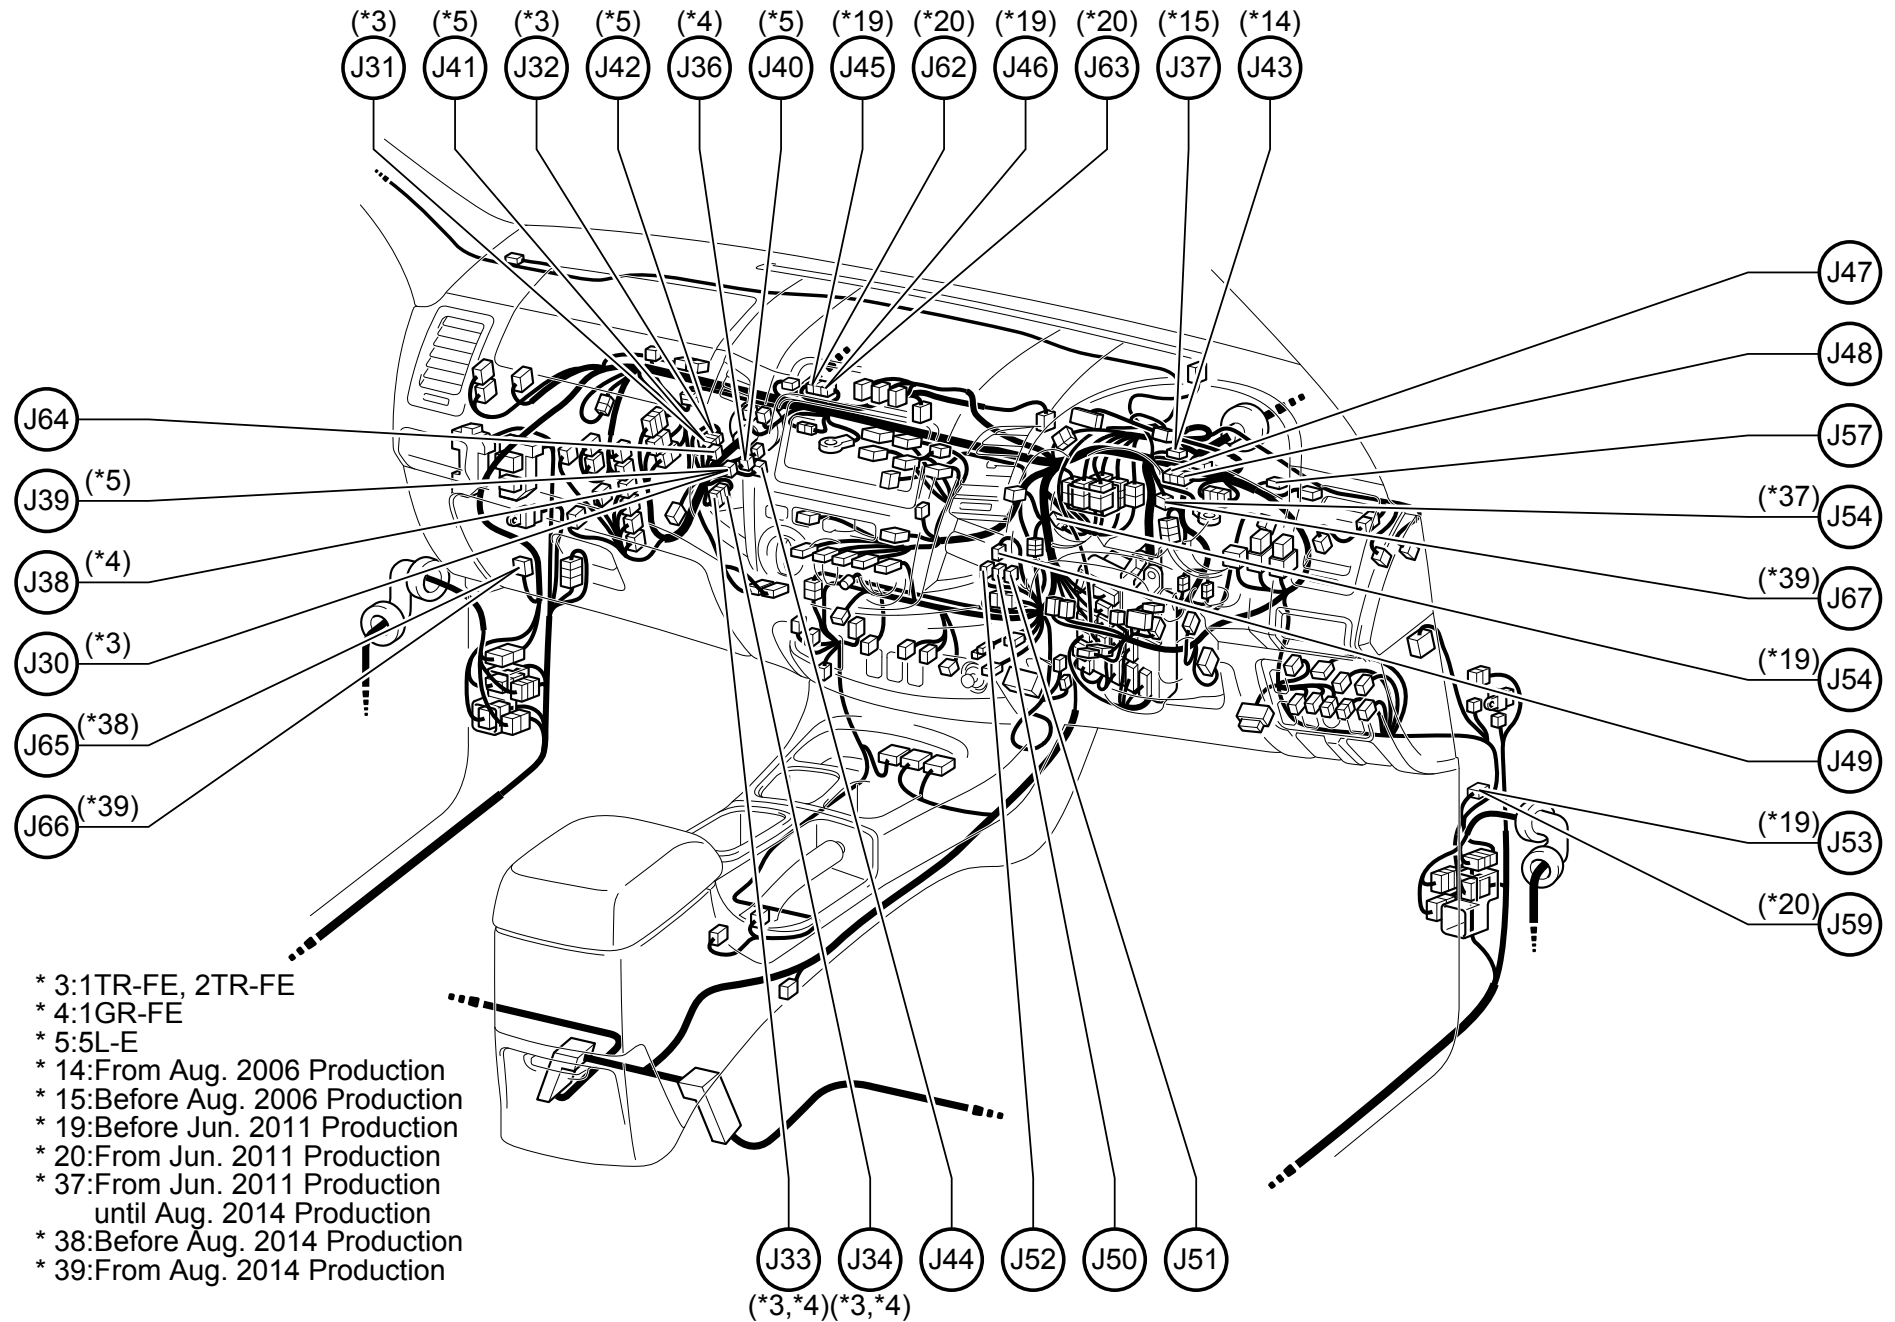 


J 30 Junction Connector
J 31 Junction Connector
J 32 Junction Connector
J 33 Junction Connector
J 34 Junction Connector
J 36 Junction Connector
J 37 Junction Connector
J 38 Junction Connector
J 39 Junction Connector
J 40 Junction Connector
J 41 Junction Connector
J 42 Junction Connector
J 43 Junction Connector
J 44 Junction Connector
J 45 Junction Connector
J 46 Junction Connector
J 47 Junction Connector
J 48 Junction Connector
J 49 Junction Connector
J 50 Junction Connector
J 51 Junction Connector
J 52 Junction Connector
J 53 Junction Connector
J 54 Junction Connector
J 57 Junction Connector
J 59 Junction Connector
J 62 Junction Connector
J 63 Junction Connector
J 64 Junction Connector
J 65 Junction Connector
J 66 Junction Connector
J 67 Junction Connector

                       Position of Parts in Instrument Panel <RHD>

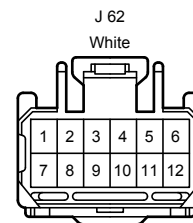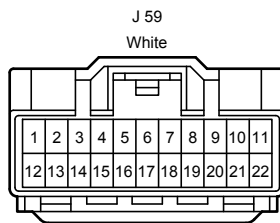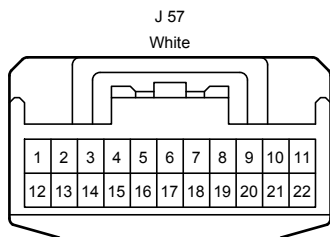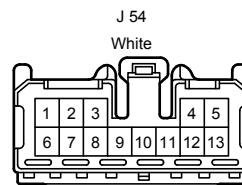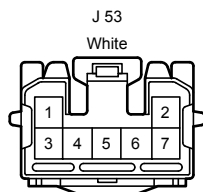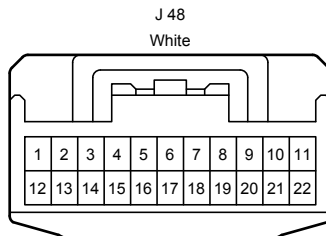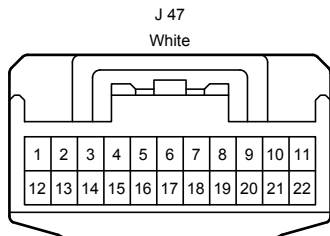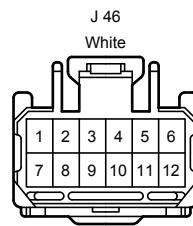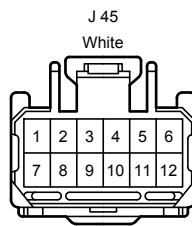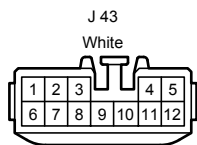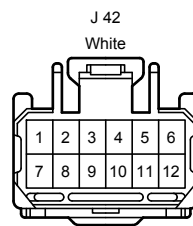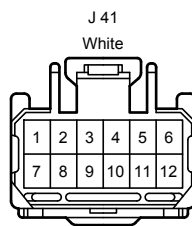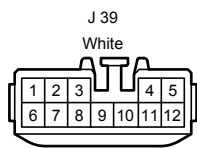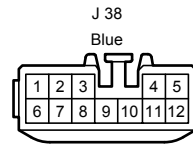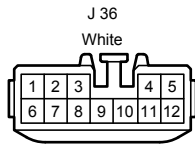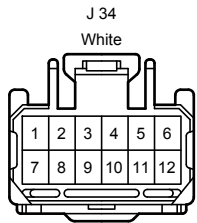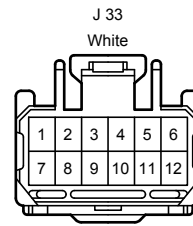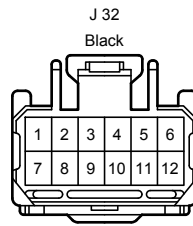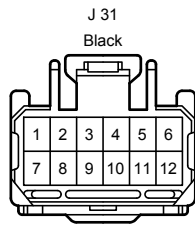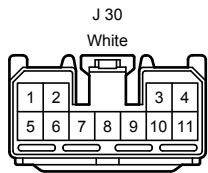


J 63

 White

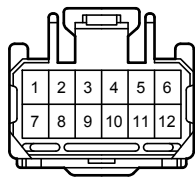


J 64

 White

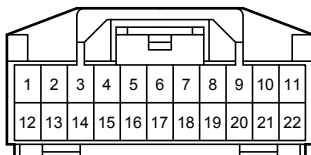


J 65

 White

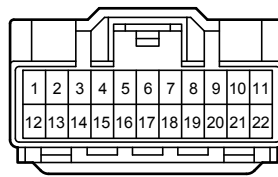


J 66

 
White

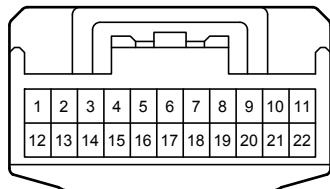

J 67

  White

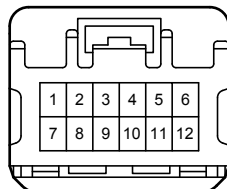

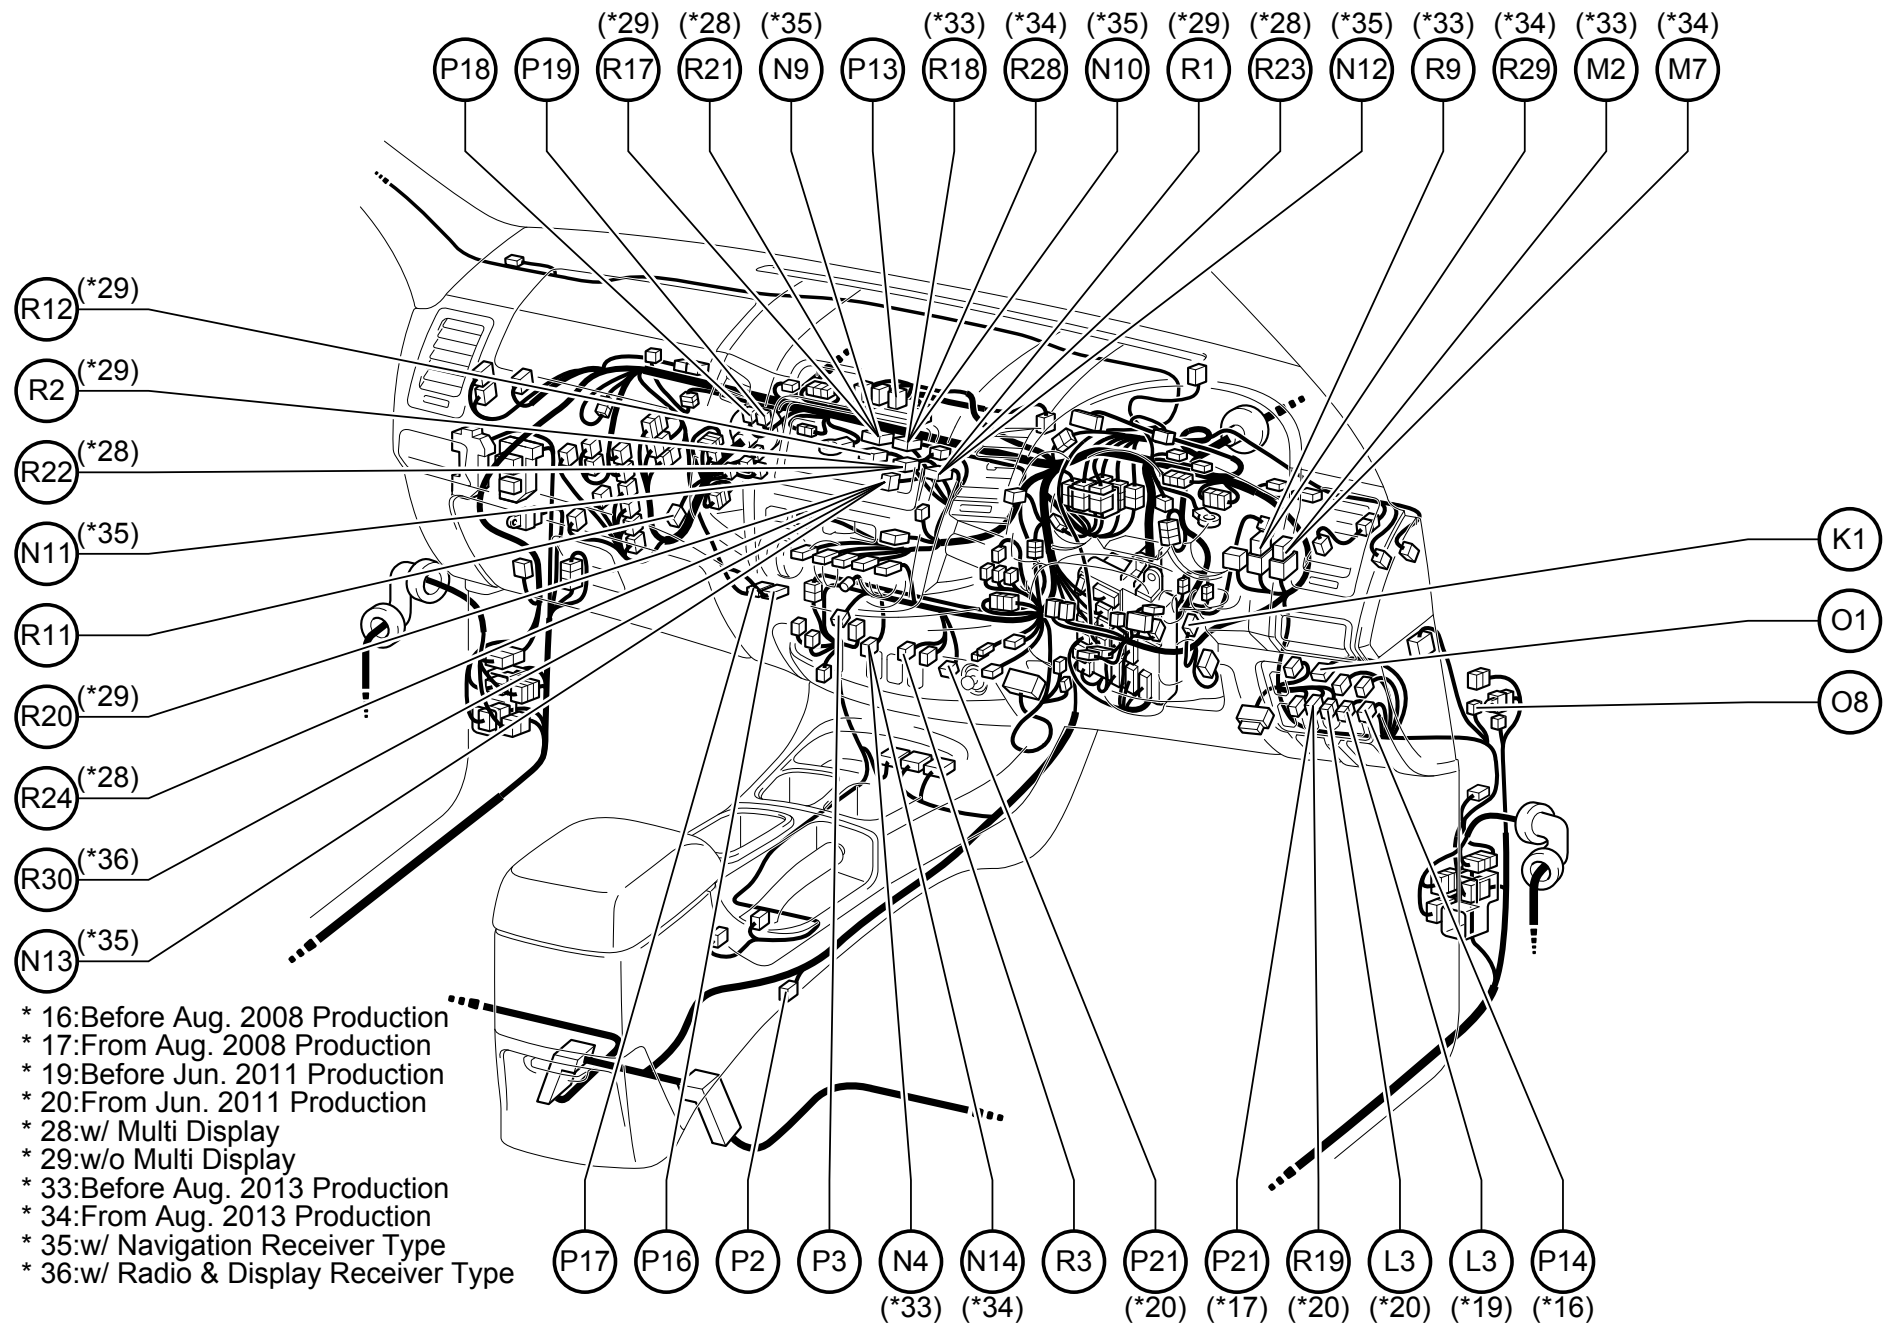

- K 1 Key Interlock Solenoid

- L 3 Light Control Rheostat

- M 2 Magnet Clutch Relay
- M 7 Magnet Clutch Relay

 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
- N 4 No. 1 Stereo Jack Adapter Assembly
- N 9 Navigation Receiver Assembly
- N 10 Navigation Receiver Assembly
- N 11 Navigation Receiver Assembly
- N 12 Navigation Receiver Assembly
- N 13 Navigation Receiver Assembly
- N 14 No. 1 Stereo Jack Adapter Assembly

- O 1 Outer Mirror SW
- O 8 Option Connector (Daytime Running Light ECU)














- P 2 Parking Brake SW
- P 3 Power Outlet Socket
- P 13 Passenger Seat Belt Warning Lamp
- P 14 Power Heater SW
- P 16 PTC Heater
- P 17 PTC Heater
- P 18 PTC Heater Relay (No.1)
- P 19 PTC Heater Relay (No.2)
- P 21 Power Heater SW


- R 1 Radio Receiver Assembly
- R 2 Radio Receiver Assembly
- R 3 Rear Window Defogger SW
- R 9 Rear Fog Lamp Relay
- R 11 Resistor (L4 Position)
- R 12 Radio Receiver Assembly
- R 17 Radio Receiver Assembly
- R 18 Radio & Display Receiver Assembly
- R 19 Rear Fog Light Switch
- R 20 Radio Receiver Assembly
- R 21 Radio & Display Receiver Assembly
- R 22 Radio & Display Receiver Assembly
- R 23 Radio & Display Receiver Assembly
- R 24 Radio & Display Receiver Assembly
- R 28 Radio & Display Receiver Assembly
- R 29 Rear Fog Lamp Relay
- R 30 Radio & Display Receiver Assembly

Position of Parts in Instrument Panel <RHD>

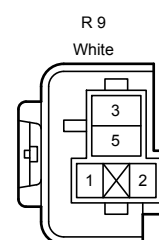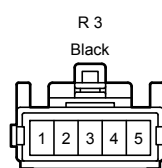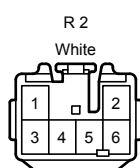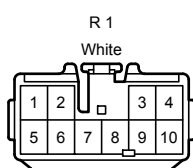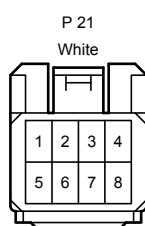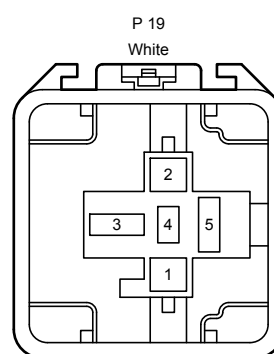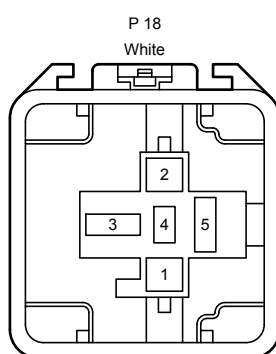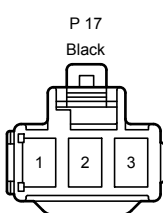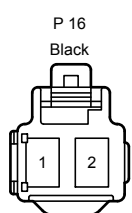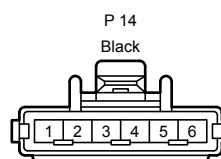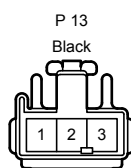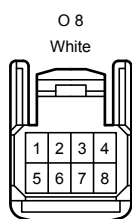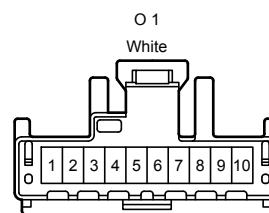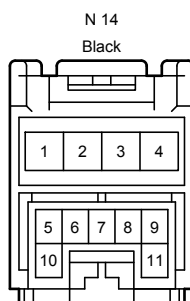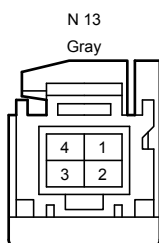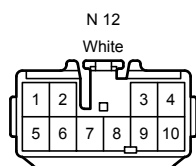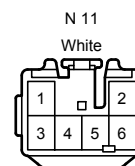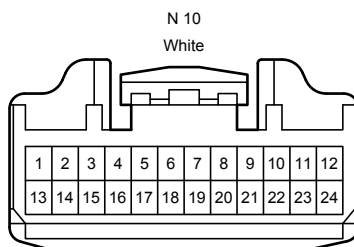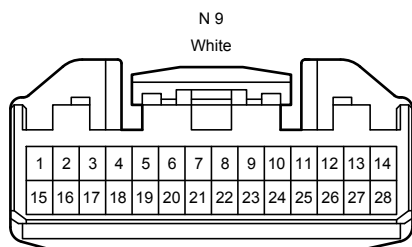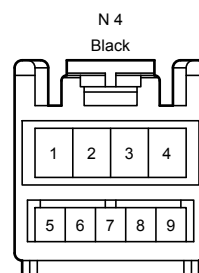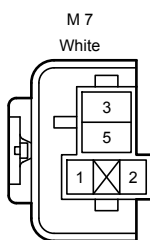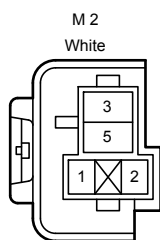

              Position of Parts in Instrument Panel <RHD>

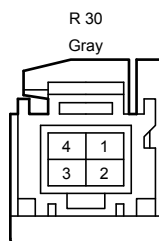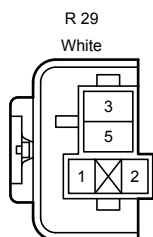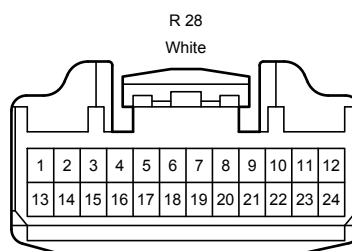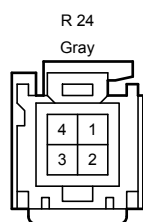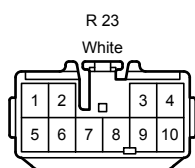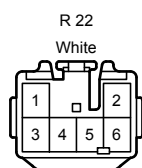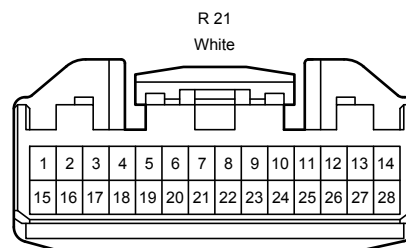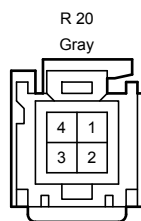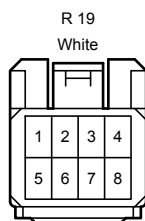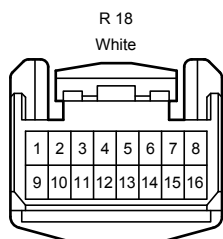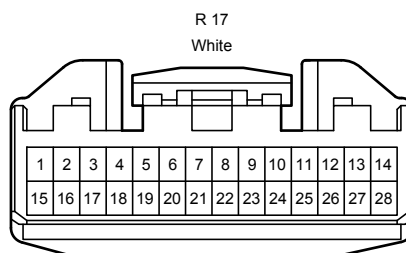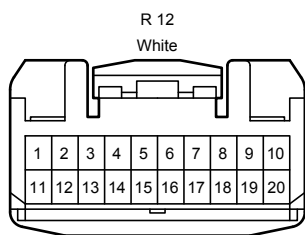

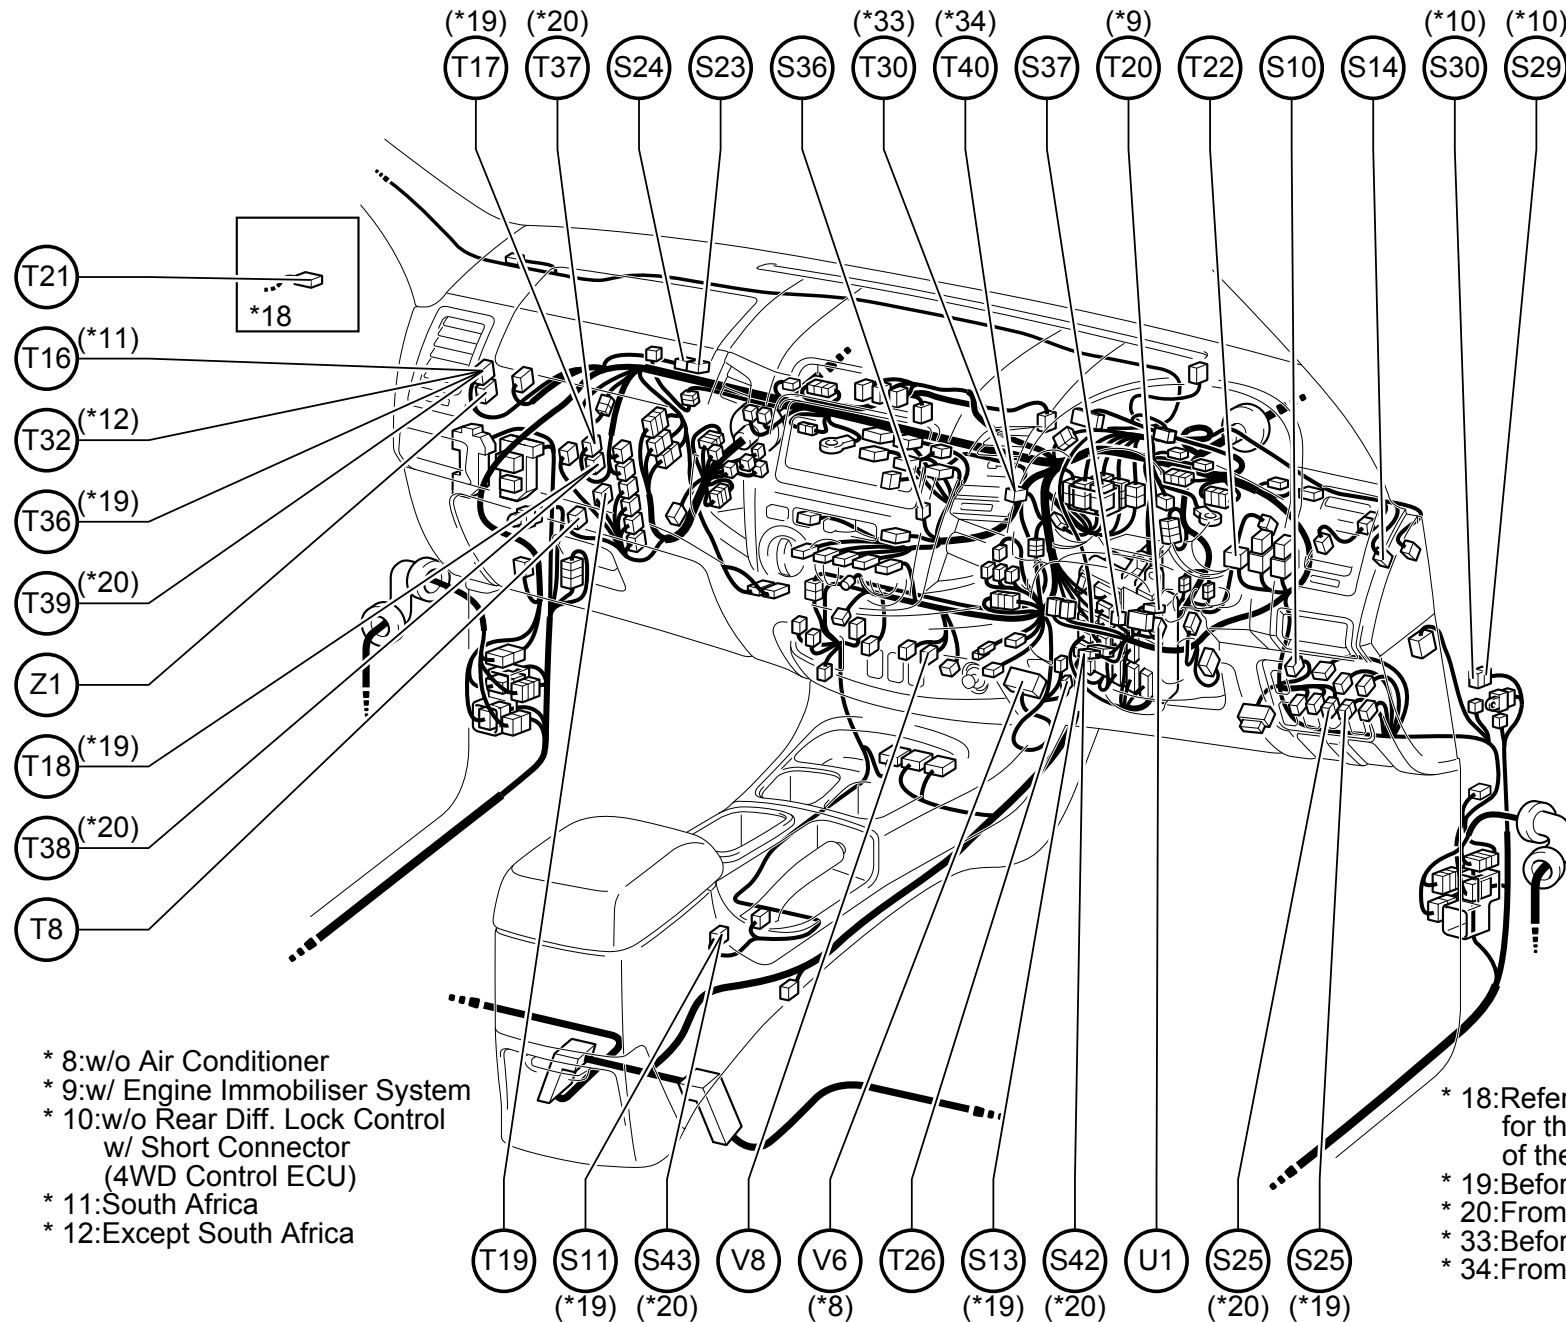

S 10 Security Indicator Lamp
 S 11 Shift Lock Control ECU
 S 13 Spiral Cable
 S 14 Stop Lamp SW
 S 23 Short Connector (Theft Warning ECU)
 S 24 Short Connector (Theft Warning ECU)
 S 25 Short Connector (Light Control Rheostat)
 S 29 Short Connector (4WD Control ECU)
 S 30 Short Connector (4WD Control ECU)
 S 36 Skid Control Buzzer
 S 37 Steering Sensor
 S 42 Spiral Cable
 S 43 Shift Lock Control ECU

 
 
 
 
 
 
 
 
 
 
 
 
 
 
T 8 Turbo Motor Driver
 T 16 Theft Warning ECU
 T 17 Transmission Control ECU
 T 18 Transmission Control ECU
 T 19 Transmission Control ECU
 T 20 Transponder Key Amplifier
 T 21 Transponder Key ECU
 T 22 Turn Signal Flasher
 T 26 Temp. Control SW (Max Hot)
 T 30 Tail Lamp Relay
 T 32 Theft Warning ECU
 T 36 Theft Warning ECU
 T 37 Transmission Control ECU
 T 38 Transmission Control ECU
 T 39 Theft Warning ECU
 T 40 Tail Lamp Relay

U 1 Unlock Warning SW


V 6 Viscous Heater Amplifier
 V 8 VSC OFF Switch

Z 1 Option Connector (TVSS)


Position of Parts in Instrument Panel <RHD>






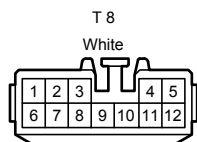
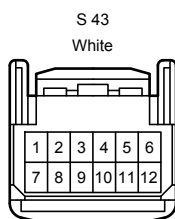
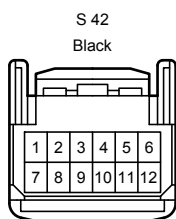
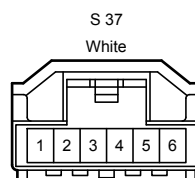

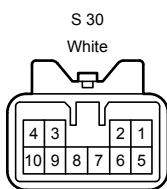
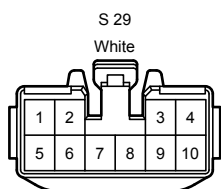

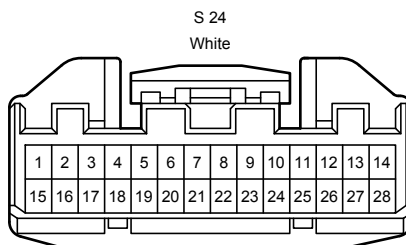
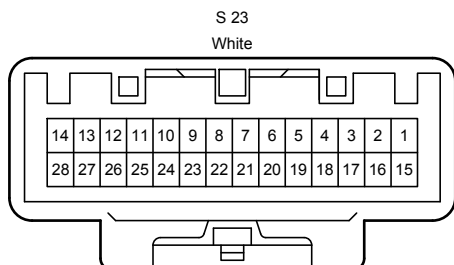
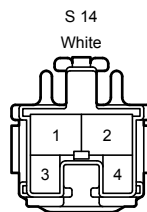
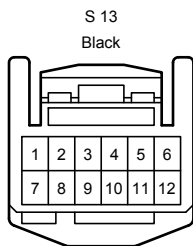
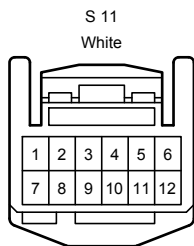



 
(Europe 1KD-FTV, Australia From Aug. 2006 Production, 2KD-FTV VN Turbocharger, South Africa 1KD-FTV From Aug. 2010 Production)

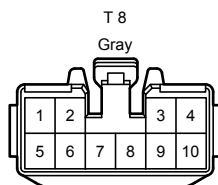


                      (South Africa 1KD-FTV Before Aug. 2010 Production, Australia Before Aug. 2006 Production)

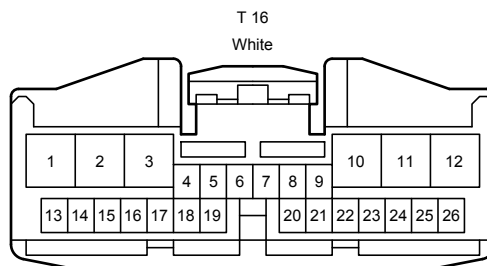


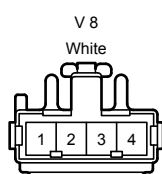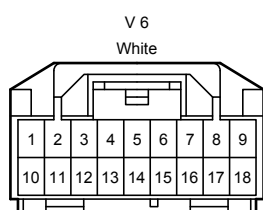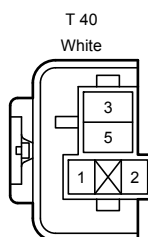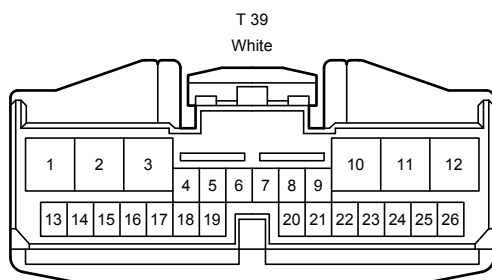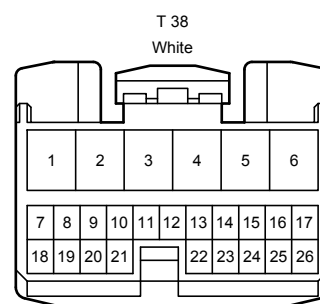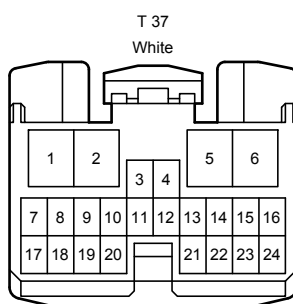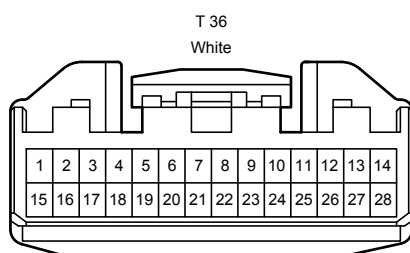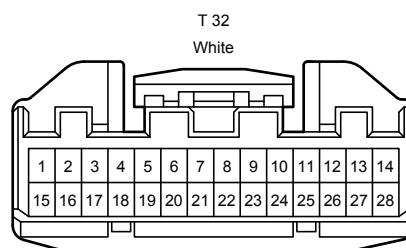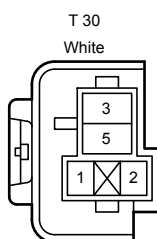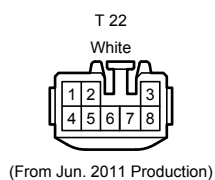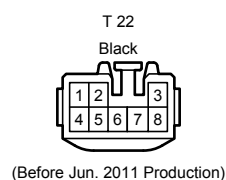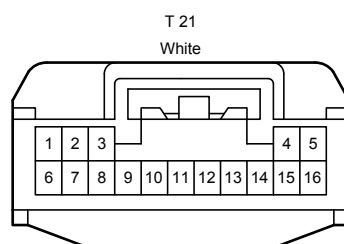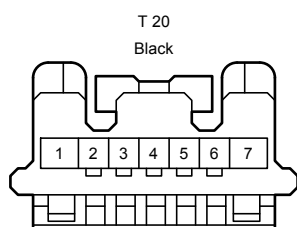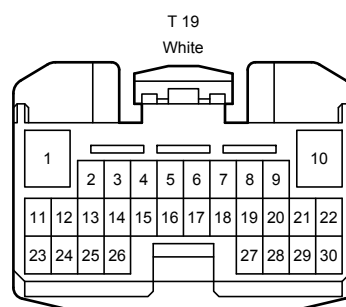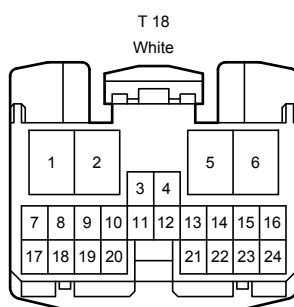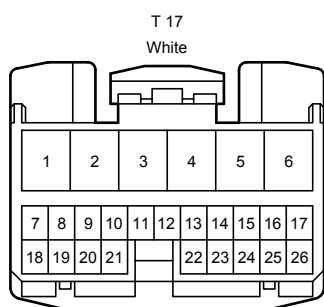


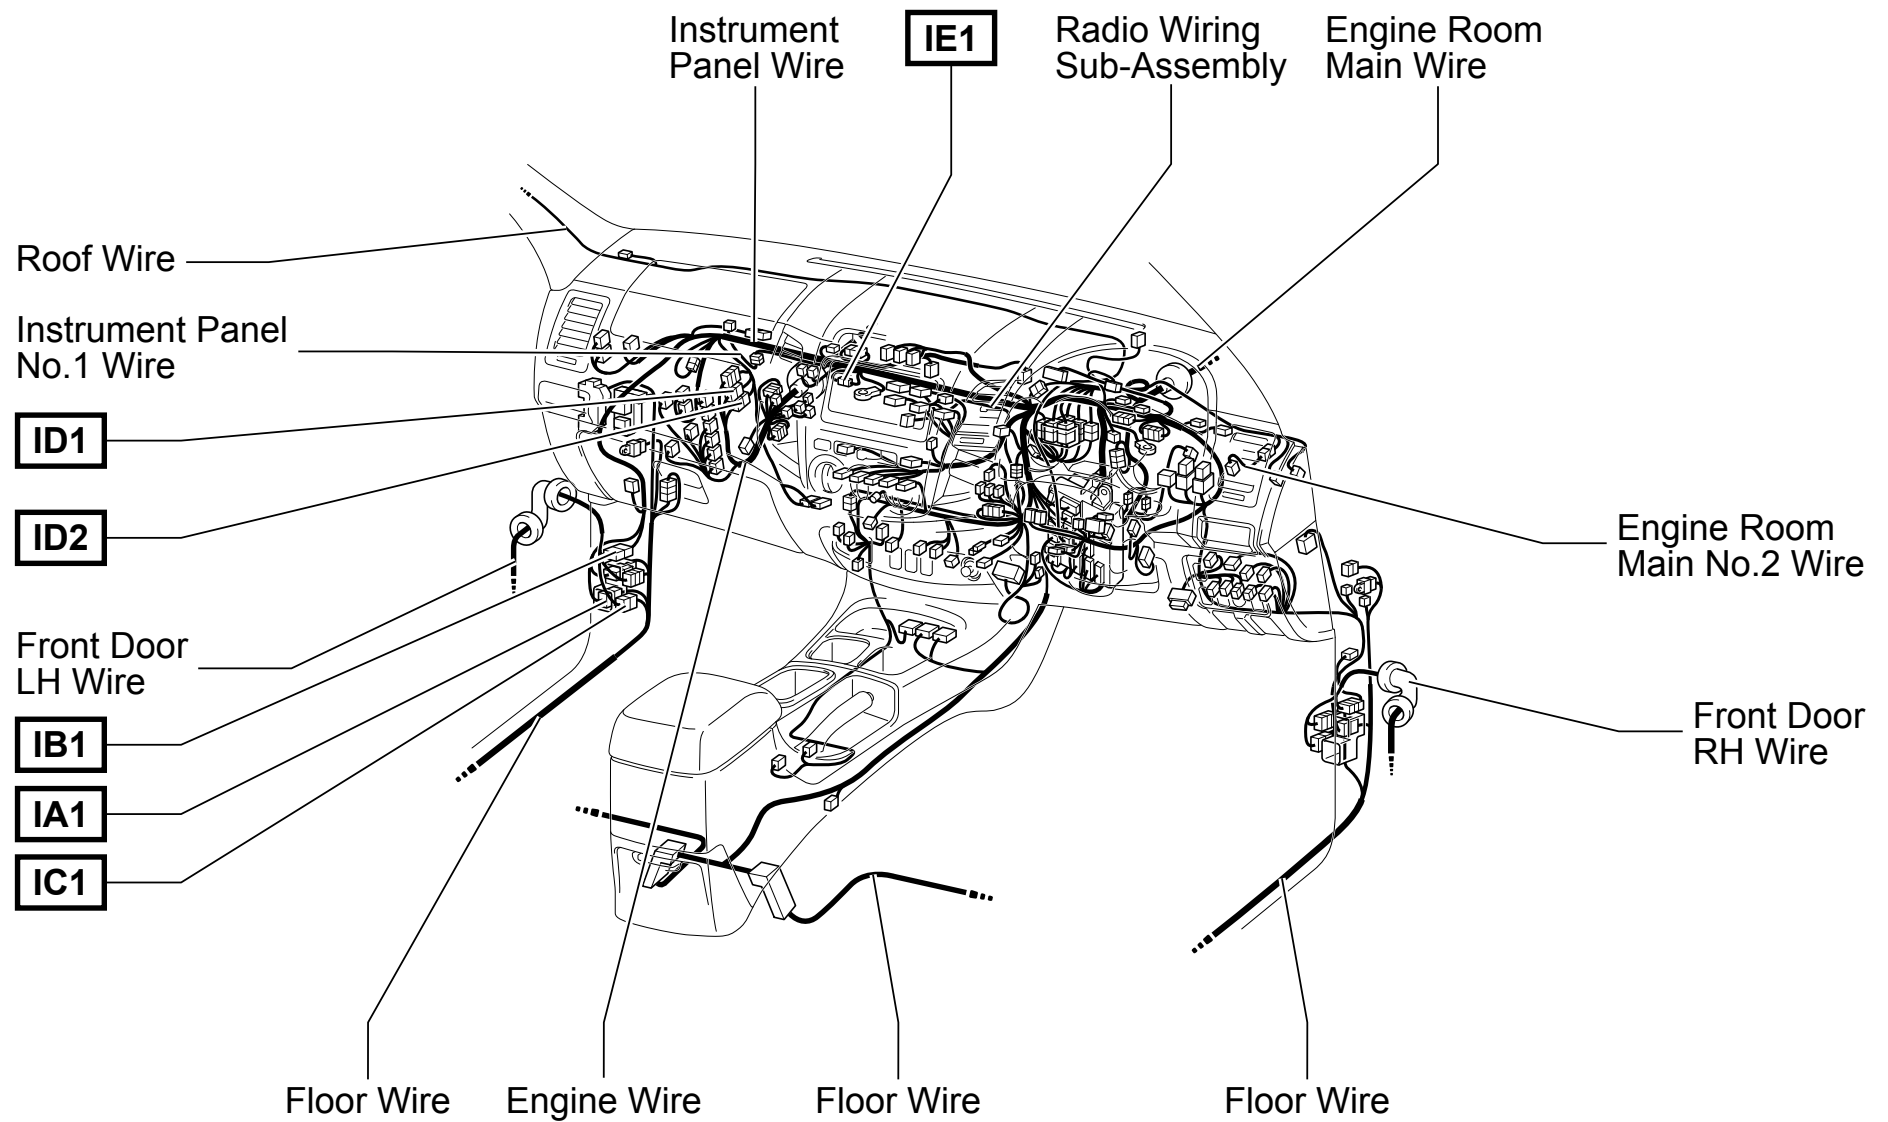


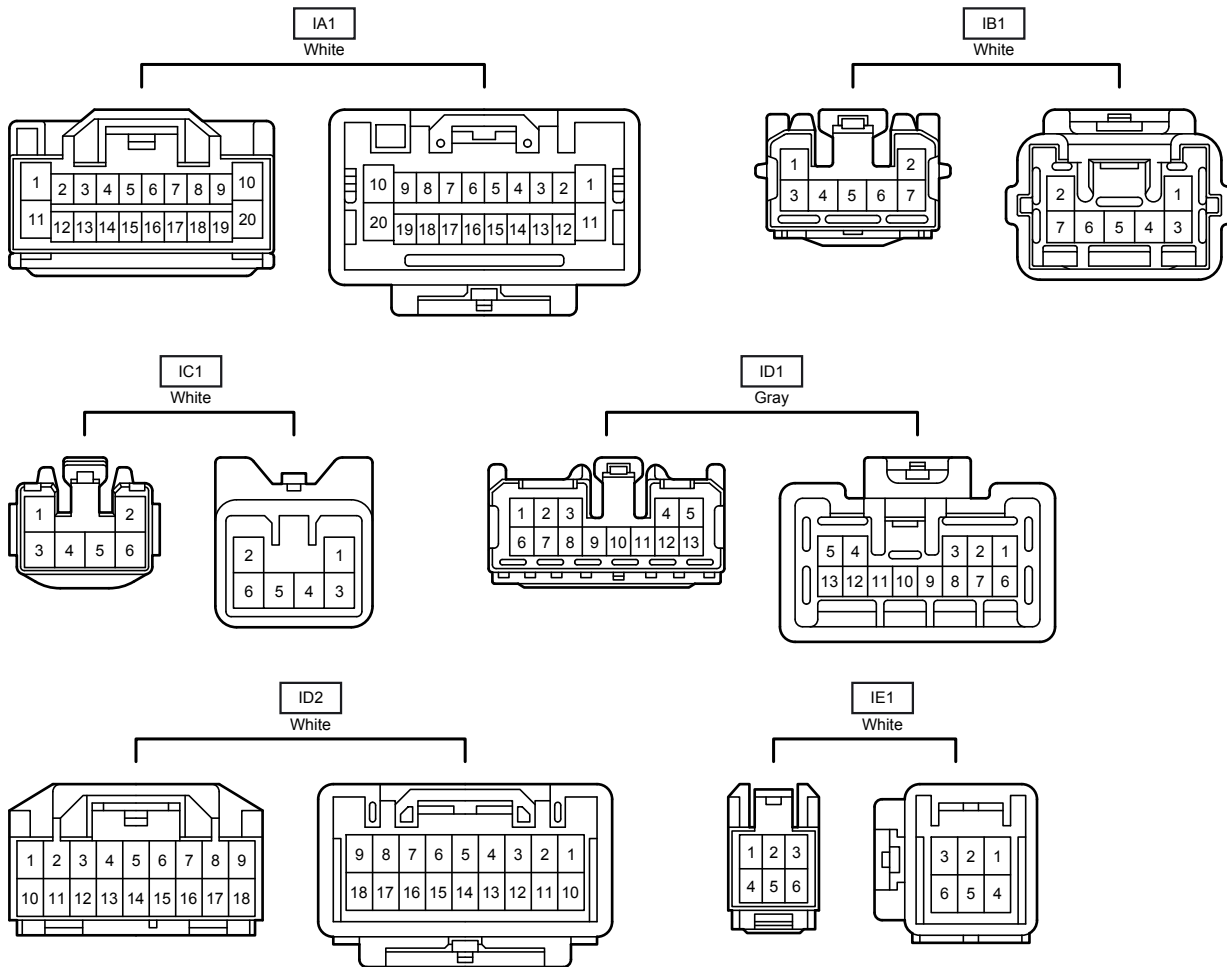


    - * 1: Before Aug. 2008 Production
- * 2: From Aug. 2008 Production
- * 3: Before Jun. 2011 Production
- * 4: From Jun. 2011 Production
- * 5: *4 w/ PTC Heater
- * 6: *4 w/o PTC Heater

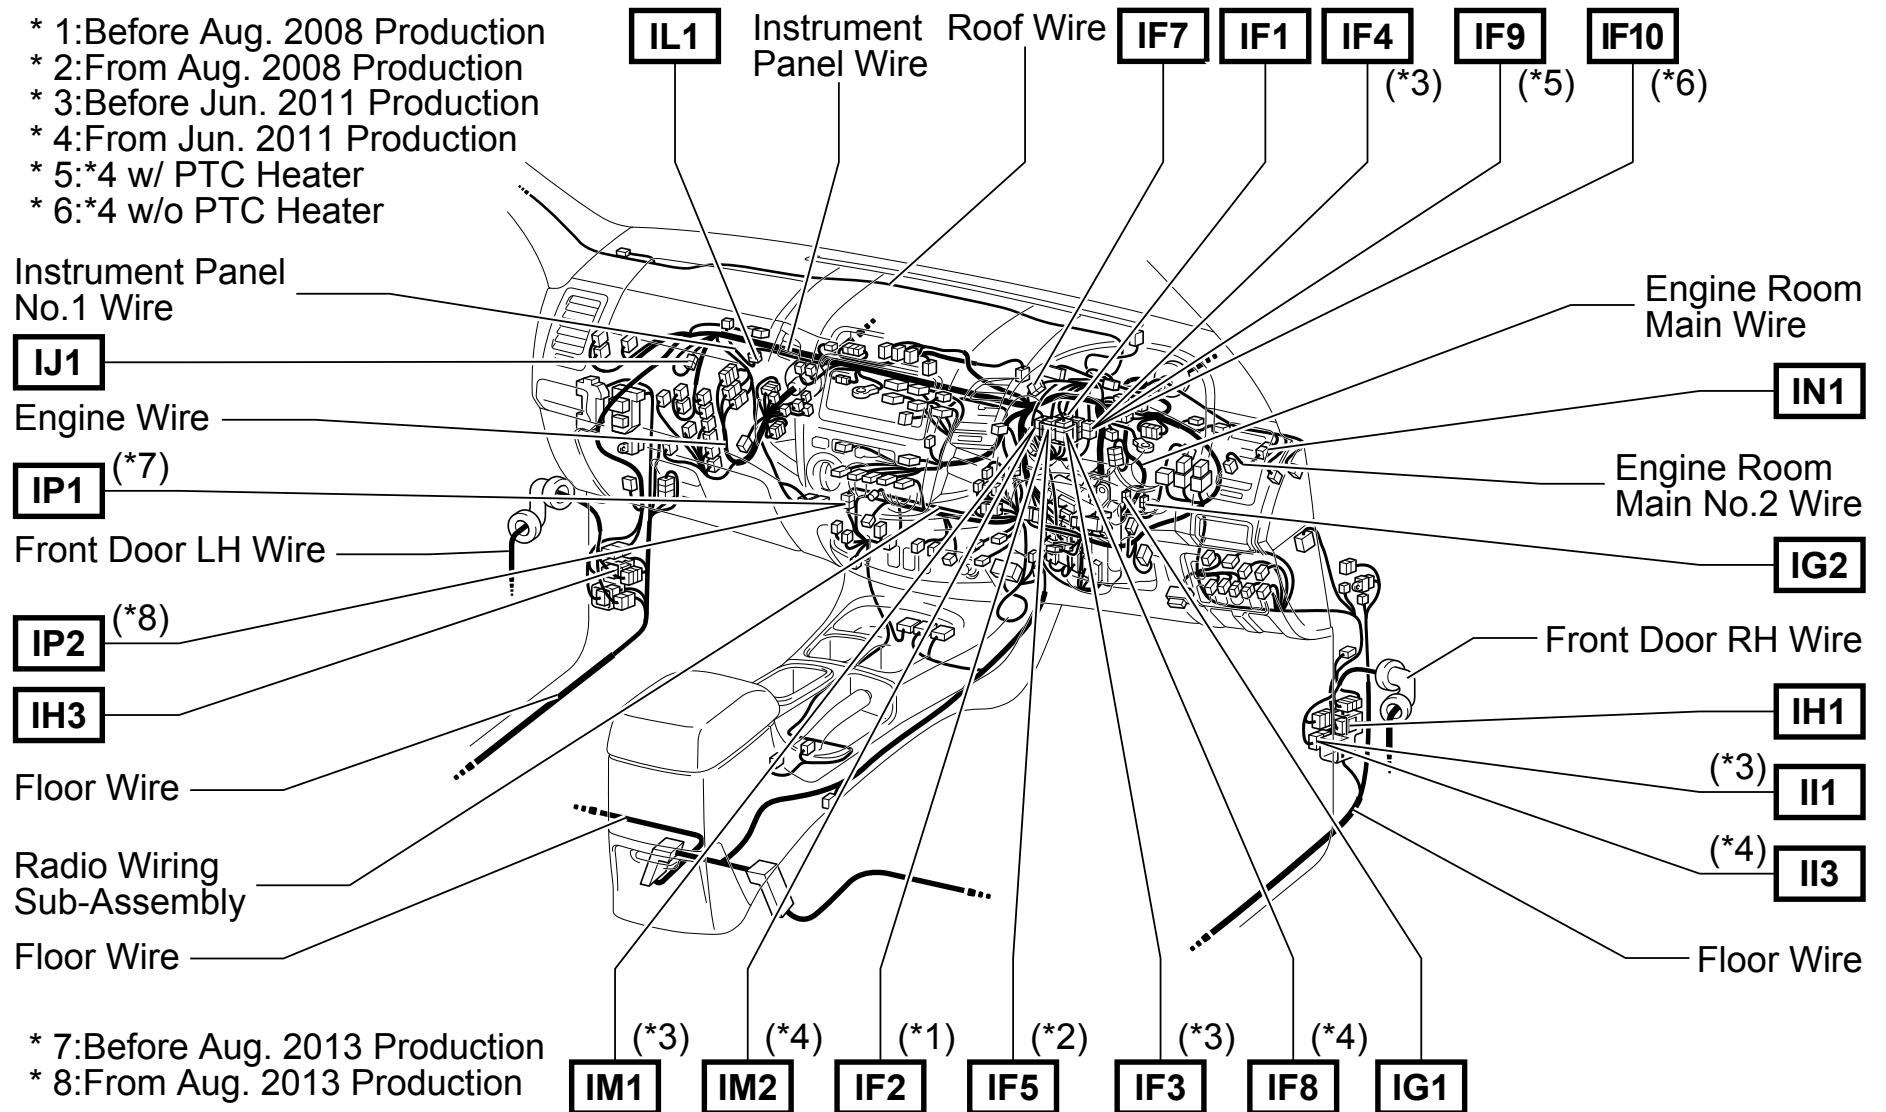

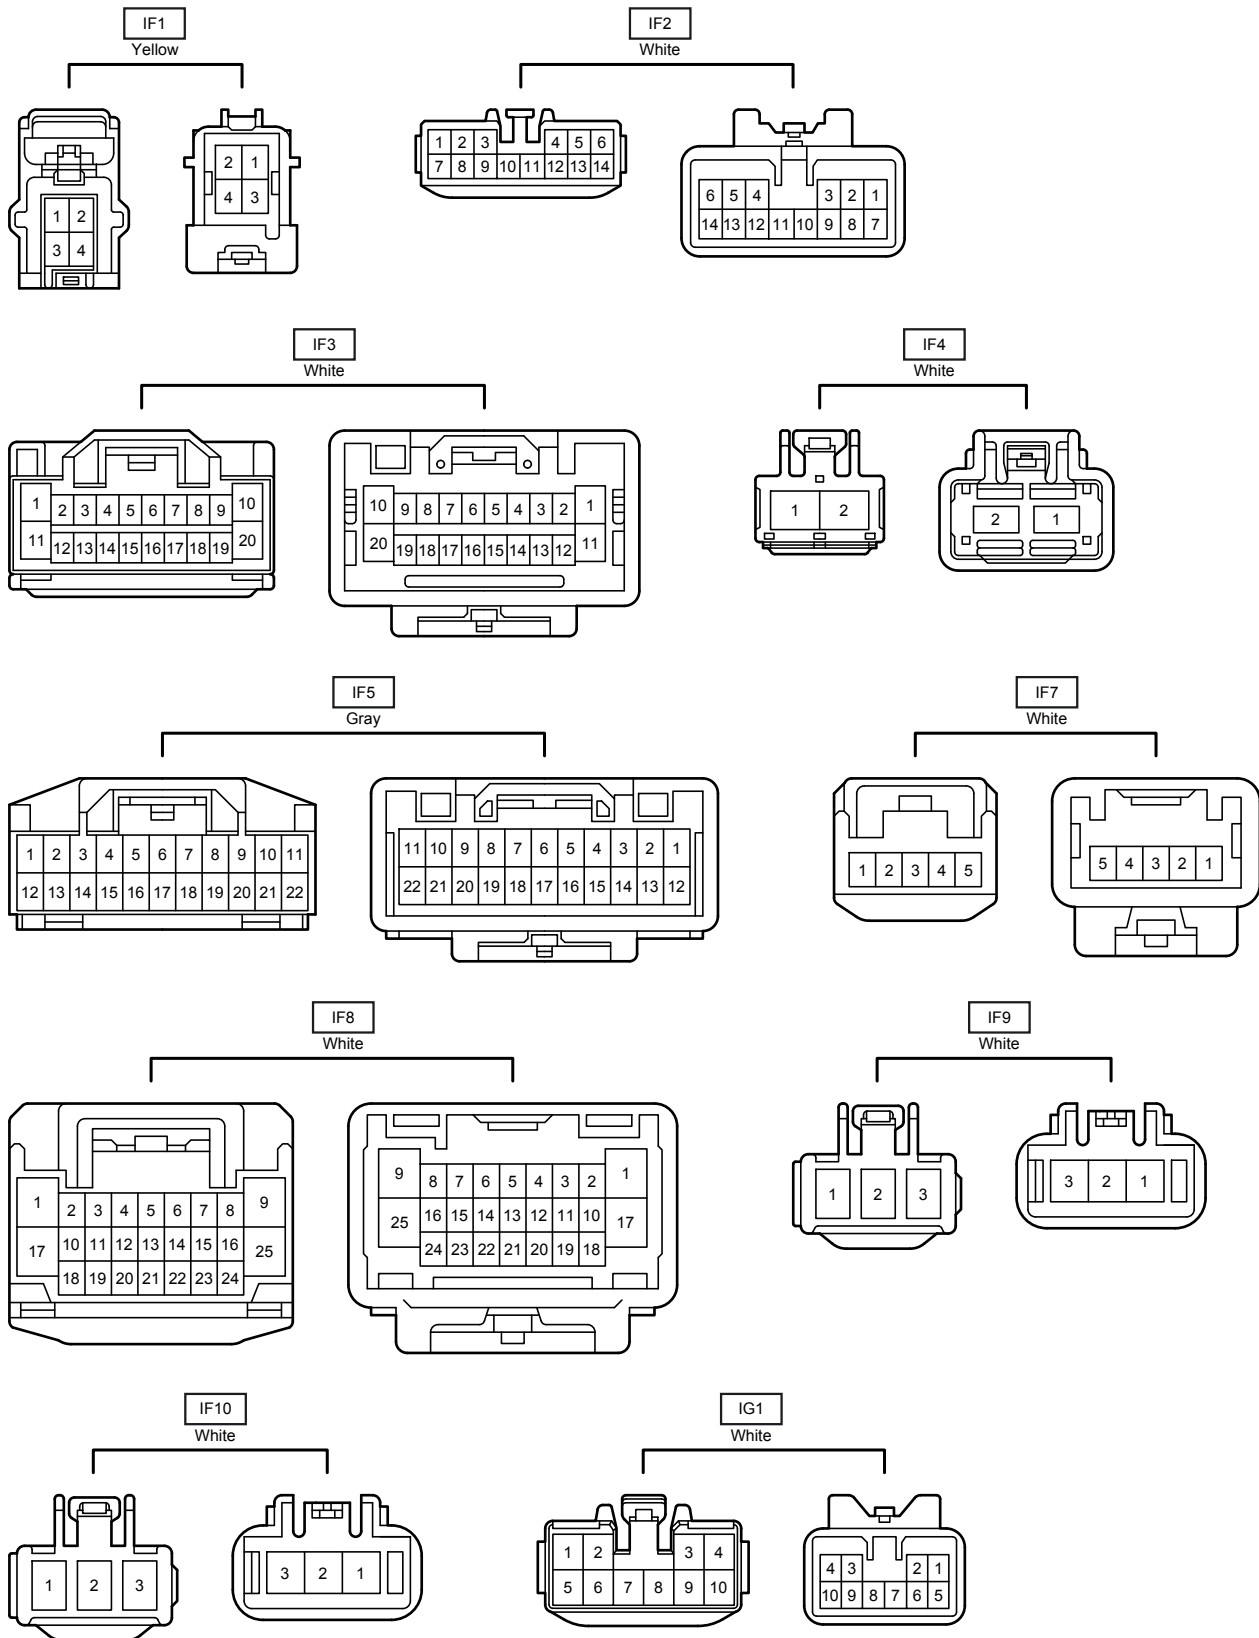

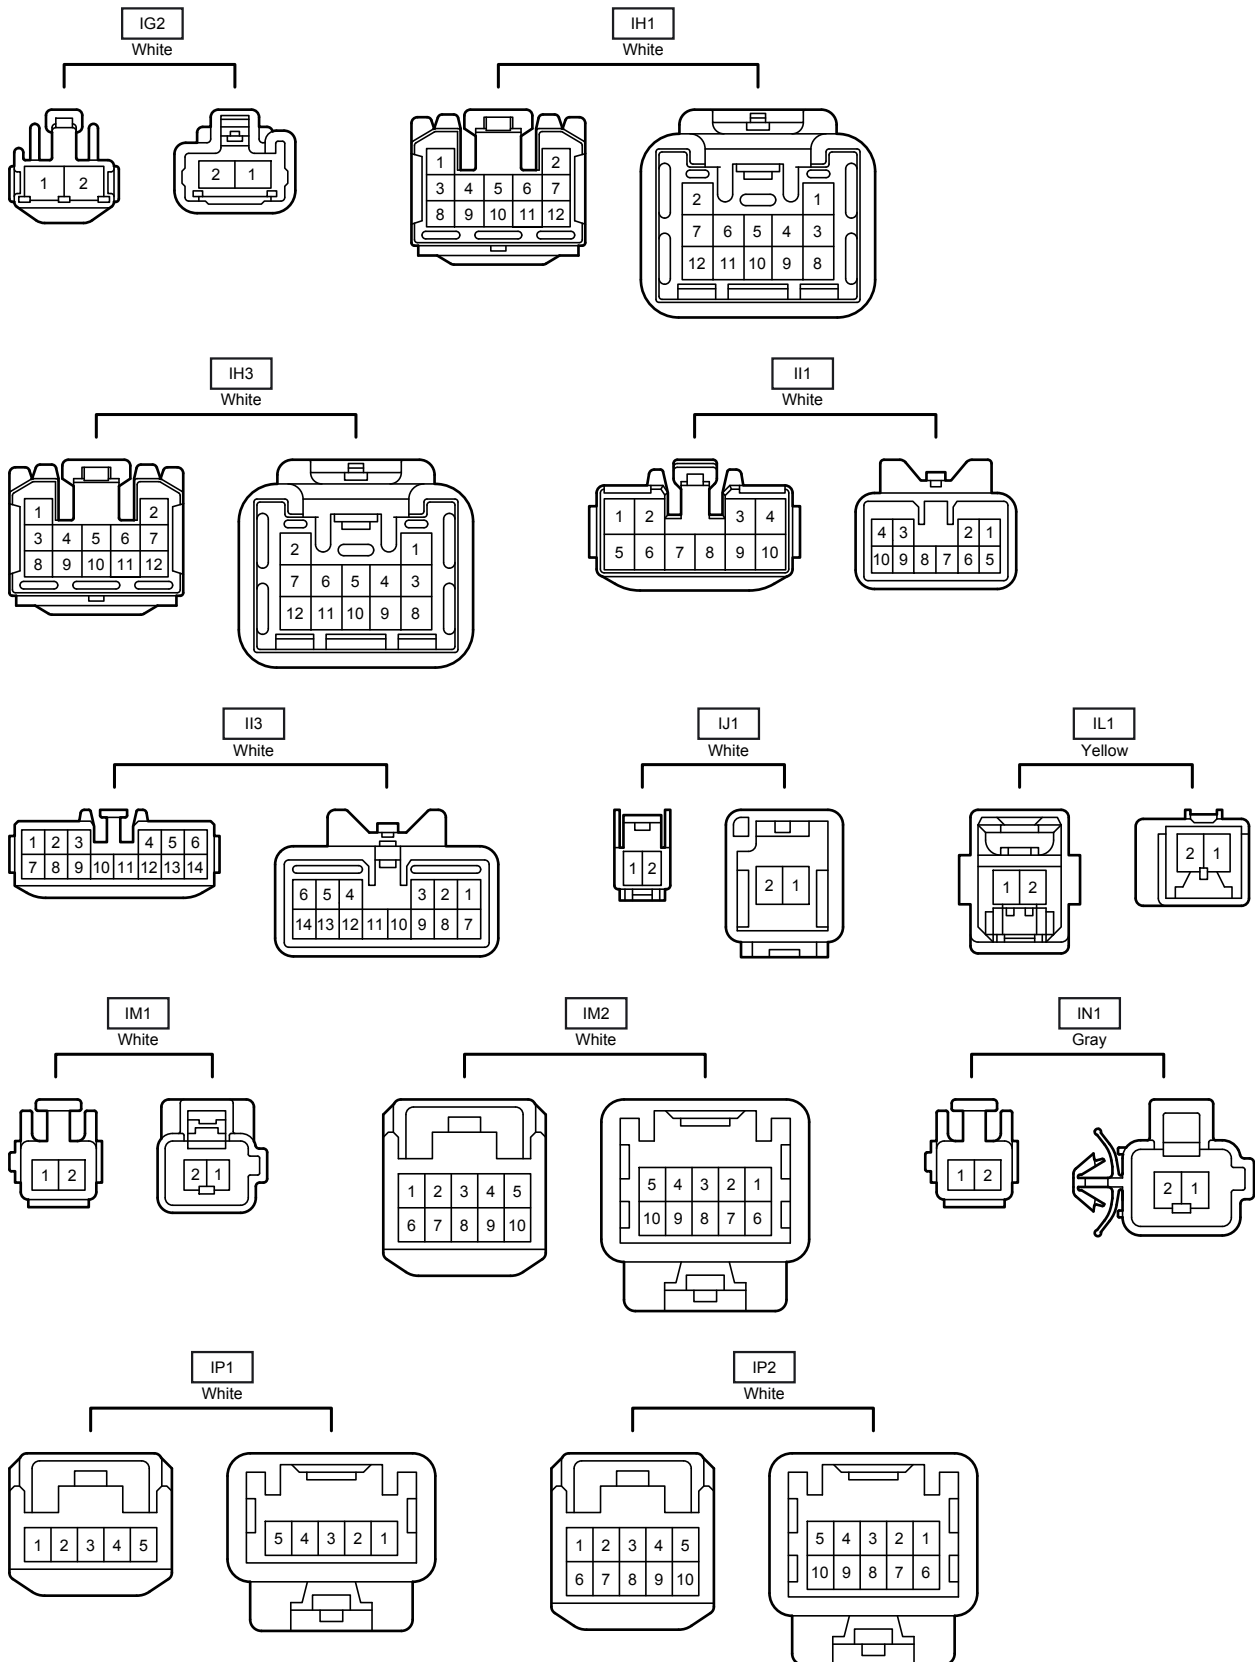








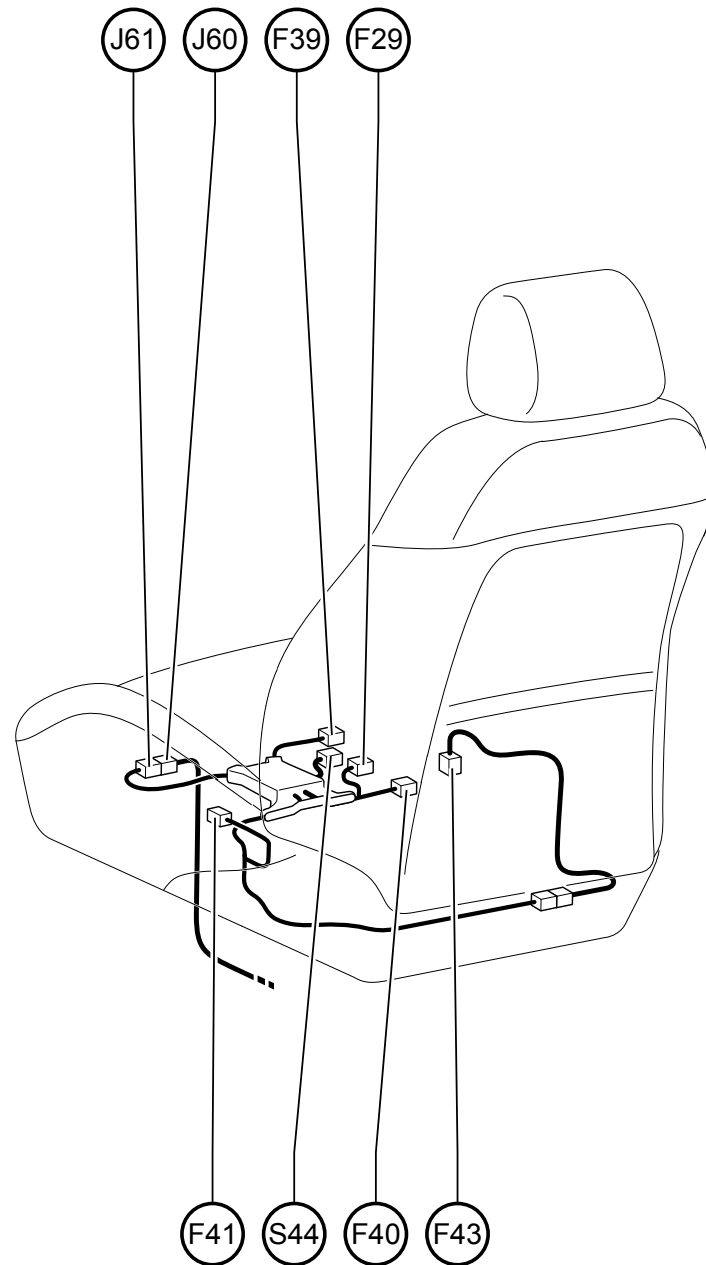



- F 29 Front Seat Inner Belt (Driver's Side)
- F 39 Front Power Seat Slide Position Motor Assembly LH
- F 40 Front Power Seat Lift Position Motor Assembly LH
- F 41 Front Power Seat Switch LH
- F 43 Front Power Seat Reclining Position Motor Assembly LH


- J 60 Junction Connector
- J 61 Junction Connector


- S 44 Seat Heater (LH)

           Position of Parts in Seat <LHD>

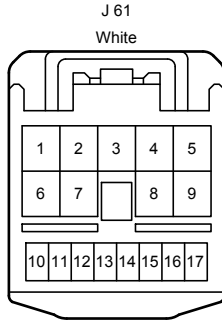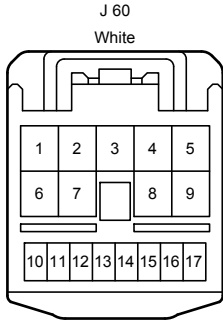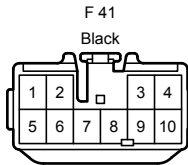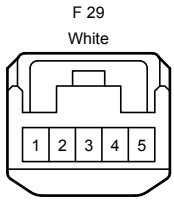

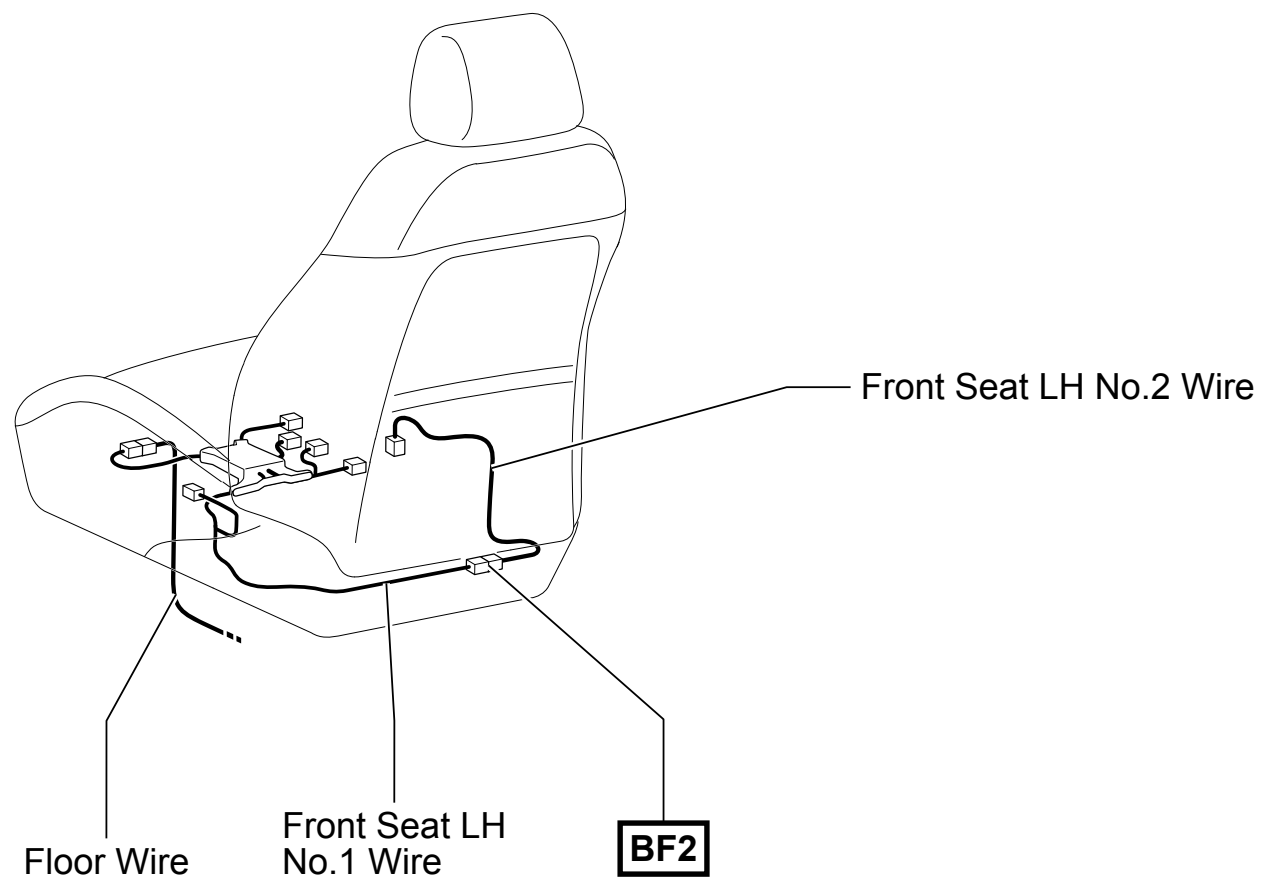

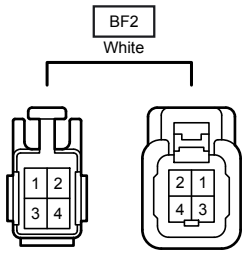

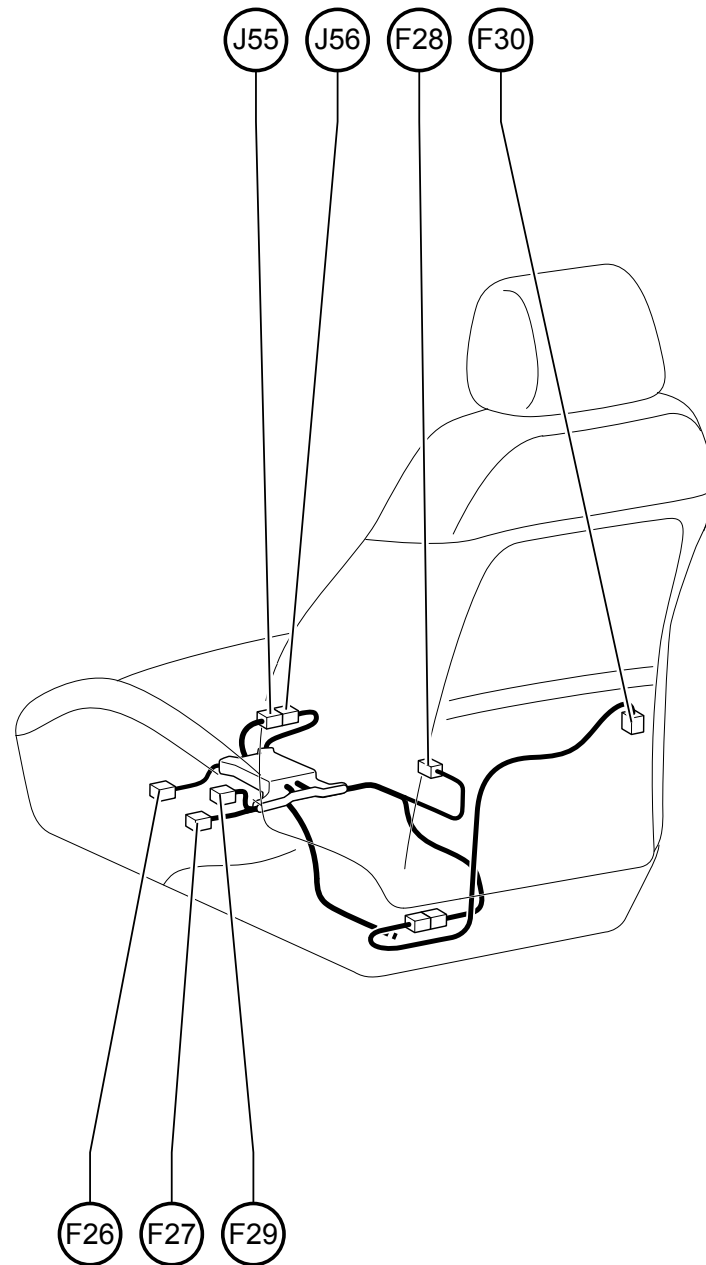

- F 26 Front Power Seat Slide Position Motor Assembly RH
- F 27 Front Power Seat Lift Position Motor Assembly RH
- F 28 Front Power Seat Switch RH
- F 29 Front Seat Inner Belt (Driver's Side)
- F 30 Front Power Seat Reclining Position Motor Assembly RH

- J 55 Junction Connector
- J 56 Junction Connector

Position of Parts in Seat <RHD>

