


WIRING DIAGRAMS **Fig. 1: Engine Compartment (Grids 1-3)** 1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:08PM

COMPONENT LOCATOR:


A/C COMP CTRL UNIT	E-F 16
ABS SYSTEM	A-C 16-19
AIR OUTLET ILLUM	C 26
ANTENNA MOTOR	B 42
ANTI-THEFT CTRL UNIT	F 8-9
ASHTRAY LIGHT	C 22
AUX FAN HI SPD RLY	E-F 7
AUX FAN RLY	E-F 7
AUX FUSE HOLDER	C-D 9
BRAKE SWITCH	C 16
CIG LIGHTER	C 21
CIS-E CTRL UNIT	A-B 4
COMBINATION RLY	A-B 35
COMBINATION SW	C-E 20
COOLANT TEMP SENSOR	E 19
CRUISE CTRL SYS	A-B 19-23
DEFOG GRID	F 41
DEFOG SWITCH	F 40
DIAGNOSTIC CONN	F 5
EXIT LIGHTS	D-E 28
FNT DOME/READING LT	A-B 28
FUEL LEVEL SENS	F 41
FUEL PUMP RLY	C-D 12-15
FUSE BLOCK	C-D 15
GEAR SEL SW	E-F 31
HAZARD LT SW	A-B 33-34
HEADLT WASHER MTR	D 3
HEADLT WASHER RLY	E 3
HEAD RESTRAINT SW	D-E 35
HEATER CTRL UNIT	C 38
HEATER WASHER NOZZLE	E-F 3
HI LEVEL STOP LT	E 43
HORN SW	E 27
IGNITION COIL	E 4
IGNITION SWITCH	A 13-14
INST CLUSTER	A-F 24
J/B #4	C 2
J/B X6	B 26
J/B X6/1	A 15
J/B X30	B-C 15
J/B #35	C 2
J/B X64	C 17
LIGHT MONITORING UNIT	F 23
LIGHT SWITCH	B-D 23
LEFT FNT DOOR SW	A 30
LEFT FNT MEMORY MOD	A-D 36
LEFT OUTSIDE MIRROR HTR	C 40
LEFT REAR DOOR SW	B 29
M 14/1 SUPPLY PUMP	F 32
MONO VALVE	E 17
OVERVOLTAGE PROTECTION RELAY (DIESEL)	A 8
PILLAR INTERIOR LT	D-E 30
PREGLOW RELAY	D-E 11
PWR ANTENNA SW	B-C 43
PWR WDO SWITCHES	E 31-35
PUSH BUTTON CTRL UNIT	C-E 16
READING LTS (RT, LEFT)	C 41-42
REAR DOME LIGHT	D 28
REAR WDO LT SWITCH	B-C 28
REAR WDO WIPER SYS	E-F 28-30
RESTRAINT RELEASE VALVE	F 35
RT FNT DOOR ACTUATOR	E-F 34
RT FNT DOOR SW	B 31
RT FNT PWR SEAT SW	F 35-38
RT OUTSIDE MIRROR HTR & MOTOR	B-C 40
RT OUTSIDE MIRROR SW	C-E 42
SEAT HEATER SW (RT, LEFT)	F 38
SPEED SENS	A-B 22-23
SRS CTRL UNIT	A 40
STARTER	A-B 3
SUNROOF MOTOR	D-F 40
SWITCHOVER VALVES	C-D 19
TEST CONN	C 10
TRUNK LIGHT	D 43
WARN BUZZER SWITCH	F 27
WARN MODULE	A-B 31
WASHER MOTOR	D 3
WIPER MOTOR	F 3

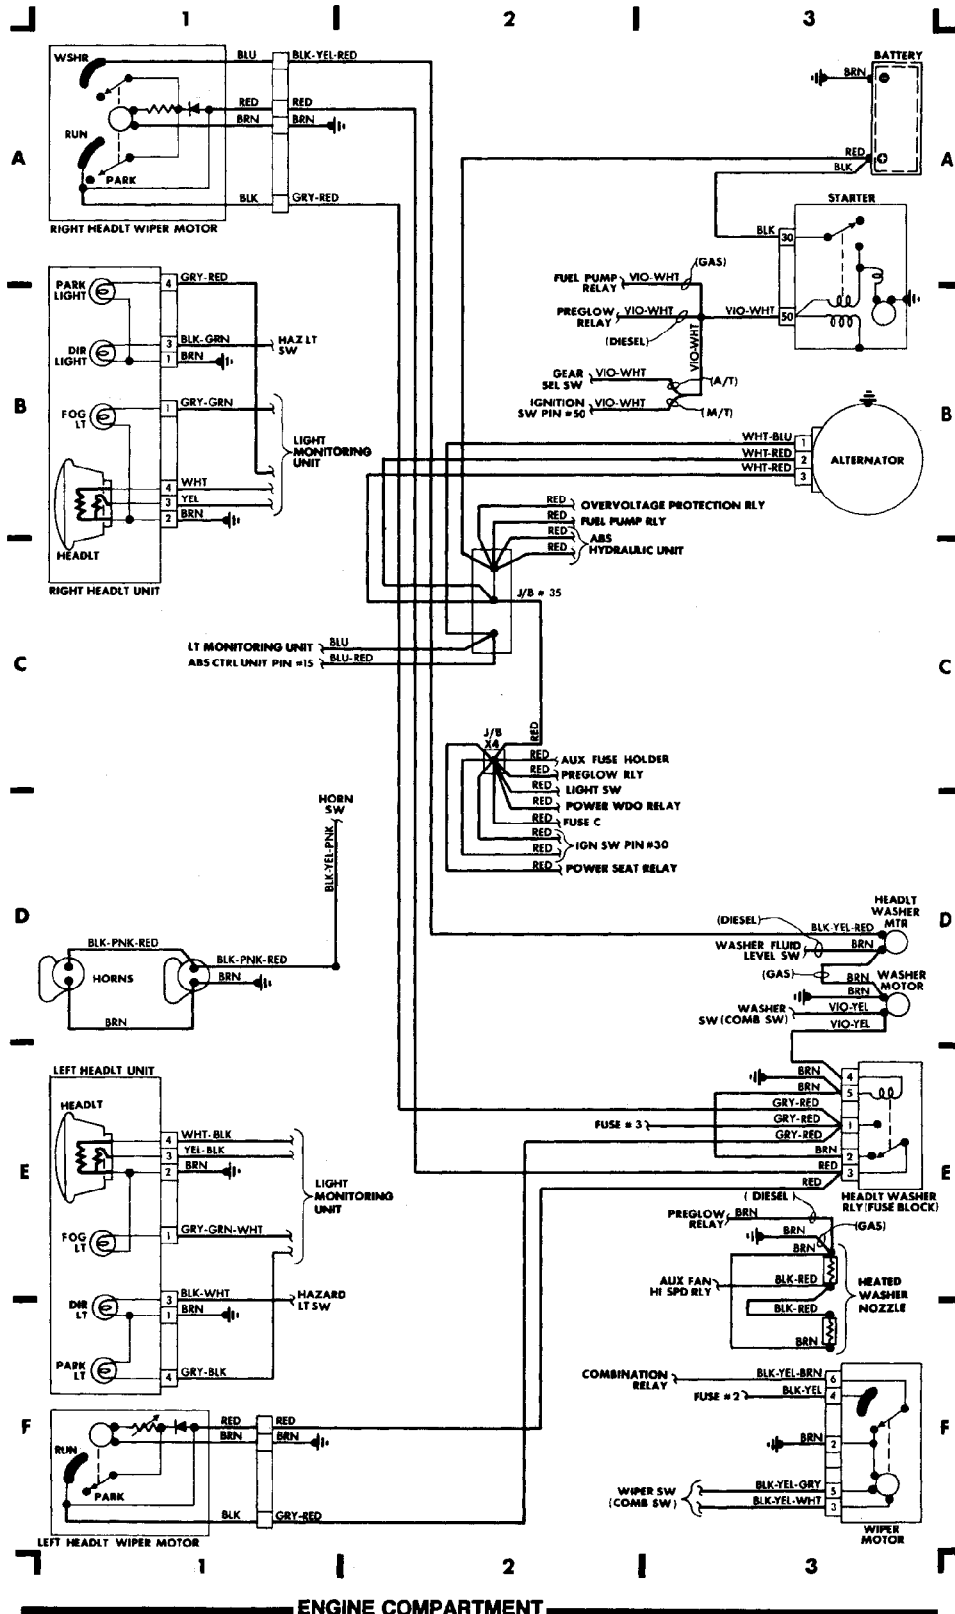

ENGINE COMPARTMENT


WIRING DIAGRAMS **Fig. 2: Engine Compartment (Cont.) (Grids 4-7)** 1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:09PM

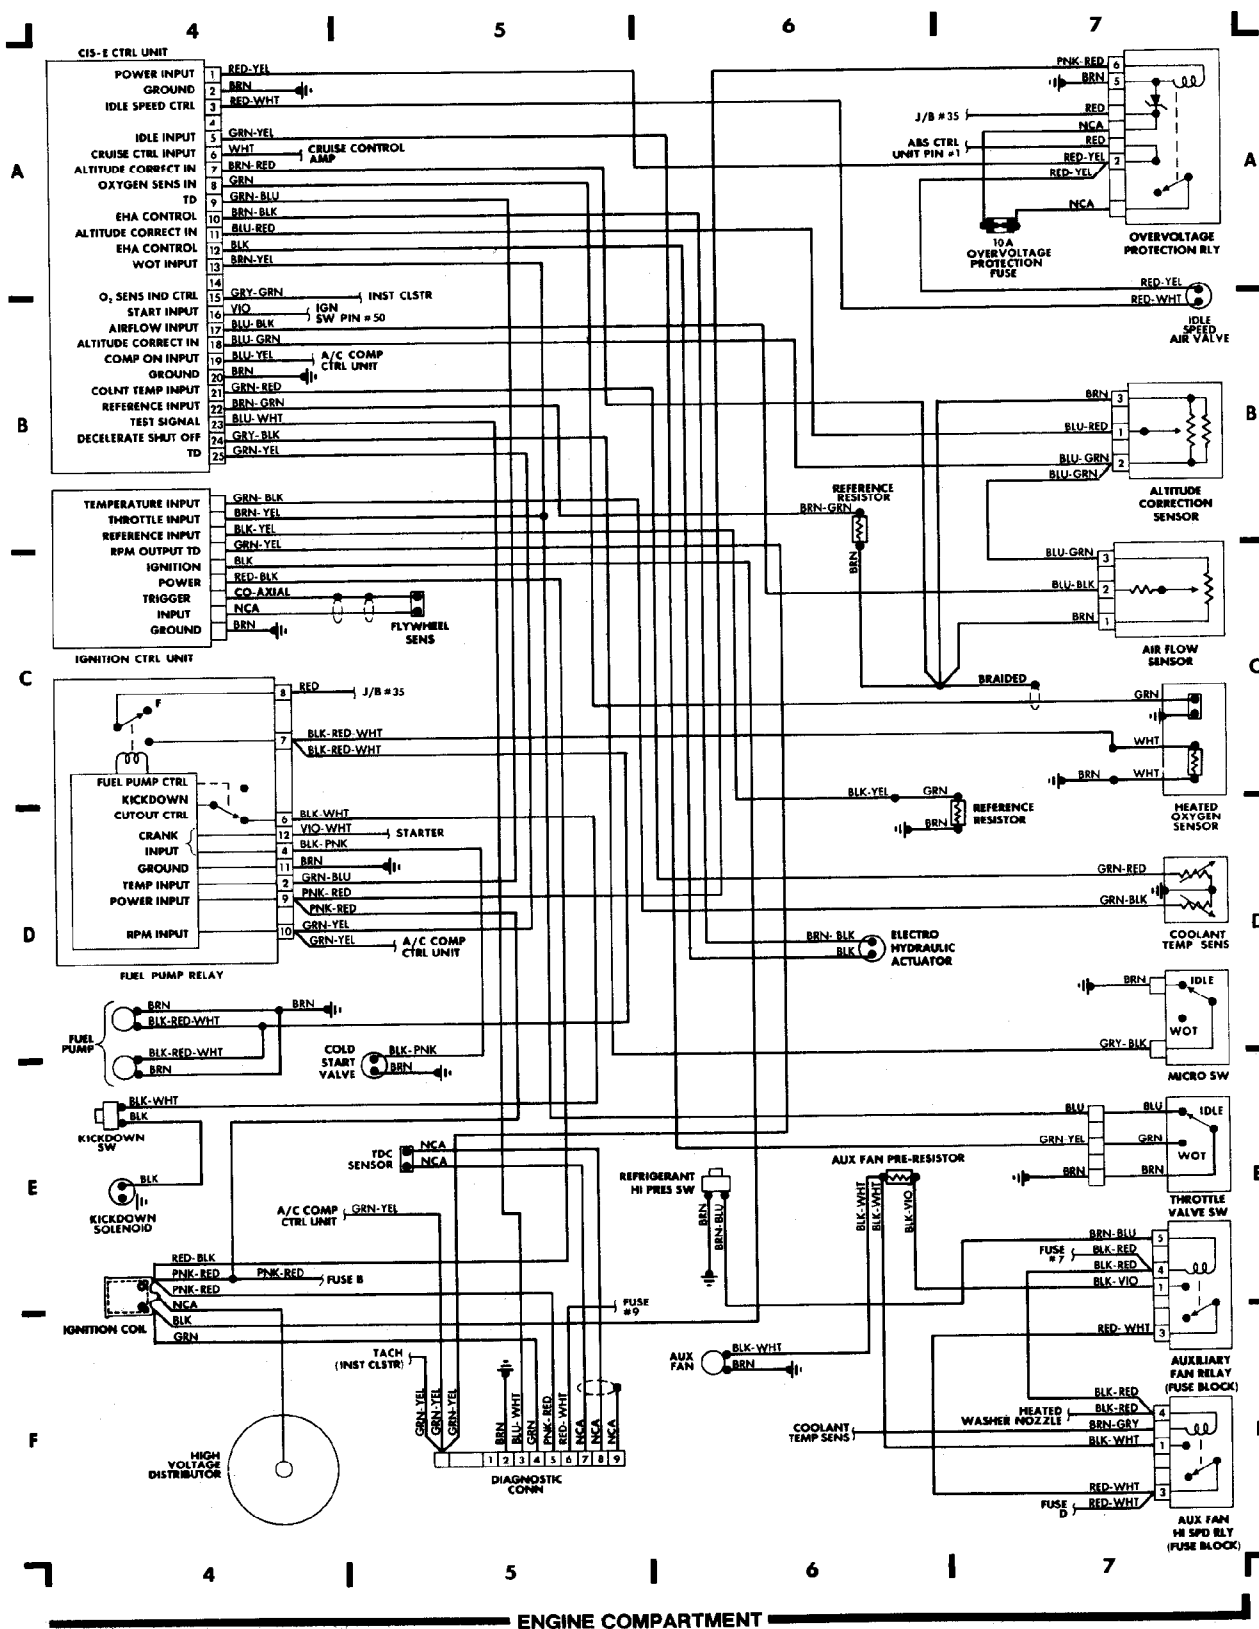


WIRING DIAGRAMS **Fig. 3: Engine Compartment (Cont.) (Grids 8-11)** 1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:09PM

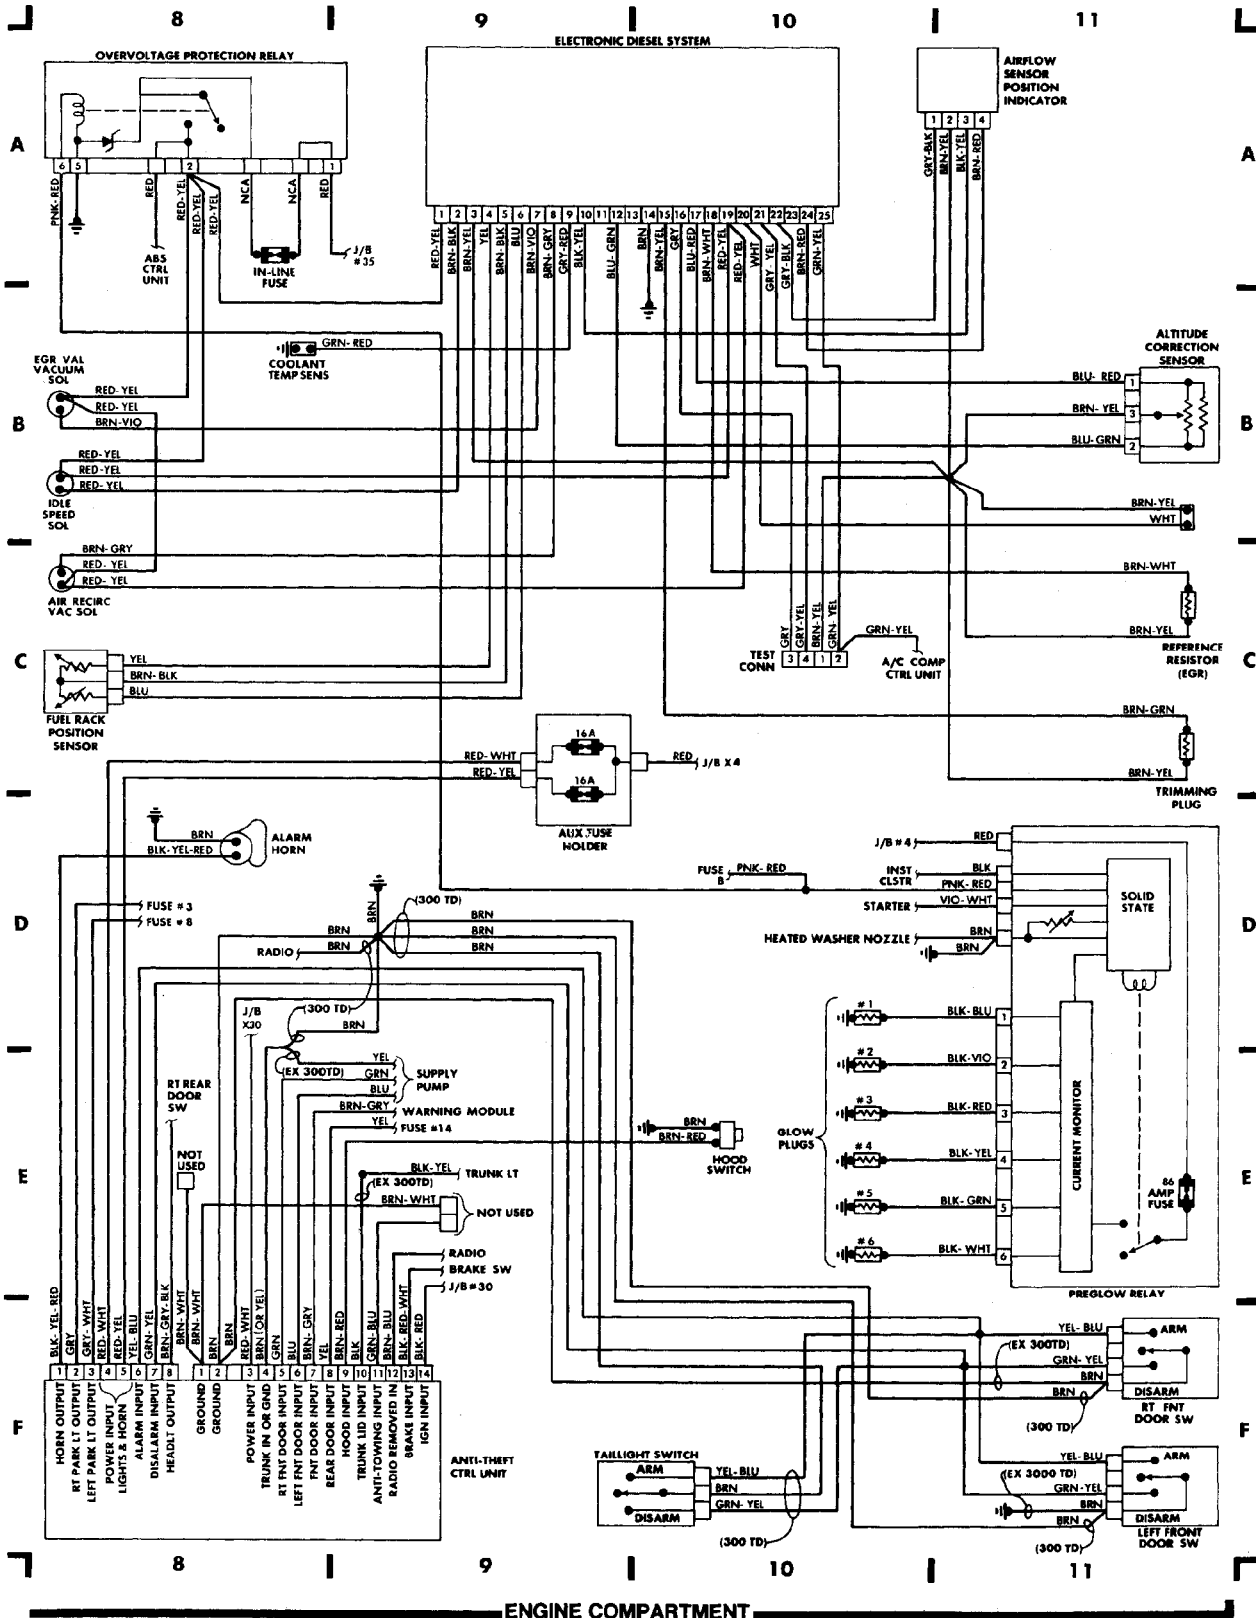


WIRING DIAGRAMS
Fig. 4: Fuse Block (Grids 12-15)
 1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:09PM

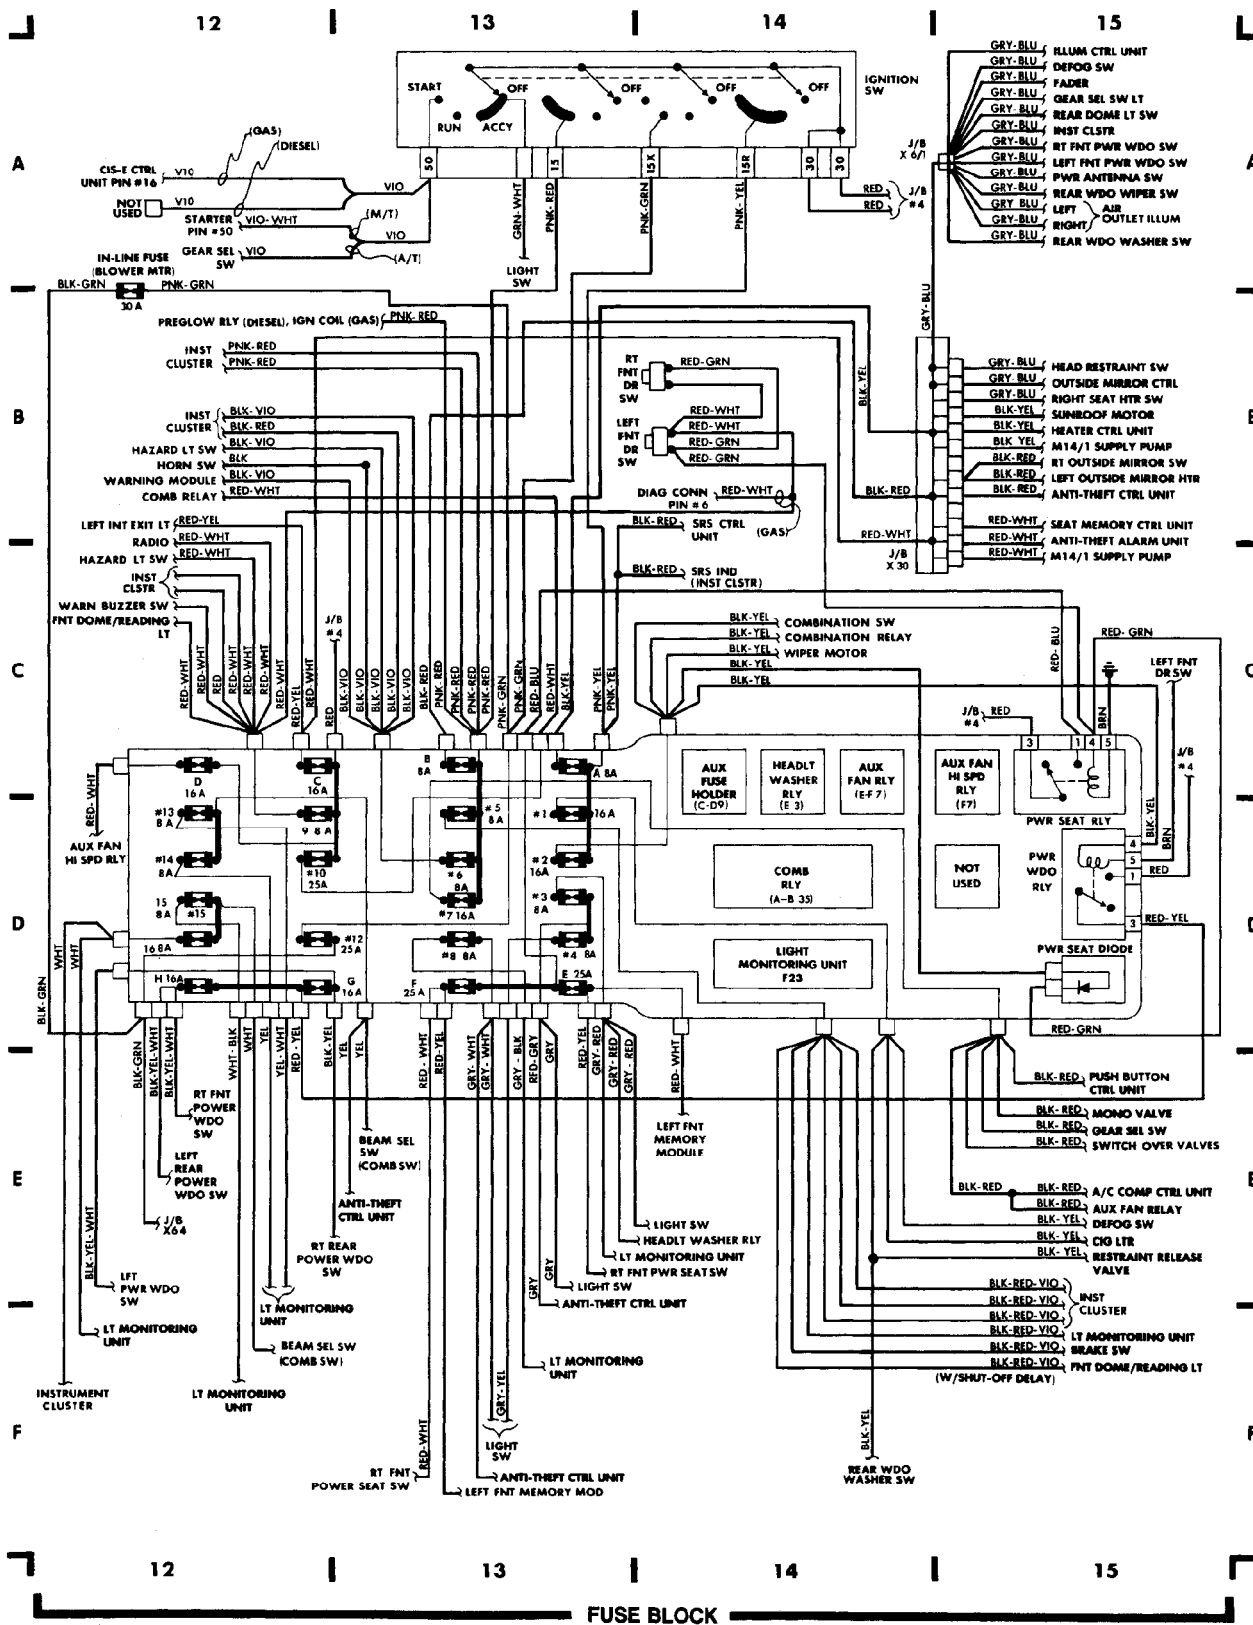

WIRING DIAGRAMS
Fig. 5: Underdash (Grids 16-19)
 1987 Mercedes-Benz 300TD


Tuesday, November 28, 2000 01:09PM

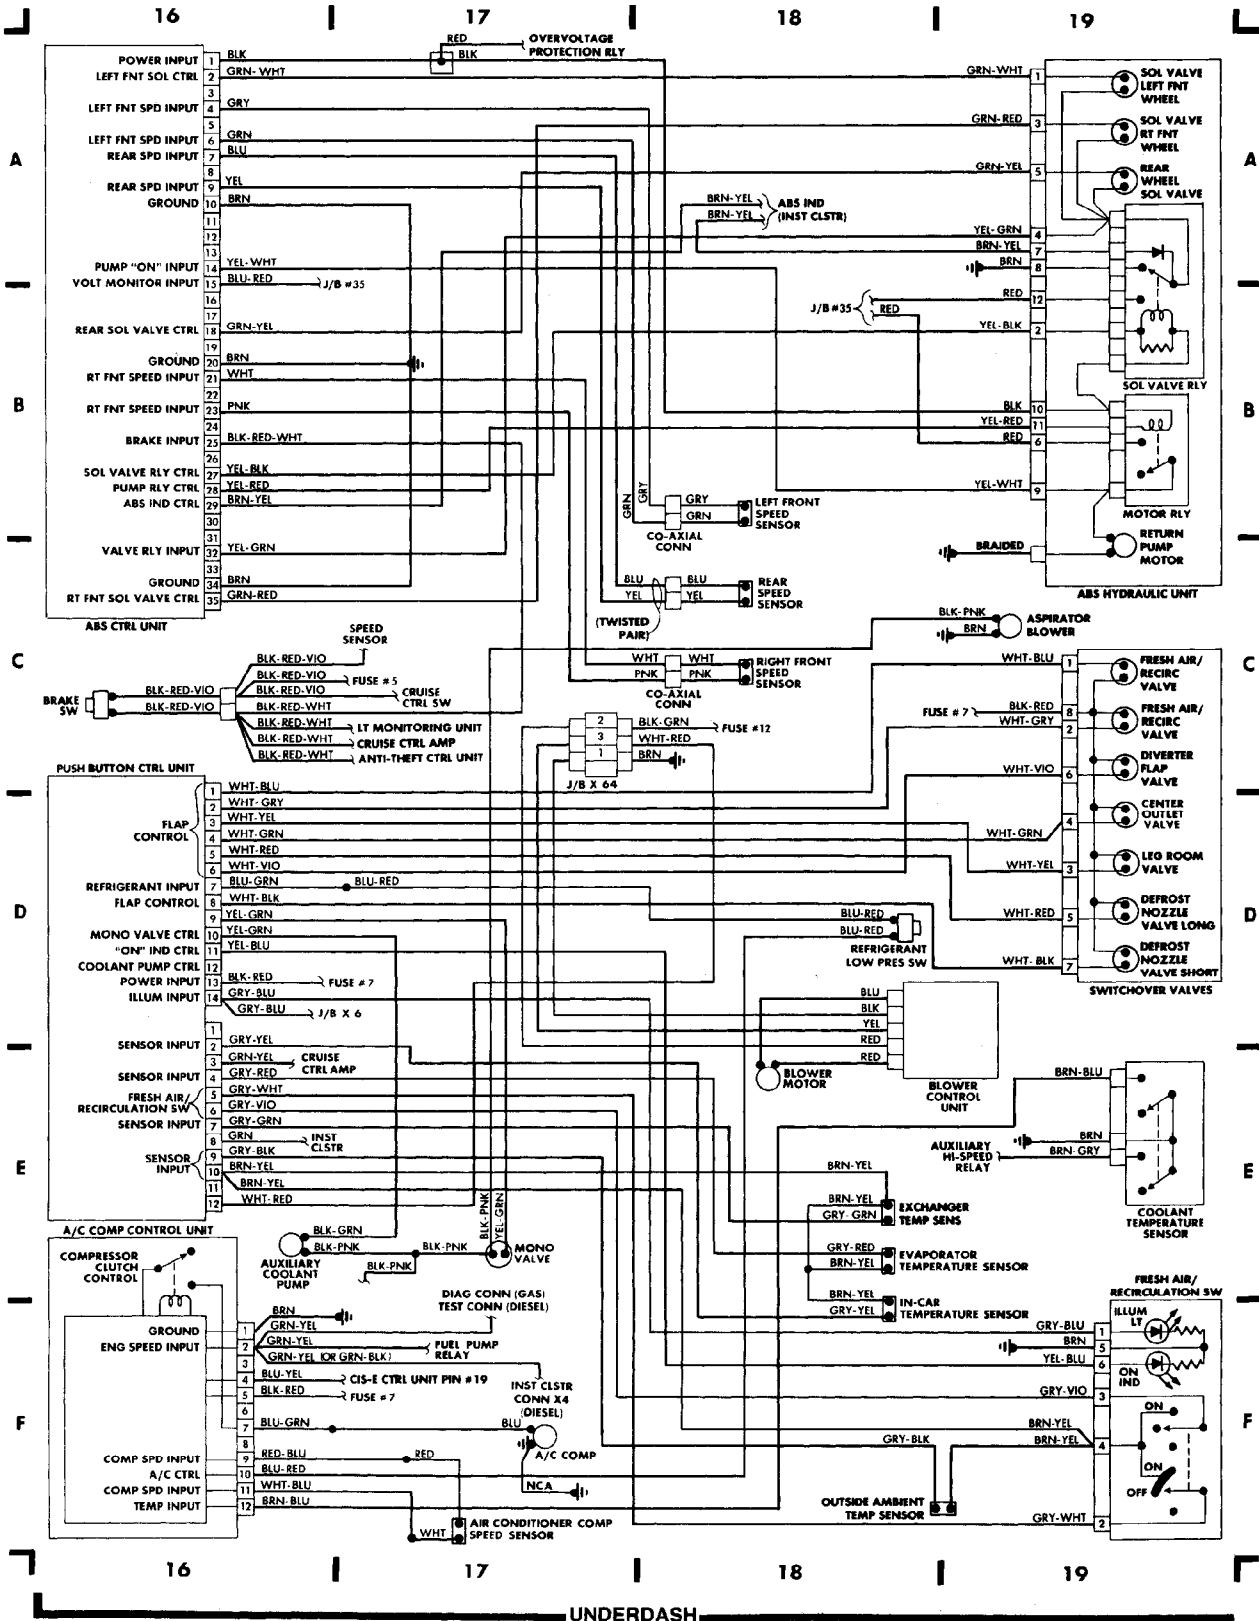

UNDERDASH

WIRING DIAGRAMS Fig. 6: Underdash (Cont.) (Grids 20-23) 1987 Mercedes-Benz 300TD


Tuesday, November 28, 2000 01:10PM

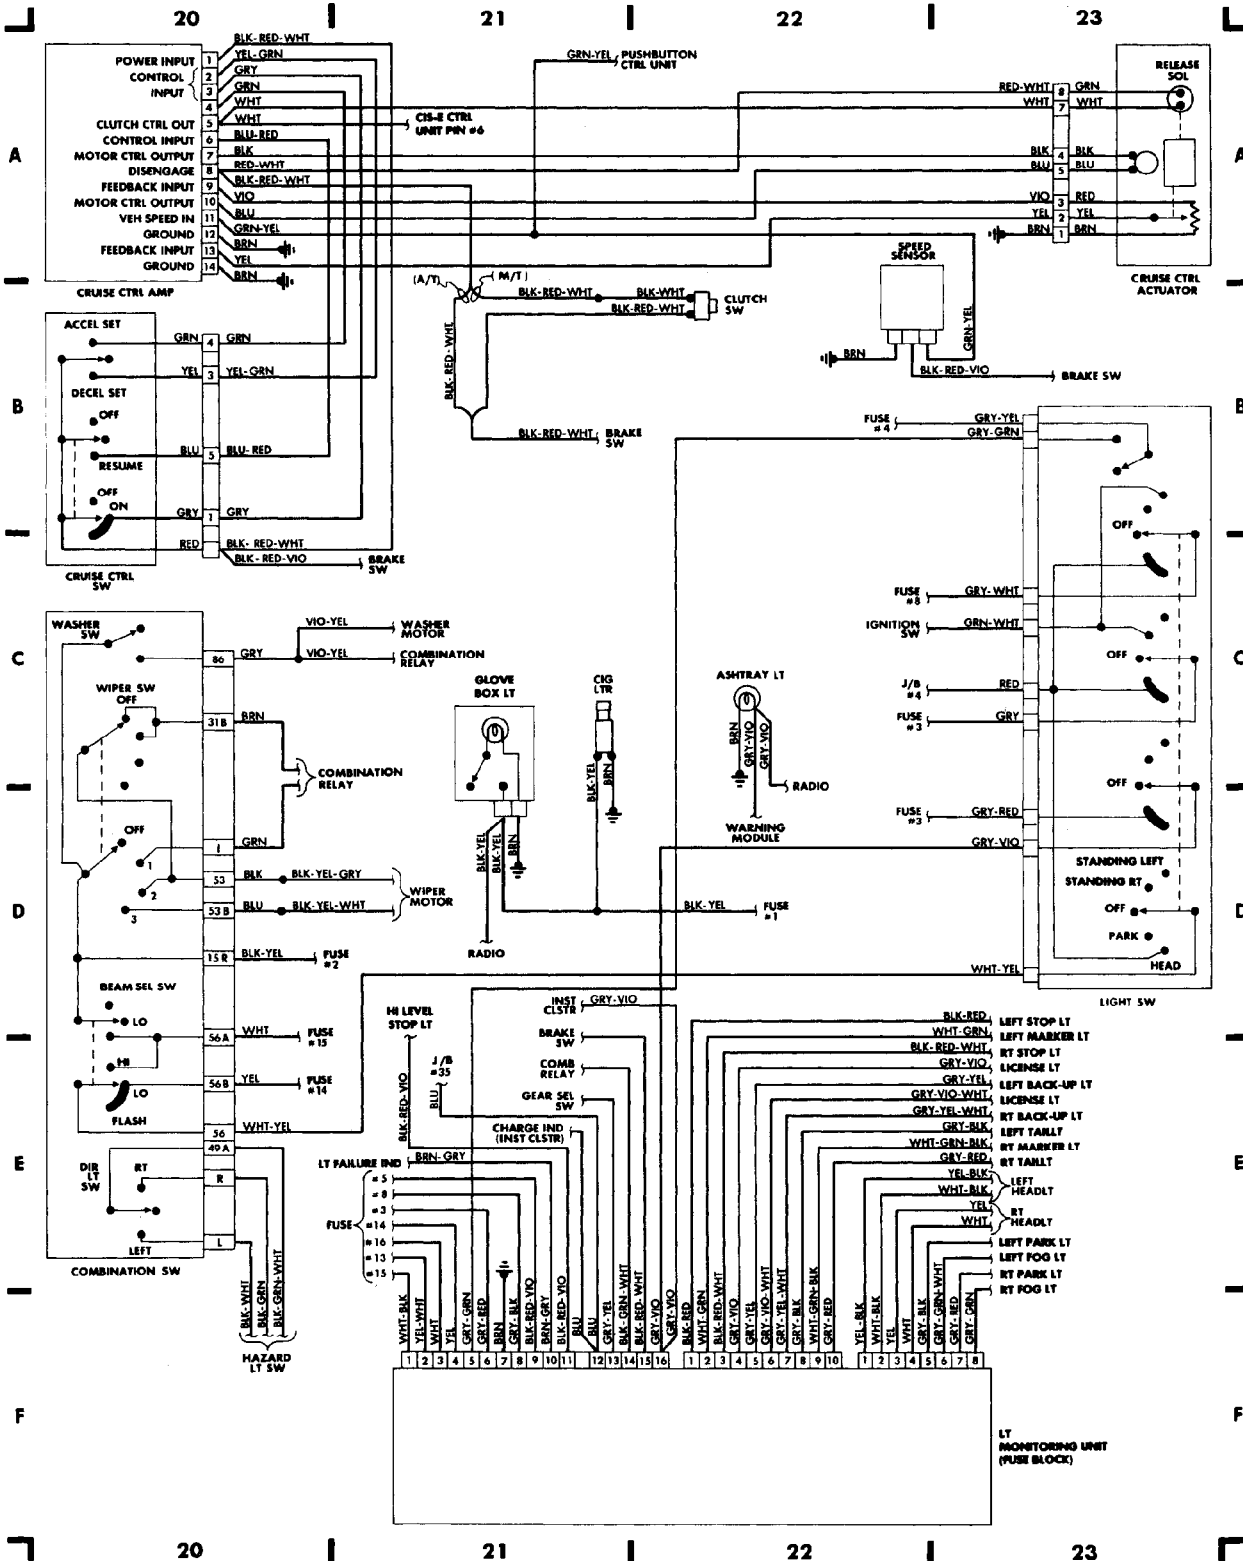

UNDERDASH

WIRING DIAGRAMS **Fig. 7: Instrument Panel (Grids 24-27)** 1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:10PM

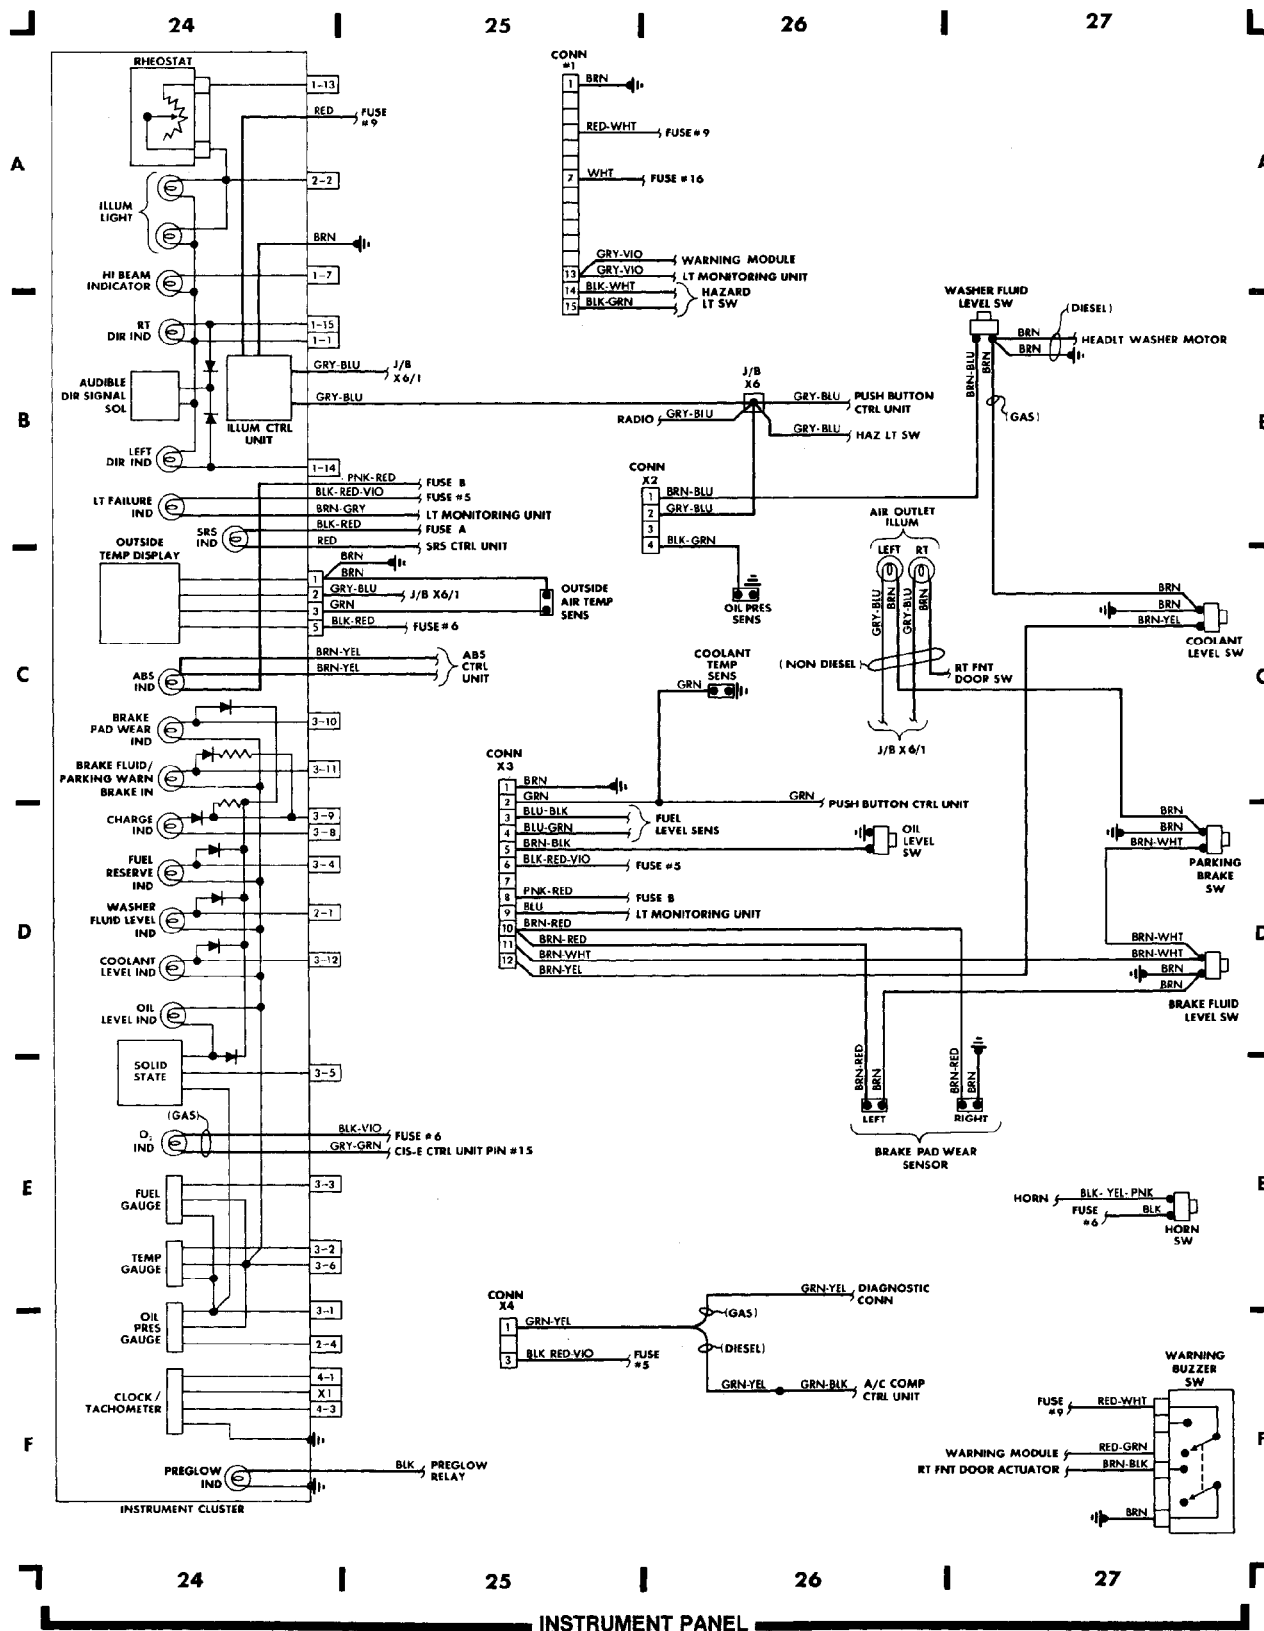


1987 Mercedes-Benz 300TD

[illegible]

WIRING DIAGRAMS

Fig. 9: Instrument Panel & Rear Compartment (Cont.) (Grids 32-35)
1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:10PM

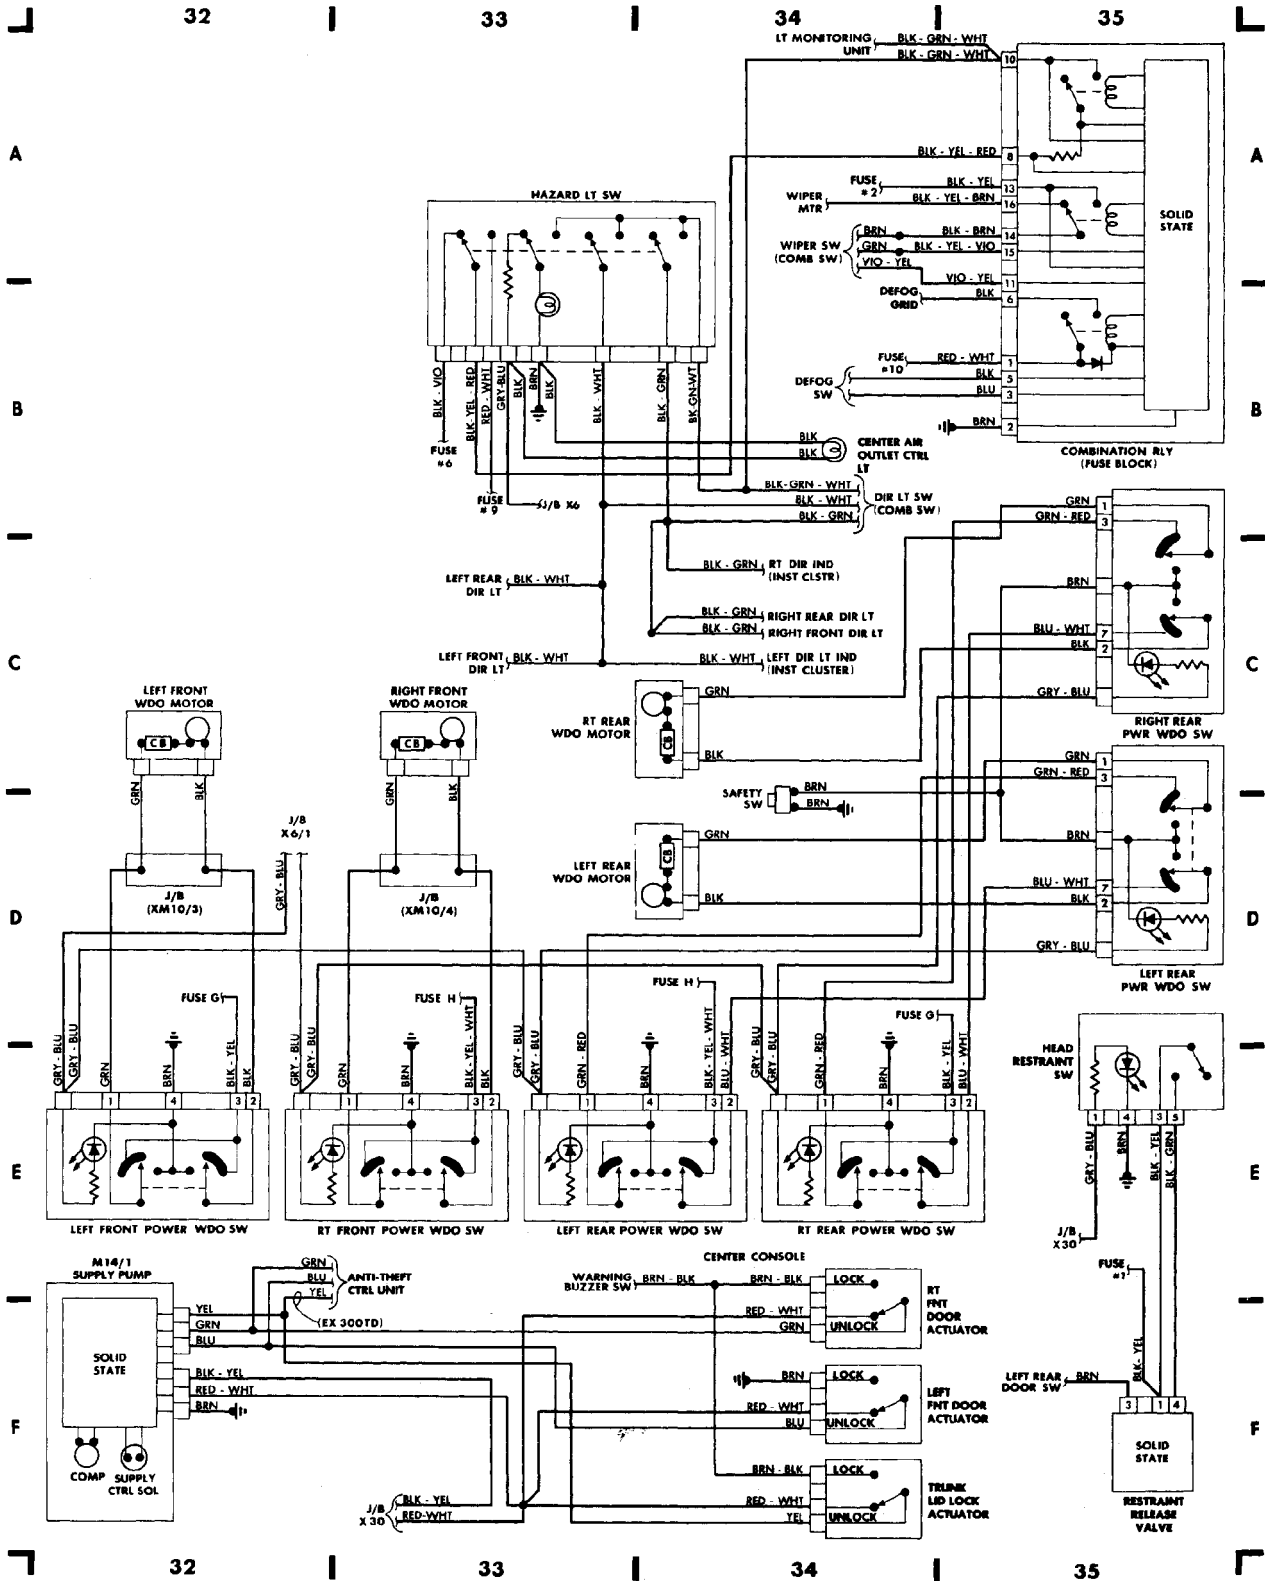


WIRING DIAGRAMS

Fig. 10: Rear Compartment (Cont.) & Accessories (Grids 36-39)

1987 Mercedes-Benz 300TD

Tuesday, November 28, 2000 01:11PM

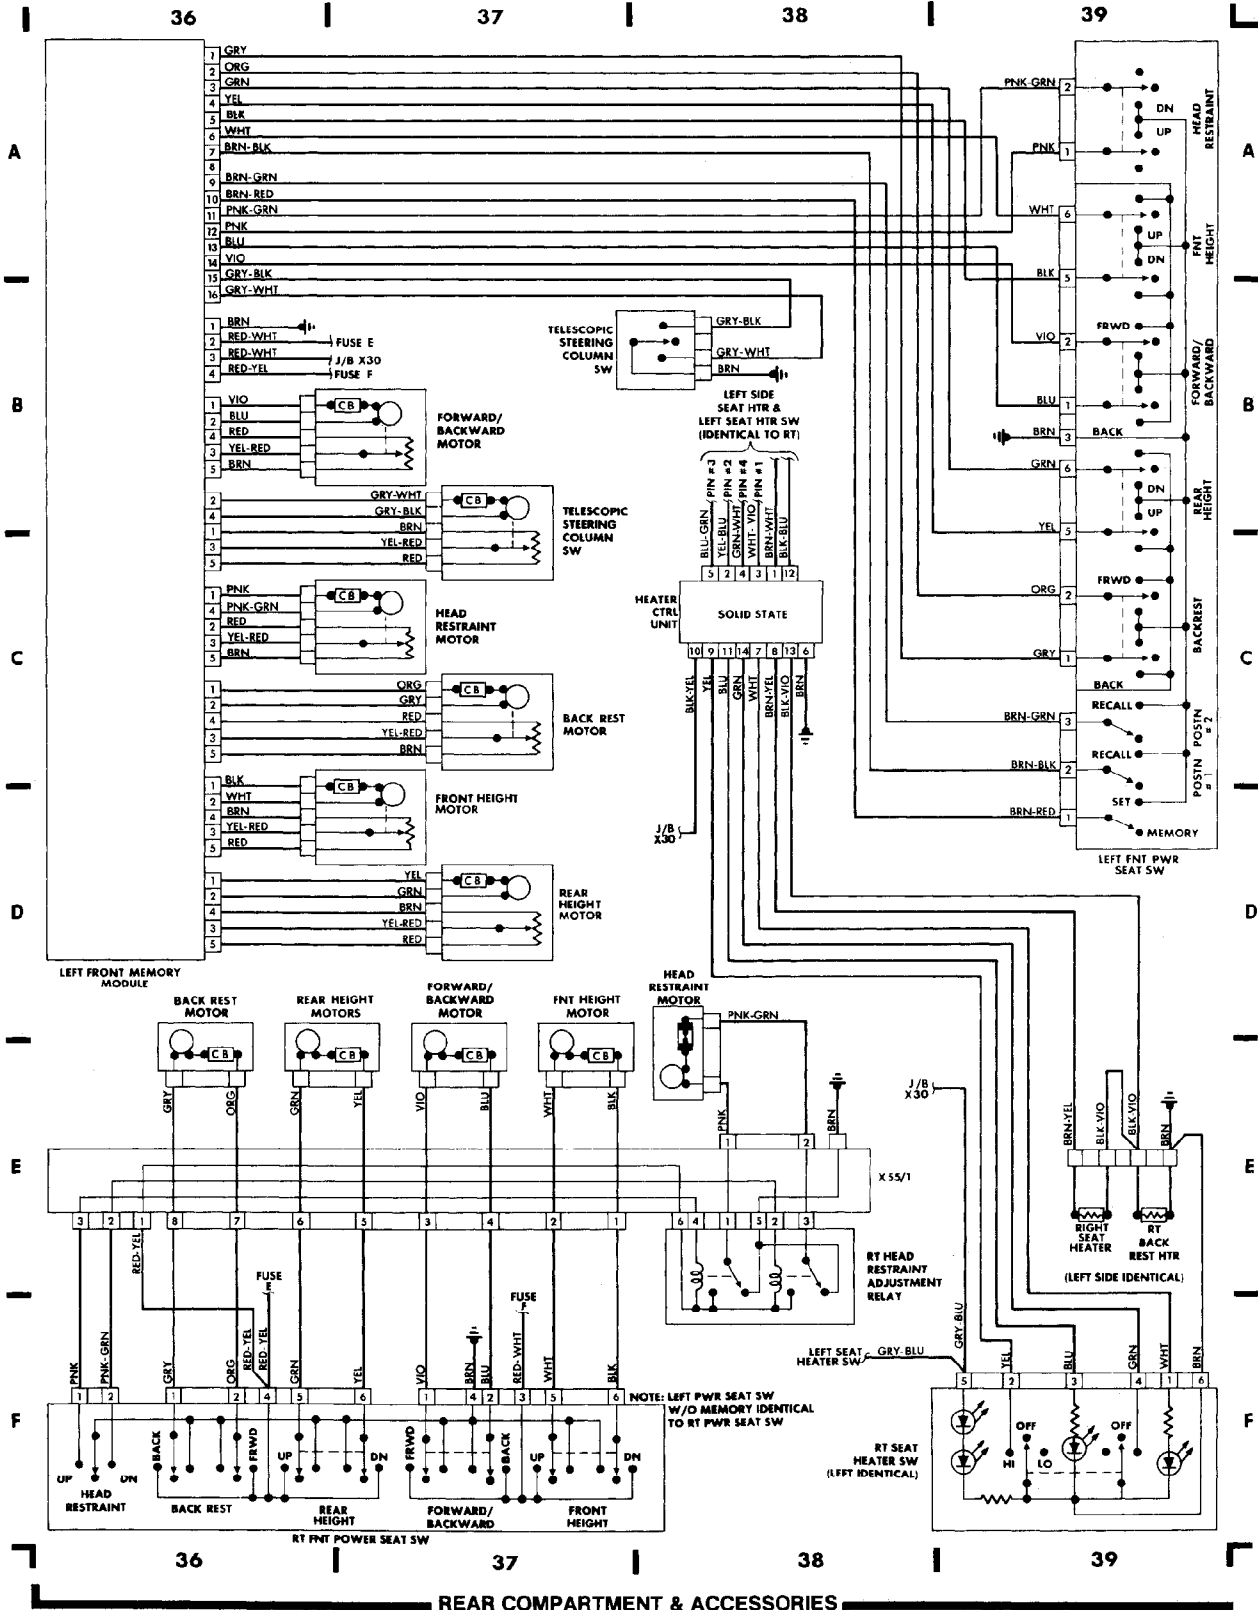

1987 Mercedes-Benz 300TD

REAR COMPARTMENT & ACCESSORIES